


# 3-TIER DOVE PAIR OUTDOOR WATER FOUNTAIN

## GS1-774

Read assembly instructions carefully and follow the care instructions. Save these instructions for future reference.

Select a smooth, level surface to place the fountain.

Assemble components on a soft, clean surface to avoid scratching or damaging the finish.

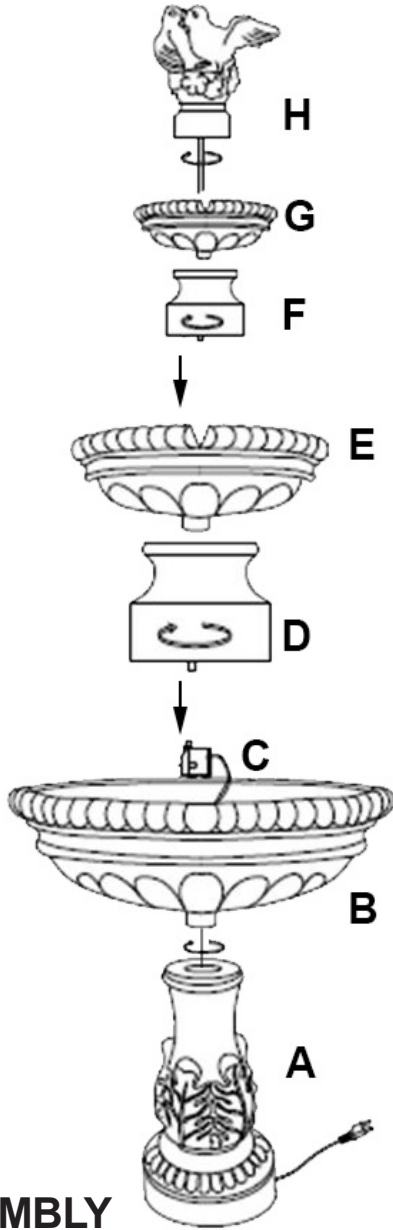

Inspect packaging to ensure all parts are accounted for before disposing of packing materials.

No.	PARTS	QTY.
A	Pedestal	1
B	Large Tier	1
C	Electric Submersible Pump	1
D	Large Column	1
E	Medium Tier	1
F	Small Column	1
G	Small Tier	1
H	Decorative Top	1



**NOTE:** The water tubing is built into the decorative top. Take care when handling the water tube; detaching the water tube from the decorative top will damage the fountain and void the product warranty.

## ASSEMBLY

1. Place Large Tier (B) into Pedestal (A), twist large tier to lock onto pedestal.
2. Place Electric Submersible Pump (C) into Large Tier (B) and run the power cord through Large Tier (B) and Pedestal (A).
3. Run built-in tubing of Decorative Top (H) through Small Tier (G), twist decorative top to lock onto small tier.
4. Connect Small Tier (G) to Small Column (F), twist to lock tier to column and place the assembled top pieces onto Medium Tier (E).
5. Place Medium Tier (E) onto Large Column (D), twist to lock tier onto column.
6. With assistance, carefully hold the assembled tiers and connect the tubing from Decorative Top (H) to the Electric Submersible Pump (C), place assembled pieces onto Large Tier (B).
7. Fill the fountain with enough water to keep the pump fully submerged during operation; approximately 4 gallons.
8. Plug the power cord into a properly grounded GFCI outlet.

**Note:** When first used, there may be air in the pump. It may take several moments for trapped air to escape, allowing water to flow.

# Care & Maintenance

- For outdoor use only. Some splashing is normal; adjust the flow rate on the pump if the water rate is too high.
- Check the water level frequently to ensure the pump remains fully submerged; never allow the pump to run dry as it will burn out the motor.
- Some climates and weather conditions increase water evaporation, requiring water to be added more frequently. Frequently check water levels during times of high temperatures, wind, and long-term exposure to direct sunlight to ensure the pump does not run dry.
- Only use water in this fountain. Distilled water will help prevent mineral buildup but is not required. Tap water is okay to use, but avoid heavily chlorinated water as it may damage the pump and cause the finish to peel.
- Periodically change the water to keep the water, fountain, and pump clean. Remove scale and buildup regularly.
  - DO NOT use harmful additives such as bleach, chlorine, etc.
  - DO NOT use anything abrasive to scrub the fountain.
  - DO NOT use a pressure washer.
- Always unplug the power supply before cleaning and maintaining the fountain and the recirculating pump.
- Take care when handling the pump; only pick it up by the body of the pump, never the power cord.
- During freezing weather, drain the fountain, disconnect the pump and store indoors; allowing ice to form may damage the fountain in such ways as, but not limited to, fountain cracking and/or permanent pump damage.

## Troubleshooting

- If water is not flowing within several moments of the fountain being plugged in, the pump may have air bubbles in it, which can prevent water from circulating properly and can cause excess pump noise.
- Ensure that the pump is not suspended above the water. The pump must be fully submerged under the water.
- Check the flow control on the body of the pump, it may need to be adjusted to achieve the desired water flow rate.
- Inspect the pump and tubing for obstructions.
- Pump noise can be caused by trapped air, low water level, or the pump being too close to the sides of the fountain. Check the pump. If necessary, add water or moving the pump helps to reduce noise.
- Check to make sure the power outlet is working; consult a certified electrician if in doubt about electrical connections.

*If you experience issues with assembly or the product was damaged during shipping, please contact our customer service team through one of the methods mentioned at the top of page 1.*

*Please have the item number and order information ready to expedite response time.*



## IMPORTANT SAFETY INFORMATION



- For outdoor use only.
- Keep fountain out of reach of children and pets.
- Make sure the power cord is away from traffic areas.
- Keep power cord away from all heat sources. Do not use electrical cords in areas with high temperatures.
- Check the water level frequently to ensure the pump remains fully submerged; never allow the pump to run dry as it will burn out the motor.
- Always unplug the power supply before cleaning and maintaining the fountain and the recirculating pump.
- Take care when handling the pump; only pick it up by the body of the pump, never by the power cord.

**Any modification to the product or failure to follow recommended care will void the product warranty.**

## WARNING!

**Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.**