

ASSEMBLY INSTRUCTION

TWO-TONE BOOKCASE

A Top Panel

B Shelf Panel

C Side Panel

D Bottom Panel



1pc

4pcs

5pcs

1pc

E Side Steel Frame


F Back Steel Frame

G Bolt

H Bolt

Ø1/4"x1-1/8"

Ø1/4"x2"

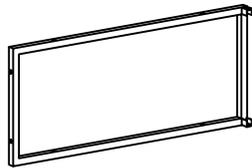

5pcs

5pcs


38pcs

16pcs

I Flat Washer
Ø1/4"x13mm

J Allen Key
M4


K Anti-Tipping

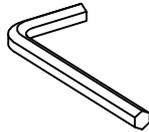

4pcs


1pc

1set

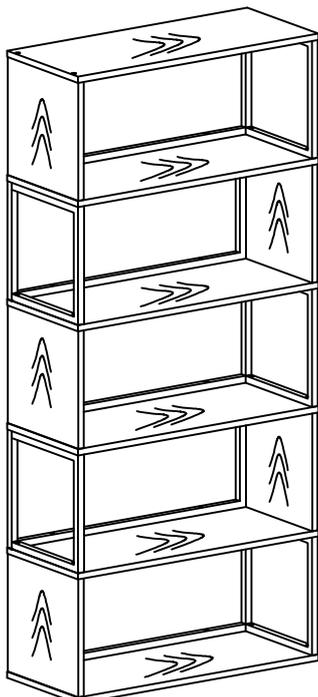


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


- 1** Attach Side Steel Frame (E) to one side of Back Steel Frame (F), at the same time, attach Side Panel (C) to the other side of Back Steel Frame (F) using Bolt (G) by Allen Key (J) as shown.
There are five groups of this step.

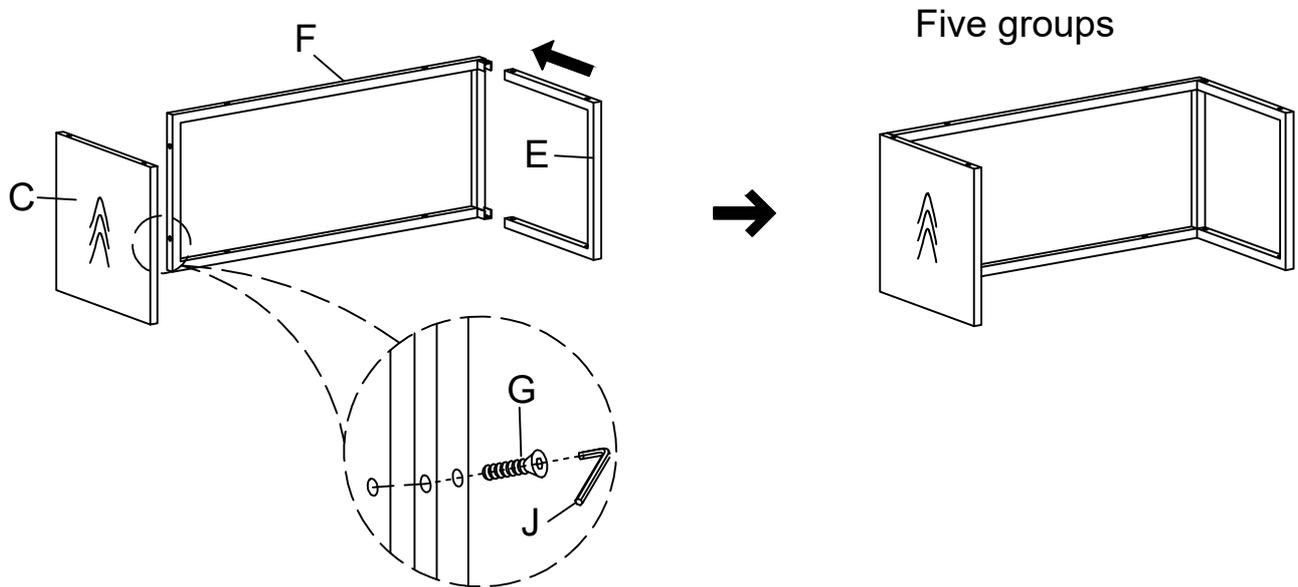


- 2** Attach one assembled group of Side Steel Frame (E), Back Steel Frame (F) and Side Panel (C) to Bottom Panel (D) by using Bolt (G), Flat Washer (I) by Allen Key (J) as shown.

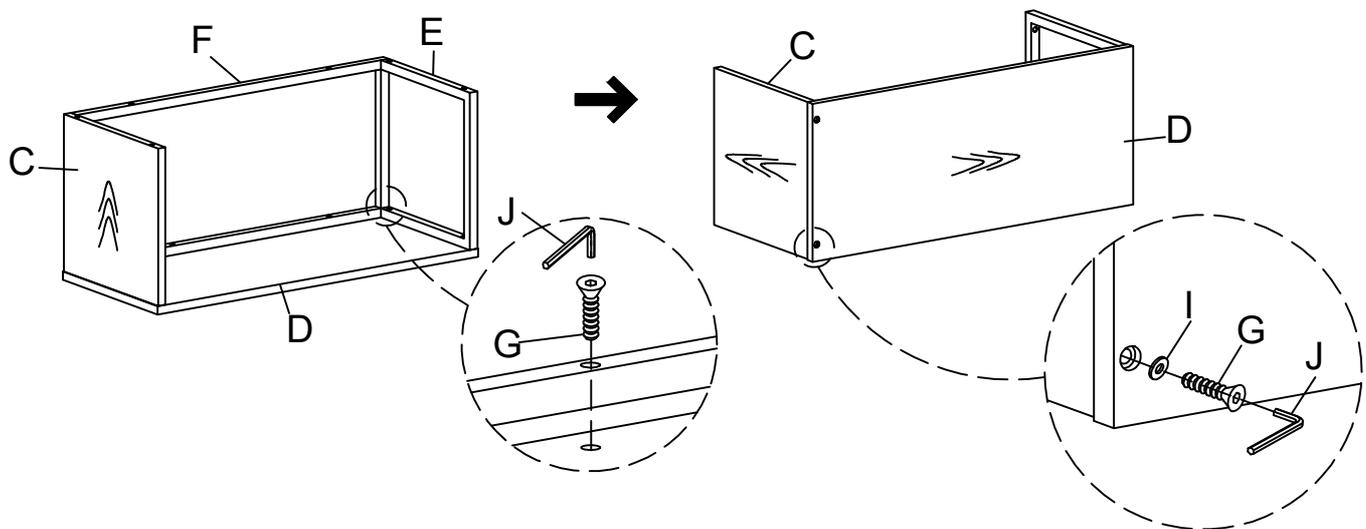

- 3** Then assemble the assembled five groups with Shelf Panel (B) & Top Panel (A) step by step from bottom to top as below picture shown, and using Bolt (G), Bolt (H) & Flat Washer (I) by Allen Key (J) to tighten.

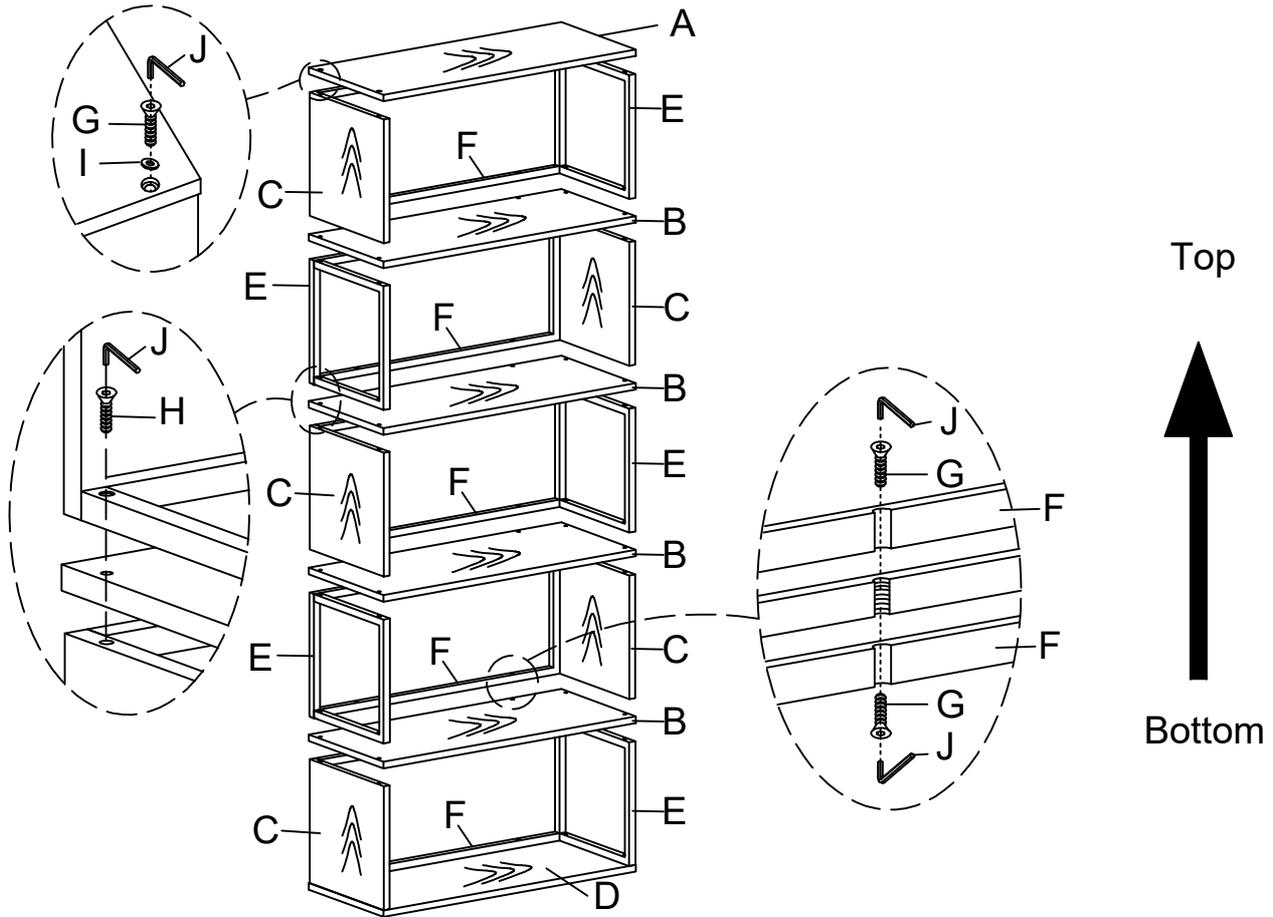

- 4** Remark: There is a tip restraint kit provided on the back of this product. Please refer carefully to the instruction on the tip restraint kit and following instruction picture for installation.

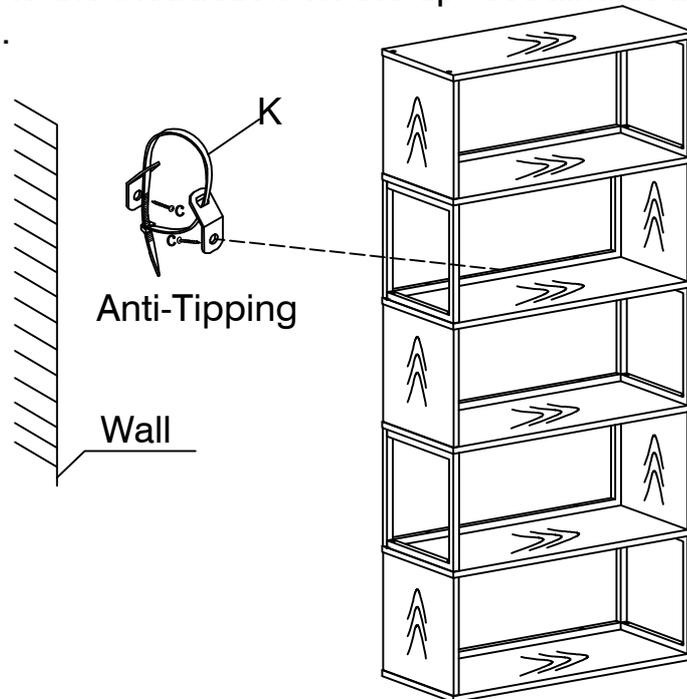

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.