 


Ceramic Farmhouse Kitchen Sink

INSTALLATION INSTRUCTIONS

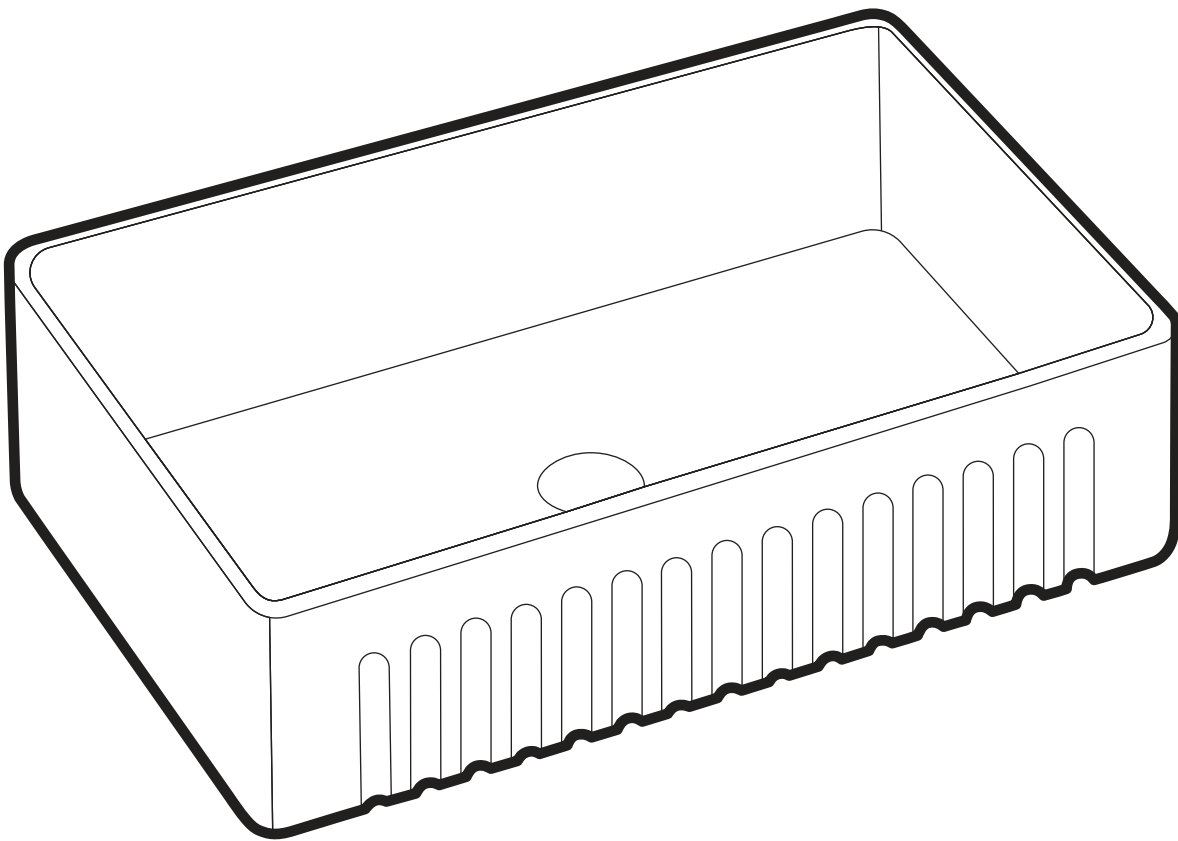



PRIOR TO INSTALLATION:

- Inspect product to ensure no damages have occurred while in shipping.
- Observe all plumbing and building codes in accordance with your state and local requirements.
- Make sure to purchase the correct cabinet size for your sink.
- All dimensions are nominal! Be sure to measure your sink prior to installation.
- The step-by-step guidelines in the installation instructions are a general reference. Should there be any discrepancies, Swiss Madison cannot be held liable. It is recommended to install all Swiss Madison products by hiring a licensed professional.
- Read installation and maintenance instructions thoroughly before installing. Be sure to use proper tools and always wear proper personal safety accessories for your protection.

QUESTIONS OR CONCERNS?

Please contact us:

1-434-623-4766

info@swissmadison.com

SUGGESTED TOOLS & MATERIALS:



 
Safety
Glasses



Drill




Jig Saw/
Hacksaw




Level



 Acetone




Tape
Measure

 


Screwdrivers



 Pencil




Adhesive

 

Shims

1 Measure & Assemble Supports

 
- Measure actual height of the apron.
- Build support frames on the inside of cabinet based on sink measurements.

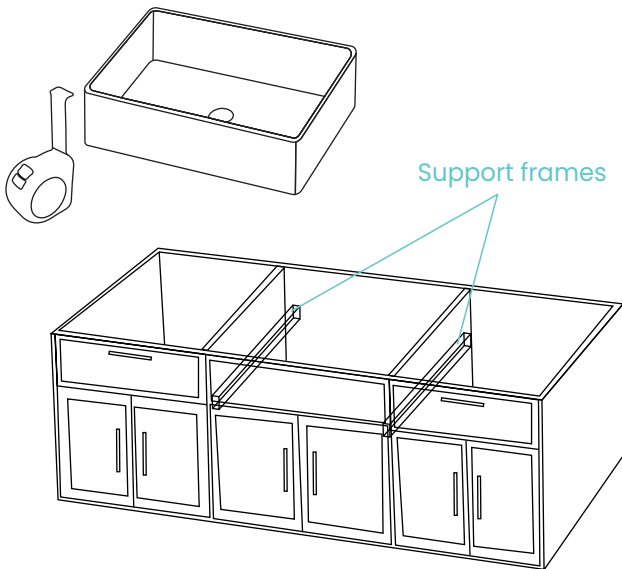

2 Cut Front of Cabinet


- Measure the height of the front apron and add $\frac{1}{16}$ " to the dimensions when marking the cabinet front cutting location.
- Use saw to cut the cabinet.

 NOTE: Always wear protective gear when using dangerous materials.

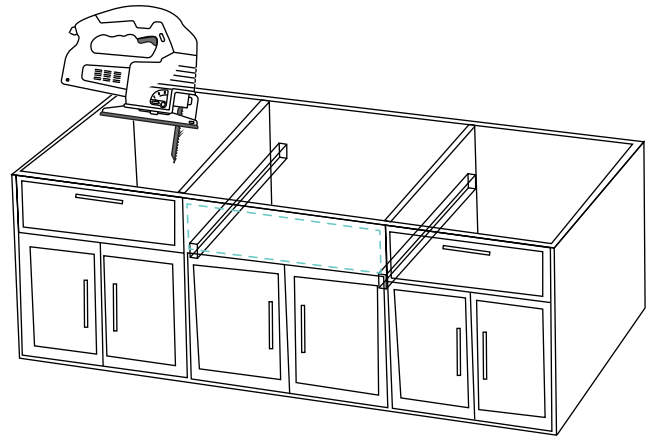


3 Install Sink

 - Carefully place sink into the opening. The weight of sink should be sustained by the pre-built support frames.
- Verify sink is leveled from side to side and front to back using a level. Use shims, if needed, to level sink.
- Use sealant to seal any gaps where required.

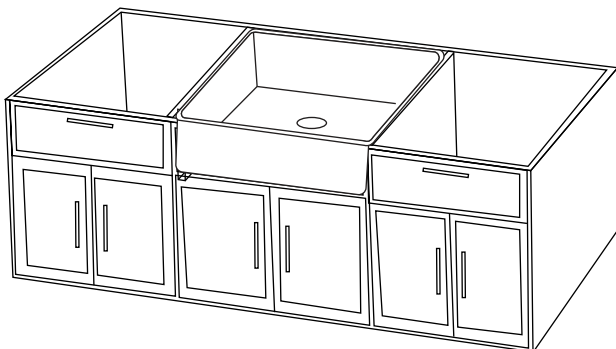

4 Install Countertop & Plumbing

 - Use a bead of silicone or preferred adhesive around the rim of the sink.
- Verify the alignment of the sink to the cutout countertop. Align cut countertop hole over the sink and press firmly.
- Connect drain trap to drain, and water supply connections to the faucet according to manufacturer's instructions.
- Run water and check for leaks.

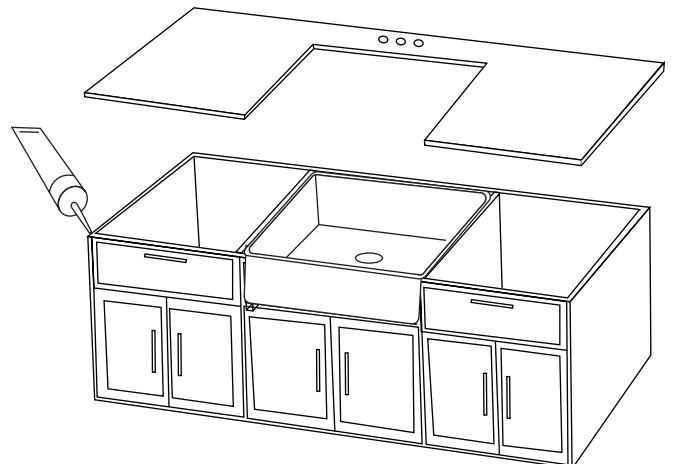

Ceramic Sink

USE & CARE INSTRUCTIONS

CARE AND MAINTENANCE

- ✓ Rub lightly with a soft cloth on a regular basis and clean periodically by thoroughly rinsing with mild soap and warm water for additional preventative cleaning.
- ✓ Check regularly for cracks. To check for cracks, you can fill a basin with water and pour in colored paint to soak overnight. If there is a change in the water level, there may be cracks.
- ✓ If your sink develops any type of discoloration, using a mild abrasive, such as baking soda, will have your sink looking brand new again.
- ✓ Remove and clean the drains regularly to prevent stubborn stains.



RUB LIGHTLY
WITH SOFT CLOTH



CLEAN
PERIODICALLY



CLEAN SINK WITH
MILD ABRASIVE

NEVER

- ✗ Do not use harsh, abrasive cleaners or chemicals.
- ✗ Avoid steel wool or metal cleaning pads on the sink.
- ✗ Avoid leaving household cleaners or bleach in the sink for a long time, as they may ruin the finish of your sink.
- ✗ Avoid dropping heavy or sharp objects from a height into the basin.
- ✗ Avoid large friction with other ceramic surfaces during use, as it will abrade the glaze and cause breakage in appearance, affecting the overall decoration.
- ✗ Avoid excessive temperature differences that may cause the sink to break.



HARSH
CLEANERS



STEEL
WOOL



LEAVING BLEACH
ON FOR TOO LONG

ONE-YEAR LIMITED WARRANTY

Swiss Madison® products are made with quality materials and excellent craftsmanship to provide our customers with beautiful, durable, long-lasting products. Should there be any defects in materials or craftsmanship under regular use that are discovered within the first year after delivery, Swiss Madison® will provide replacement parts at no charge, or at its discretion, replace any product or part of the product that is deemed defective, under normal installation, use, service or maintenance. This warranty applies only to the original purchaser. Proof of purchase must be submitted with any warranty claim.

Swiss Madison® recommends that all installations of Swiss Madison® products to be conducted by a licensed plumber or contractor. Swiss Madison® will not be held responsible for any damage or product failure due to improper installation, misuse, or failure to utilize a licensed plumber or contractor for installation. Swiss Madison® is not responsible for any installation or removal costs.

THIS ONE-YEAR LIMITED WARRANTY WILL BE VOIDED IF:

- The installation instructions were not followed by the installer
- The product has been moved from its initial place of installation
- The product has in any way been modified from its original condition
- The product has been subjected to improper maintenance, abuse, misuse, excessive use of chemicals, accidents, or other damages

Swiss Madison® makes no warranty that its products comply with any local building or plumbing codes. It is the consumer's responsibility and obligation to determine local code compliance prior to and during installation.

Swiss Madison® is not responsible for any special, incidental or consequential damages associated with the installation, replacement, return or use of the original purchaser's product. This includes, but is not limited to: freight costs, labor, travel time, lost profit, home damages and other contingent liabilities and costs (including, without limitation, costs associated with 'professionals' or 'experts', investigations, audits, analyses, attorneys and any other professional/hired services). Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

The Swiss Madison® warranty is a comprehensive and explicit limit of liability. All other warranties are hereby disclaimed and waived.

QUESTIONS OR CONCERNS? Please contact us directly at: 1-434-MADISON (623-4766)



WARNING:

Contents of your order may contain sharp and possibly other harmful pieces and may cause hazard to children and adults. Swiss Madison® is not responsible in any way for personal injuries or damages.