English, Spanish & French Manual



OWNER'S MANUAL



Visit us on the web! www.brinly.com Important: This manual contains information for the safety of persons and property. Read it carefully before assembly and operation of the equipment!

INTRODUCTION

CONGRATULATIONS on your new Brinly-Hardy purchase! This accessory has been designed, engineered and manufactured to give you the best possible dependability and performance.

Should you experience any problem you cannot easily remedy, please do not hesitate to contact our knowledgeable customer service department toll-free at 1-877-728-8224. We have competent, well trained technicians to help you with the assembly and use of your product.



CUSTOMER RESPONSIBILITIES

- Please read & retain this manual. The instructions will enable to assemble and maintain your product properly.
- Please carefully read and observe the SAFETY SECTION of this manual.
- Follow a regular schedule in maintaining and caring for your Brinly-Hardy product.

TABLE OF CONTENTS
REQUIRED TOOLS 2 SAFETY 3 PARTS 4 - 5 ASSEMBLY 6 - 9
USE AND CARE - Specifications 10 - Operation 10 - 11 - Maintenance
WARRANTY 12

RECORD PURCHASE INFORMATION

Record your purchase information in the spaces provided below:

DATE OF PURCHASE	
COMPANY NAME	
COMPANY PHONE	
SERIAL NUMBER	



- 13 mm Wrench (x2)
- 10 mm Wrench (x2)
- Gloves

SAFETY

SAFE OPERATION

This symbol will help point out important safety precautions used throughout this manual. It means: **ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED.**


- · Read the owner's manual before operating the aerator.
- Do not allow children to operate the aerator.
- Do not allow adults to operate without proper instruction or without having read the owner's manual.
- Always wear substantial footwear. Do not wear loose fitting clothing that can get caught in moving parts.
- Keep your eyes and mind on the aerator and the area being covered. Do not let other interests distract you.
- Stay alert for holes in the terrain and other hidden hazards.
- · Do not operate the aerator on a steep incline
- · Never exceed the weight capacity of 35 pounds.
- · Do not run or jog while operating the aerator.
- Use the Aerator only on an established lawn, never on newly laid sod.
- To avoid damage to tines, always engage transport wheels to raise the Tines when crossing concrete or asphalt walks, drives, or roads.
- · Do not operate the aerator near pets or other animals.

CAUTION

- Tines have SHARP points. Wear gloves and handle with care.
- · Do not stand on the aerator.
- Keep all fasteners tight to be sure the equipment is in safe working condition.
- Store the aerator in a position in which the tines are not exposed.
- Store the aerator indoors to maximize the product life.
- If the product is to be hung from a wall when stored, ensure the hanging hardware is rated for weight of the aerator.

NOTES

PARTS

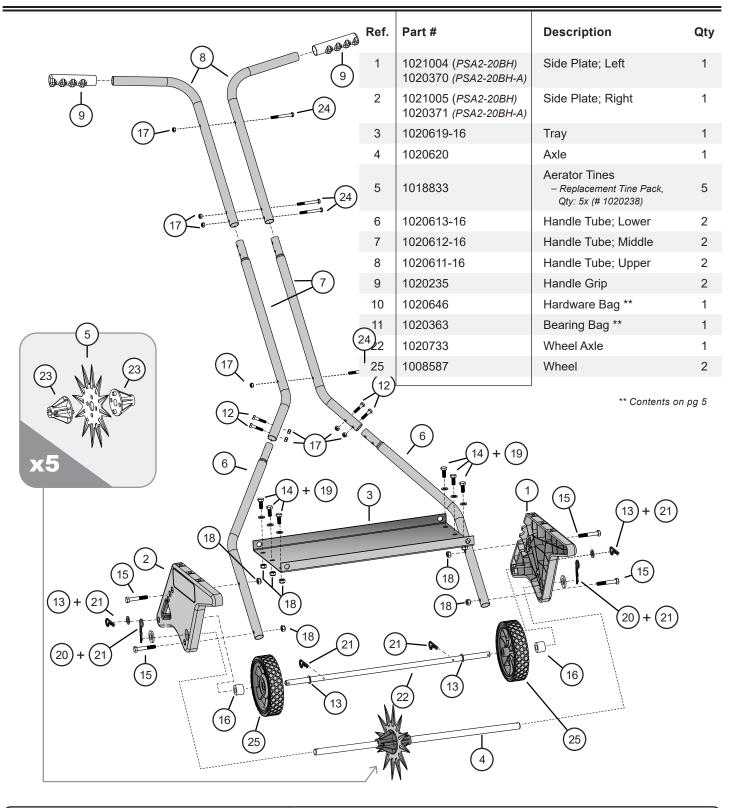


Installation Questions? Missing Parts? Replacement Parts?



DON'T GO BACK TO THE STORE!

Please call our Customer Service Department, Toll Free: 877-728-8224 or customerservice@brinly.com


PARTS

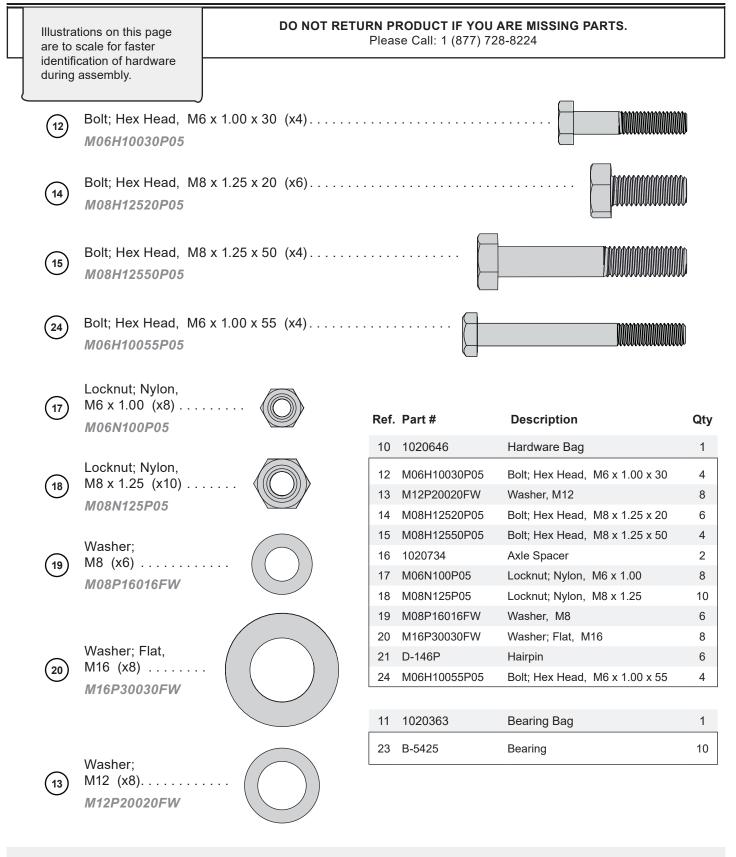


EXTRA PARTS:


Extra washers are provided, however, may not be needed after Step 2. (#20, Flat Washer; M16)


Assembly Tips	PARTS
Illustrations on page 5 are to-scale. For faster identification of hardware during assembly, simply lay the hardware on top of the illustration.	
The hardware packs are individually bagged and labeled to pair with each assembly step.	
Additional info and videos are available on our website: brinly.com This QR code links directly to the product page:	Contraction of the contraction o
Step 1 (19)	
Step 1 Align the side plates (1) & (2) with the tray (3) as illustrated. Running bolts from the top, secure using: - x6 M8 x 1.25 x 20 Hex Head Bolts (14) - x6 M8 Washers (19) - x6 M8 Nylon Locknuts (18) Do not fully tighten bolts (yet).	(1)
✓ Hardware Bag 1 ★ Tools: M13 Wrench (x2)	18 -

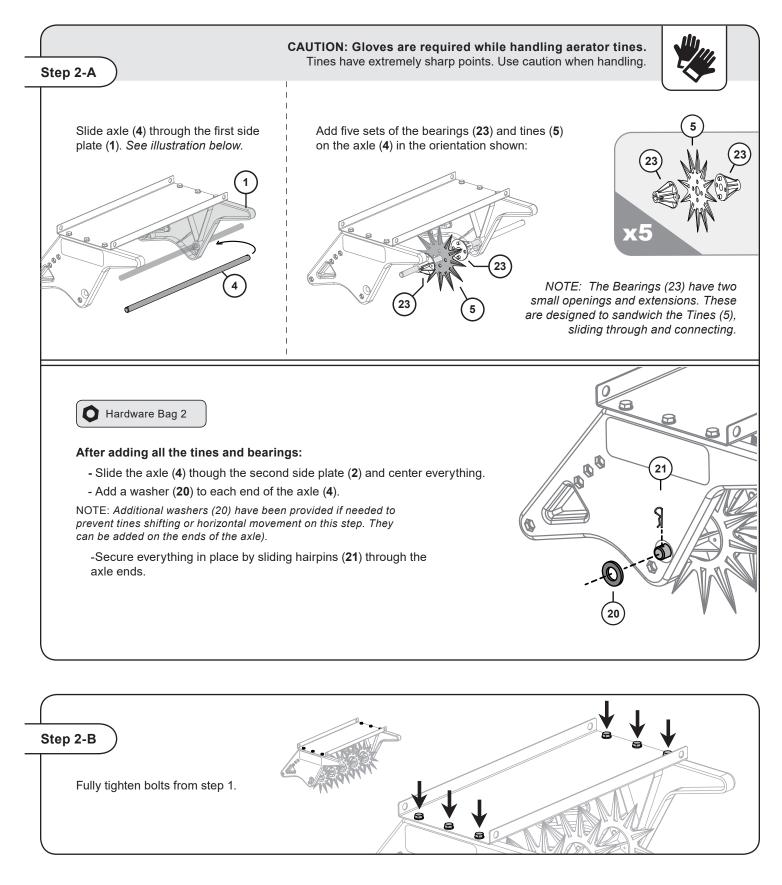

NOTE:

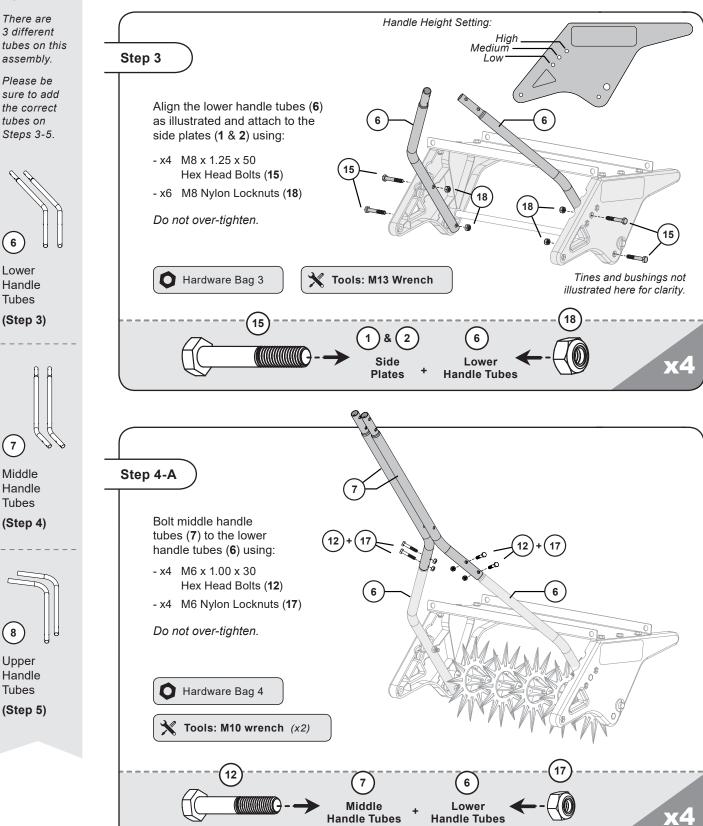

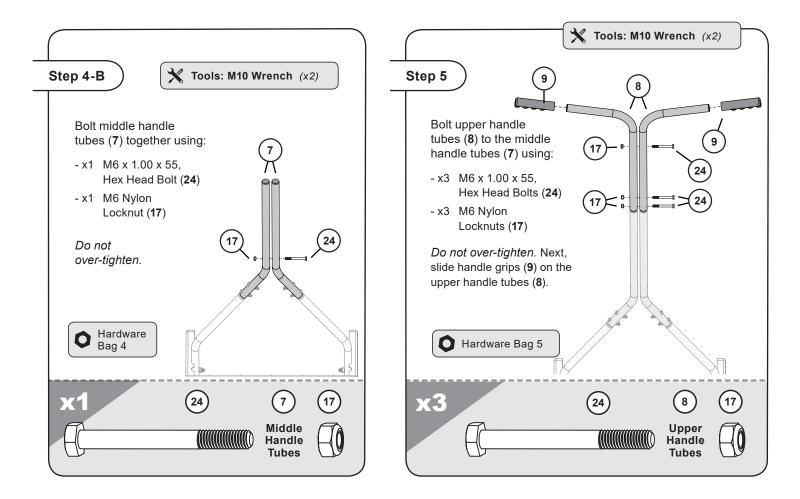


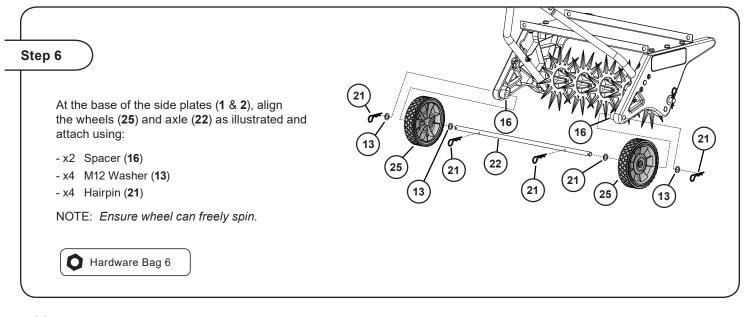



Assembly is Complete!

English Manual

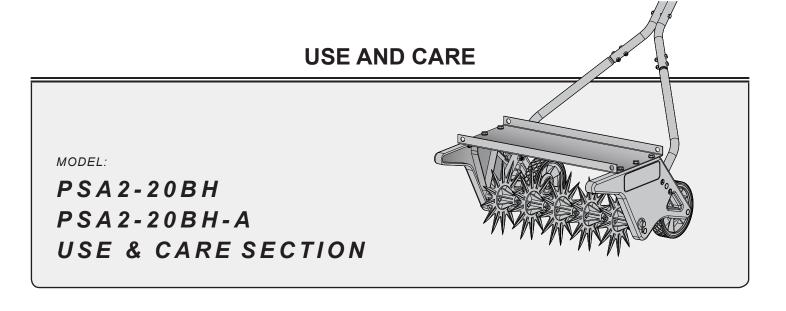


SPECIFICATIONS

Recommended MAXIMUM Speed 3 mph Aeration Depth Up to 2" Working Width 20"

Weight Weight Capacity 35 lbs

WHEN TO USE


Your Aerator should not be used when lawn conditions are too wet or too dry. This can be determined by digging a small amount of soil (about three inches deep) and checking it.

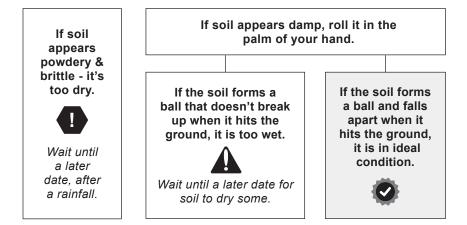

FREQUENCY

Lawn aeration is not accomplished in a single pass. It will normally take several passes over the lawn.

Alternating the direction by 90 degrees will improve the aeration effect. The Aerator may be used in an independent operation or may be used when mowing your lawn.

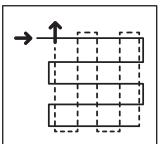

English Manual

OPERATING TIPS

- CAUTION: To prevent injury, closed toe shoes are advised during use.
- Tines have sharp points. Wear gloves and handle with care.



- The recommended operating speed is a brisk walk **3 MPH**
- If the soil is very soft and the aerator is difficult to push, reduce the weight in the tray.
- Do not stand on the aerator.
- Keep all fasteners tight to be sure the equipment is in safe working condition.
- Store the aerator in a position in which the tines are not exposed.
- Store the aerator indoors to maximize the product life.
- If the product is to be hung from a wall when stored, ensure the hanging hardware is rated for weight of the aerator



ADDING WEIGHT

- Do not load more than 35 lbs on the Aerator tray, that is the maximum weight capacity.
- Weight can be added to the tray and should be secured by rope, straps, or other suitable means.

MAINTENANCE



- Should rust appear on any other part of your Aerator, sand lightly to remove rust and coat lightly with enamel.
- Apply a drop of lubricating oil to each nylon bearing (aerator tine shaft, agitator shaft, and wheels) before each use.
- To prevent rust in aerator tines, apply a light coat of oil on the working areas of tines after each use.
- After each use, service unit as described and store in a dry area, shielding tines to avoid injury

SERVICE

QUALITY CONTINUES WITH QUALITY SERVICE

If you have installation questions, are missing parts or need replacement parts, don't go back to the store!

Please find your product serial number and model number, then contact our Customer Service department:



In North America and Canada call Toll-Free: **877-728-8224**



Chat online: www.brinly.com



Email: customerservice@brinly.com

ONLINE

BRINLY.COM

Additional info and videos are available on our website. Please visit the URL above OR scan this QR code.







The limited warranty set forth below is given by Brinly-Hardy Company with respect to new merchandise purchased and used in the United States (its possessions and territories) and Canada.

Brinly-Hardy Company warrants the products listed below against defects in material and workmanship, and will at its option, repair or replace, free of charge, any part found to be defective in materials or workmanship. This limited warranty shall only apply if this product has been assembled, operated, and maintained in accordance with the Operator's manual furnished with the product, and has not been subject to misuse, abuse, commercial use, neglect, accident, improper maintenance, alteration, vandalism, theft, fire, water, or damage because of other peril or natural disaster.

Parts found to be defective within the warranty period will be replaced at our expense. Our obligation under this warranty is expressly limited to the replacement or repair, at our option, of parts found to be defective in material and workmanship.

HOW TO OBTAIN SERVICE: Warranty parts replacements are available, only with proof of purchase, through our Customer Service Department. Call 877-728-8224.

This limited warranty does not provide coverage in the following cases:

- a. Routine maintenance items such as lubricants & filters.
- b. Normal deterioration of exterior finish due to use or exposure.
- c. Transportation and/or labor charges.
- d. The warranty does not include commercial and/or rental use.

No implied warranty, including any implied warranty of merchantability of fitness for a particular purpose, applies after the applicable period of express written warranty above as to the part as identified below. No other express warranty whether written or oral, except as mentioned above, given by any person or entity, including a dealer or retailer, with respect to any product, shall bind Brinly-Hardy Co. During the period of the warranty, the exclusive remedy is repair or replacement of the product as set forth above.

The provisions as set forth in this warranty provide the sole and exclusive remedy arising from the sale. Brinly-Hardy Co. shall not be liable for incidental or consequential loss or damage including, without limitation, expenses incurred for substitute or replacement lawn care services or for rental expenses to temporarily replace a warranted product.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you.

During the warranty period, the exclusive remedy is replacement of the part. In no event shall recovery of any kind be greater that the amount of the purchase price of the product sold. Alteration of safety features of the product shall void this warranty. You assume the risk and liability for loss, damage, or injury to you and your property and/ or to others and their property arising out of the misuse or inability to use this product. NOTE: *This limited warranty shall not extend to anyone other than the original purchaser or to the person for whom it was purchased as a gift.*

This limited warranty lasts as long you own your product purchased from an authorized seller. Coverage terminates once you sell or otherwise transfer the product.

This limited warranty does not cover any purchaser other than the original purchaser of the product, nor does it cover any product purchased from an unauthorized third-party. If you are not the original purchaser of this product, your product is not covered by our limited warranty and you take the product "AS IS" and "with all faults."

We may require proof of purchase from you demonstrating that you are the original purchaser of the product, purchased the product from an authorized dealer, and are eligible to make a valid claim under this limited warranty.

How state law relates to this warranty: This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

IMPORTANT:

The Warranty period stated below begins with the proof of purchase. Without the proof of purchase, the Warranty period begins from the date of manufacture determined by the serial number manufacturing date. All parts replaced under warranty will be considered as part of the original product, and any warranty on the replaced parts will expire coincident with the original product warranty.

WARRANTY PERIOD:

See applicable parts listed below.

Standard / Residential Use:

Steel Frame & Steel Parts	. 2 years
Stars & Plugs	90 days
Tires / Wheels	90 days
Drive: Chain & Sprocket	90 days

All other normal wear parts or component failures will be covered on this product for a period of 90 days.

If this equipment is being used in a commercial application and / or for multiple properties, the warranty is 90 days after purchase for all parts.