


INSTRUCTION MANUAL

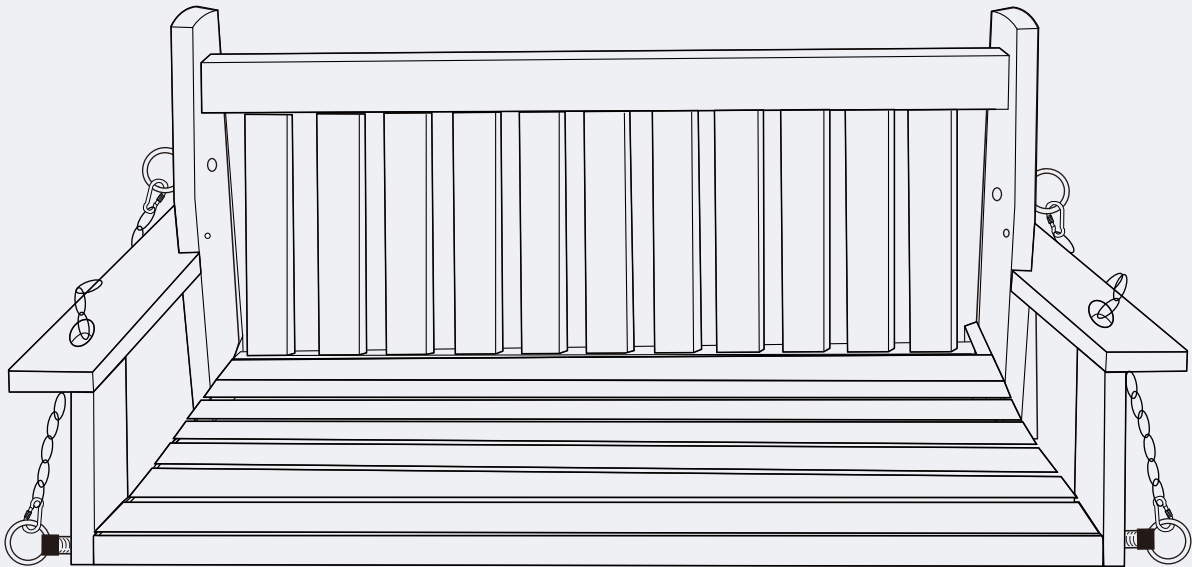

Poly 51" Porch Swing




V1.0

! CARE & MAINTENANCE

Please keep this instruction for your future reference.

- Be careful when assembling, avoid hurting the plating of the surface.
- Clean the chair with lukewarm water, mild detergent & soft cloth.
- Firmly secure all bolts before use, do not use any part of this item as a step ladder.
- Reconfirm that all bolts, screws, and nuts are secure every 90 days..
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- Do not overtighten screws (insert all screws before tightening screws).

TOOLS REQUIRED

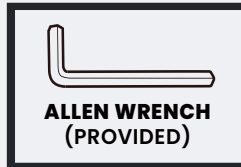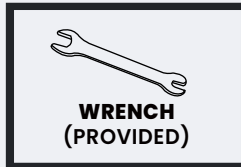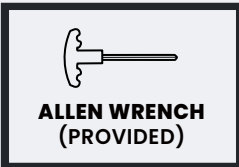

**SWING
500 LBS
CAPACITY**



**2 PERSONS
ASSEMBLY**



**UP TO 30 MIN.
ASSEMBLY**

HARDWARE

- | | | | | |
|--|--|---|---|---|
| 1
SCREW
M6 x 45 mm

3 PCS | 2
SCREW
M6 x 55 mm

2 PCS | 3
SCREW
M6 x 100mm

2 PCS | 4
BOLT
M6 x 70mm

8 PCS | 5
BOLT
M6 x 40mm

2 PCS |
| 6
EYE BOLT
M8 x 70 mm

2 PCS | 7
EYE BOLT
M8 x 45 mm

2 PCS | 8
M6 NUT

8 PCS | 9
M6 WASHER

8 PCS | 10
M8 NUT

4 PCS |
| 11
M8 WASHER

4 PCS | 12
ALLEN WRENCH


1 PC | 13
WRENCH

1 PC | 14
ALLEN WRENCH


1 PC | 15
CHAINS

2 PCS |


PARTS

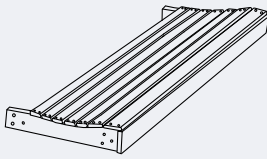A**SWING SEAT**


1 PC

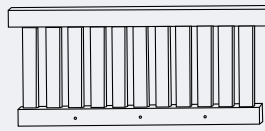B**SWING BACKREST**


1 PC

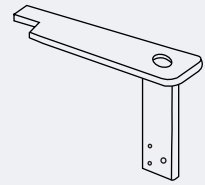C**SWING LEFT ARM**


1 PC

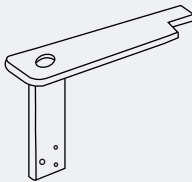D**SWING RIGHT ARM**

1 PC

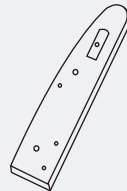E**RIGHT SIDE RAIL**


1 PC

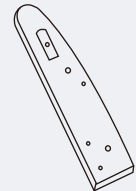F**LEFT SIDE RAIL**

1 PC

PRODUCT ASSEMBLY – OVERALL VIEW


Look at following overall view of this swing and learn the exact position of each part to be assembled.

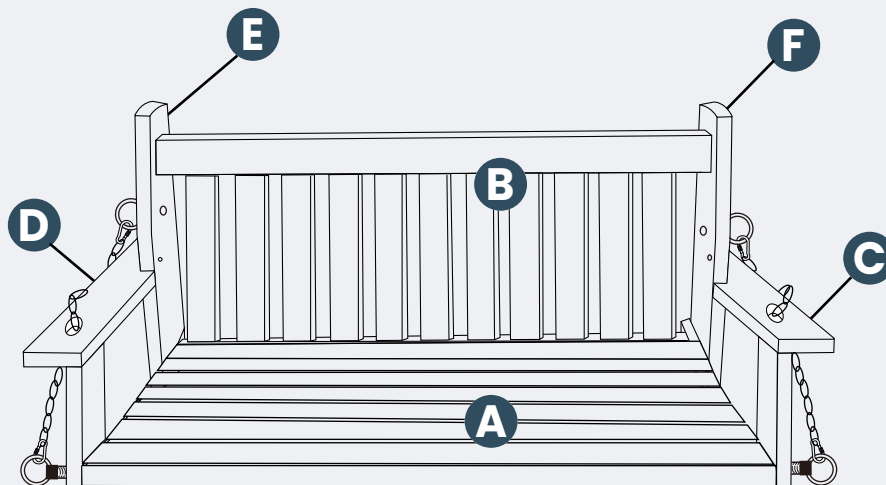

PRODUCT ASSEMBLY


1

Place **Part A Swing Seat** on flat surface, attach **Part E Right Side Rail** to **Swing Seat** with 2 sets of **Hardware #4 Bolt**, **Hardware #9 (M6) Washer** and **Hardware #8 Nut (M6)**.

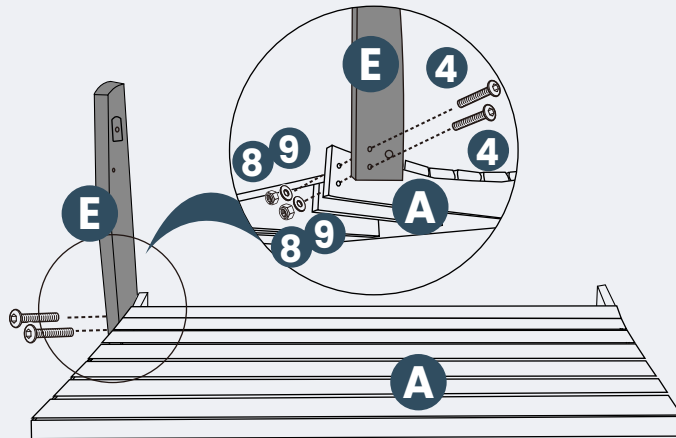

2


Attach **Part F Left Side Rail** to **Swing Seat** with 2 sets of **Hardware #4 Bolt**, **Hardware #9 Washer** and **Hardware #8 Nut**.

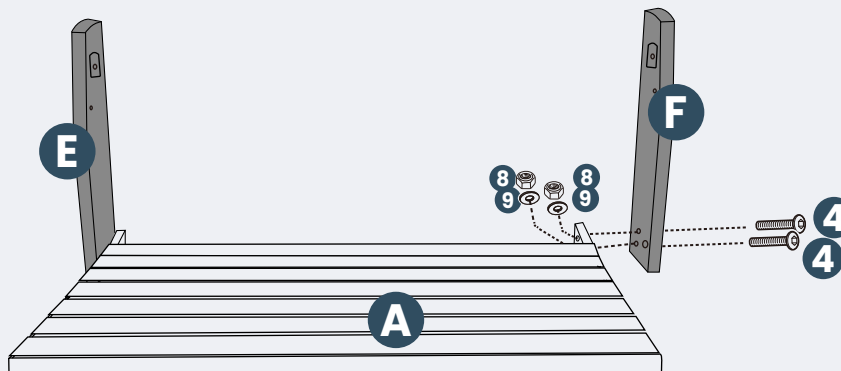

PRODUCT ASSEMBLY


3

Attach **Part D Swing Right Arm** to **Part A Swing Seat** with 2 sets of **Hardware #4 Bolt**, **Hardware #9 Washer** and **Hardware #8 Nut**. Attach **Part D Swing Right Arm** to **Part E Side Rail** with 1 pc of **Hardware #2 Screw**. Do the same to attach **Part C Left Swing Arm** to **Part A Swing Seat** and **Part F Side Rail**.

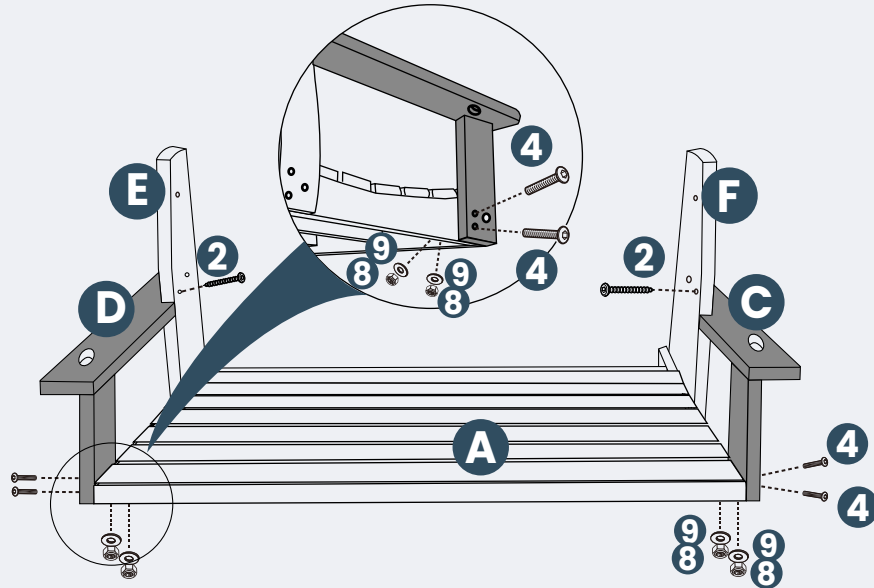

4


Place 2 pcs of **Hardware #6 Eye Bolt** to combined **Part (C+A)** and **(D+A)**, attach with 2 sets of **Hardware #11 Washer (M8)** and **Hardware #10 Nut (M8)** as below.

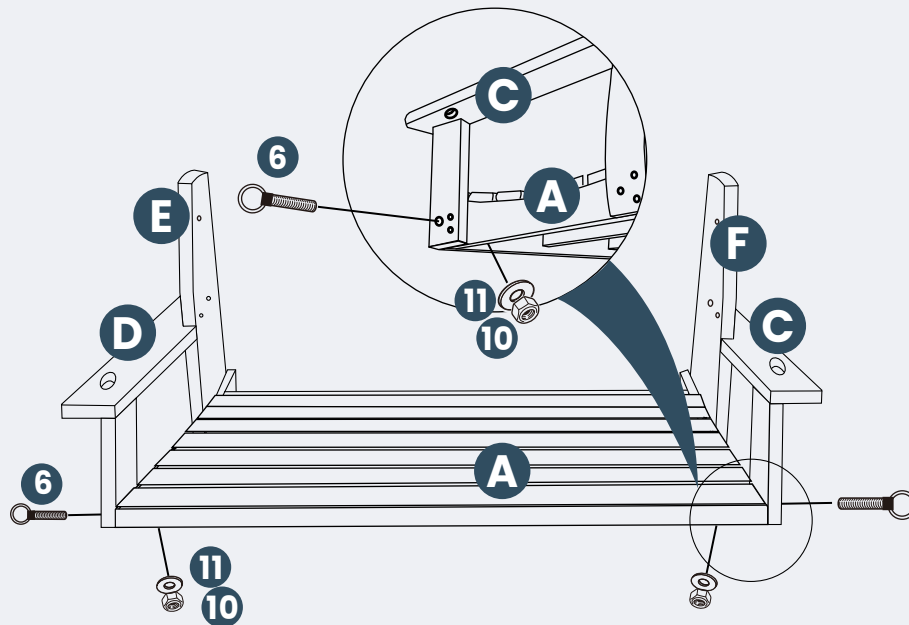

PRODUCT ASSEMBLY


5

Attach **Part B Swing Backrest** to **Part E & F Side Rails** with 2 pcs of **Hardware #5 Bolt** as below. Attach it to **Part A Swing Seat** with 3 pcs of **Hardware #1 Screw**. Attach it to the combined **Part (A+E)** and **(A+F)** with 2 pcs of **Hardware #3 Screw**.

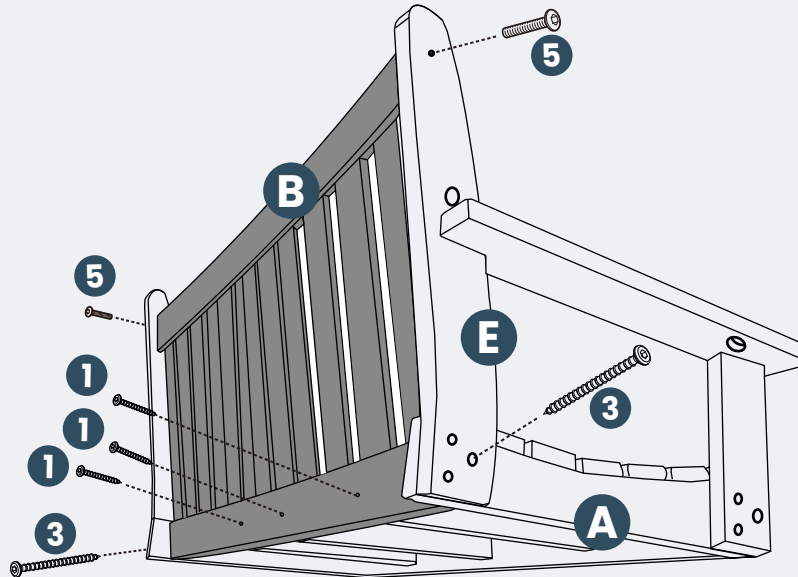

6


Attach 2 pcs of **Hardware #7 Eye Bolt** to **Part E and F Side Rails** and tighten with 2 sets of **Hardware #11 Washer (M8)** and **Hardware #10 Nut (M8)** as below.

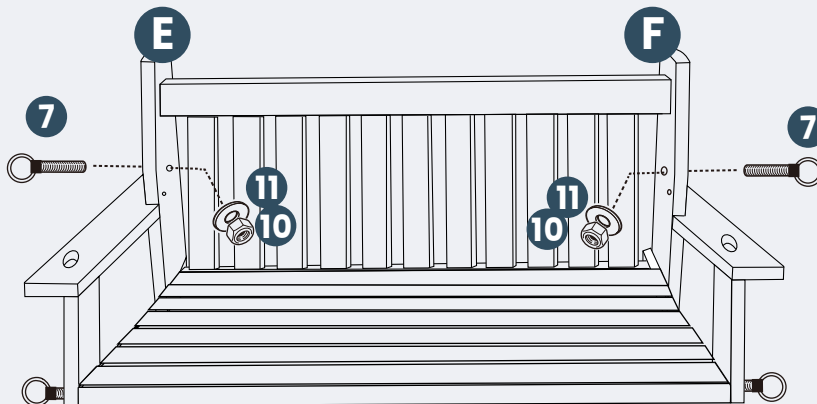

PRODUCT ASSEMBLY


7

Turn the thread lock to open the carabiner, attach it to the eye bolt on the swing. make **Hardware #15 Longer Chain** go through the hole in the arm and lock it to the carabiner. Lock another end to the eye bolt on the side rail. Do the same to assemble another chain to the other side.

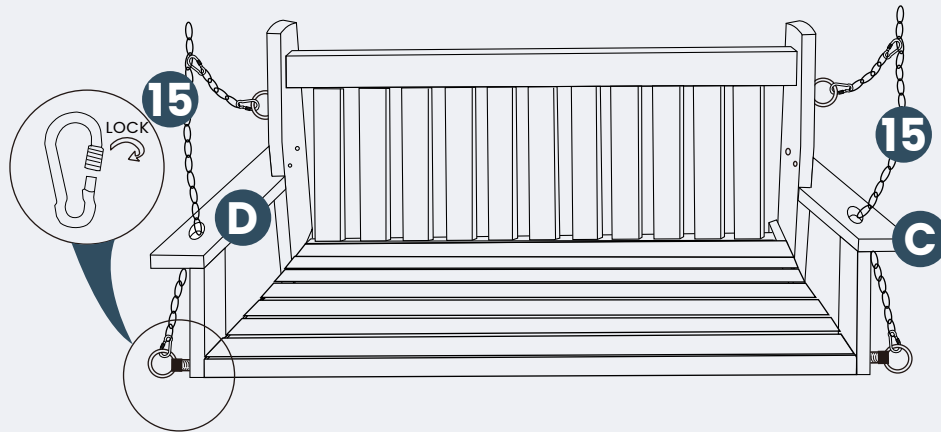

8

Tighten all the bolts and nuts again to ensure the swing is steady enough to use.

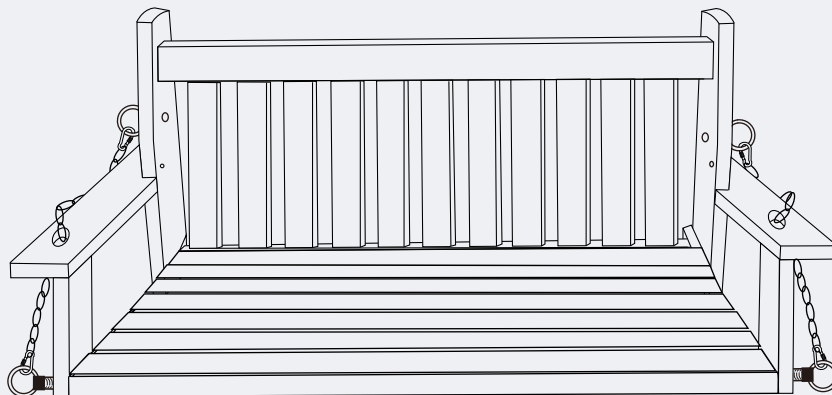

CLEANING TIPS

REGULAR CLEAN: Use a mixture of warm water and mild soap. Gently scrub the surface with a soft bristle brush to remove any dirt or stains.

QUICK CLEAN: You can simply wipe down the furniture with a damp cloth.

Regular cleaning not only preserves the aesthetic appeal of your furniture, but also helps extend its lifespan.