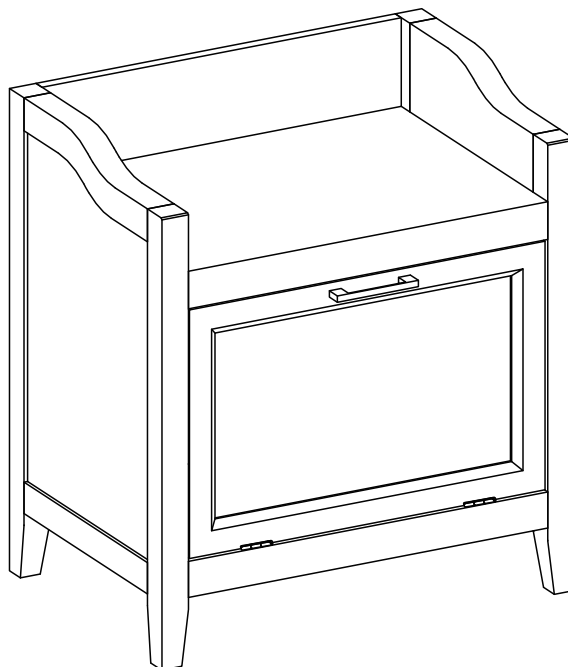 


AVINGTON / MIA / HAYES

STORAGE HAMPER BENCH

MODEL # AXCBC-004-WH





**FOR REPLACEMENT PARTS OR HELP WITH
ASSEMBLY PLEASE CONTACT US AT:**

simpli-home.com/customer-support

**PLEASE ENSURE TO HAVE THE MODEL #
FROM THE PACKAGING OR INSTRUCTION BOOKLET**

**TO RETURN THE PRODUCT:
PLEASE CONTACT THE RETAILER
WHERE THE ITEM WAS PURCHASED FROM**



**ENTER
TO WIN**

**Upload an image of our furniture
in your home with a short review
to our facebook page for a chance to**

**Win up to \$3000 of
Simpli Home furniture!!!**

www.facebook.com/simplihomefurnishings



IMPORTANT : Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

SAFETY INFORMATION

Identify all the parts and hardware. Do not discard of the packaging until you have checked that you have all of the parts and hardware required. Hardware package may have spare parts.

WARNING: This item contains small parts which can be swallowed by children and pets. Keep children and pets away during assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets. We recommend that you assemble this unit on a carpeted floor to avoid scratches. If using power tools, set the tool to low torque to avoid damage.

May require 2 people for ease of assembly.

CARE and MAINTENANCE

To clean, use a soft or slightly damp cloth, then wipe with a clean, dry cloth. Dust with soft dry cloth.

Do not use ammonia-based cleaning products, as they will damage the finish.

Do not leave liquids or damp cloths on this furniture.

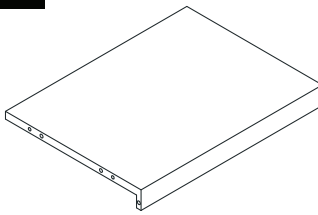 
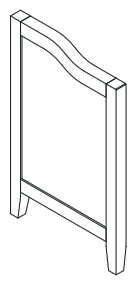 
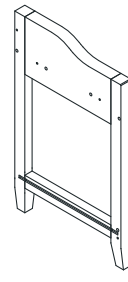 
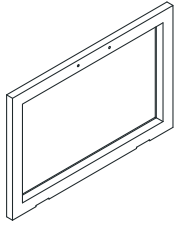 
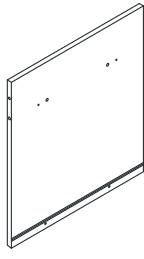 
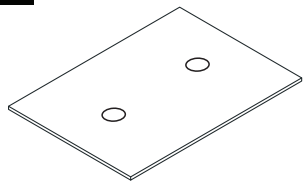 
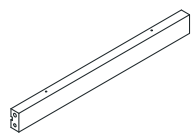 
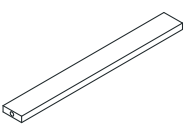 
To avoid dulling of the finish, do not place furniture in direct sunlight.

Please inspect and tighten all screws or bolts on a regular basis to ensure proper performance and safety of your item.



PRE-ASSEMBLY INFORMATION


MODEL # AXCBC-004-WH

PARTS DESCRIPTION


A  CABINET TOP QTY 1	B  LEFT SIDE PANEL QTY 1	C  RIGHT SIDE PANEL QTY 1	D  DOOR QTY 1
E  BACK PANEL QTY 1	F  BOTTOM PANEL QTY 1	G  CROSS BAR QTY 1	H  STRENGTHENING RIB QTY 2

  HARDWARE DESCRIPTION


AA  WOOD DOWEL QTY 14	BB  CAM BOLT QTY 14	CC  CAM LOCK QTY 14	DD  SCREW QTY 2
EE  SCREW QTY 2	FF  MAGNET QTY 1	GG  SCREW QTY 2	HH  HANDLE QTY 1
II  SCREW QTY 4	JJ  DOOR HINGE QTY 1	KK  SCREW QTY 13	LL  METAL HINGE QTY 2
MM  METAL PLATE QTY 1			

 

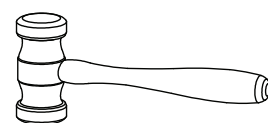 
Required -
 Flathead screwdriver
 Phillips screwdriver
 Rubber mallet
Not Included



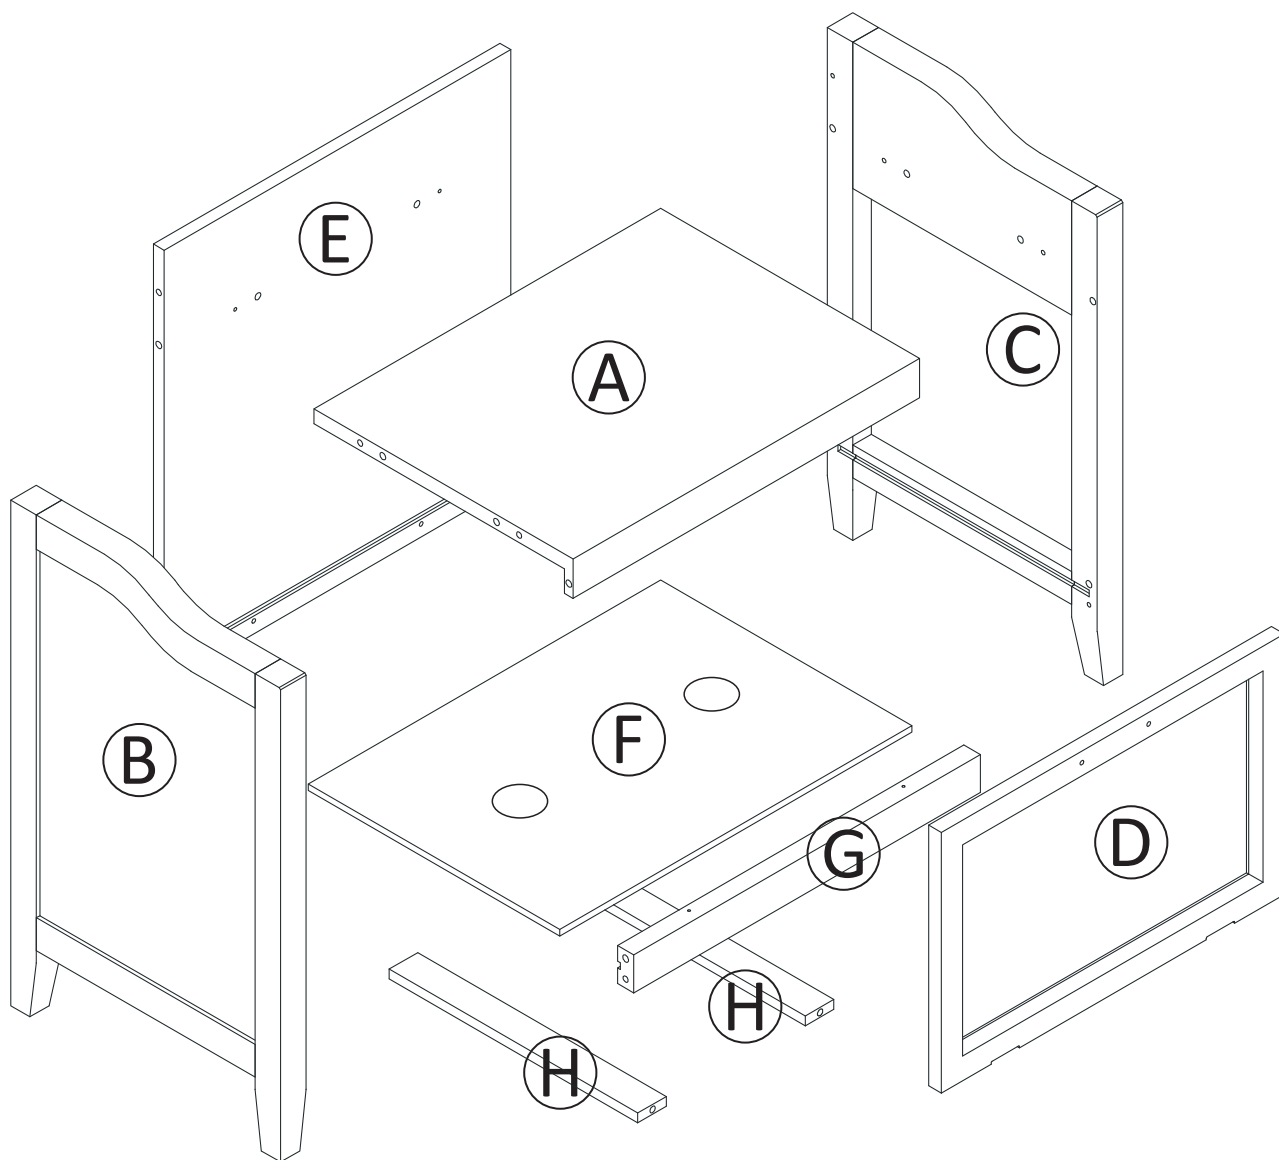 NEED HELP? For help with assembly or if you are missing a part,
 Please call customer service at 1-866-518-0120 ext. 262 (9 am to 4 pm EST)



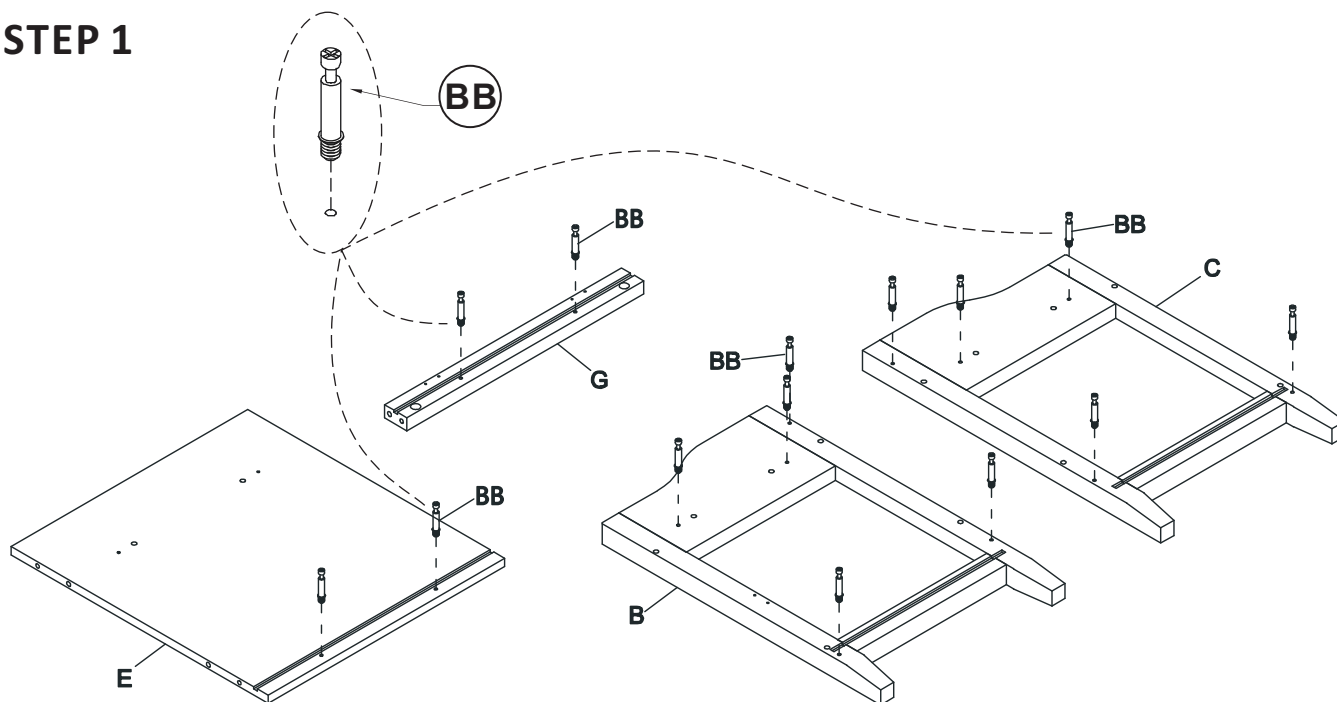 
STEP 1



Assembling Side Panels, Back Panel and Cross Bar

1. Lay down the left side panel (B), right side panel (C), cross bar (G) and back panel (E).
2. Screw 14 cam bolts (BB) into the pre-drilled holes accordingly on all panels using a Phillips screwdriver.
3. Do not over-tighten.

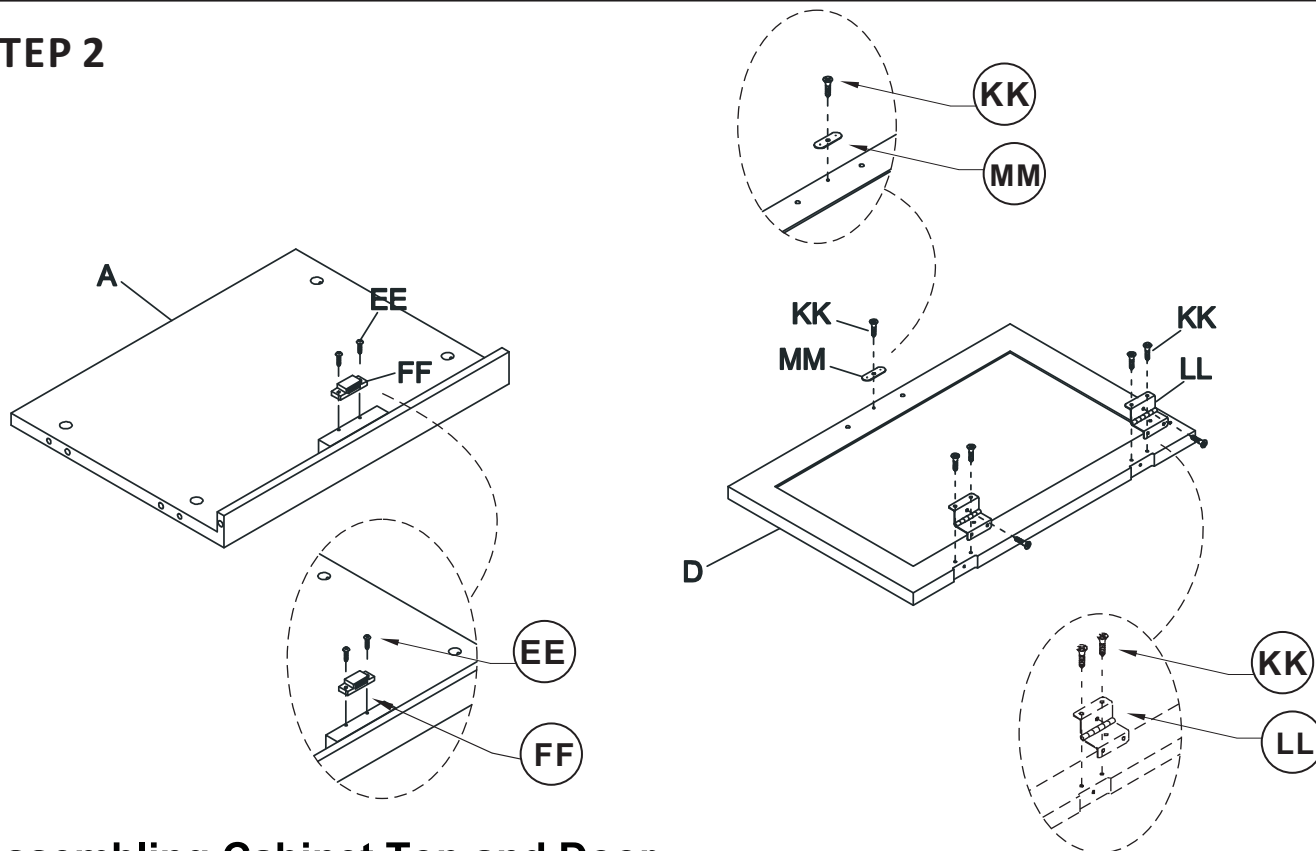 
STEP 2



Assembling Cabinet Top and Door

1. Lay down the cabinet top (A) and attach the magnet (FF) to the cabinet top (A) by inserting two screws (EE) through the holes using a Phillips screwdriver.
2. Lay down the door (D) and attach a metal hinge (LL) and metal plate (MM) to the door (D) by inserting five screws (KK) through the holes using a Phillips screwdriver.

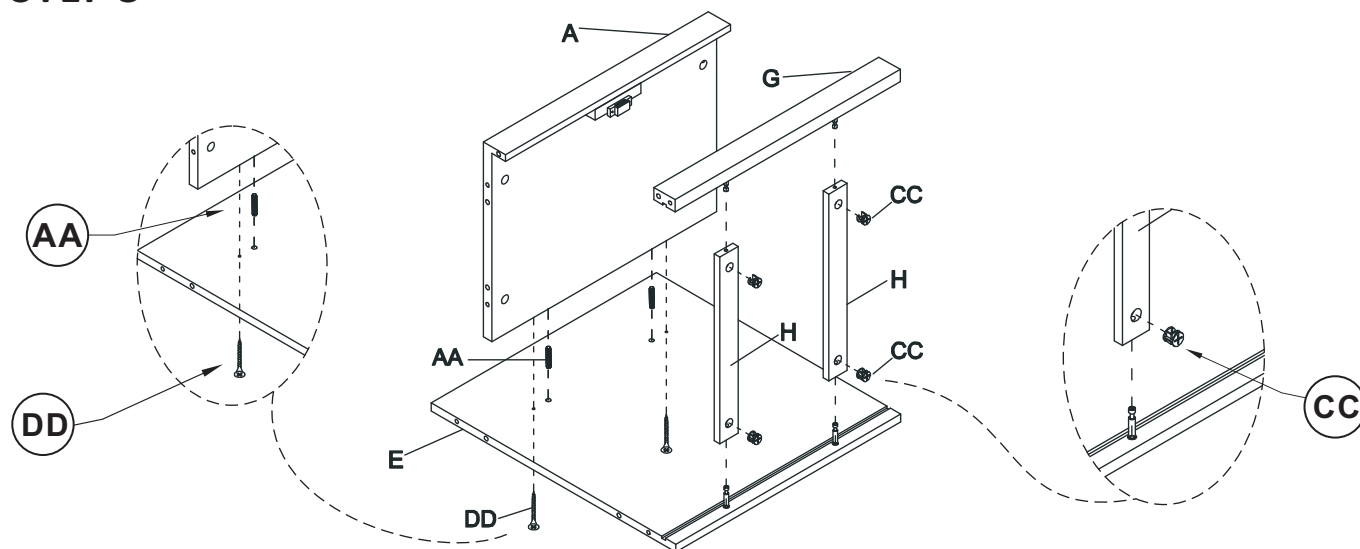 
STEP 3



Assembling Back Panel, Cabinet Top, Strengthening Rib and Cross Bar

1. Attach the cabinet top (A) and strengthening ribs (H) to the back panel (E) by inserting two wood dowels (AA), two cam locks (CC) and two screws (DD). Then rotate clockwise to secure cam locks (CC) and screws (DD) in place using a Phillips screwdriver.
2. Attach the cross bar (G) to the strengthening ribs (H) by inserting four cam locks (CC). Rotate clockwise to secure cam locks (CC) in place using a Phillips screwdriver.

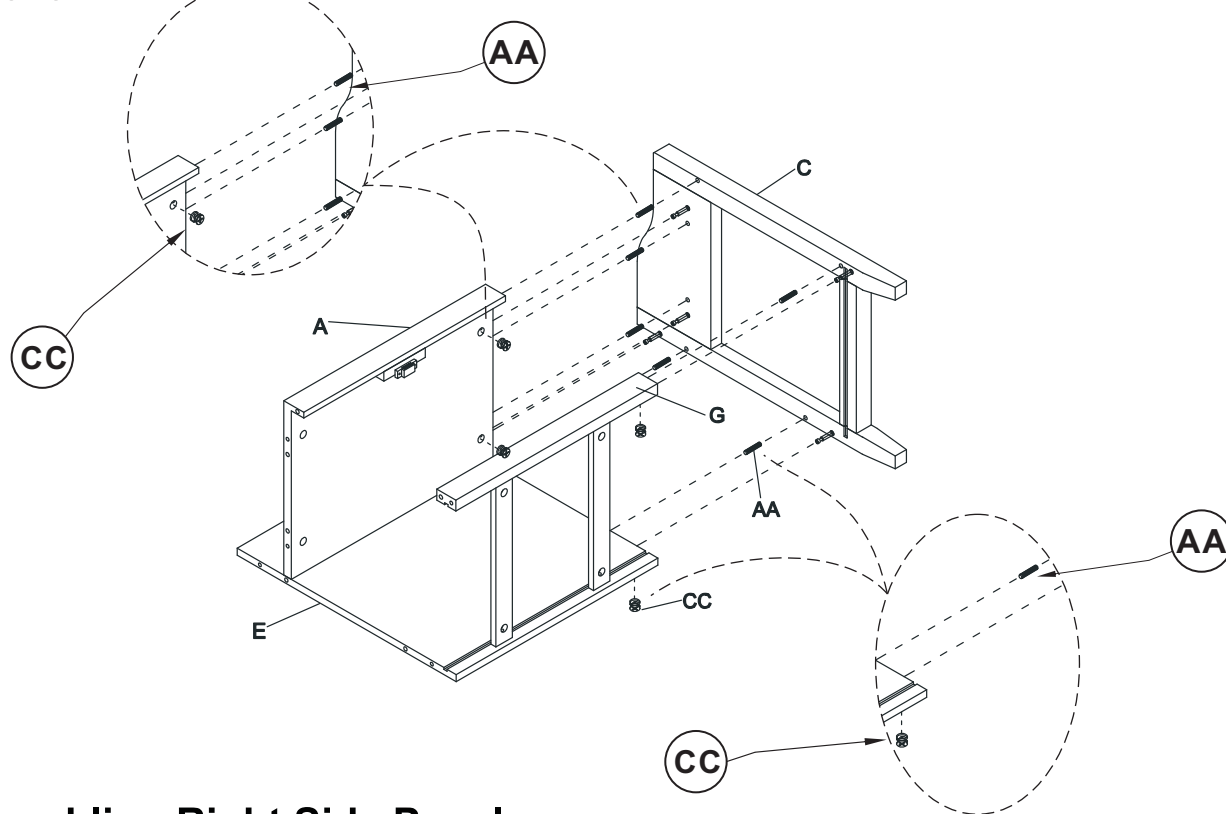 
STEP 4



Assembling Right Side Panel


1. Attach the back panel (E), cabinet top (A) and cross bar (G) to the right side panel (C) by inserting five wood dowels (AA) and four cam locks (CC). Rotate clockwise to secure cam locks (CC) in place using a Phillips screwdriver.

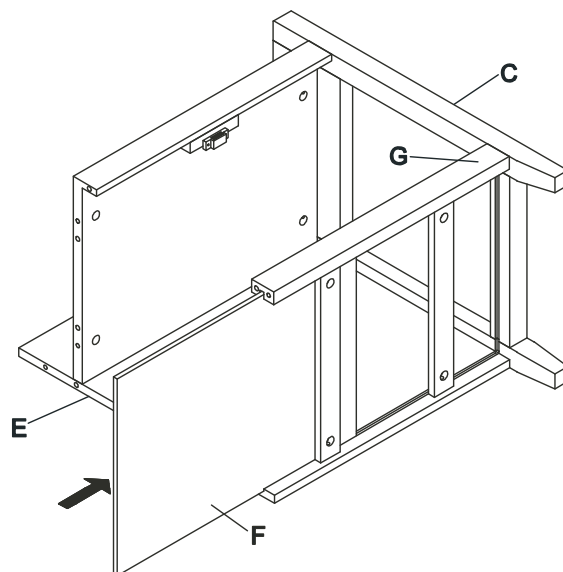 STEP 5

**Assembling Bottom Panel**


1. Insert the bottom panel (F) into the assembly.

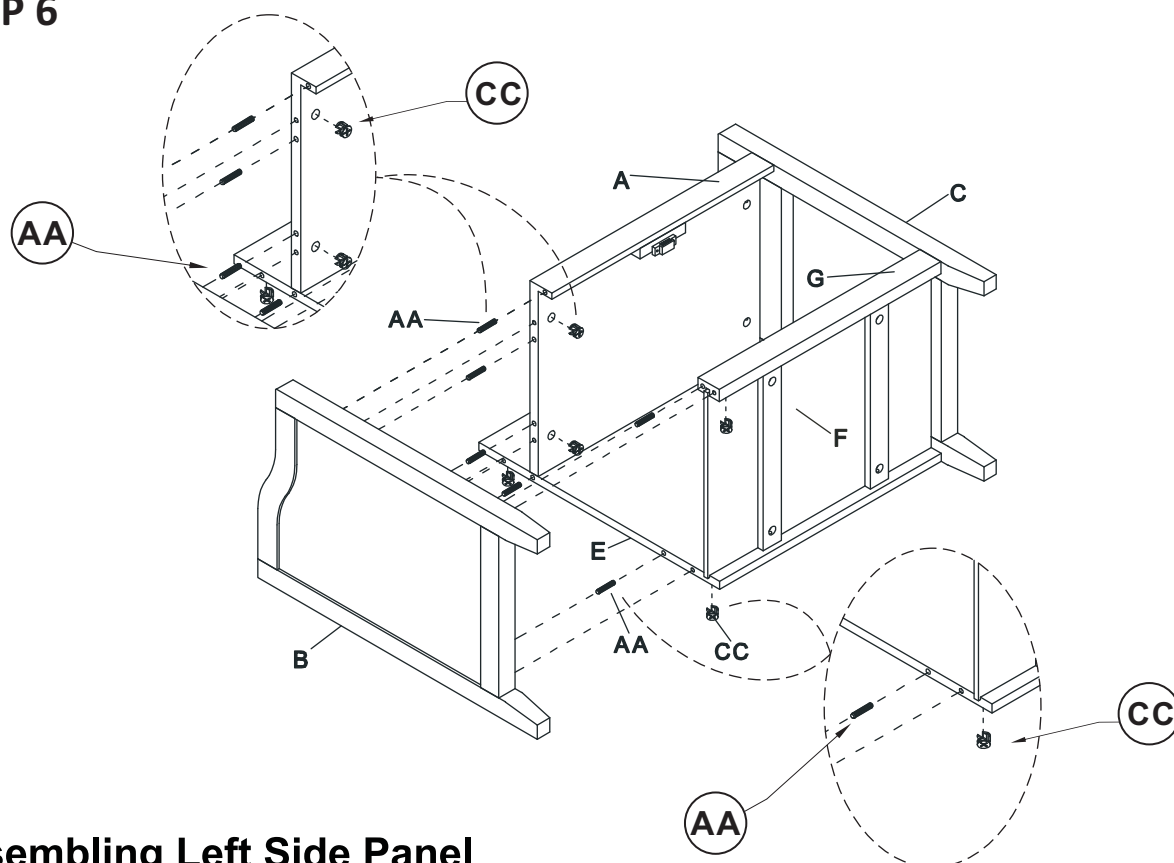 STEP 6

**Assembling Left Side Panel**

1. Attach the back panel (E), cabinet top (A) and cross bar (G) to the left side panel (B) by inserting five wood dowels (AA) and four cam locks (CC). Rotate clockwise to secure cam locks (CC) in place using a Phillips screwdriver.

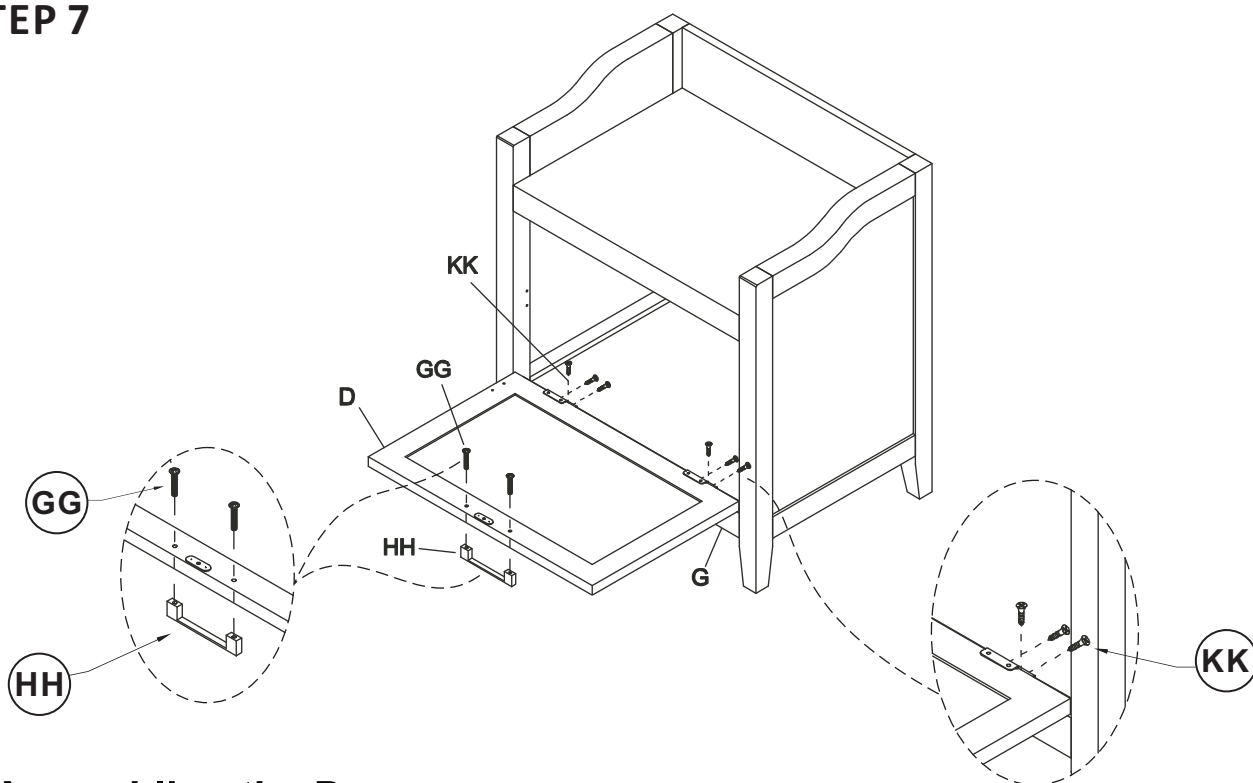 
STEP 7



Assembling the Door

1. Attach the door (D) into the cross bar (G) with six screws (KK) using a Phillips screwdriver.
2. Attach the handle (HH) to the door (D) with two screws (GG) using a Phillips screwdriver.

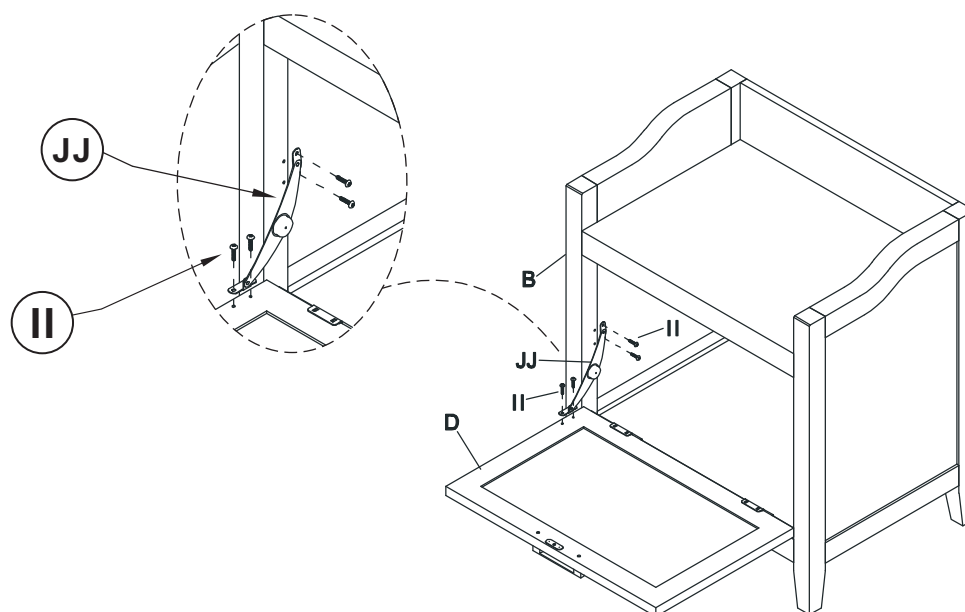 STEP 8



Attaching the Door

1. Connect the door (D) to the left side panel (B) with four screws (II) and door hinge (JJ) using a Phillips screwdriver.



WARRANTY

Thank you for purchasing a **Simpli Home – Wyndenhall – Brooklyn + Max** product. These products have been made to demanding, high-quality standards and are guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase. This warranty does not affect your statutory rights.

In case of any malfunction of your product (failure, missing parts, etc.) please contact us at our toll free service line at 1-866-518-0120 ext. 262 from 9 am to 4 pm, Monday to Friday, Eastern Standard Time or by email at simpli-home.com/customer-support.

We reserve the right to repair or replace the defective product, at its discretion.

This product is guaranteed for 12 months if used for normal purposes. Any warranty is invalid if the product has been overloaded or subject to neglect, improper use or an attempted repair by other than an authorized agent. Heavy-duty or daily professional/commercial usage are not guaranteed.

Due to continuous product improvement, we reserve the right to change the product specifications without prior notice.



Question, problems, missing parts?

Before returning your product
please email Customer Support at
simpli-home.com/customer-support

or call

Customer Support at 1-866-518-0120 ext. 262
Monday to Friday between 9 am – 4 pm EST

For more information visit us on our website
www.simpli-home.com

Like us on facebook
www.facebook.com/simplihomefurnishings