 


SIMPLIHOME

Sidney / Fleming / Dressler

54 Inch Tall TV Stand

Model # AXCSDY-01

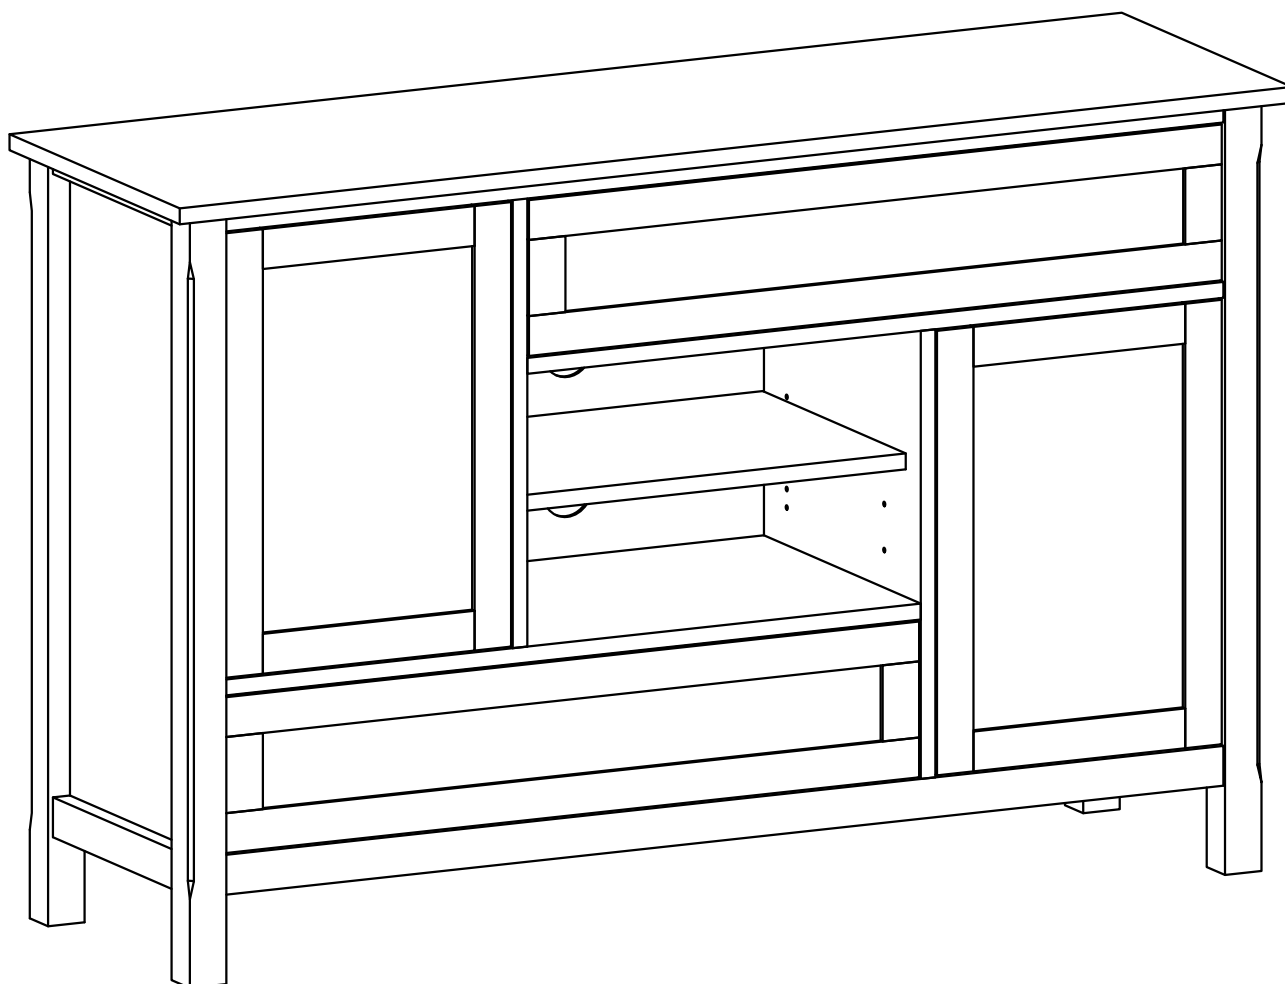

brooklyn + max™

WyndenHall™
HOME DECOR

SIMPLIHOME

Great quality is a right.

Thank you for shopping with Simpli Home,
America's top brand for high-value furniture.



It's time to register your product warranty.

It's quick and easy. And you'll be happy you did.



- ✓ Activate your **1-year** warranty
- ✓ Automatic entry to win a **\$500** gift certificate
- ✓ Earn instant rewards and **save**

simpli-home.com/product-registration

SIMPLIHOME

Review your product and collect rewards!

Thank you for your purchase! We hope you enjoy it. We'd love your feedback. Please share a review and get instant rewards!



simpli-home.com/product-review



Share photos and get your cash back!



Send us images or share them on social and qualify for instant rewards. You may even receive store credit on your entire purchase!



simpli-home.com/share-images

SIMPLIHOME®

For Fastest Customer Service:



1. Open your phone's camera.
2. Point your phone's camera at the QR code to scan.
3. Click on the pop up.
4. You'll be taken to our customer service page.
5. Fill the form with your order information and issue.
6. Submit form.
7. A customer service associate will contact you.

Other ways to contact us...



Email Us

customerservice@simpli-home.com



Visit Us

Visit our site directly at
www.simpli-home.com



Call Us

1-866-518-0120
Monday to Friday
9am to 5pm EST

***If you've purchased from a retailer and you wish to return the product, please contact the retailer directly.**

IMPORTANT : Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

Safety Information

CAUTION: Injuries and damage can occur from furniture tip over if product is not properly anchored to the wall. Use the Furniture Anti-Tipping Restraint provided with the product. Consult our assembly instructions for help.

If the Furniture Anti-Tipping Restraint kit is not in the box, please contact our customer service department in order to obtain another kit before using the furniture.

Identify all the parts and hardware. Do not discard of the packaging until you have checked that you have all of the parts and hardware required. Hardware package may have spare parts.

WARNING: This item contains small parts which can be swallowed by children and pets. Keep children and pets away during assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets. We recommend that you assemble this unit on a carpeted floor to avoid scratches. If using power tools, set the tool to low torque to avoid damage.

May require 2 people for ease of assembly.

Care & Maintenance

This furniture is designed for indoor use.

Perhaps the greatest environmental damage to wood furniture comes from wide swings in relative humidity (RH) in our homes. Wood absorbs and desorbs water as relative humidity rises and falls, and in doing so it swells and shrinks. Making matters worse, it expands and contracts unequally along different grain directions. As humidity changes, the components of wooden objects are continually pushing and pulling against each other. This pressure often results in parts of furniture no longer fitting together closely or becoming distorted or breaking from their own internal stresses.

The response to relative humidity changes begins with determining the annual average RH for your particular space. Then try to keep the RH in the space where your furniture is as close to that average as possible, generally within about 10% up or down. De-humidify in the summer and humidify in the winter.

Be aware that raising the temperature lowers the humidity and vice versa. Thus, modern heating systems, which can drive down interior RH in the winter, almost invariably cause problems for furniture. To counteract their effect, you can either modify the RH by keeping furniture containing spaces cooler in the winter or most importantly, have a good working humidifier for your home. A humidistat automatically works to balance the humidity in your home so it is constant. Dry indoor air can suck enough moisture from its surroundings to do permanent damage to wood, causing it to crack or split.

Remember, that not all woods are created equal. Two factors that help determine how rapidly a wood will lose moisture are pore size and surface hardness. A piece made from a dense and hard wood will dry less rapidly than pieces made from softer woods.

Furniture that is sealed and lacquered will lose moisture more slowly than an unfinished piece while pieces with veneer finishes are not only stronger but lose moisture more slowly than other finishes.

 
To help protect your wood furniture, take these steps:

- Use a humidifier, preferably one with an automatic control system that can sense the humidity level and adjust itself accordingly
- Don't over-humidify; that can damage wood by causing it to expand and contract
- Keep furniture out of direct sunlight, which can cause it to dry out, crack and warp
- If you can avoid it, don't put furniture near heating vents; if you can't, keep the item 3 to 4 inches away from the wall, giving the heat and air space to circulate
- Dust with soft dry cloth
- Do not use liquid or aerosol products
- To avoid marking, do not place rubber on surface (foot pads, etc.)
- For soil build-up, wipe with damp cloth & dry
- Do not use abrasive cleaners

WARNING

The maximum diagonal CRT television screen size is 25 inch to 27 inch (63.50 cm to 68.58 cm). For use with televisions weighing 200 lbs or less. Using larger or heavier televisions may cause instability or tip over which can lead to serious injury or even death.

The recommended maximum width of the television intended for use is 60 inch (152.4 cm).

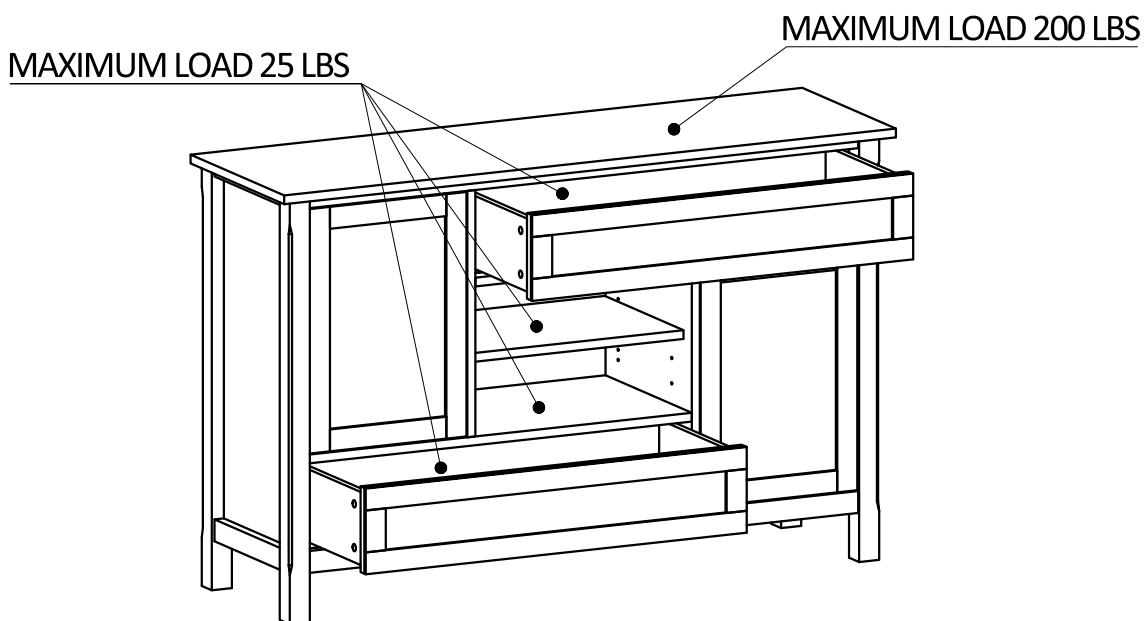

WARNING Do not place toys, food, etc. on the top shelves or upper drawers. Serious injury or death may occur when children climb on furniture. A remote control or items placed on the furniture may encourage a child to climb on the furniture and as a result make it top-heavy and cause it to tip over on the child.

WARNING Do not place a TV that exceeds the weight limits or size guidelines shown in the instructions specified for the furniture. Do not overload shelves or place heavy items on top shelves or drawers. Improper use of furniture to support TVs may result in serious injury or death.

 
WARNING Do not relocate audio and/or video equipment to furniture not specifically designed to support audio and/or video equipment. Do not move furniture without shelves or drawers unloaded. Furniture can collapse or tip over onto a child and cause physical injury or death.

This TV Stand does not come with legible instructions pertaining to the risk of fire and electric shock that is associated with the use of electrical components such as operation, user-maintenance, loading, storage and as applicable electrical issues including grounding or double-insulation.

Any use of this item other than that recommended by the manufacturer in this manual may cause fire, burns, electric shock and/or serious injuries or death.


Part Description

A

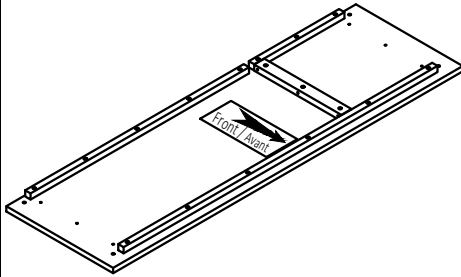


TOP
QTY 1

 B

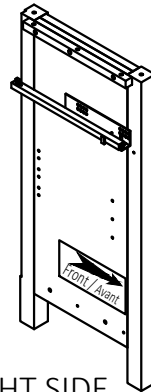


RIGHT SIDE
QTY 1

 C

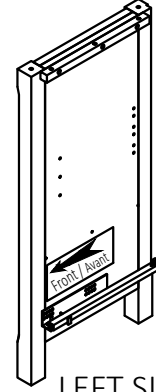


LEFT SIDE
QTY 1

 D

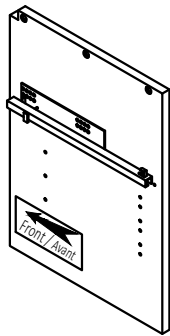


LEFT DIVIDER
QTY 1

 E

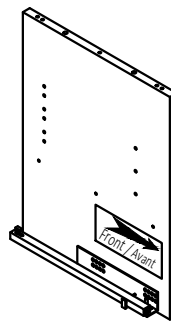


RIGHT DIVIDER
QTY 1

 F

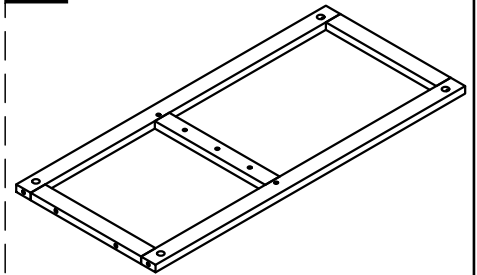


TOP FRAME
QTY 1

 G

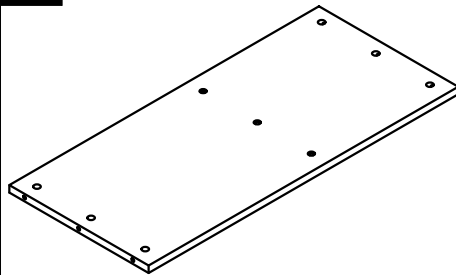


CENTRE SHELF
QTY 1

 H

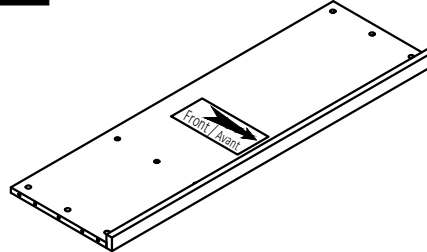


BOTTOM SHELF
QTY 1

 I

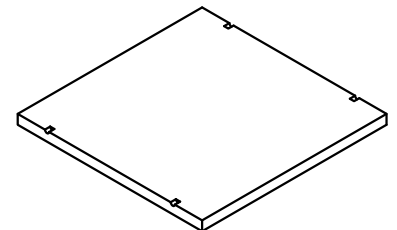


SIDE SHELF
QTY 2

 J

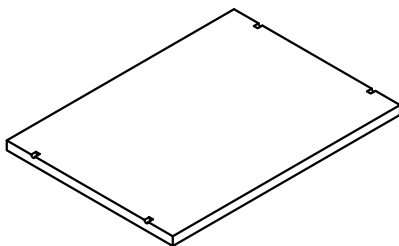


CENTRE SHELF
QTY 1

 KL

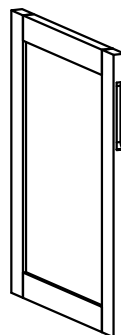

LEFT DOOR
QTY 1

 
KR

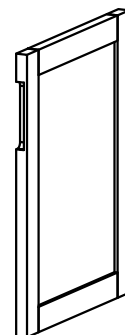

RIGHT DOOR
QTY 1


Part Description

 LL

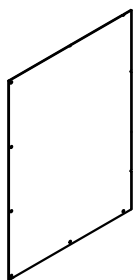

LEFT BACK PANEL
QTY 1

 
LR

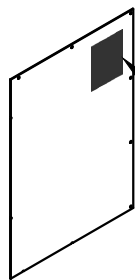

Warning
Label


RIGHT BACK PANEL
QTY 1

 L1

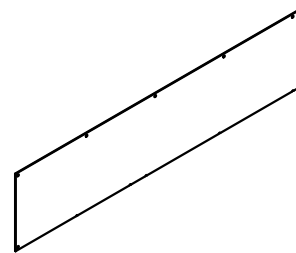


TOP & BOTTOM BACK PANEL
QTY 2

 L2

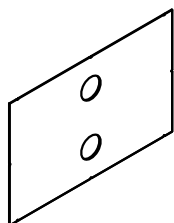


CENTRE BACK PANEL
QTY 1

 M

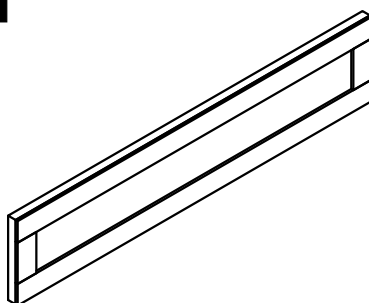


DRAWER FRONT
QTY 2

 NL

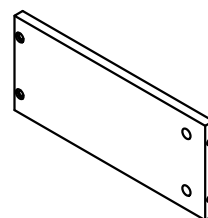


LEFT DRAWER SIDE
QTY 2

 NR

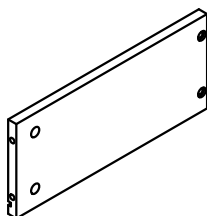


RIGHT DRAWER SIDE
QTY 2

 O

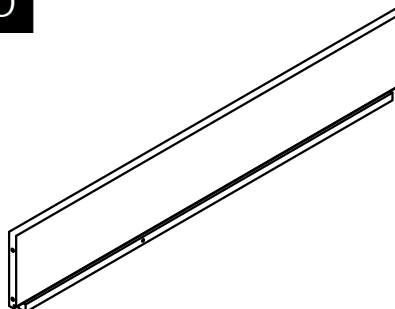


DRAWER BACK
QTY 2

 P

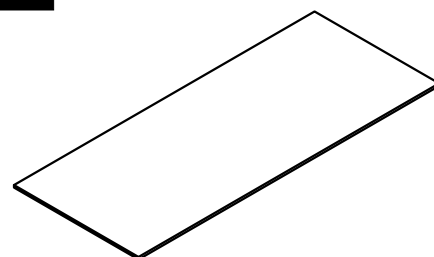

DRAWER BOTTOM
QTY 2

 Q

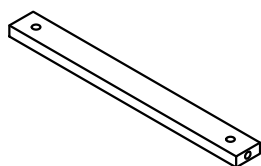


DRAWER BOTTOM SUPPORT
QTY 4

Pre-Assembly Information

Model # **AXCSDY-01**


Hardware Description

 1



ALLEN KEY SCREW
M6 X 30mm
QTY 26

 2



CAM LOCK PIN
CAM LOCK
QTY 32 SETS

3



 
WOOD DOWEL
M8 X 30mm
QTY 18

4




ALLEN KEY
QTY 1

5




PHILLIPS SCREW
ROUND HEAD
M4 X 15mm
QTY 38

 6

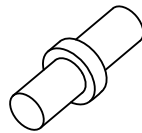


SHELF SUPPORT
QTY 18

 7




PHILLIPS SCREW
M3 X 15mm
QTY 8

 8

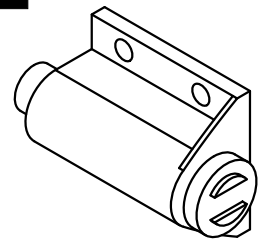


MAGNET
QTY 2

 9




PHILLIPS SCREW
M4 X 15mm
QTY 24

 10

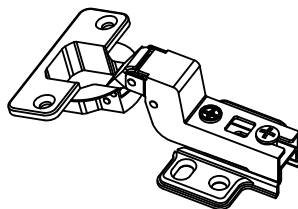


ADJUSTABLE HINGE
QTY 4

 11

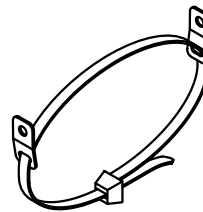



FURNITURE TIP OVER RESTRAINT
QTY 1 SET

 - a. M4 X 25mm - QTY 2
(1 is extra)
- b. M4 X 15mm - QTY 1
- c. M4 X 25mm - QTY 1

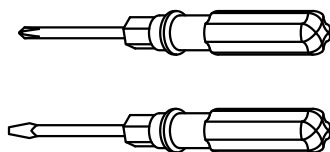


  Required -
Flathead screwdriver
Phillips screwdriver
Rubber mallet
Not Included

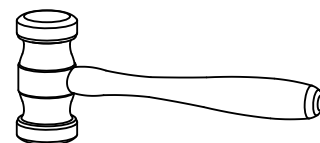

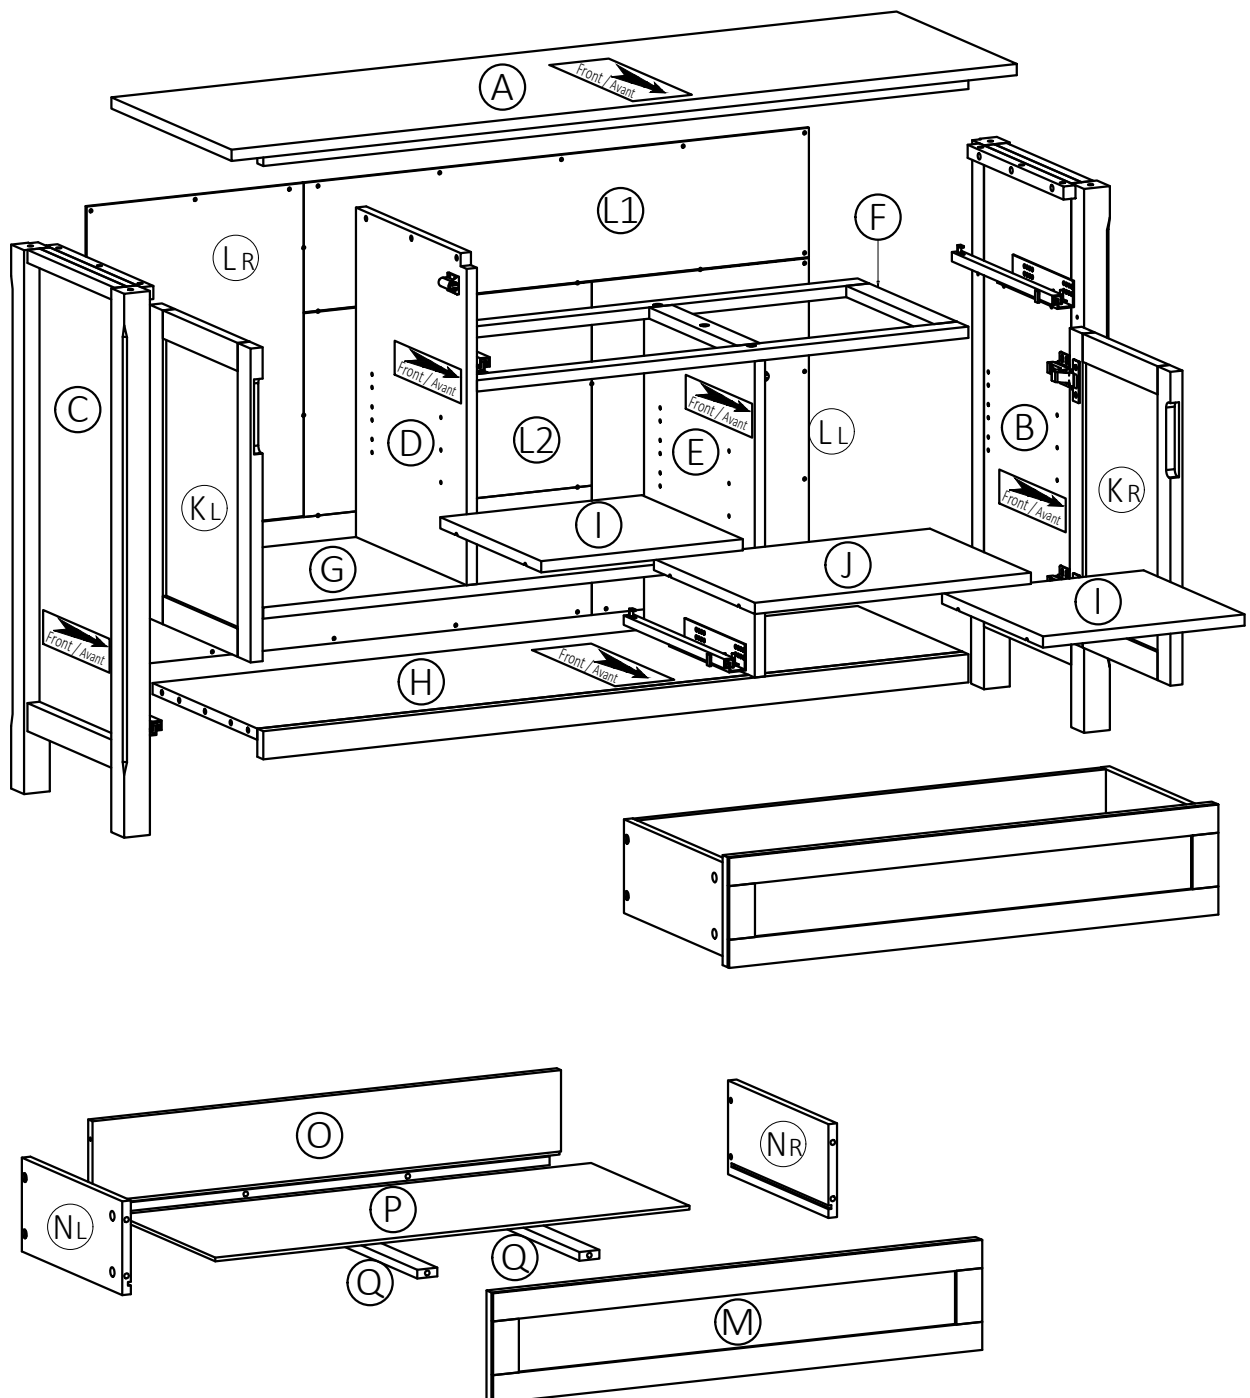


 Step 1

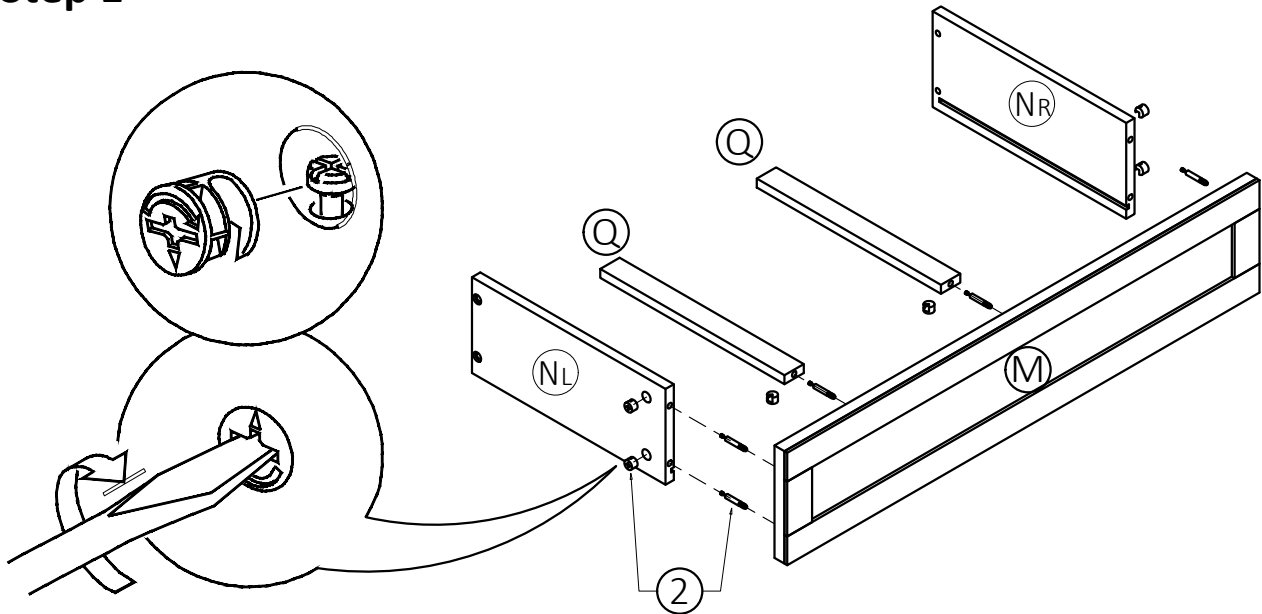


1. Attach 6 Cam Lock Pins (2) to pre-drilled holes at back of Drawer Front (M).
2. Align Cam Lock Pins with pre-drilled holes and attach Drawer Sides (NL, NR) and Drawer Bottom Supports (Q).
3. Insert 6 Cam Locks (2) into pre-drilled holes on Drawer Sides (NL, NR) and Drawer Bottom Supports (Q) (2 Cam Locks on each Drawer Side, 1 Cam Lock on each Drawer Bottom Support).
4. Use flathead screwdriver secure Cam Locks.

 Step 2

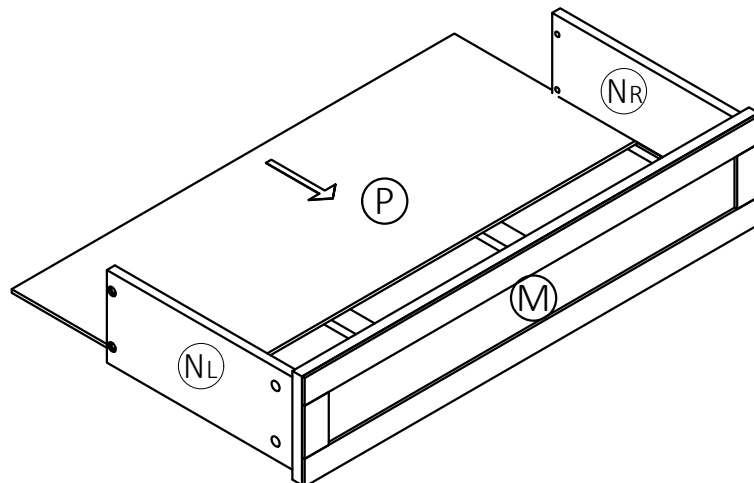


1. Slide Drawer Bottom (P) firmly into slots on Drawer Sides (NL, NR) and Drawer Front (M).

 Step 3

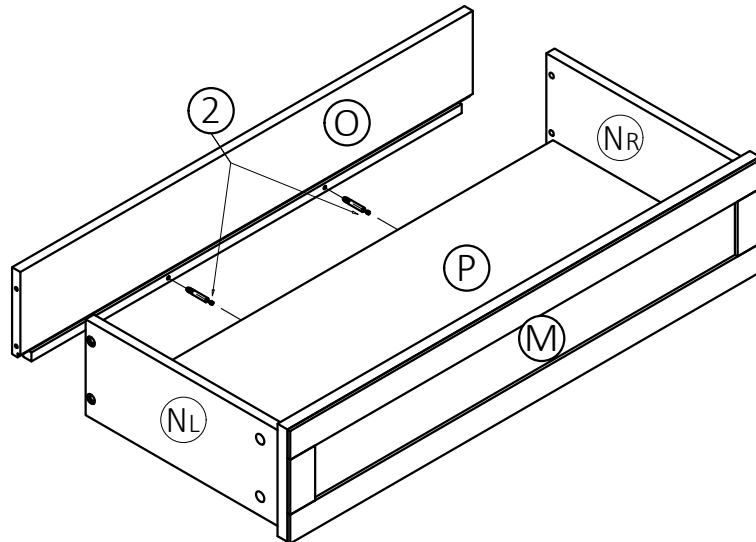


1. Attach 2 Cam Lock Pins (2) to pre-drilled holes at Drawer Back (O).

 Step 4

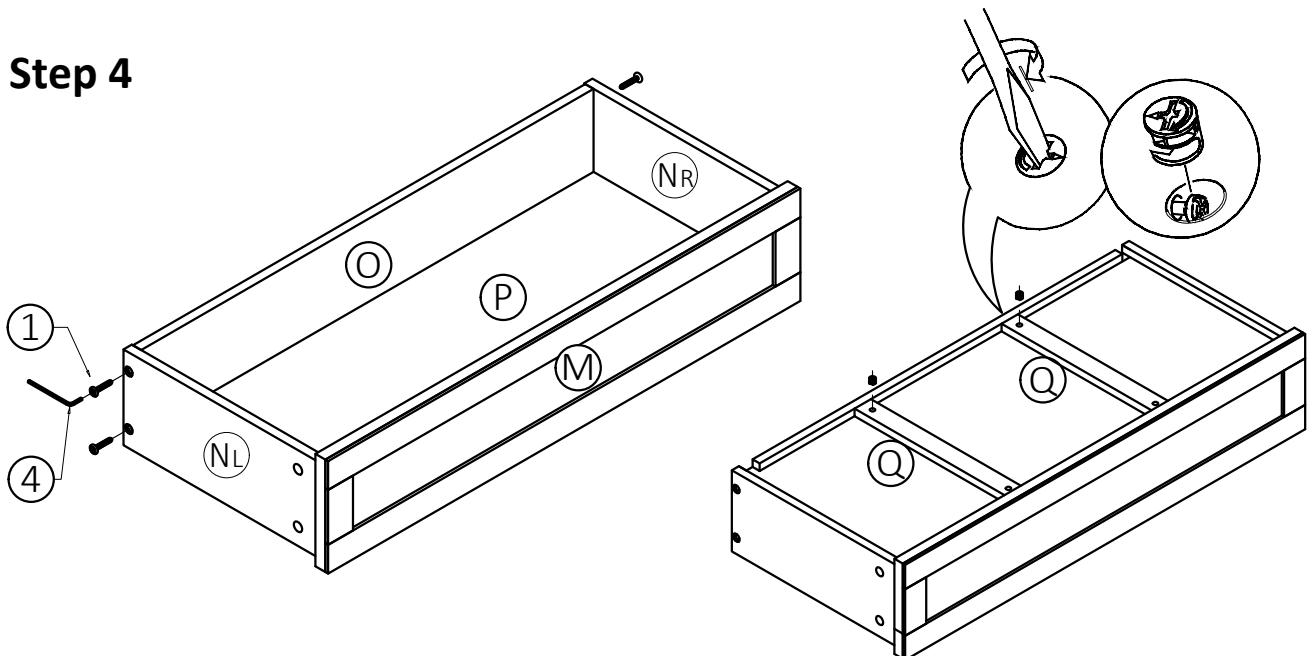


1. Align Cam Lock Pins on Drawer Back (O) with pre-drilled holes on Drawer Bottom Supports (Q).
2. Align Drawer Back (O) with Drawer Bottom (P) and press firmly into slot.
3. Attach Drawer Back (O) using 2 Allen Key Screws (1) through pre-drilled holes on each Side (NL, NR).
4. Use Allen Key (4) to tighten screws. Do not over-tighten.
5. Insert 1 Cam Lock (2) into pre-drilled hole on each Drawer Bottom Support (Q).
6. Use flathead screwdriver secure Cam Locks.

 Repeat Step 1 - 4 for the second drawer.

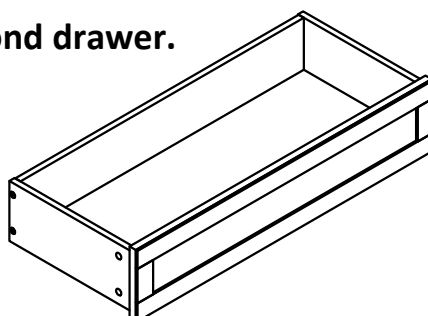


 Step 5

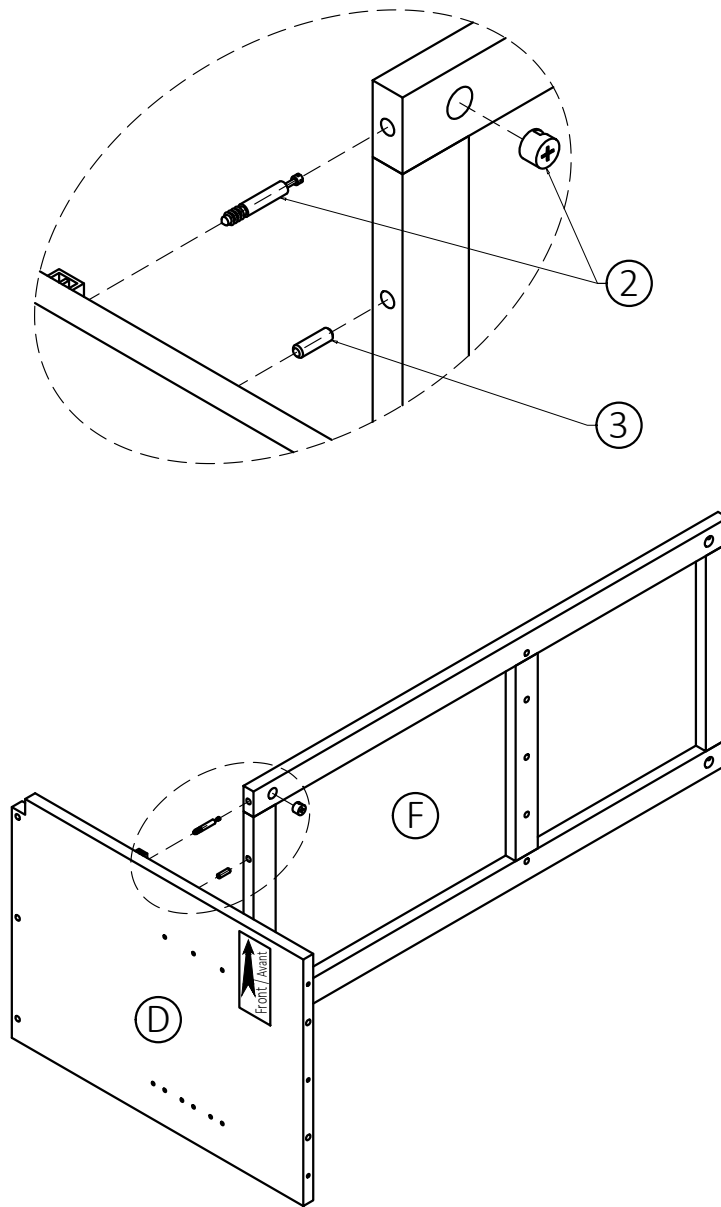


1. Insert 2 Dowels (3) into pre-drilled holes on Left Divider (D).
2. Use rubber mallet to tap Dowels (3) into bottom of holes securely. 1/2 length of Dowels should be exposed.
3. Attach 2 Cam Lock Pins (2) to Left Divider (D) using guide holes.
4. Align Cam Lock Pins with pre-drilled holes on Top Frame (F).
5. Insert 2 Cam Locks (2) into pre-drilled holes on Top Frame (F).
6. Use flathead screwdriver secure Cam Locks.

 Step 6

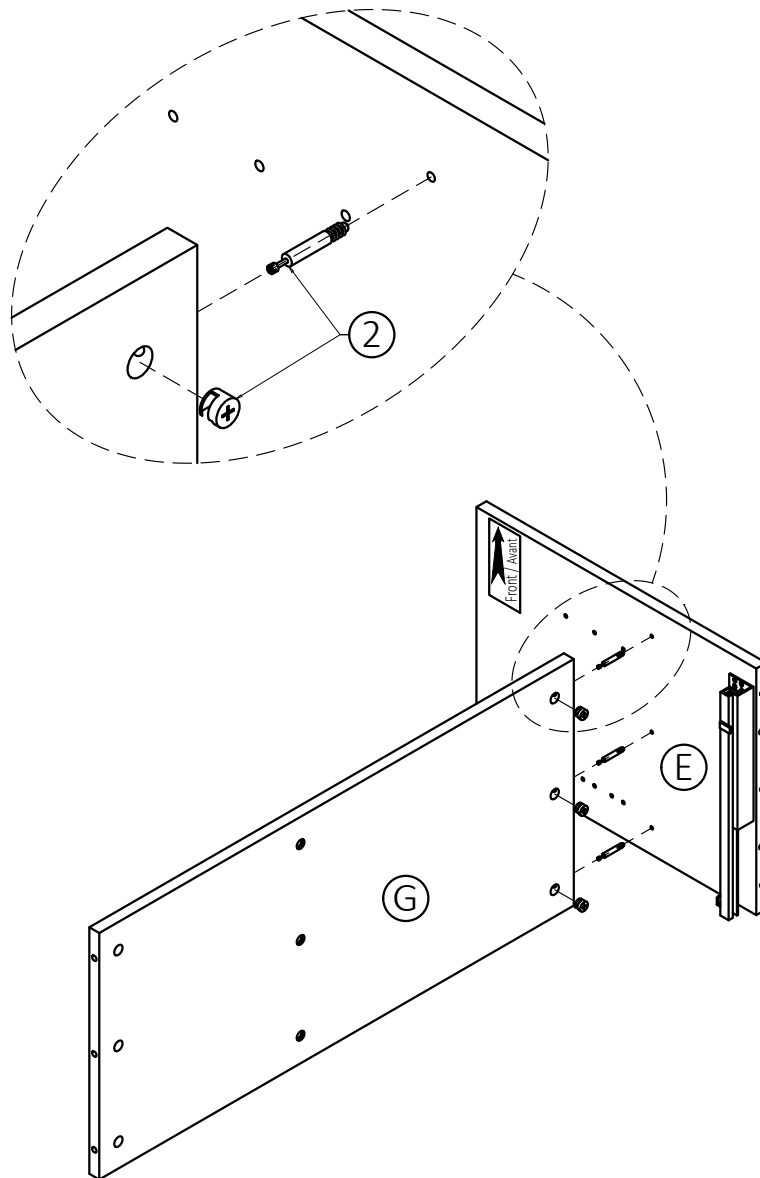


1. Attach 3 Cam Lock Pins (3) to Right Divider (E) using guide holes.
2. Align Cam Lock Pins with pre-drilled holes on Centre Shelf (G).
3. Insert 3 Cam Locks (2) into pre-drilled holes on Centre Shelf (G).
4. Use flathead screwdriver secure Cam Locks.

 Step 7

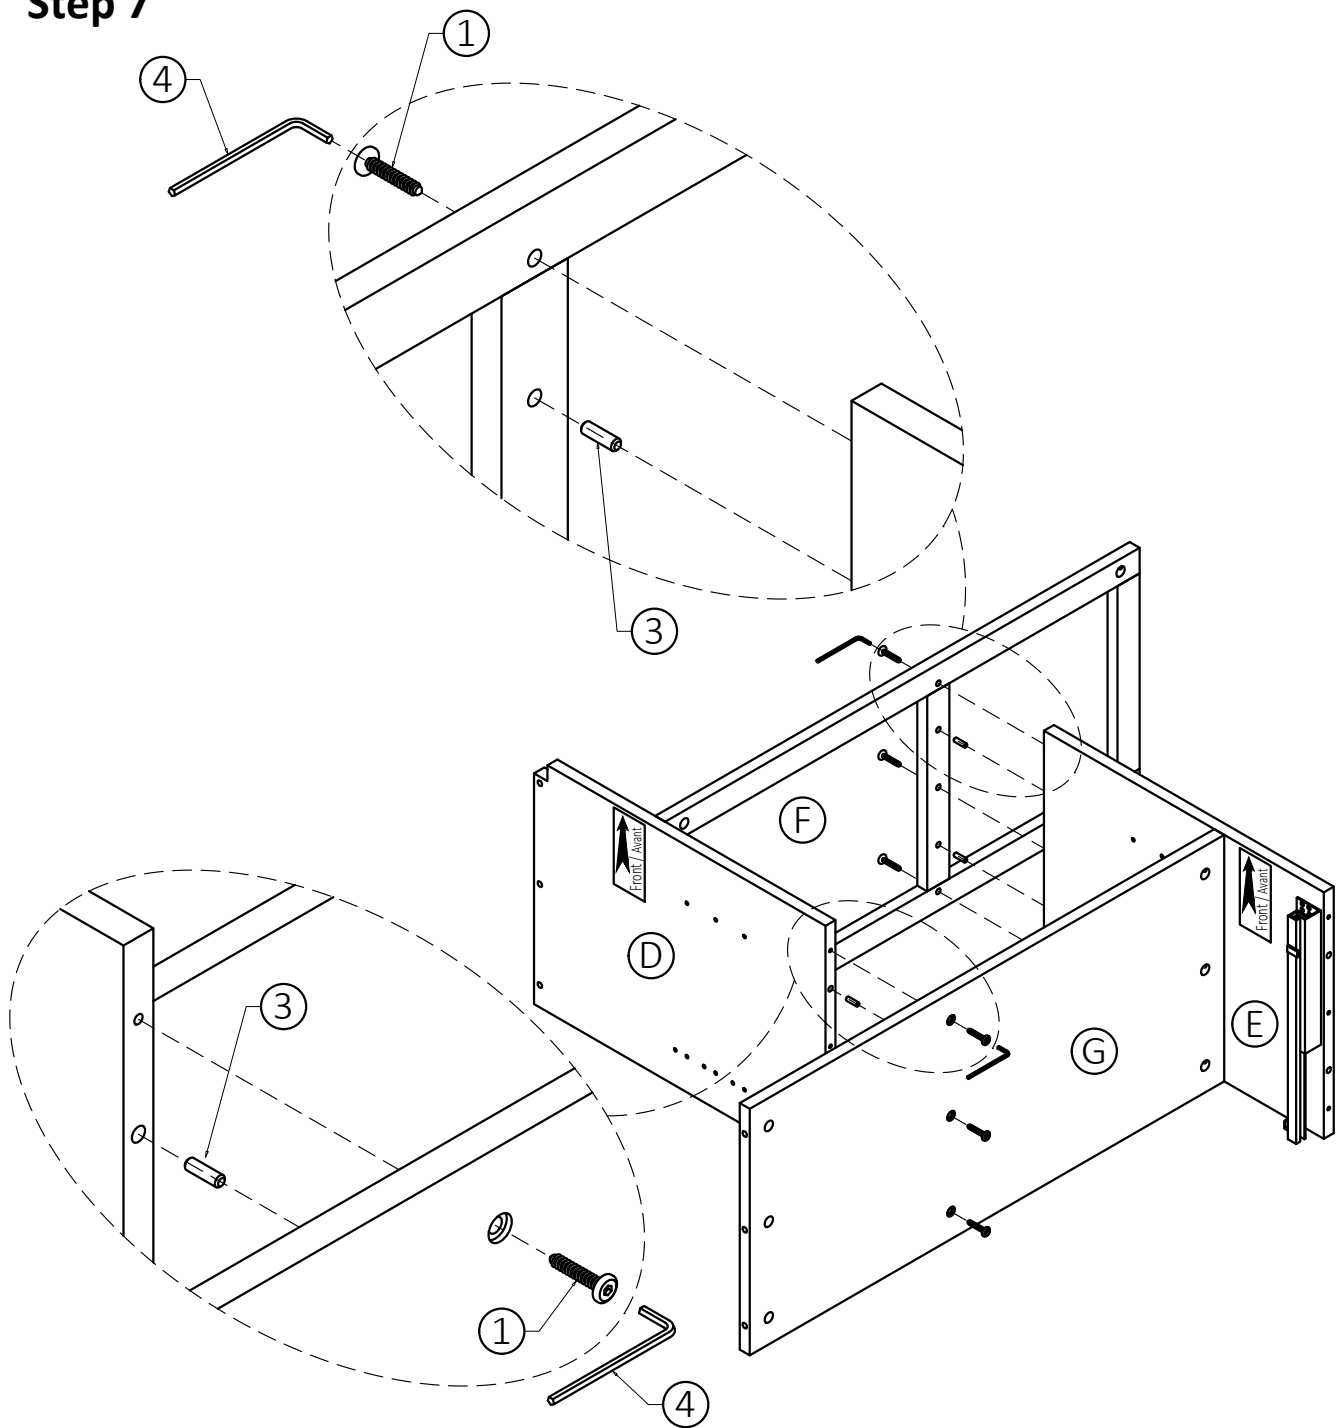


1. Insert 2 Dowels (3) into pre-drilled holes on each Left Divider (D) and Right Divider (E).
2. Use rubber mallet to tap Dowels (3) into bottom of holes securely. 1/2 length of Dowels should be exposed.
3. Attach Left Divider (D) to Centre Shelf (G) using 3 Allen Key Screws (1).
4. Attach Right Divider (E) to Top Frame (F) using 3 Allen Key Screws (1).
5. Use Allen Key (4) to tighten screws. Do not over-tighten.

 Step 8

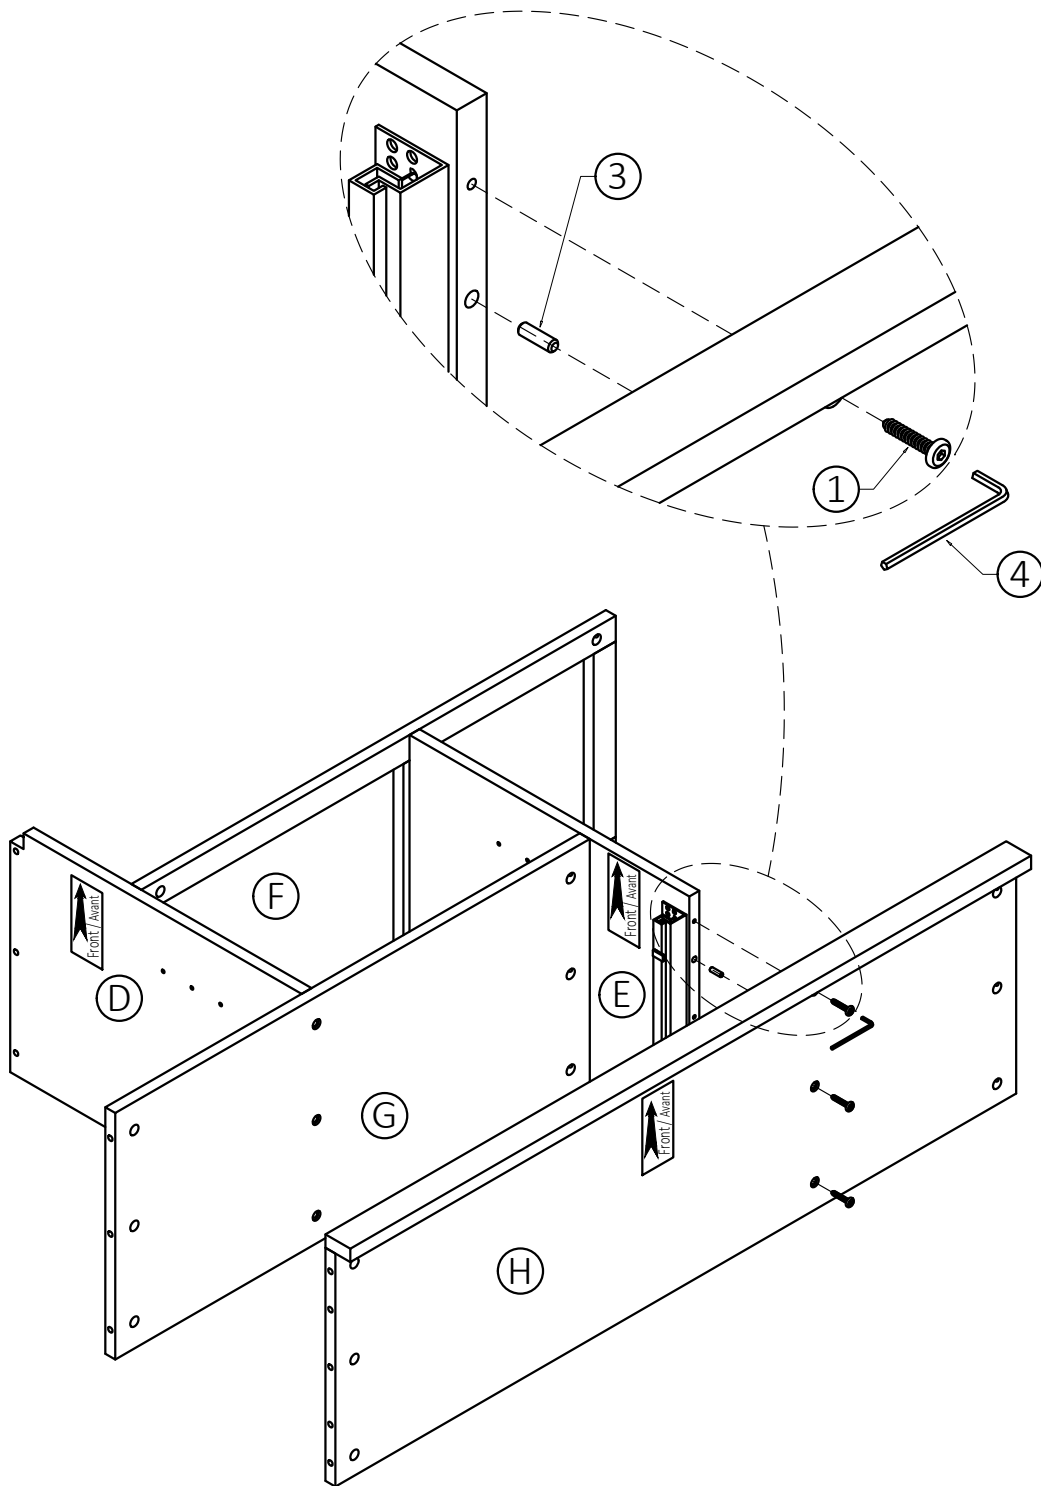


1. Insert 2 Dowels (3) into pre-drilled holes on Right Divider (E).
2. Use rubber mallet to tap Dowels (3) into bottom of holes securely. 1/2 length of Dowels should be exposed.
3. Attach Right Divider (E) to Bottom Shelf (H) using 3 Allen Key Screws (1).
4. Use Allen Key (4) to tighten screws. Do not over-tighten.

 Step 9

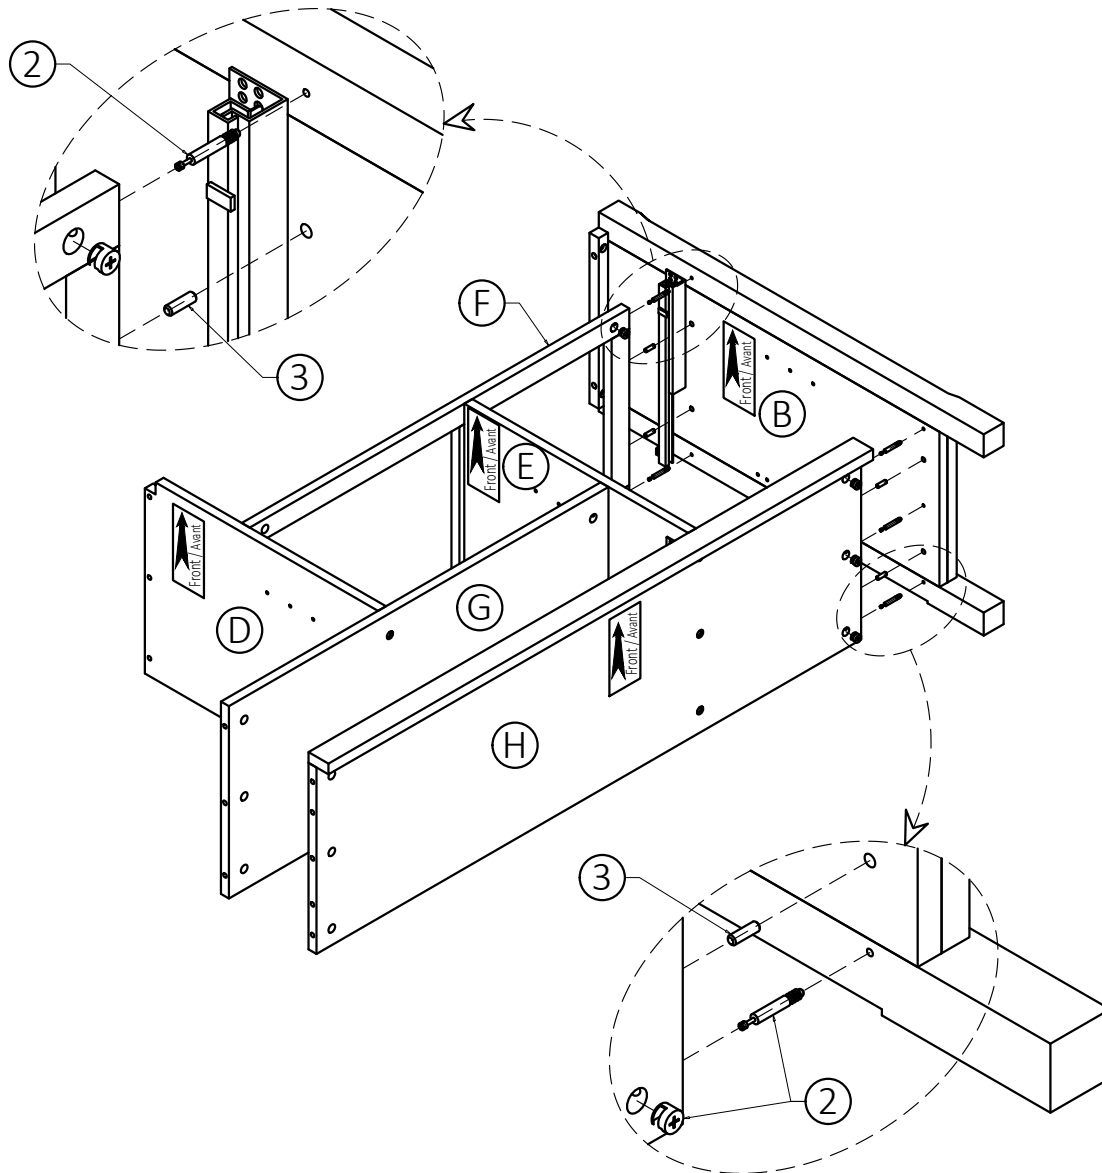


1. Insert 4 Dowels (3) into pre-drilled holes on Bottom Shelf (H) and Top Frame (F) (2 Dowels on each part).
2. Use rubber mallet to tap Dowels (3) into bottom of holes securely. 1/2 length of Dowels should be exposed.
3. Attach 5 Cam Lock Pins (2) to Right Side (B) using guide holes.
4. Align Cam Lock Pins with pre-drilled holes on Top Frame (F) and Bottom Shelf (H).
5. Insert 5 Cam Locks (2) into pre-drilled holes on Top Frame (F) and Bottom Shelf (H).
6. Use flathead screwdriver secure Cam Locks.

 Step 10

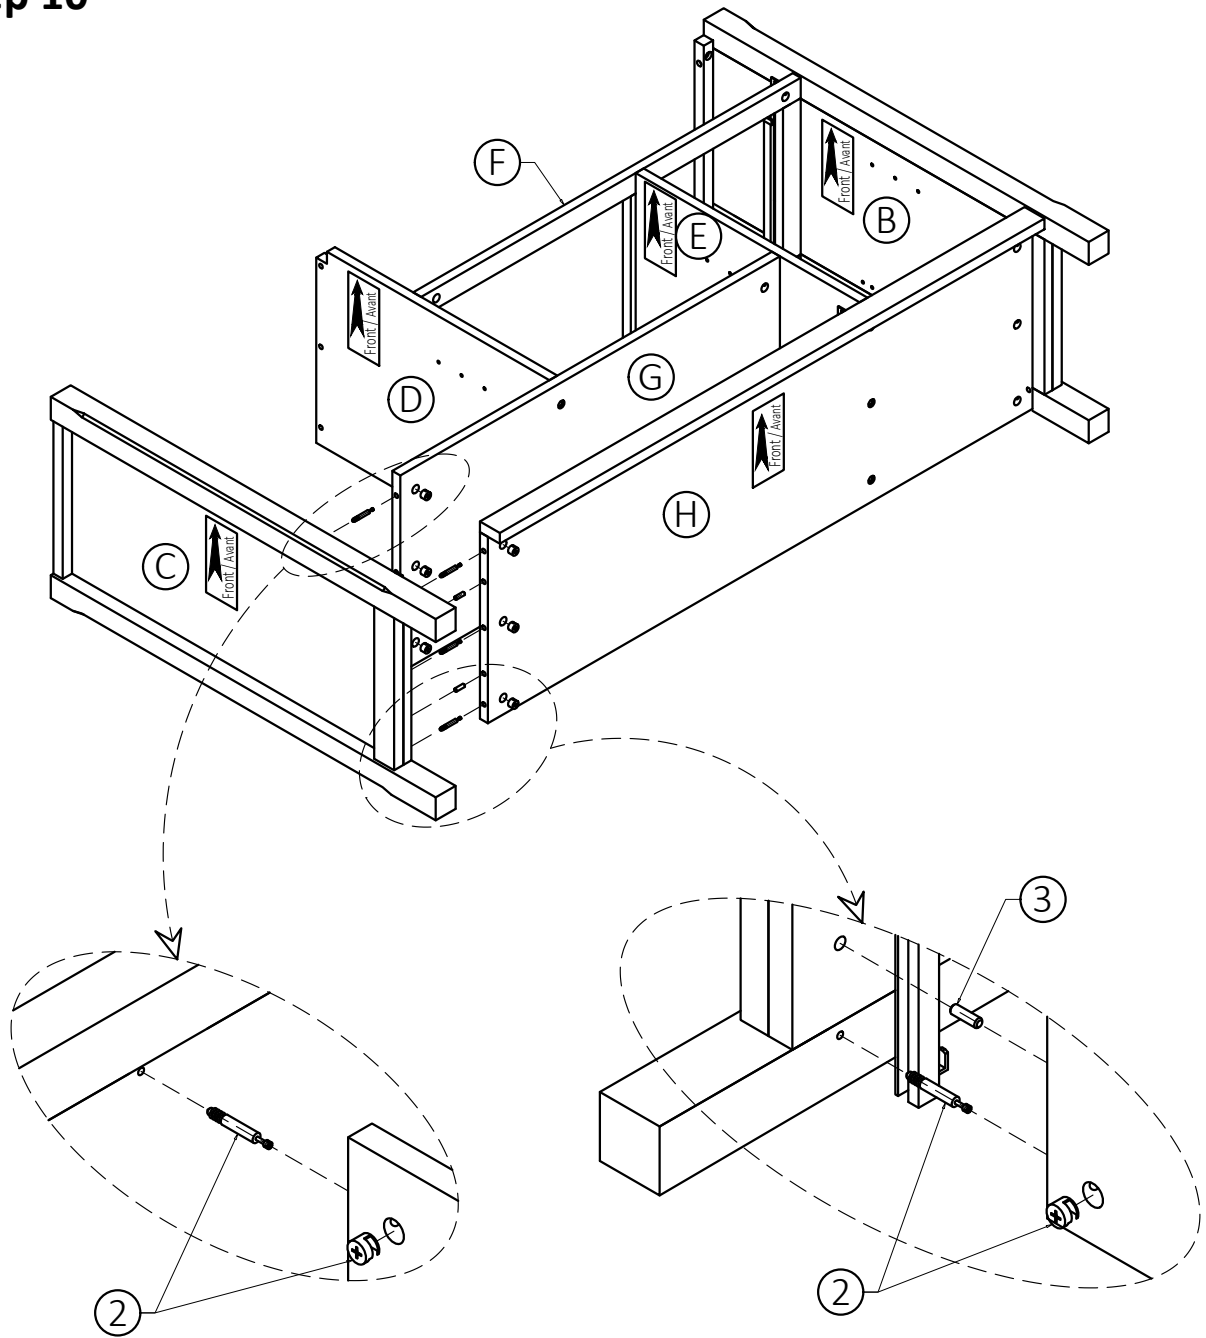

1. Insert 2 Dowels (3) into pre-drilled holes on Bottom Shelf (H).
2. Use rubber mallet to tap Dowels (3) into bottom of holes securely. 1/2 length of Dowels should be exposed.
3. Attach 6 Cam Lock Pins (2) to Left Side (C) using guide holes.
4. Align Cam Lock Pins with pre-drilled holes on Centre Shelf (G) and Bottom Shelf (H).
5. Insert 6 Cam Locks (2) into pre-drilled holes on Centre Shelf (G) and Bottom Shelf (H).
6. Use flathead screwdriver secure Cam Locks.

 Step 11

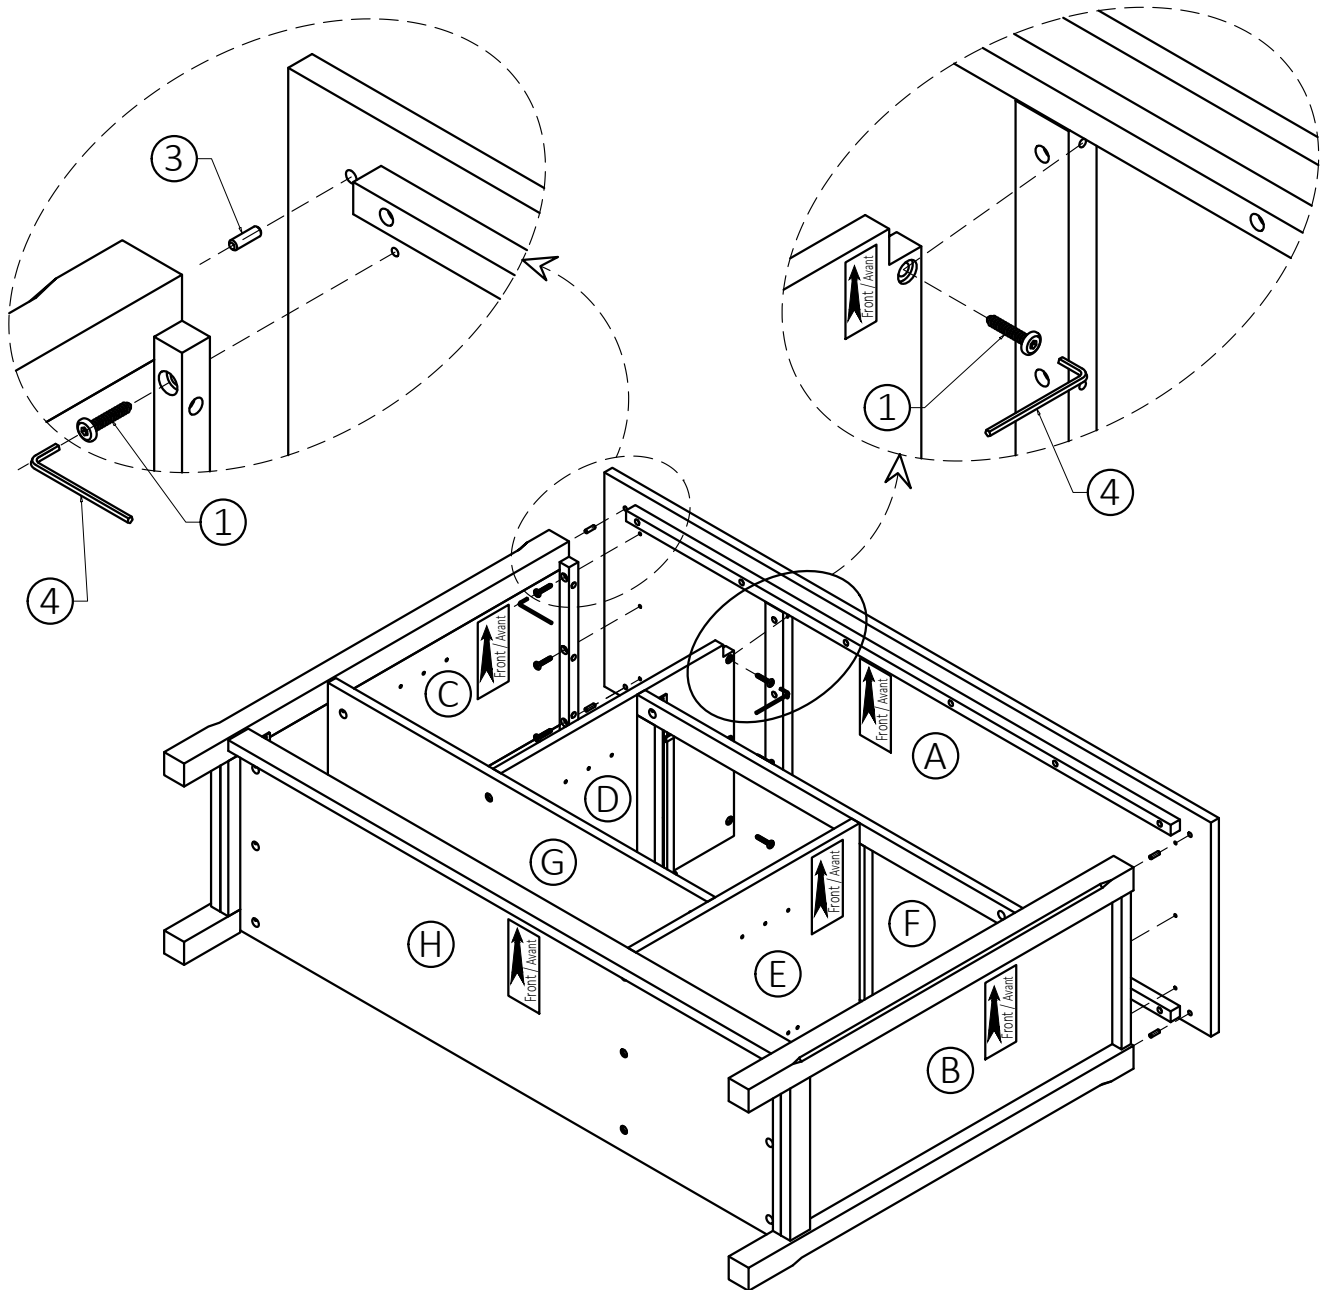


1. Insert 4 Dowels (3) into pre-drilled holes on Right Side (B) and Left Side (C).
2. Use rubber mallet to tap Dowels (3) into bottom of holes securely. 1/2 length of Dowels should be exposed.
3. Align pre-drilled holes bottom corners of Top (A) with Dowels (3) in Right Side (B) and Left Side (C).
4. Attach Top (A) to Right Side (B), Left Side (C) and Left Divider (D) using 9 Allen Key Screws (1).
5. Use Allen Key (4) to tighten Screws. Do not over-tighten.

Step 12


Note:

 The back of the TV frame does not have pre-drilled holes to attach the back panels.

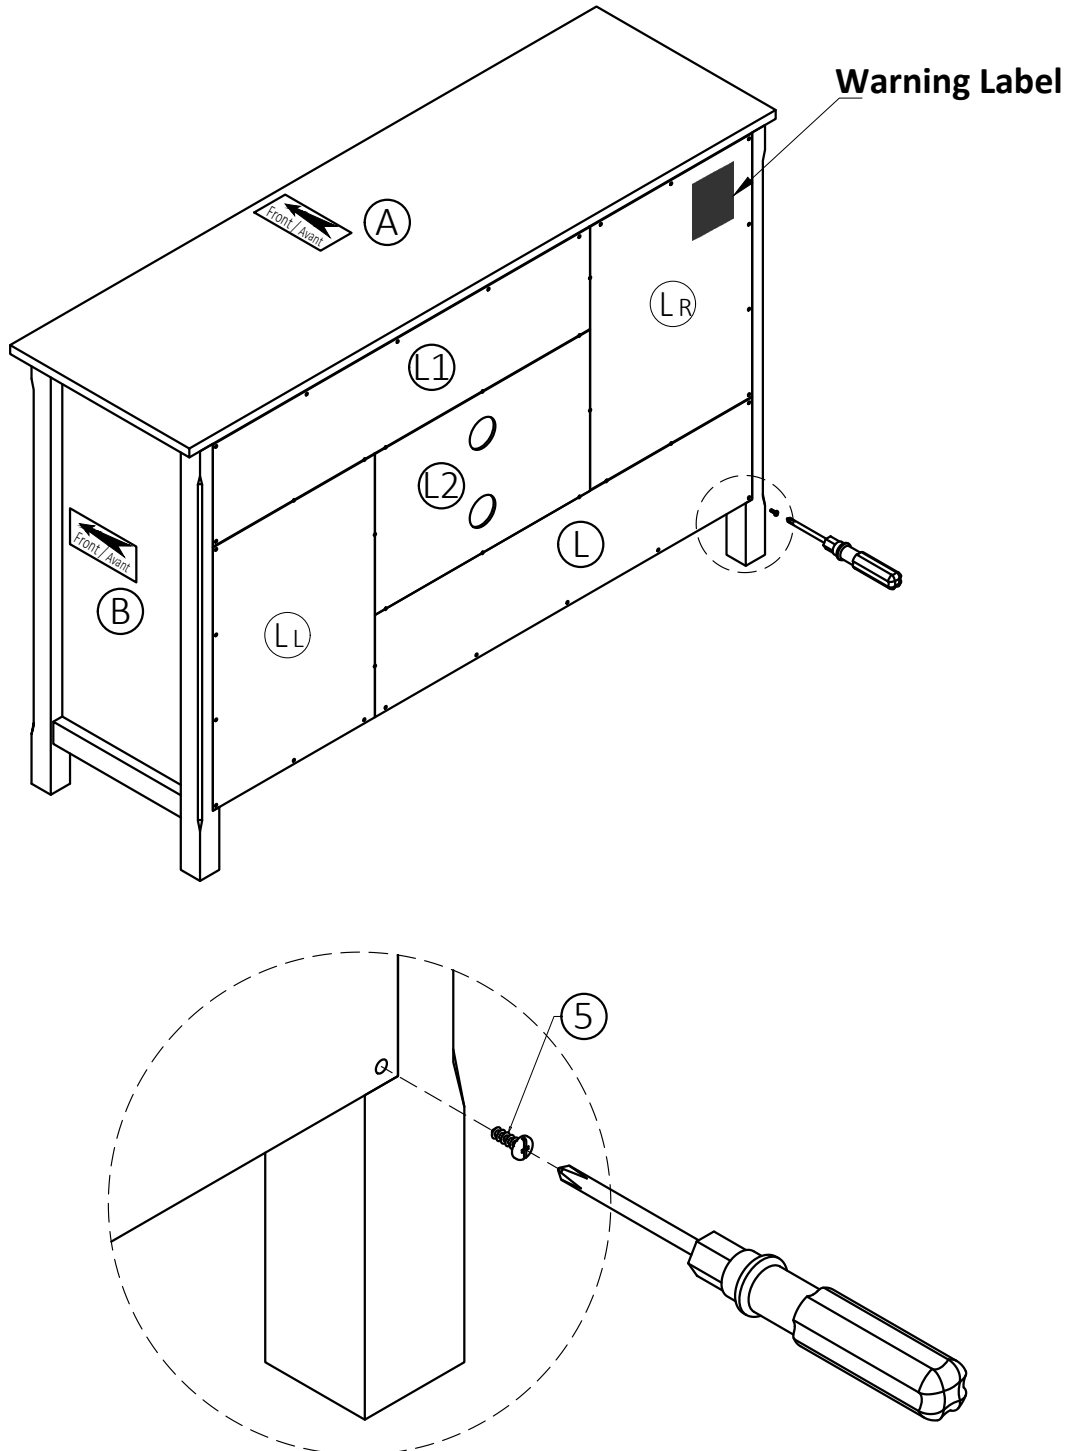


1. Attach Back Panels (LL), (LR), (L1), (L2) to back frame of TV Stand using 38 Phillips Screws Round Head (5) through pre-drilled holes.
2. Use Phillips Screwdriver to tighten screws.

 Step 13

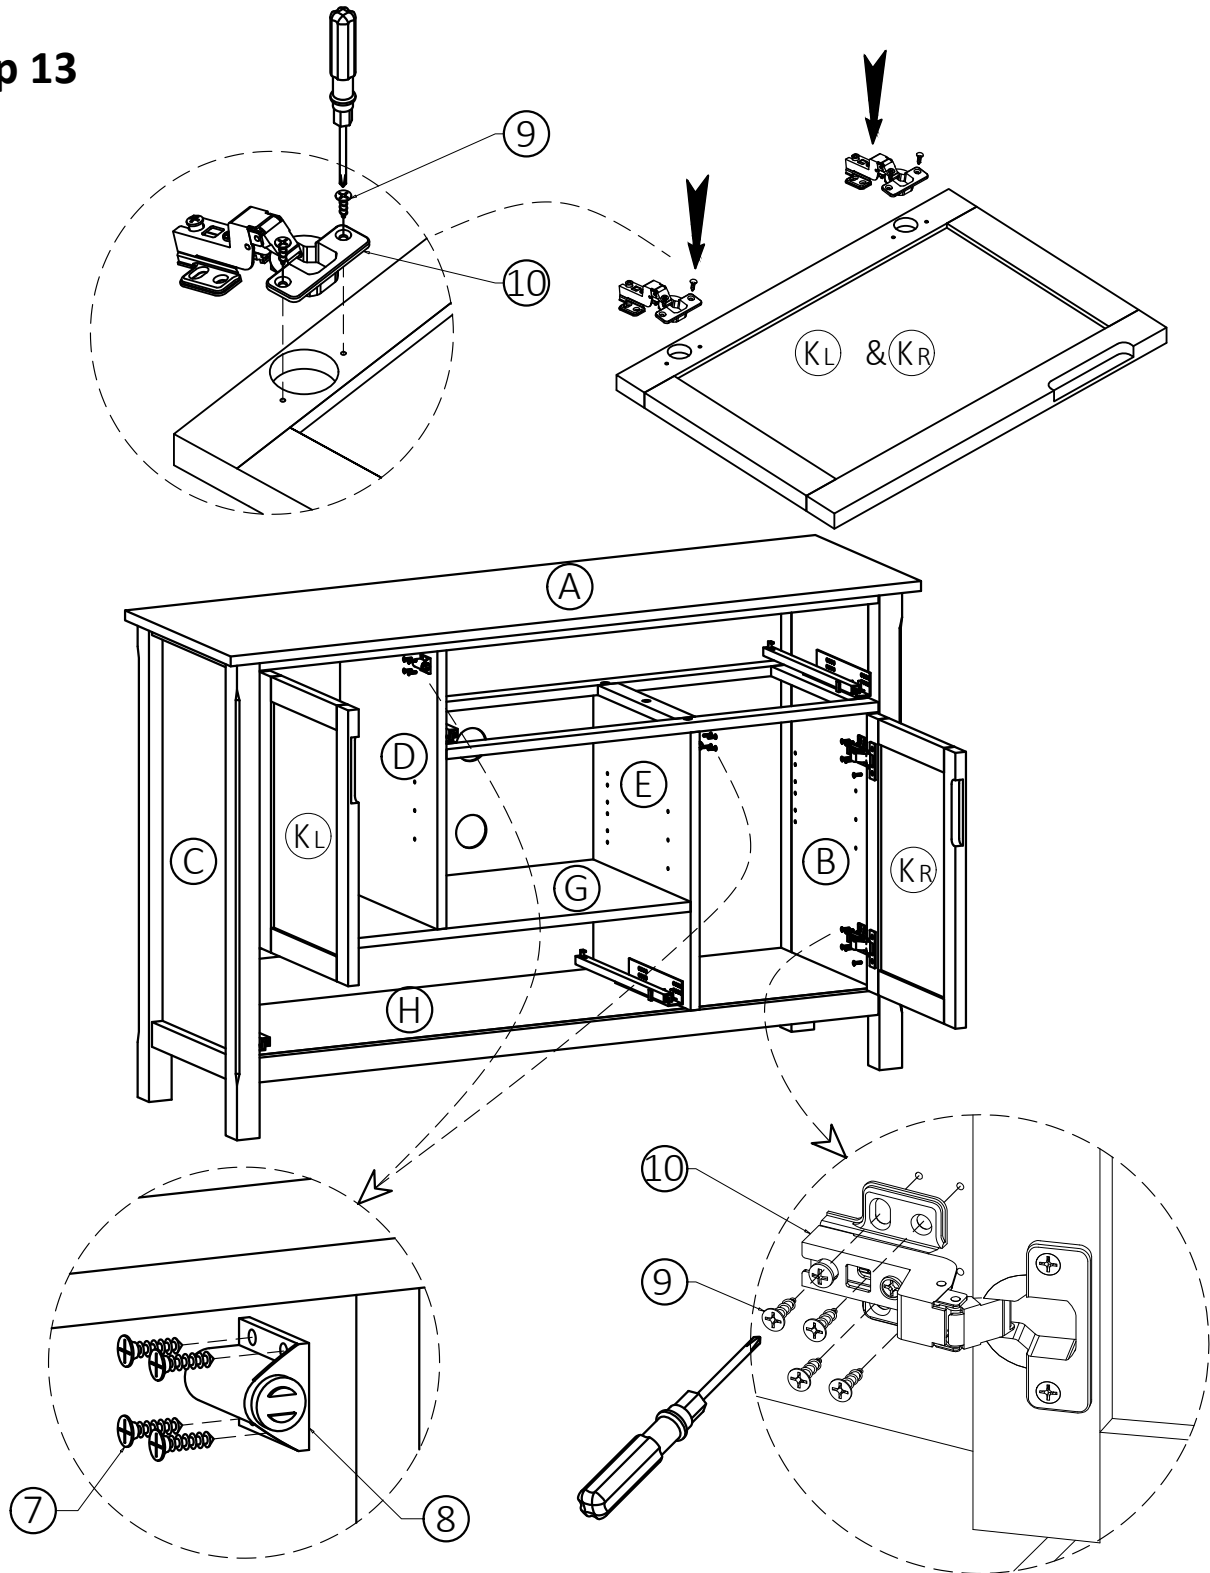

1. Attach Adjustable Hinges (10) to Doors (KL), (KR) using Phillips Screws (9) into guide holes on Doors (KL), (KR).
2. Attach Adjustable Hinges on Doors (KL), (KR) to Sides (C), (B) using Phillips Screws (9) into guide holes on Sides (C), (B).
3. Attach Magnets (8) using Phillips Screws (7) into guide holes on Left Divider (D) and Right Divider (E).
4. Use Phillips screwdriver to snugly tighten screw.

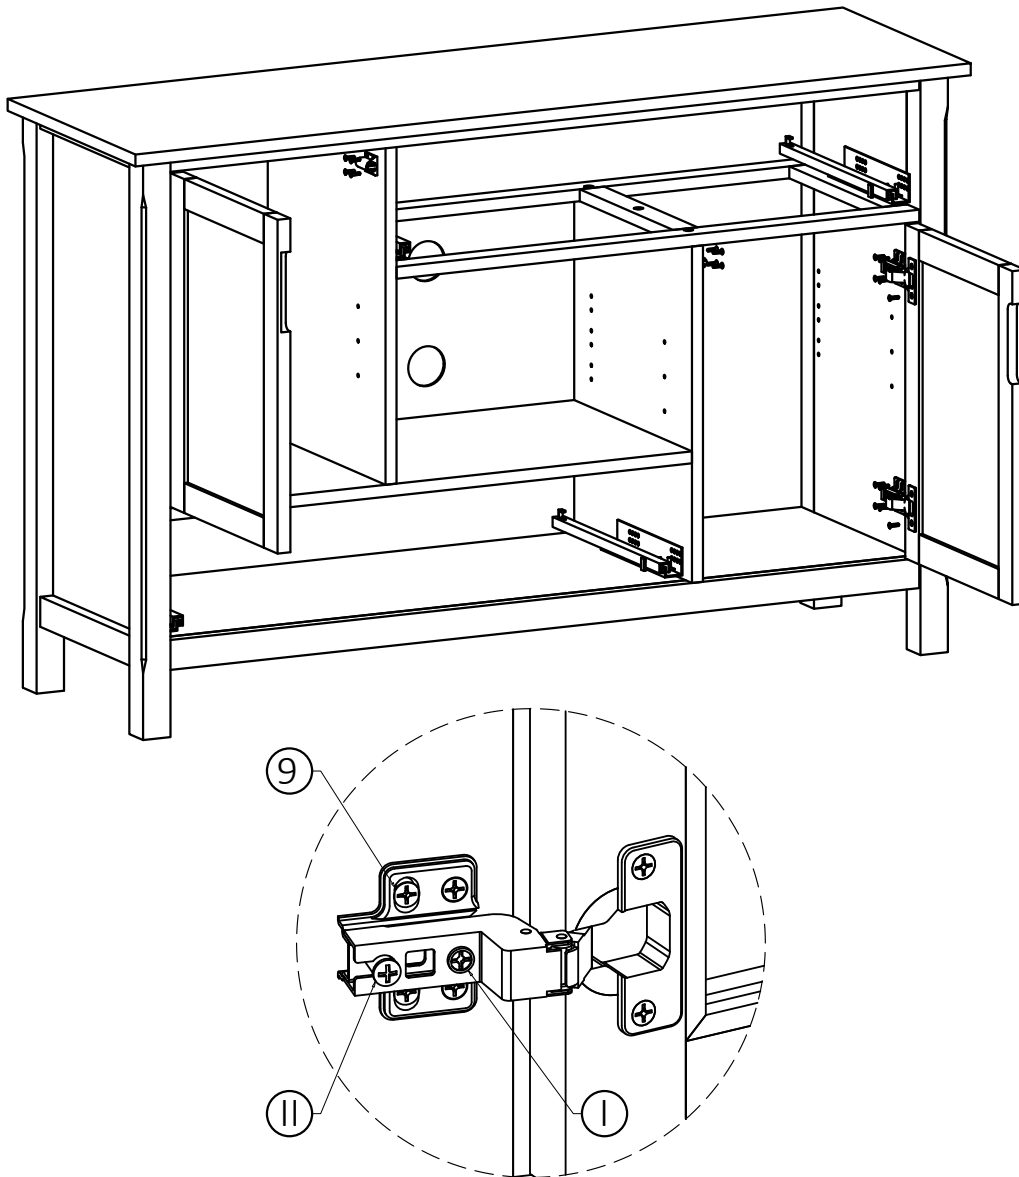 IMPORTANT NOTE:

Tighten the Screw marked ⑪ to fasten hinge. The door may need to be adjusted so that all the spaces between the door and the unit sides are equal.

To adjust, follow instructions:

1. Side adjustment 4 mm

To move the door towards the side panel, loosen screw ① and tighten screw ⑪.

To move the door away from the side panel, loosen screw ⑪ and tighten screw ①.

 
 
2. Depth adjustment 4 mm

Loosen screw ⑪ (just one turn), adjust door to desired position, re-tighten screw.

3. Height adjustment

Loosen screw ⑨, adjust door to desired position, re-tighten screw.

Step 14

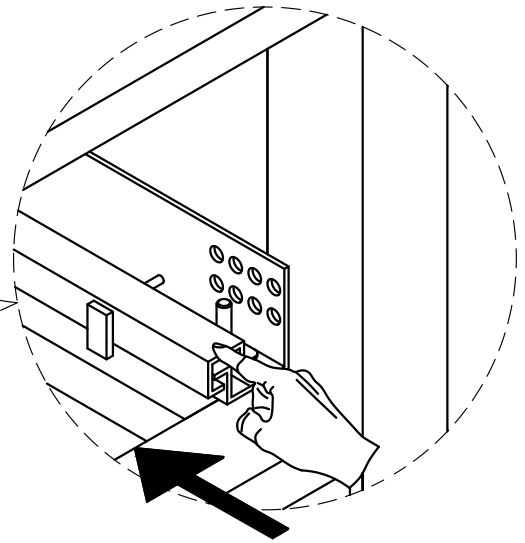
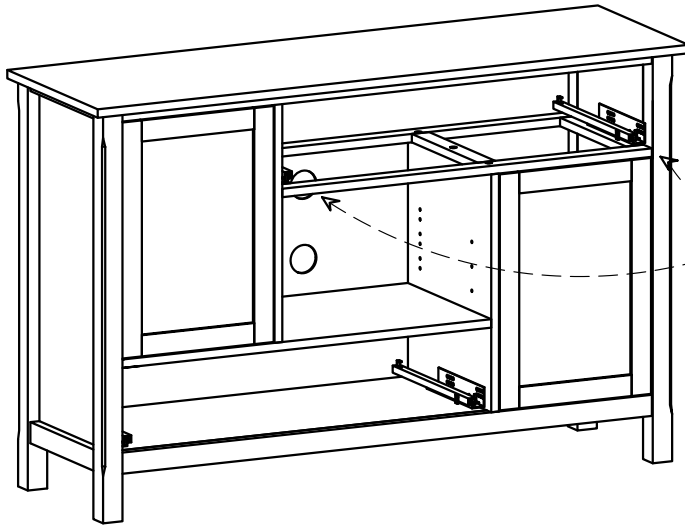


1. Keep your position 0.5 m (20 inch) away from the glider!
2. Slightly push the rail backward to unlock. Hold the rail while it is pulled out automatically.


Important Note:

While push the rail backward, do not release the rail. Instead please hold it in order to avoid the propulsive force by its springs.

  3. Pull the lock (C) out of the rail.

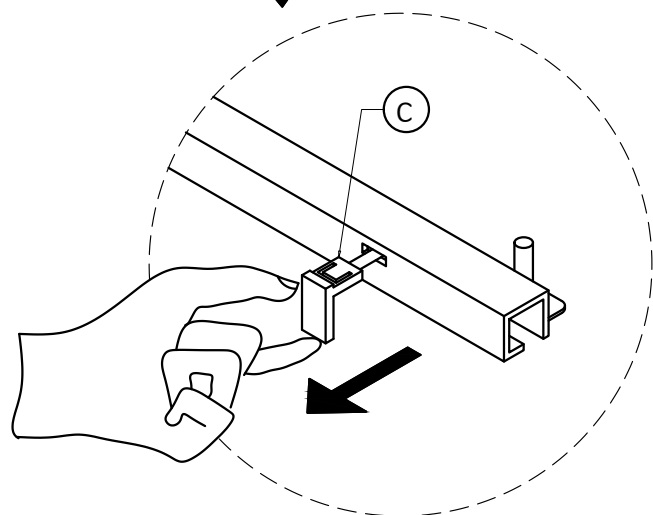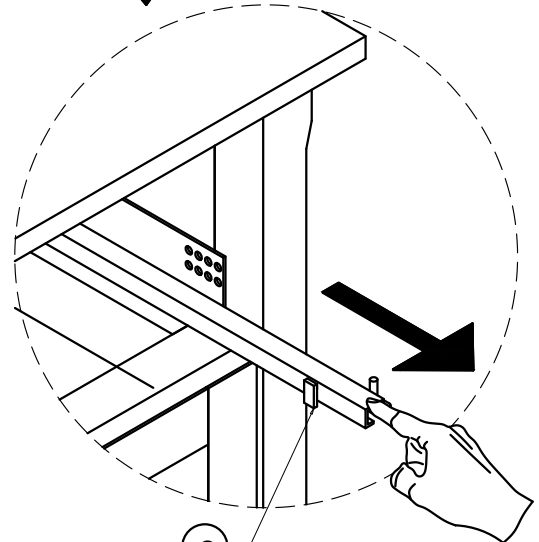


 Step 15

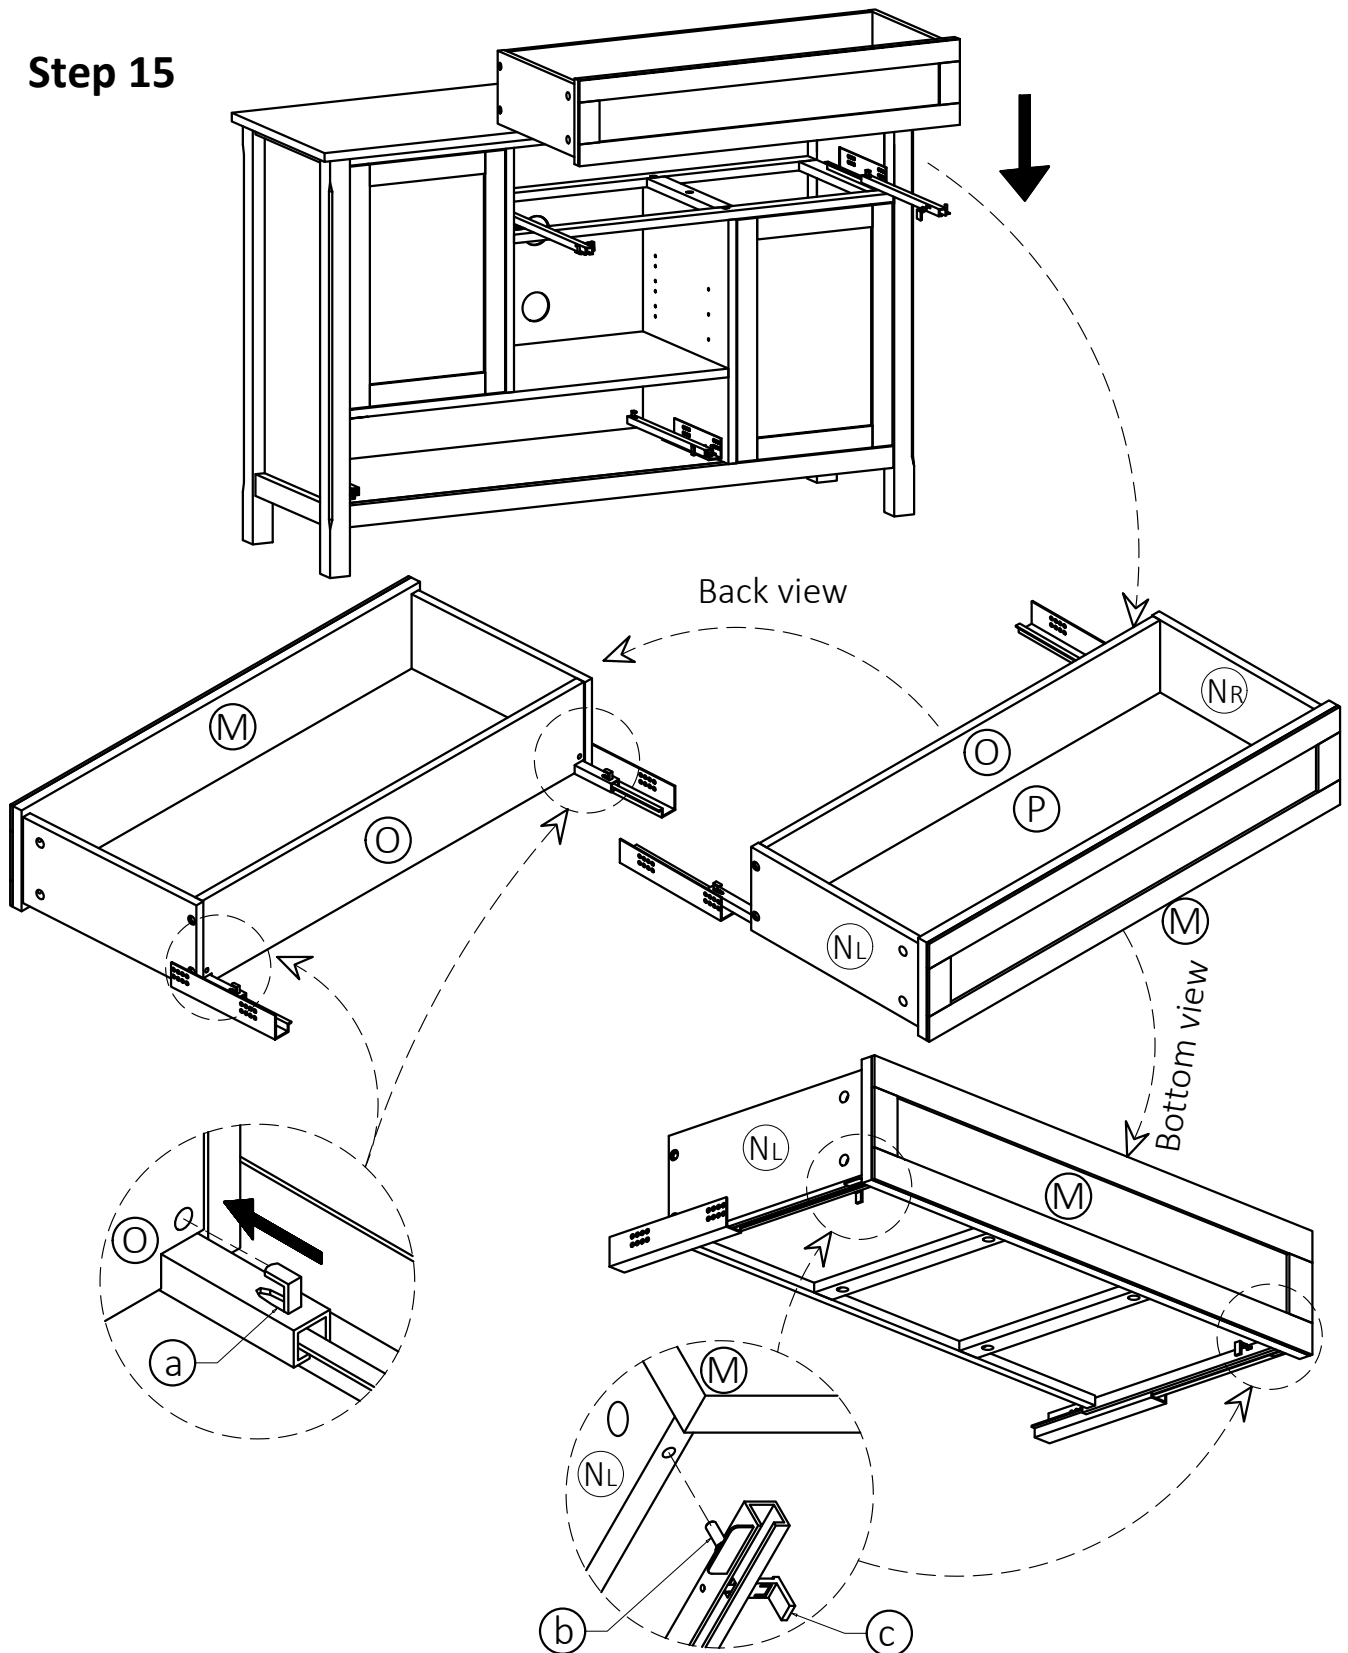

1. Place the drawer on top of 2 gliders.
2. Push the drawer along the gliders until the 2 holes at the rear of the back panel (of drawer box) inserted into the hook at back of the rails.
3. Inserting 2 holes underneath of 2 side panel (of drawer box) into 2 pins (b) on the rails.

 
Step 16

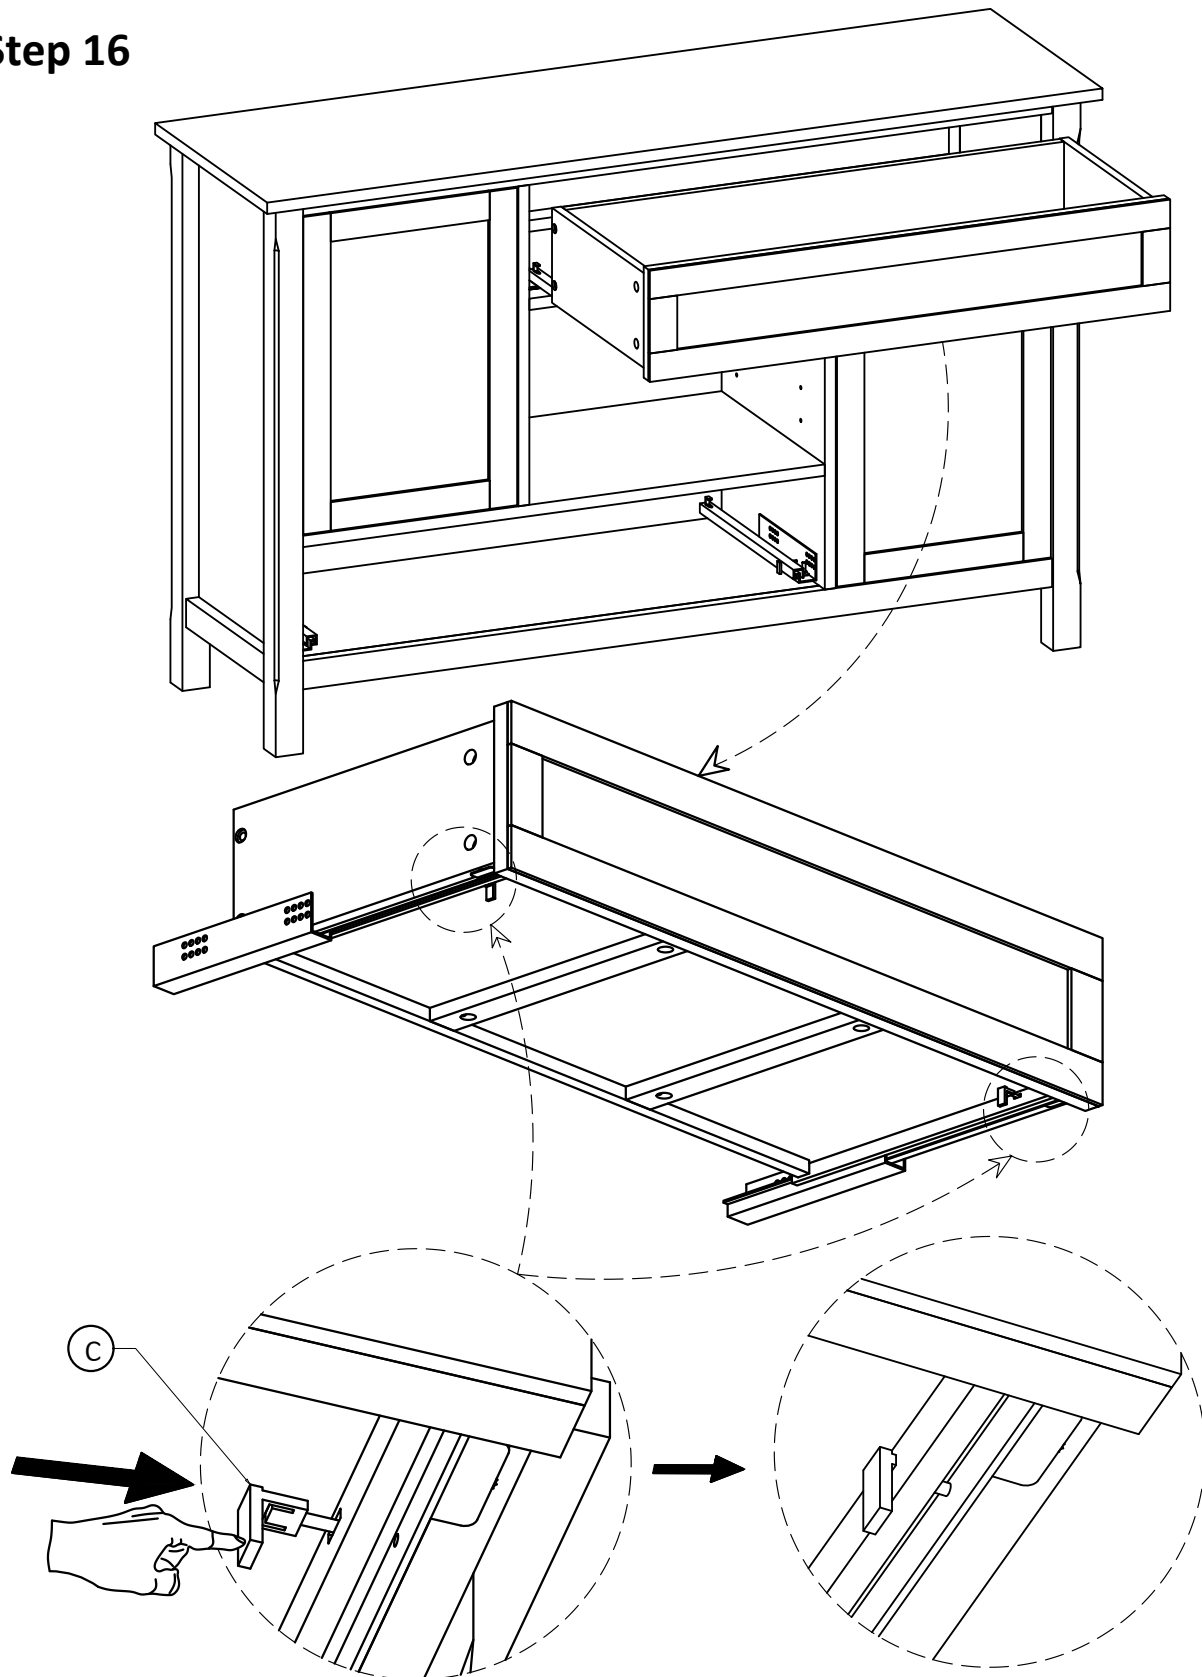


Lock position (Both side of drawer).

1. Push lock (C) on the rails to lock the rail and the drawer.

 Step 17




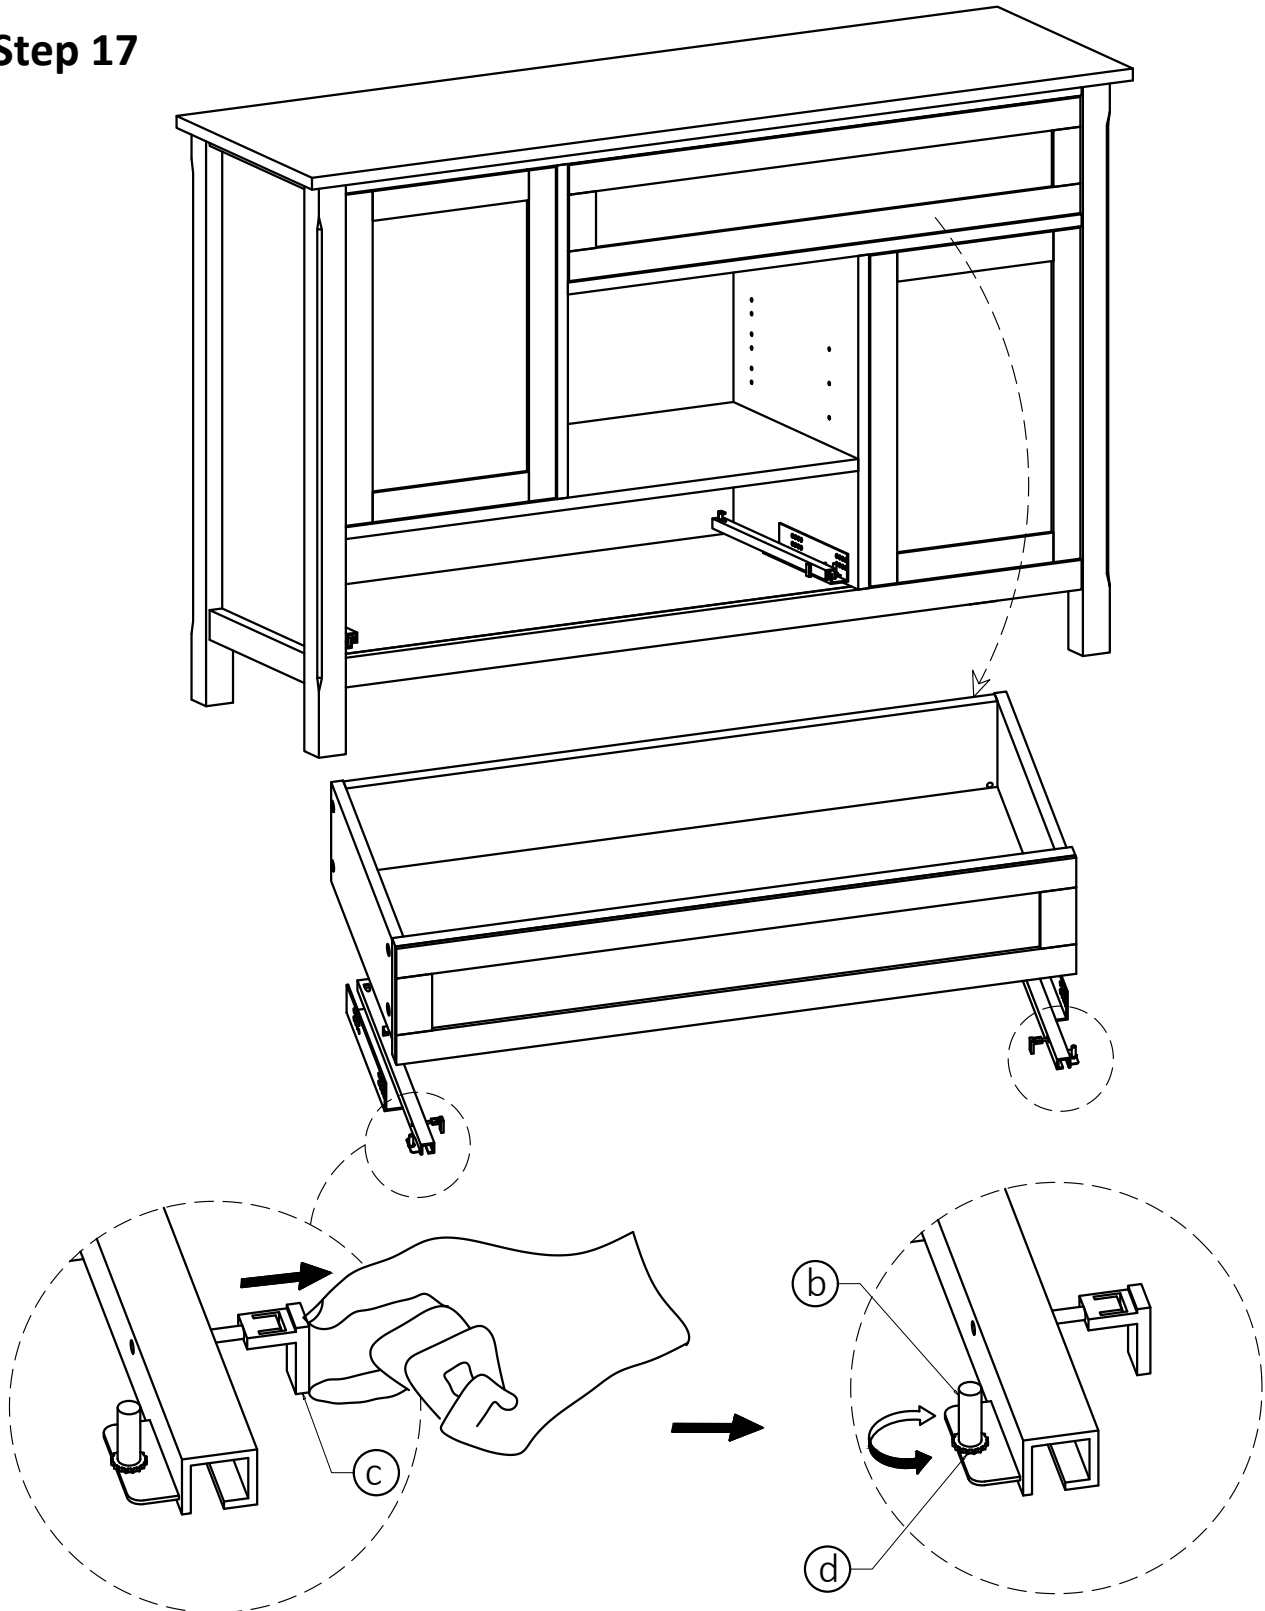


 1. After completing the assemble of drawer box, if it's not well positioned with the front of drawer frame, pls follow the below steps:
 - Unlock the lock (c) by pulling it out.
 - Lift up the front of drawer box.
 - Adjusting the cog-wheel (d) to lower / higher the side panel to suitable position.
 - Return the front of drawer box to its fixed position & push lock (c) to lock the rail & drawer.

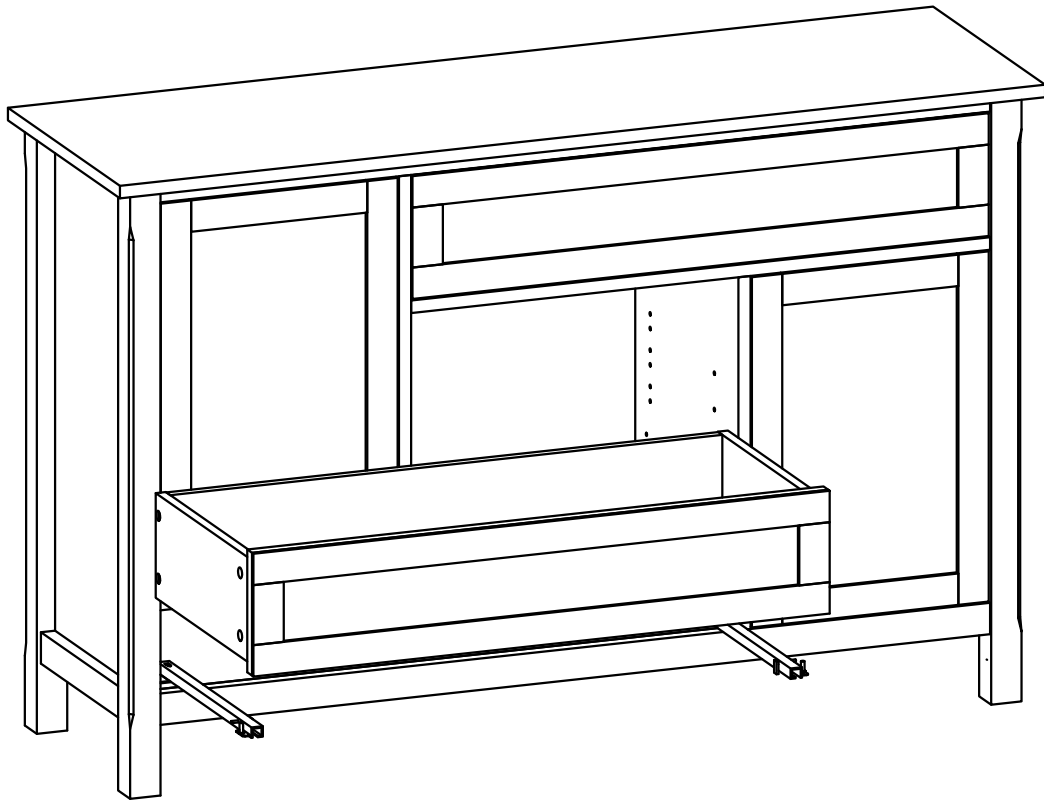Step 18

1. Repeat Step 14-17 for the second Drawer.

    Step 19

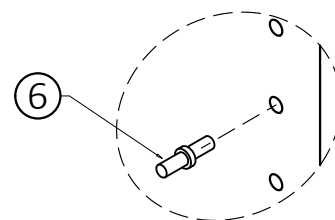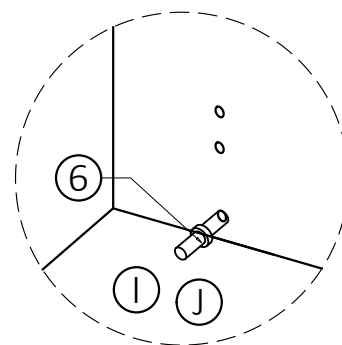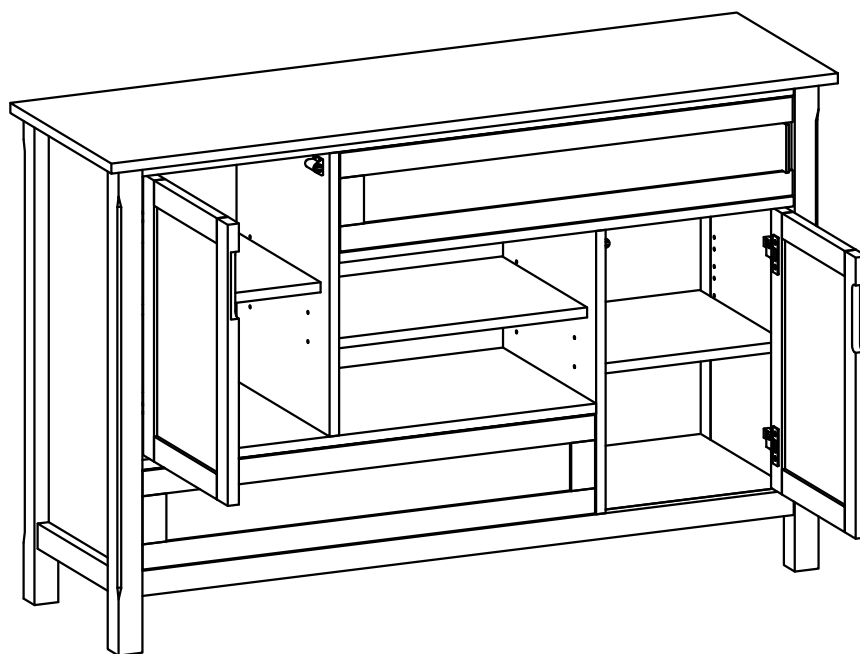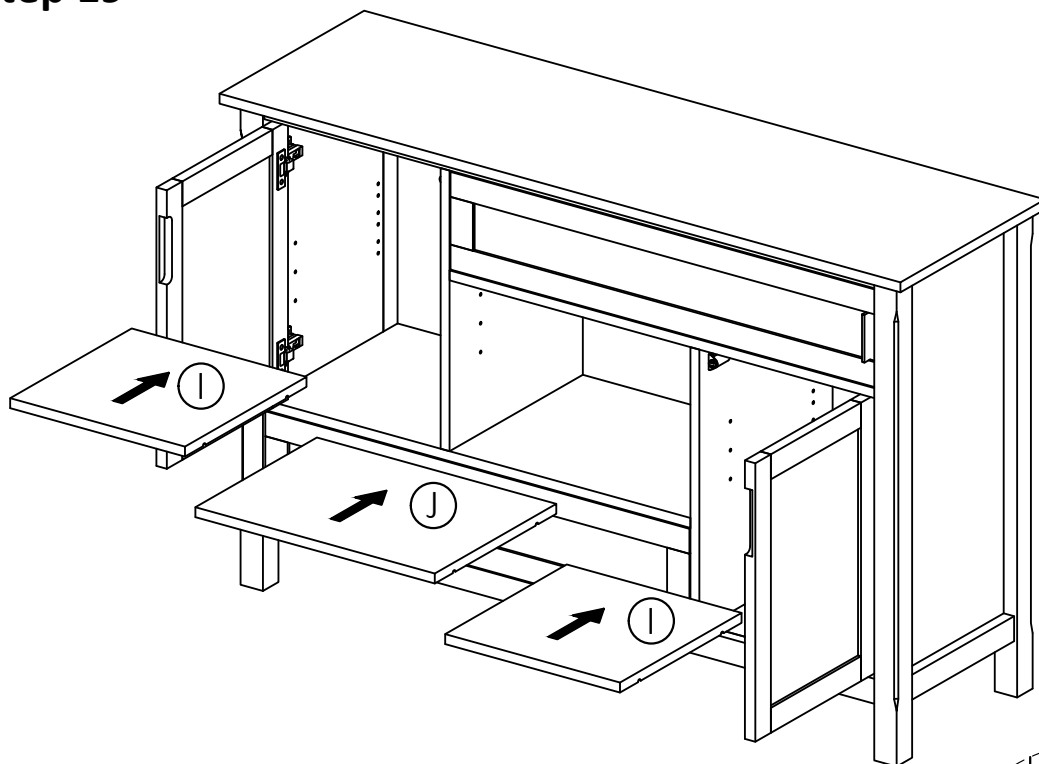

1. Use 4 Shelf Supports (6) for each Side Shelf (I) and Centre Shelf (J) in desired location.
2. 2 Shelf Supports (6) may be used on back top of each Side Shelf (I) and Centre Shelf (J) as a tipping restraint.

 
Furniture Tip Over Restraint Assembly



WARNING


Serious or fatal crushing injuries can occur from furniture tip-over.

If the furniture tip over restraint kit is not in the box, please contact our customer service department in order to obtain another kit before using the furniture.




NOTE: The screwdriver is not included in the hardware pack.

 Step 20

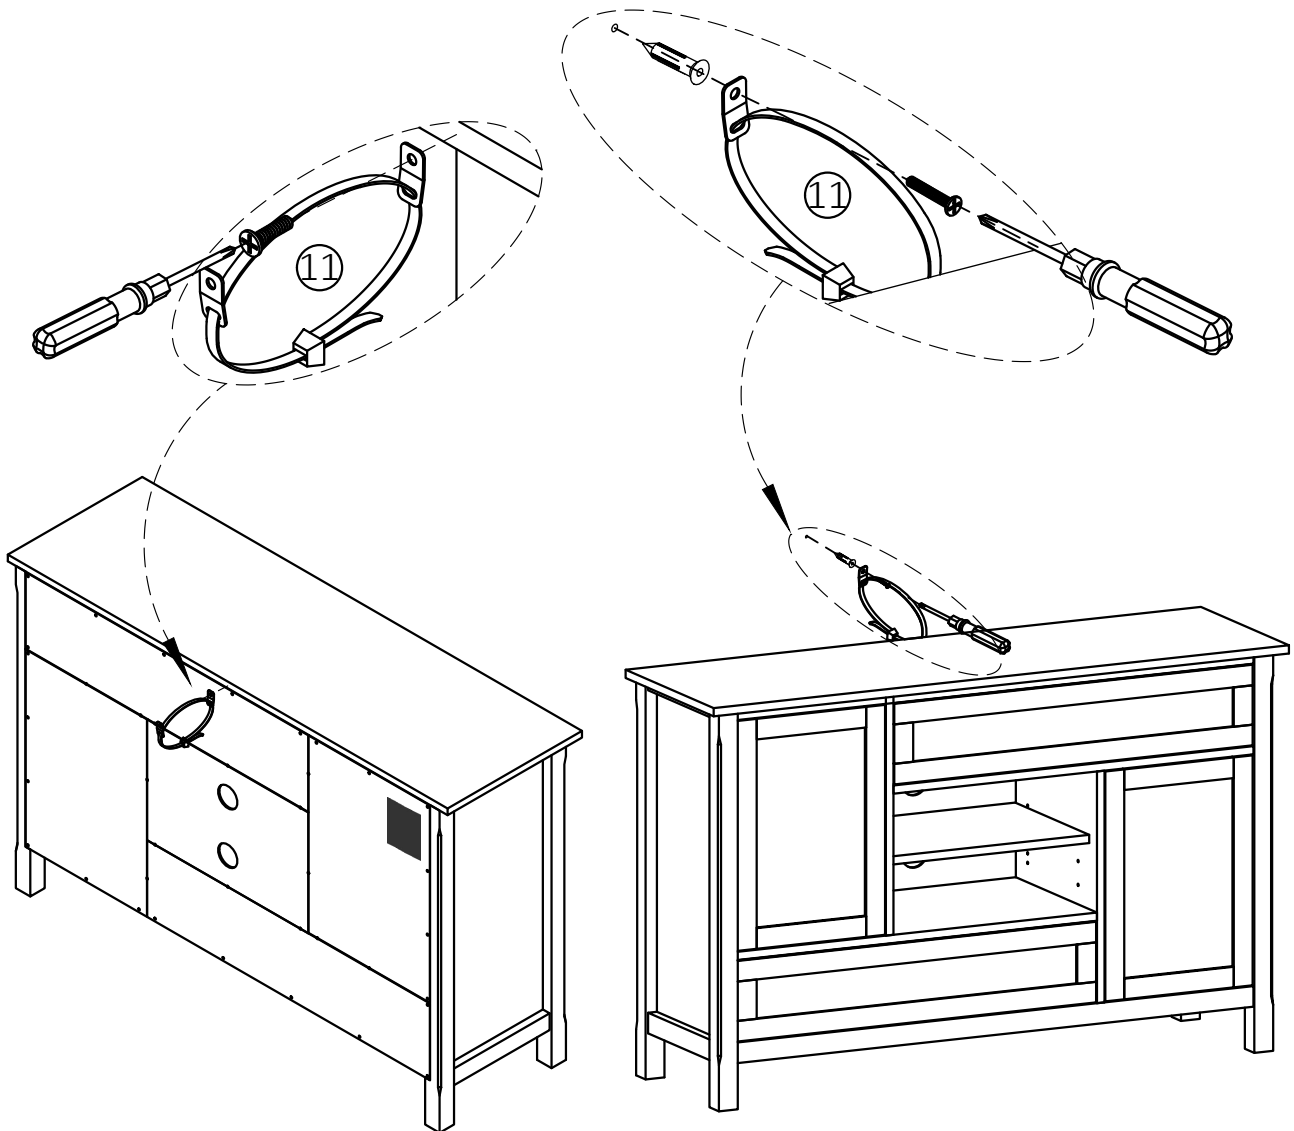


Furniture Anti-Tipping Restraint Instructions

 
1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the shorter screw.

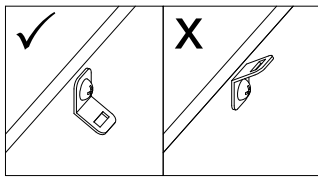

 2. Determine where furniture is to be placed and mark location on the wall for mounting bracket screw hole approximately 2 inches below the bracket mounted to the furniture.

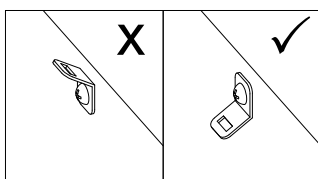

3. Drill a 3/16 inch hole in the wall. Press the plastic anchor into the hole and gently tap until the flange on the anchor is against the wall surface.
4. Position the bracket over the anchor and use the longer screw to securely attach the bracket to the wall.
5. Place the furniture so the back edge is in line with the bracket on the wall.
6. Lace an end of the nylon zip-tie strap down through each bracket. Bring both ends together and slide the smooth side upright through the square-shaped end and pull through to create the "locked" position.
7. Check to make sure the strap is securely laced and locked to the brackets.

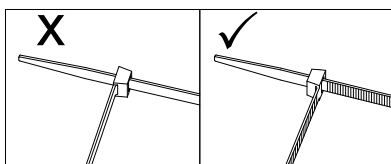 

- **DO NOT** place heavy objects in top drawers or on top shelves
- **DO NOT** let children climb or hang on drawers, doors or shelves