



INSTALLATION INSTRUCTIONS

For Juno R Series Trac Connectors, Electrical Feeds and Accessories

Juno R series connectors, electrical feeds and accessories are to be used only with Juno R Series Trac. Some Juno R Series Connectors can also be used as Electrical Feeds as noted. All Juno Trac Components are both mechanically and visually polarized to assure proper connections and to simplify installation.

- Trac face has polarity line indicating positive side
- Trac connectors have embossed arrow which must point towards the Trac polarity line when installed.

Important: Completely read instructions before attempting installation. Electrical Rating: 120V, 60Hz and 20 amp max

R34 Conduit Connector

(For Electrical Feed Away From Junction Box)

Makes electrical connection from conduit, BX, or Greenfield. Use at end of Trac run when wiring.

1. Make sure power is OFF.
2. Remove connector cover.
3. Attach 1/2" connector (not supplied) and secure to conduit, BX, or Greenfield.
4. Insert Conduit Connector fully into Trac section with polarity arrow pointing toward Trac polarity line, secure with set screw.
5. Attach Trac to ceiling (or wall) following instructions supplied with the Trac section.
6. Fasten positive wire to screw terminal marked "P".
7. Fasten neutral white wire to screw terminal marked "N".
8. Replace cover and secure with screw.

WARRANTY

Limited warranty located at:

www.acuitybrands.com/customerresources/terms_and_conditions.aspx

Technical Services Phone 1-800-705-SERV (7378)



One Lithonia Way • Conyers, GA 30012 • Phone 1-800-705-SERV (7378) • Visit us at www.acuitybrands.com
©2020 Acuity Brands Lighting, Inc. Rev 2/20 P3089

R34 Conduit Connector

