 


homestyles®

20 05064 0941 Kitchen Island

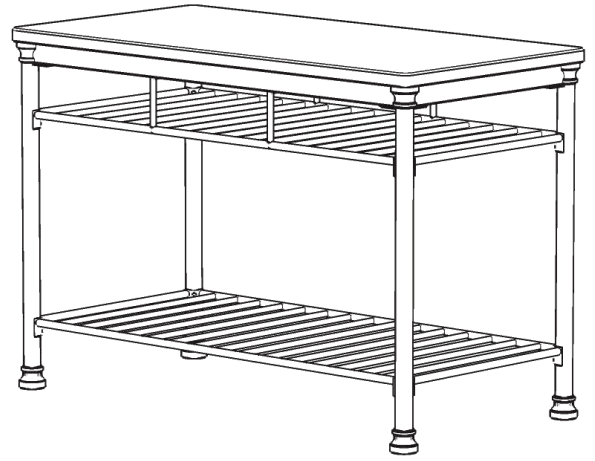

 
IMPORTANT

Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.


Do not use power tools above 8 volts to assemble.

Part List

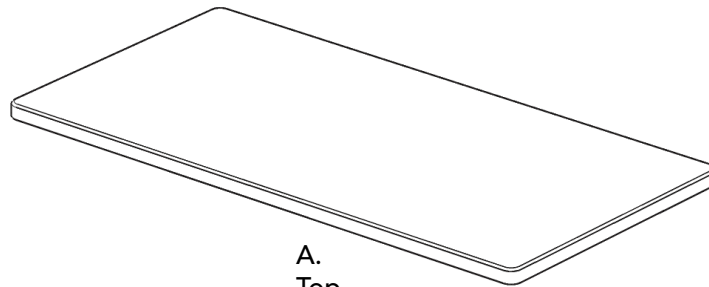

A.
Top
1 pc.

 Hardware List

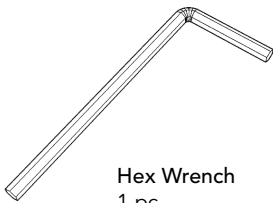

Hex Wrench
1 pc.



 
Small Hex Wrench
1 pc.



Flat Washer
10 pcs. (+1 extra)



Spring Washer
10 pcs. (+1 extra)

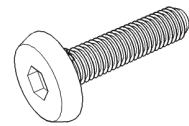

M6x25
Head Cap Bolt
10 pcs. (+1 extra)

Care Instructions

This solid wood top cannot be used as a cutting or chopping board. Do not use knives or any sharp objects directly on the top. Follow the Care Instructions on the last page of the 20 05060 0942 Kitchen Island Assembly Instructions.

For assembly see instructions in carton 20 05060 0942.