



CASTELL 9000 PERFECT PENCIL



Write

1. Gently pull the pencil (4) out of the extender (3).
2. Turn the pencil (4) around and insert the eraser end inside of the extender (3). Push gently until the pencil is held firm.

Erase

1. Gently pull the pencil (4) out of the extender (3) and begin erasing with the eraser (6) on the back end of the pencil (4).

Sharpen

1. Gently pull the cap (1) out of the sharpener (2). Place the tip of the pencil (4) into the sharpener (2) and turn the pencil (4) clockwise, applying even pressure. Sharpen until you reach your desired point. The pencil (4) can be sharpened all the way down to the ferrule (5) that holds the eraser (6). The extender (3) allows for comfortable writing as the pencil (4) is sharpened down.
2. To replace the sharpener when dull, unfasten the sharpener (2) by holding the cap (1) and turning the sharpener (2) counterclockwise. Add a new sharpener (2) by turning clockwise until secure.

Store

1. Place the extender (3) onto the tip of the pencil (4) and push closed. The extender (3) will protect the point of the pencil (4). The sturdy clip will fasten securely on a shirt pocket.

REFILLS Pencil: 119038
Replacement Sharpener: 188664