

THE BATTERY

The battery is the power source for the vehicle. It provides the electrical energy to start the engine and to power the electrical system. The battery is located in the engine compartment. It is important to check the battery regularly to ensure it is properly maintained and charged. The battery should be checked for electrolyte level, terminal condition, and overall health. If the battery is found to be low or discharged, it should be recharged or replaced. A fully charged battery is essential for the proper operation of the vehicle's electrical system.

Item	Description	Notes
1	Battery	Check electrolyte level
2	Terminal	Check for corrosion
3	Charging System	Check voltage output
4	Alternator	Check belt tension
5	Starter Motor	Check for proper operation
6	Ignition Switch	Check for proper operation
7	Lighting System	Check for proper operation
8	Wiring	Check for loose connections

Check the battery regularly to ensure it is properly maintained and charged.

THE ENGINE



The engine is the power source for the vehicle. It converts the energy from the fuel into mechanical energy to drive the vehicle. The engine is located in the engine compartment. It is important to check the engine regularly to ensure it is properly maintained and running smoothly. The engine should be checked for oil level, belt tension, and overall health. If the engine is found to be low on oil or has a loose belt, it should be re-oiled or the belt should be tightened. A properly maintained engine is essential for the proper operation of the vehicle.