
88 5542 41 Bermuda Chest


IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

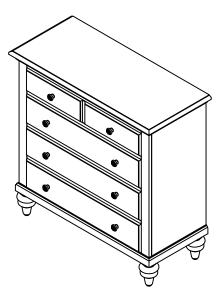



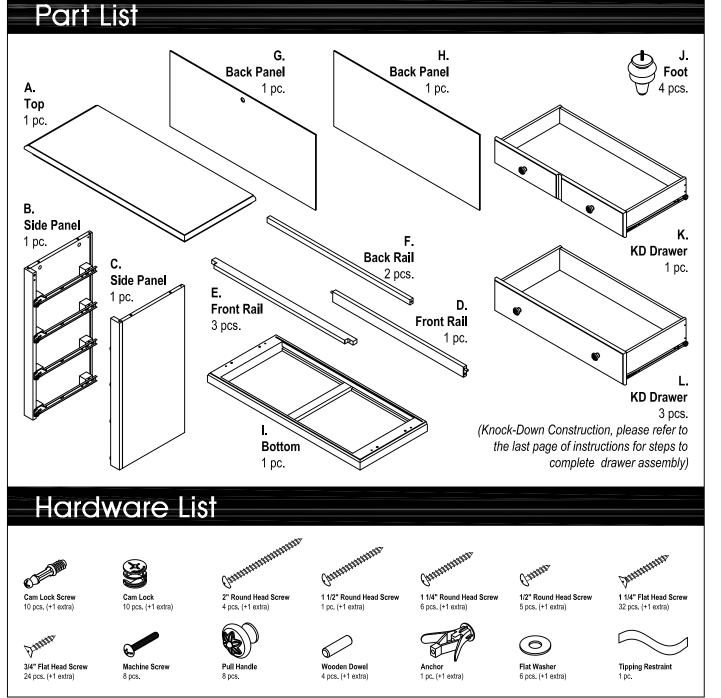

Tools Required For Assembly : Phillips screwdriver

Tools Recommended For Assembly : Level

Home Styles Consumer Assistance: www.homestyles-furniture.com, servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319


Assembly Instructions 2/8

IMPORTANT

- * Do not tighten up all the screws until each part is properly assembled.
- * Use a soft cloth between these parts and the floor.
- * After assembly, item must be level to work properly. Use the included adjustable levellers to level.

STEP 1


Insert Cam Lock Screws into the pre-drilled holes and (C).

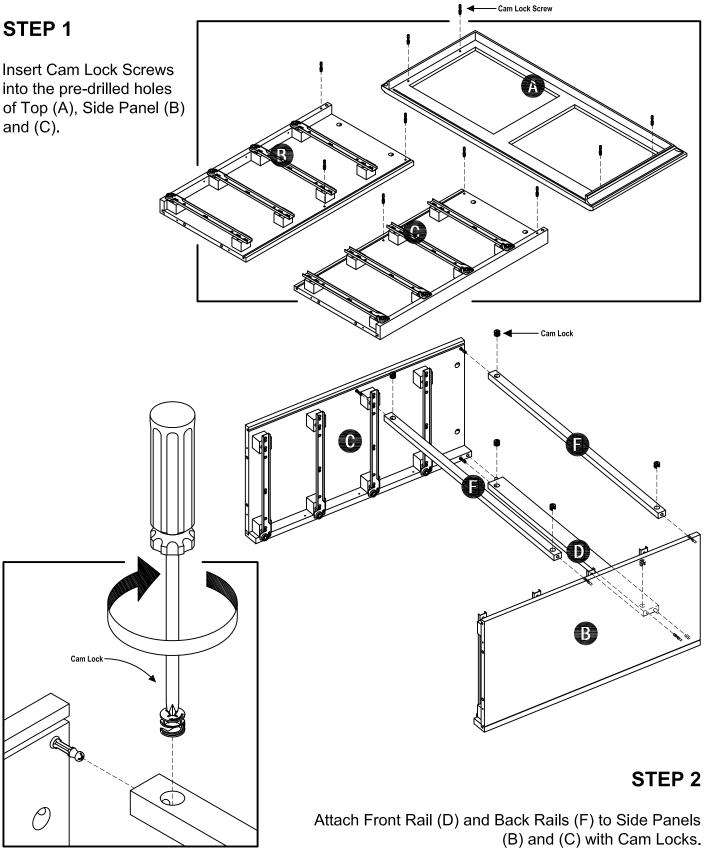


(see Figure 1).

Figure 1

Assembly Instructions 3/8

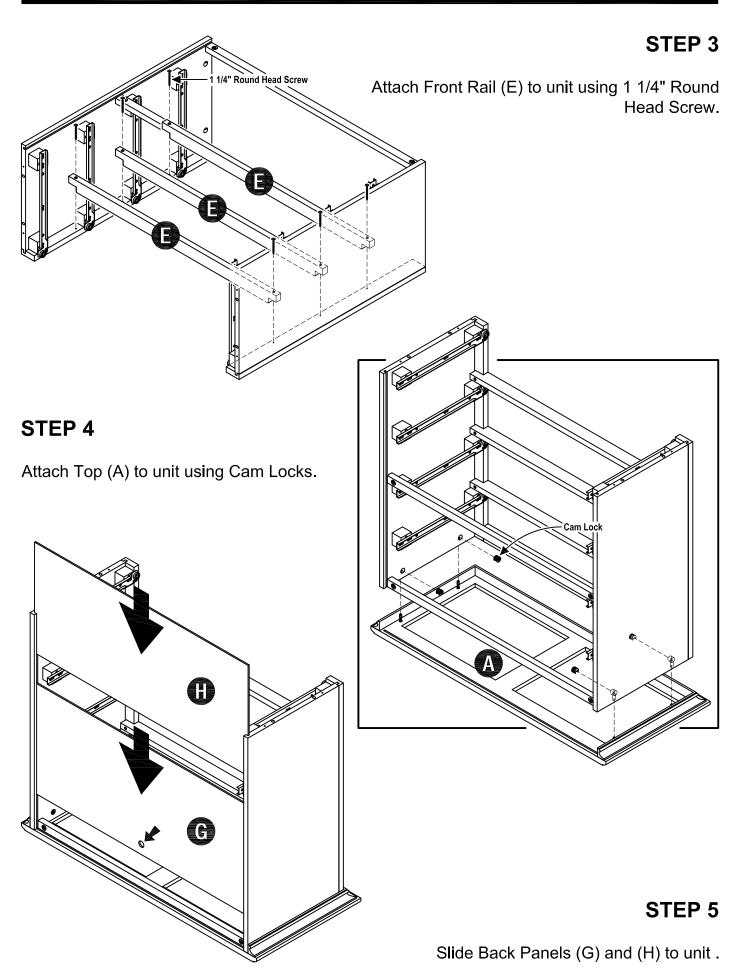


Assembly Instructions 4/8

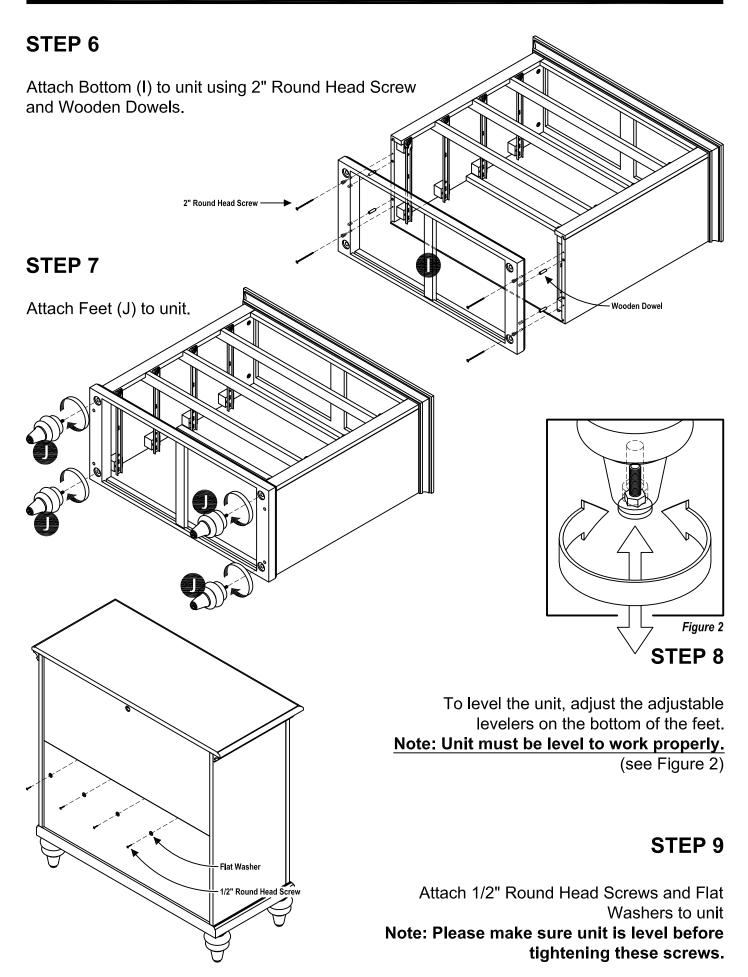


Assembly Instructions 5/8


ATTENTION!

For safety reasons, please follow these instruction to prevent the unit from tipping over.

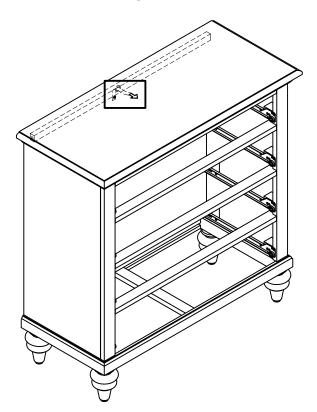


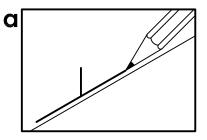


Place the unit on the wall at desired location. Mark with pencil to show the height and center of unit.

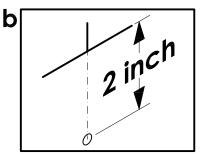


Move unit. Drill a 1/2" hole in the wall, 2 inches down and directly below the mark.

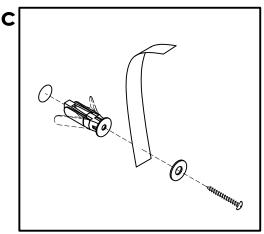


Attach Tipping Restraint to the wall using 1 1/2" Round Head Screw, Flat Washer & Anchor.

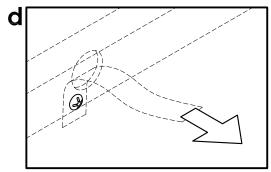

Insert Tipping Restraint to unit through the hole of Back Panel (G).

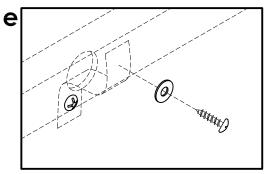


Screw Tipping Restraint to unit using 1/2" Round Head Screw & Flat Washer.

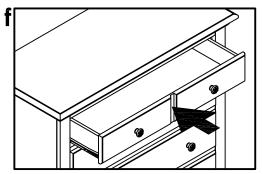



Insert drawers (K, L) into unit.


Assembly Instructions 6/8

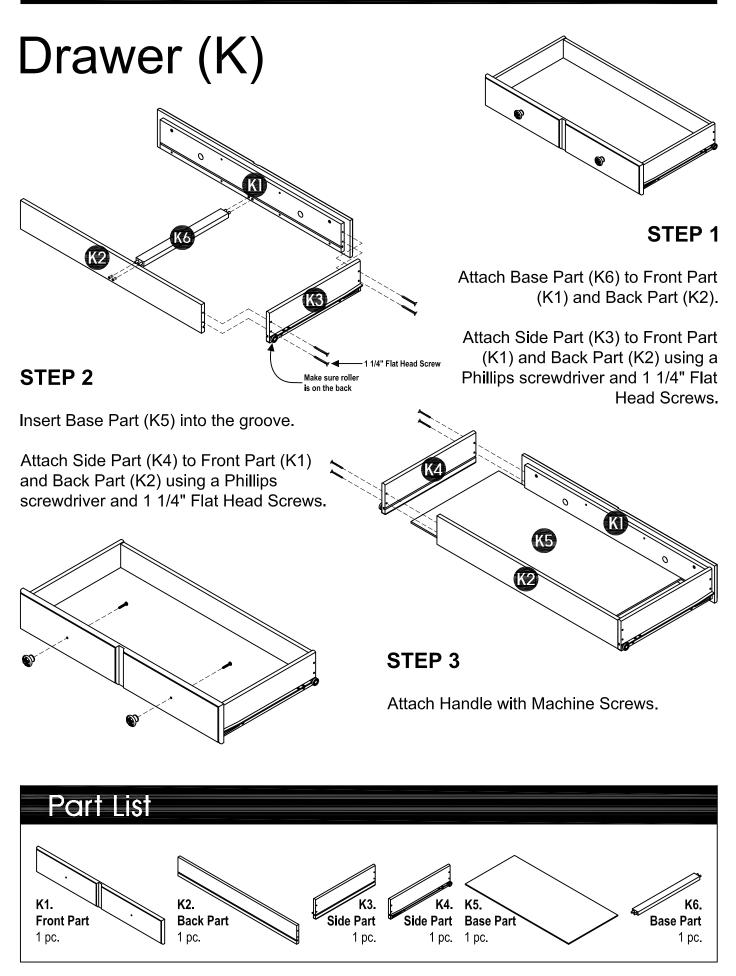

Assembly Instructions 7/8

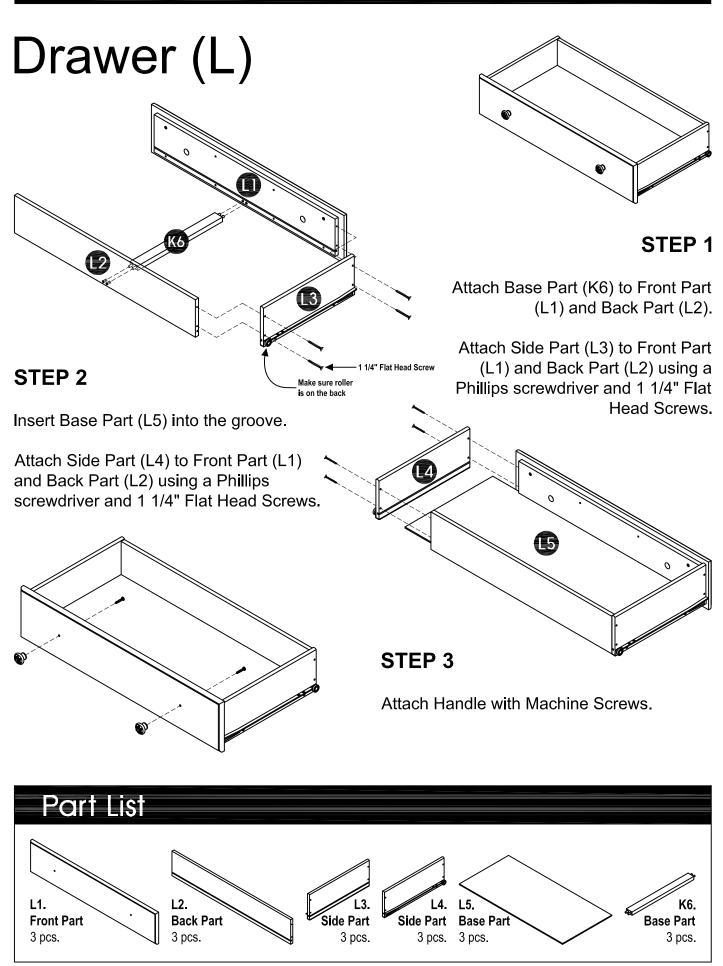

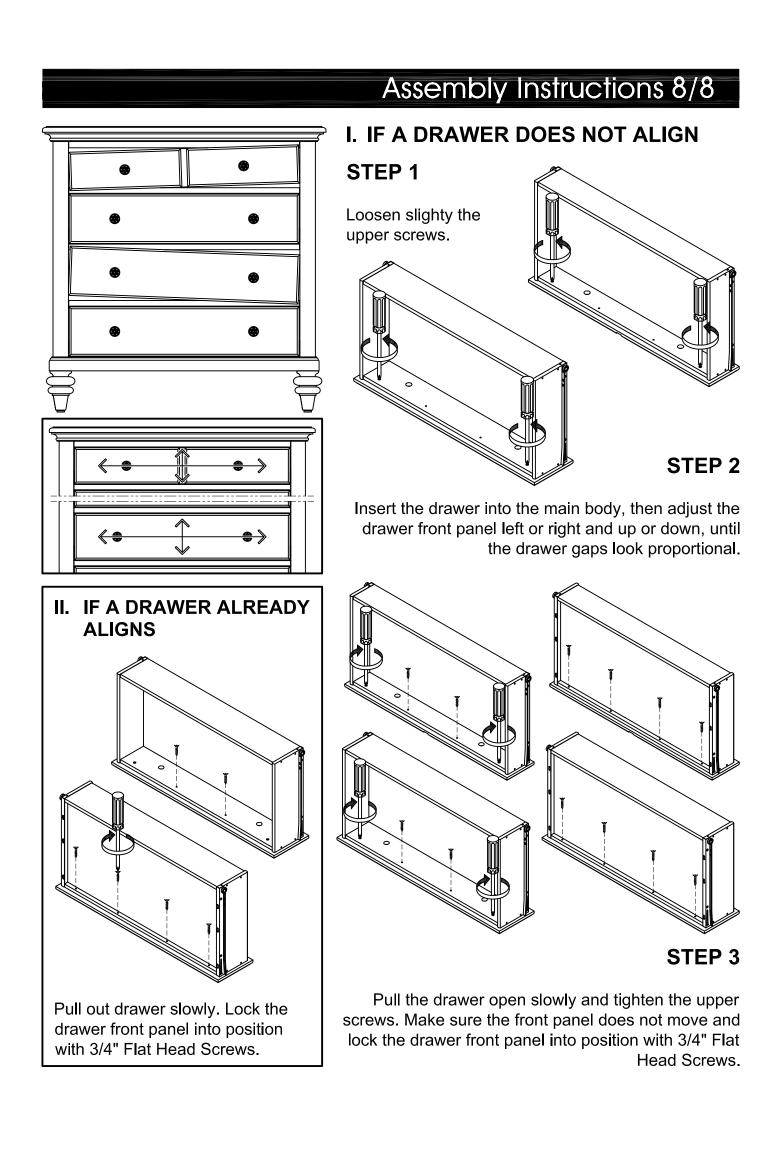

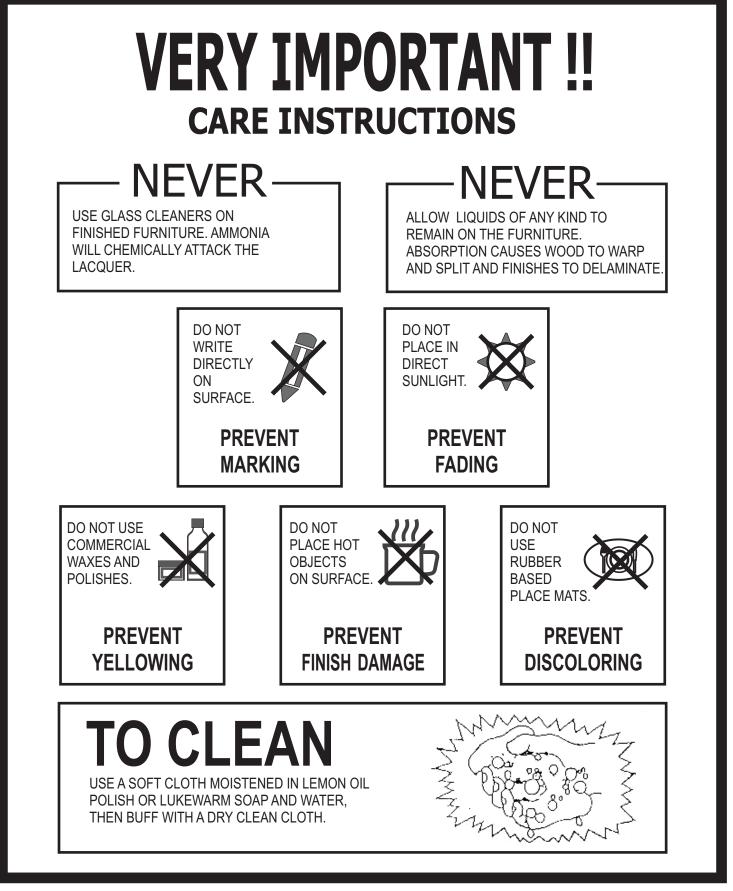

Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If this product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at: www.homestyles-furniture.com/customer_service

Home Styles Consumer Assistance: www.homestyles-furniture.com, servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319