

Assembly Guide



Bush
FURNITURE

 


**If you're having any difficulty during assembly
of this product, don't hesitate to call us at
1-800-950-4782.**

Our customer service experts are trained to provide step-by-step instruction and can easily replace any missing or damaged parts.

**Representatives are available Monday-Friday
from 8:30 a.m. to 7:30 p.m. (ET)**

Lateral File Storage Cabinet

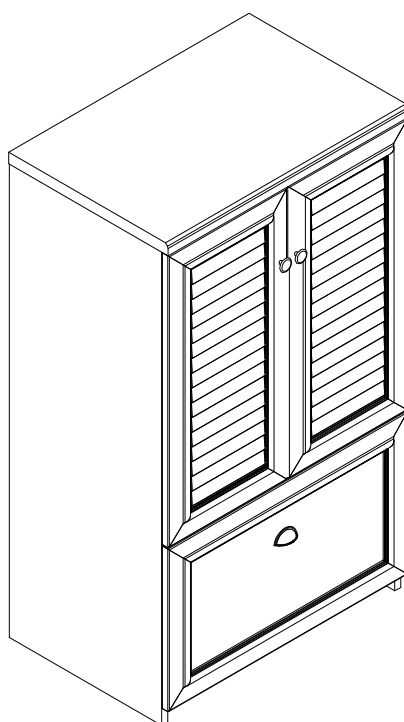

Lot Code #

Part Number A185970C

Keep manual for future reference.

For best results, keep these tips in mind:

- ① We know you want to finish this assembly as quickly as possible, but trust us: you'll have a better experience if you take it one step at a time.
- ② Give yourself some room to work near where you want the fully assembled product.
- ③ If your floor isn't carpeted, assemble this product on the empty carton to avoid scratching.
- ④ Do you have a friend who owes you a favor? Some steps may go a little easier with a second set of hands.

DOs

- ✓ Use a #2 Phillips head screwdriver (or other handheld tools as indicated)
- ✓ Wear safety glasses at all times during assembly
- ✓ Carefully follow the instructions in this guide and complete all steps in order
- ✓ Give us a call if you're having trouble with a particularly tricky step

DON'Ts

- ✗ We know power tools are quick and easy, but you shouldn't use them when assembling this product (unless otherwise specified)
- ✗ Never move your furniture with items inside or resting on the surface
- ✗ Do not attempt to use this product before all steps have been completed

**Watch assembly videos right on your phone or computer!**

Some steps include QR codes that link to helpful videos. Watch out for the icon on the left! Simply open up your smartphone camera to scan the code.

(Users of older smartphones may need to install a QR Reader.)

SCAN HERE**FOR VIDEOS**

Or visit <https://www.bushfurniture.com/CustomerService/HowtoAssemble.aspx>

IMPORTANT SAFETY INFORMATION



PLEASE READ WARNINGS

Improper use can cause safety hazards, or damage to your furniture and household items.

Warning	Do	Don't	Why it's important
Serious injury may occur.	- Assemble following all instructions using all indicated parts and hardware provided. - Install every indicated nail and/or screw. - Verify furniture is stable on it's own. - Place heaviest items in the lower drawers or shelves. - Remove items that might tempt kids to climb, such as toys and remote controls from the top and upper shelves of furniture. - Install tip-over restraint provided.	- Do not move unit when loaded. - Do not load with a television or other heavy equipment. - Do not exceed the maximum load limits stated in the instructions. - Do not allow children to stand, climb, or hang on furniture.	Improper assembly, use or loading can lead to product instability, tip-over or collapse.

Advertencia	Hacer	No	Por qué es importante
Se pueden producir lesiones graves.	- Ensamble siguiendo todas las instrucciones utilizando todas las piezas y hardware indicados provistos. - Instale todos los clavos y / o tornillos indicados. - Verifique que los muebles sean estables por sí mismos. - Coloque los artículos más pesados en los cajones o estantes inferiores. - Retire los artículos que puedan tentar a los niños a trepar, como juguetes y controles remotos de los estantes superiores y superiores de los muebles. - Instale el sistema de sujeción antivuelco que se proporciona.	- No mueva la unidad cuando esté cargada. - No cargue con un televisor u otro equipo pesado. - No exceda los límites máximos de carga establecidos en las instrucciones. - No permita que los niños se paren, trepen o cuelguen de muebles.	El ensamblaje, uso o carga inadecuados pueden provocar inestabilidad del producto, vuelco o colapso.

 
 
IMPORTANT SAFETY INFORMATION



PLEASE READ WARNINGS

Improper use can cause safety hazards, or damage to your furniture and household items.

Avertissement	Faire	Ne le fais pas	Pourquoi c'est important
Des blessures graves peuvent survenir.	• Assemblez en suivant toutes les instructions en utilisant toutes les pièces et le matériel indiqués fournis. • Installez tous les clous et / ou vis indiqués. • Vérifiez que les meubles sont stables par eux-mêmes. • Placez les articles les plus lourds dans les tiroirs ou les étagères inférieurs. • Retirez les objets qui pourraient inciter les enfants à grimper, tels que les jouets et les télécommandes des étagères supérieure et supérieure des meubles. • Installez le dispositif anti-basculement fourni.	• Ne déplacez pas l'unité lorsqu'elle est chargée. • Ne chargez pas avec un téléviseur ou un autre équipement lourd. • Ne dépassez pas les limites de charge maximale indiquées dans les instructions. • Ne laissez pas les enfants se tenir debout, grimper ou s'accrocher aux meubles.	Un assemblage, une utilisation ou un chargement incorrects peuvent entraîner une instabilité du produit, un renversement ou un effondrement.

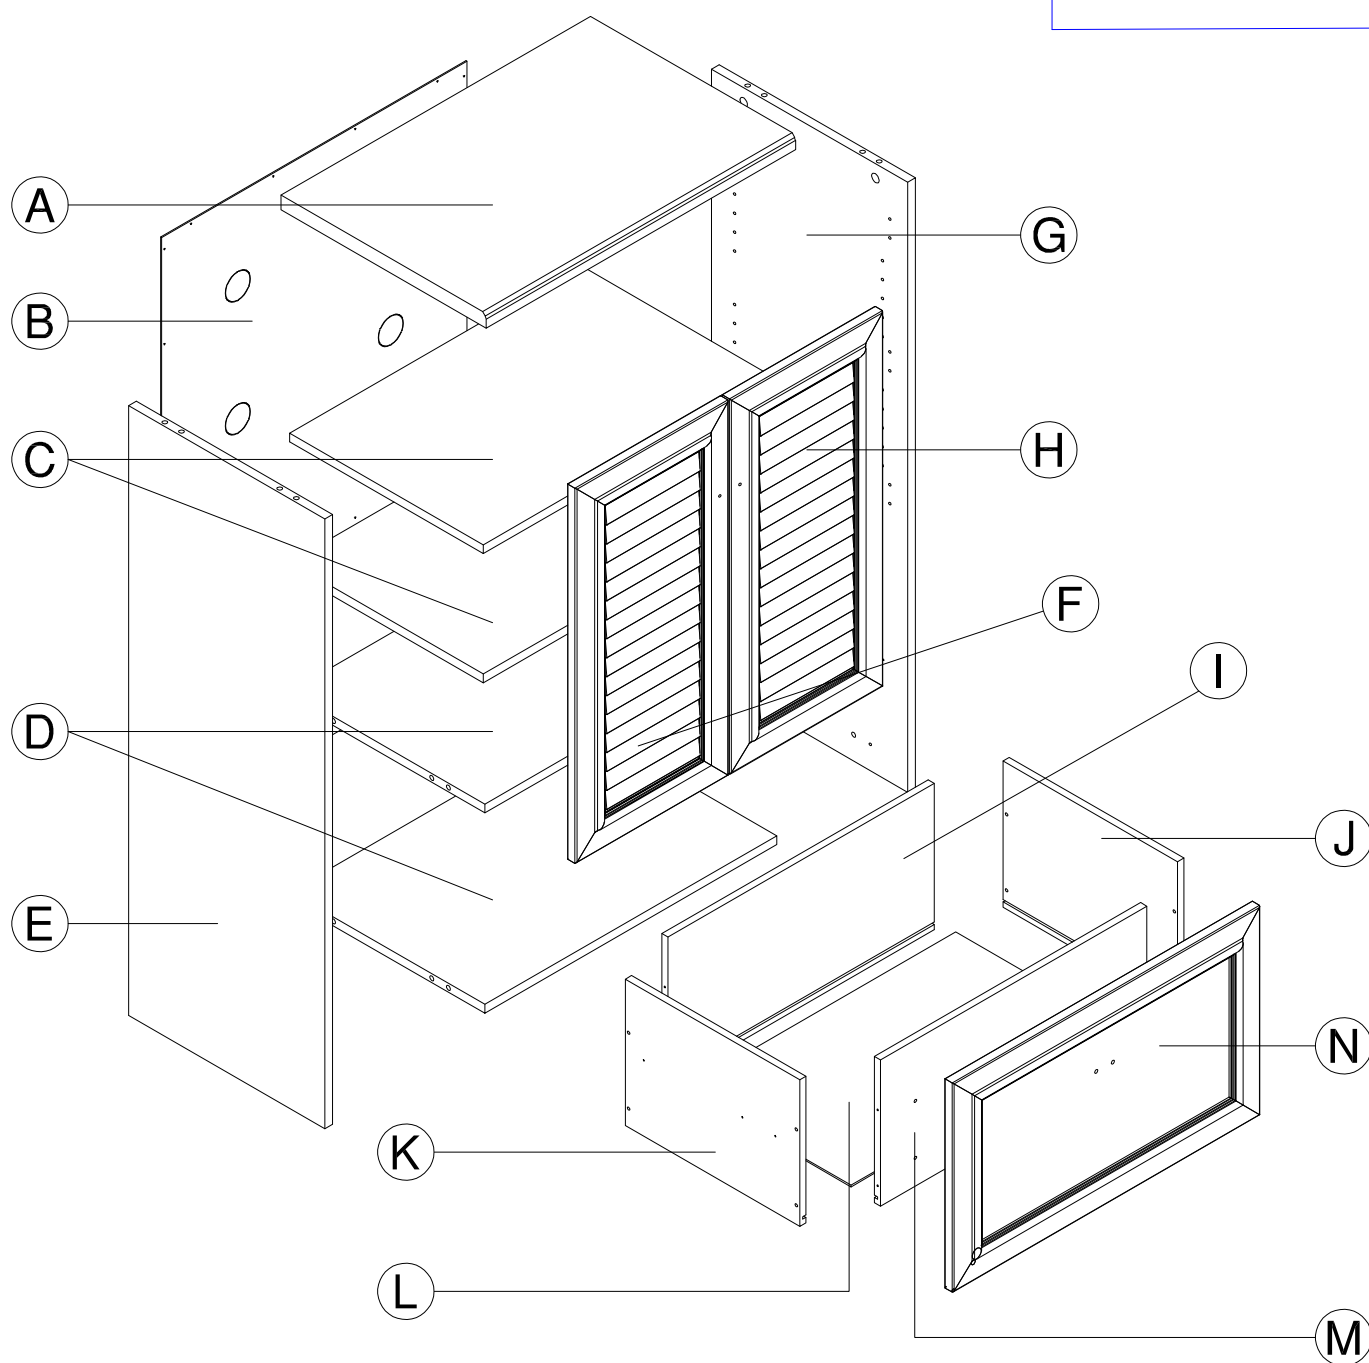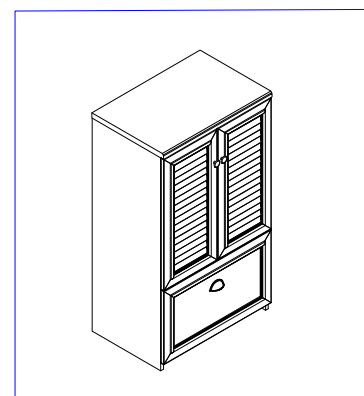

Have an assembly question or need a replacement part? Just call
1-800-950-4782, we are here to help.

Get to know your Fasteners

A185970C

Fasteners are shown actual size.

 
H38169



Wood Dowel
8 x 30mm

[12]

H101725



#6 x 1/2"

[12]

 
H153243



#5 x 9/16"

[2]


H180604



KD Bolt

[12]

 
H181468



KD Cam

[12]

 H160160



M4 x 10mm

[2]


H34174



#3 x 3/4"

 [26]

H153242



#8 x 5/8"

[12]

 
H23198



#10 x 1-1/2"

[8]


H160161



#8 x 3/4"

[6]

 H158943



M4 x 25mm

[2]

 
Have an assembly question or need a replacement part? Just call
1-800-950-4782, we are here to help.

Get to know your Hardware

A185970C

Hardware not to scale.


H158707



Shelf Pin

[8]

 
H148805



Pull

[2]

 
H160282

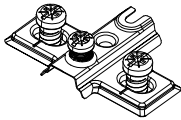

Mounting Plate

[6]

 
H180927

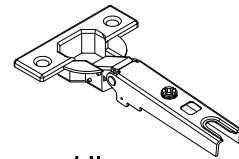

Hinge

[6]

 
H180871

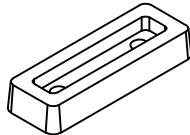

Door Stopper


[1]

 H20385



Tack Glide

 [4]



Cover Cap

[4]

Have an assembly question or need a replacement part? Just call
1-800-950-4782, we are here to help.

Hardware not to scale.

 
H153475



File Extrusion
12-1/8" (308mm)

[2]


H148802

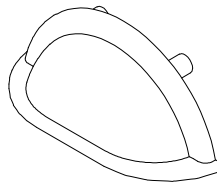

Handle

[1]

 Q02442

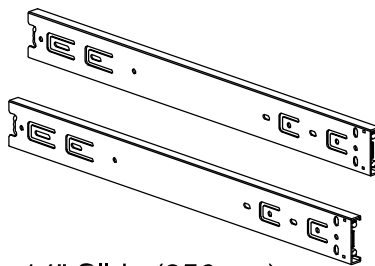

14" Slide (356mm)

[1]

 
H89793



File Bar
12-1/2" (318mm)

[1]

H186068

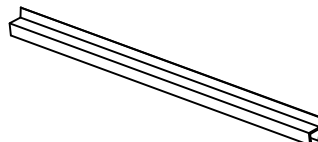

File Extrusion
20-5/16" (516mm)

 
[2]

Have an assembly question or need a replacement part? Just call
1-800-950-4782, we are here to help.


STEP 1

Assemble Panels

A185970C


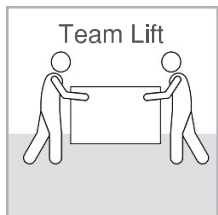


H23198

 

[8]

#10 x 1-1/2"

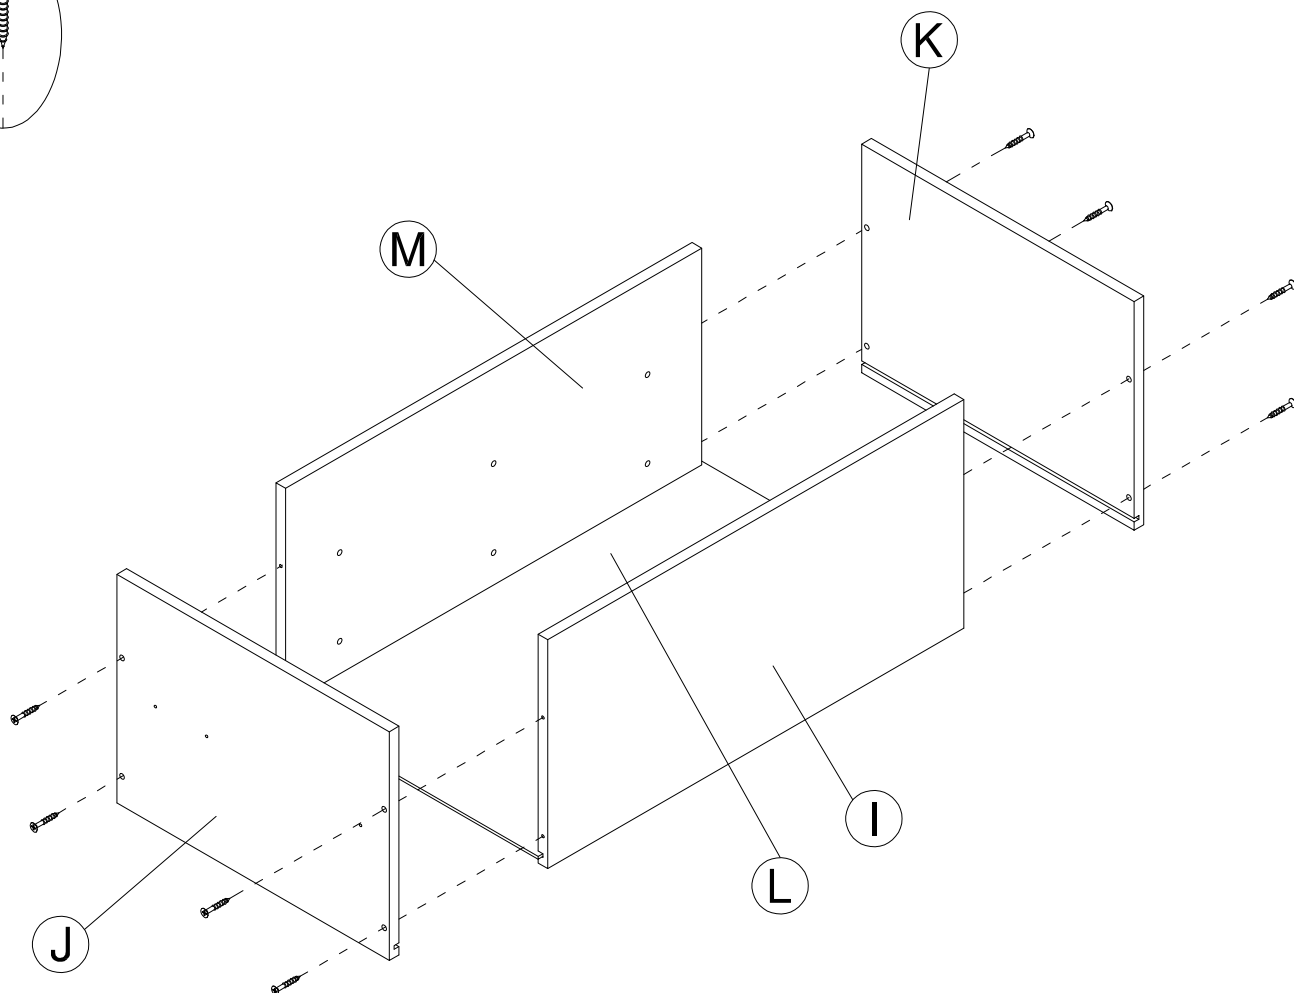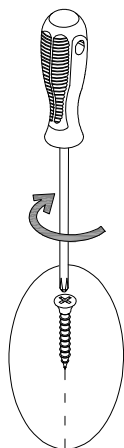  


Have an assembly question or need a replacement part? Just call
1-800-950-4782, we are here to help.

STEP 2

Prepare Panel

A185970C

 
H160160



[2]


M4 x 10mm

 H148802

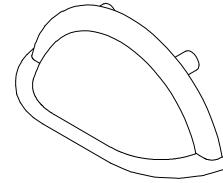

[1]

 Handle

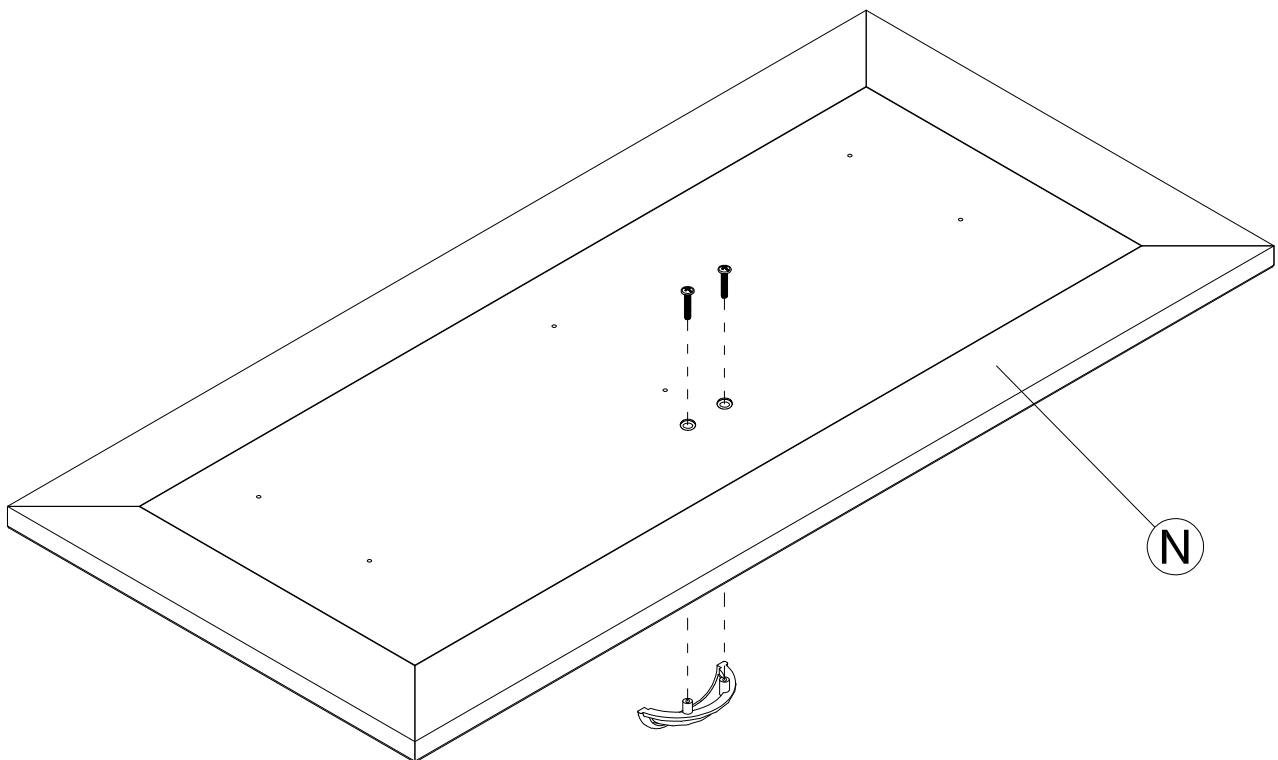


Have an assembly question or need a replacement part? Just call
1-800-950-4782, we are here to help.


STEP 3

Assemble Panels

 A185970C

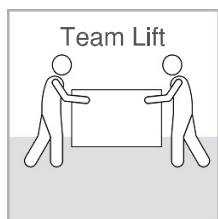


H186068

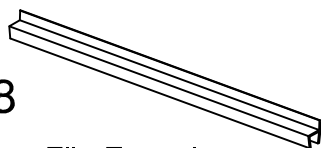 

File Extrusion
20-5/16" (516mm)




[1]

 H160161



[6]

#8 x 3/4"

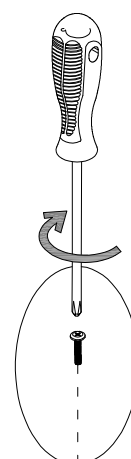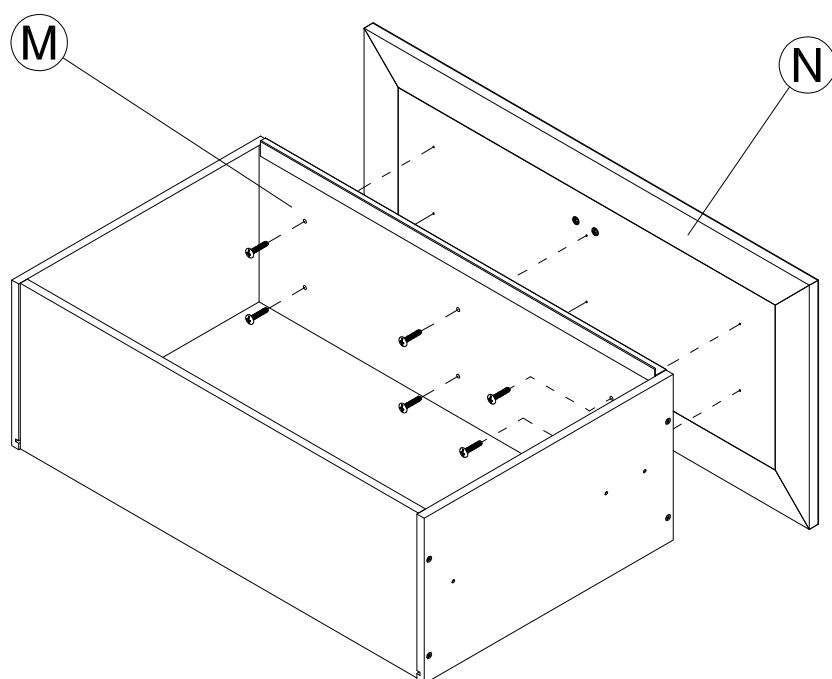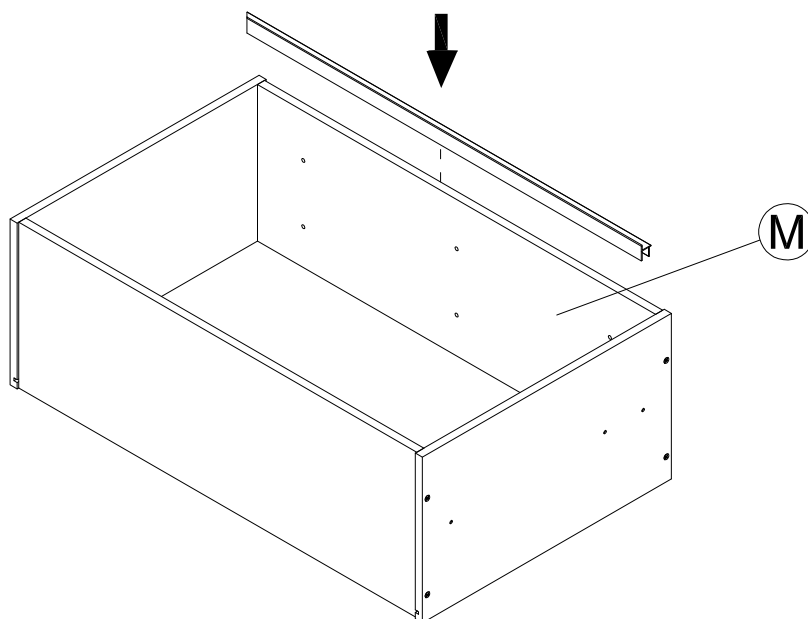   

Have an assembly question or need a replacement part? Just call
1-800-950-4782, we are here to help.

STEP 4

Separate Slides

A185970C

Scan QR Code to
Watch Video on:

 


How to Separate
and Install Drawer
Slides


**Slides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.**

Las diapositivas deben separarse antes del montaje.
Después de la separación, déjelo a un lado hasta que sea necesario.


Les glissières doivent être séparées avant l'assemblage.
Après la séparation, mettez de côté jusqu'au moment de l'assemblage.

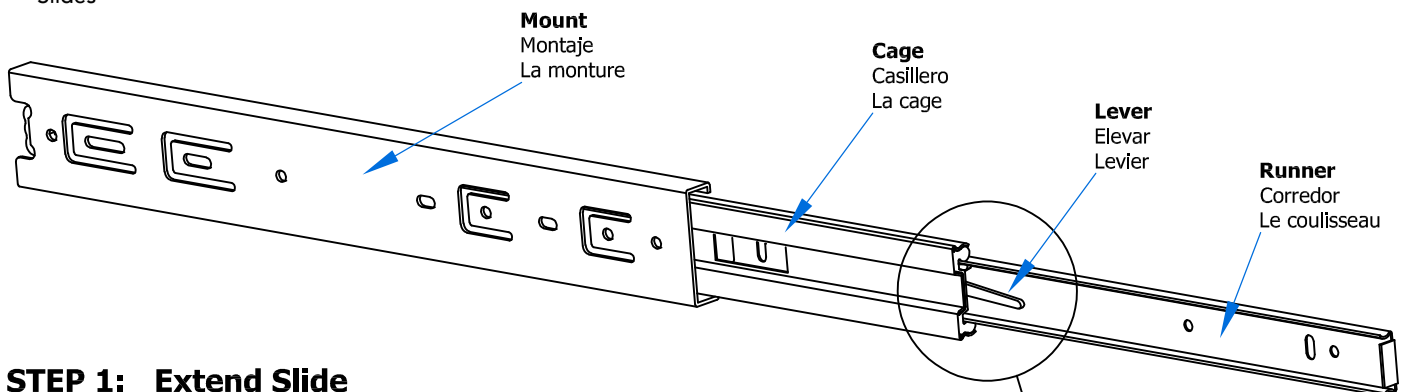

 
STEP 1: Extend Slide
Extender la diapositiva
Extendre la diapositive

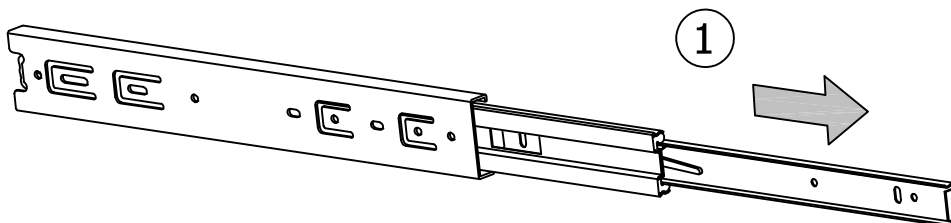

 STEP 2: Push Lever UP
Empujar hacia arriba
Lever le levier

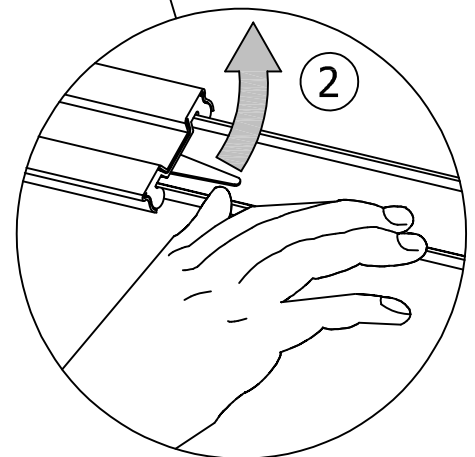

 STEP 3: Remove Runner
Quitar el corredor
Enlever le coureur

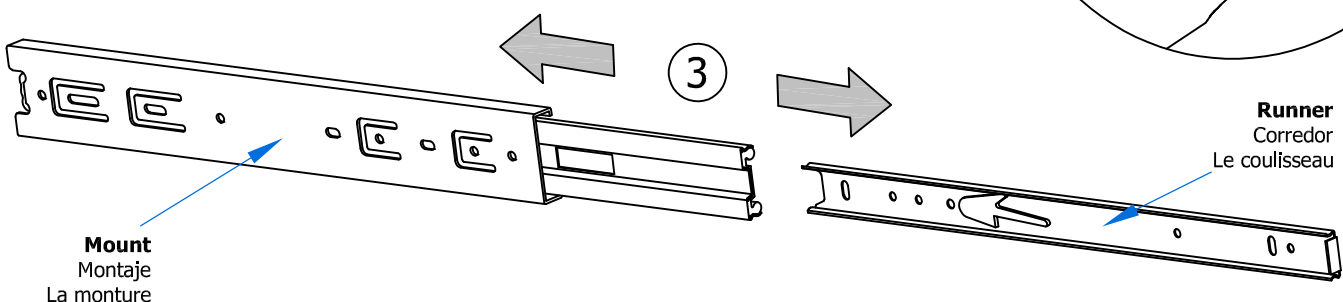




Have an assembly question or need a replacement part? Just call
1-800-950-4782, we are here to help.

STEP 5

Install Slide Runners

A185970C

   Scan QR Code to
Watch Video on:

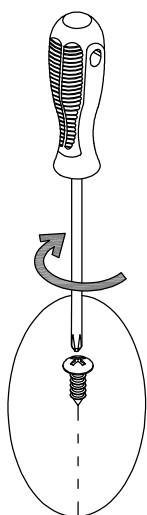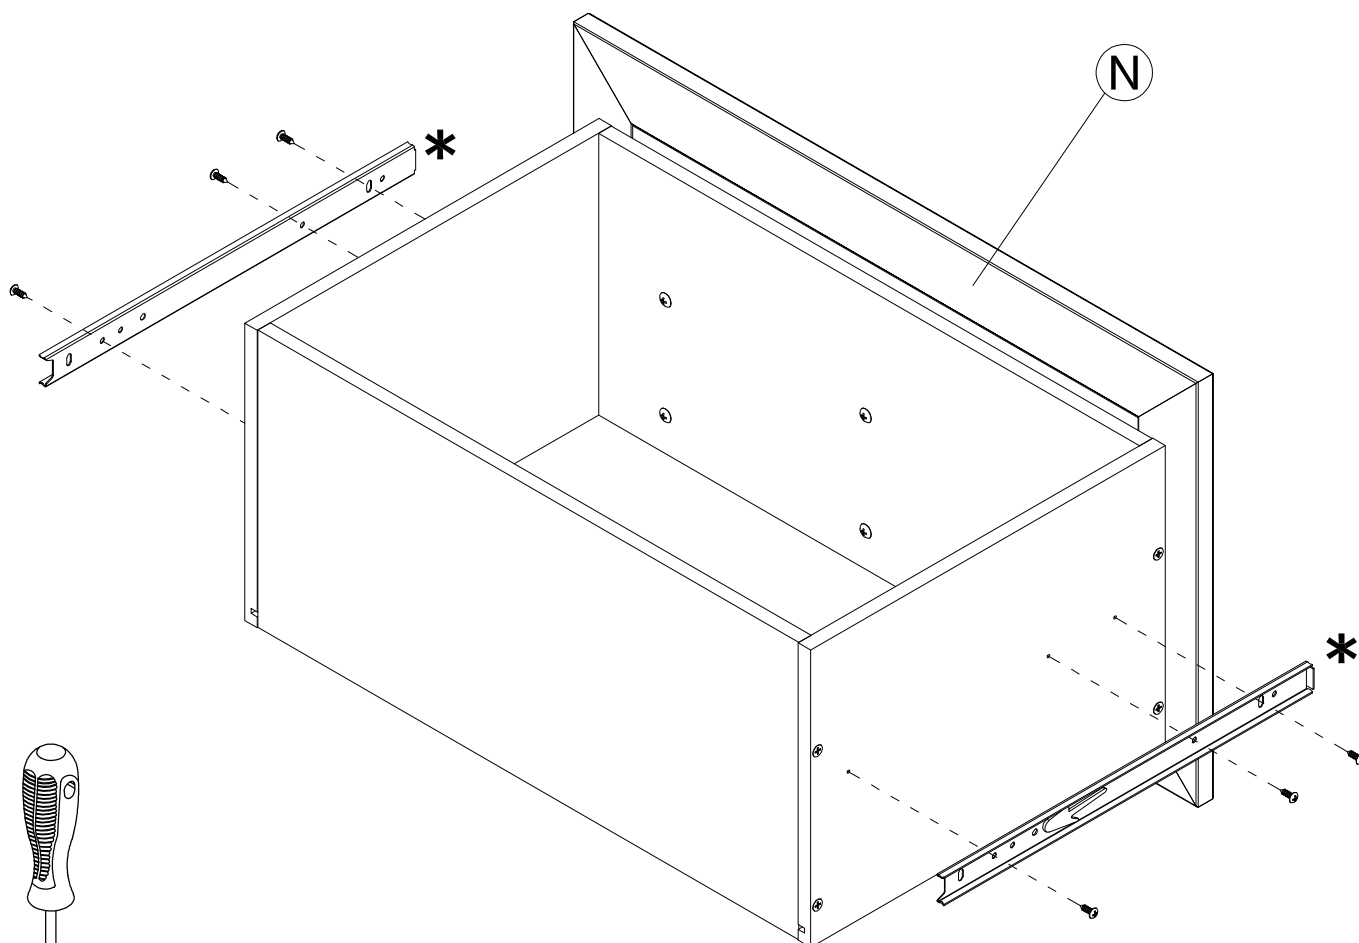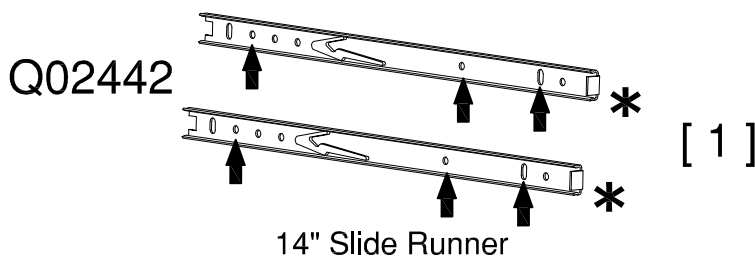

Have an assembly question or need a replacement part? Just call
1-800-950-4782, we are here to help.

STEP 6

Install Hardware

A185970C

 
H186068



File Extrusion
20-5/16" (516mm)

[1]

H153475



File Extrusion
12-1/8" (308mm)

 
[2]

H89793



File Bar
12-1/2" (318mm)

[1]

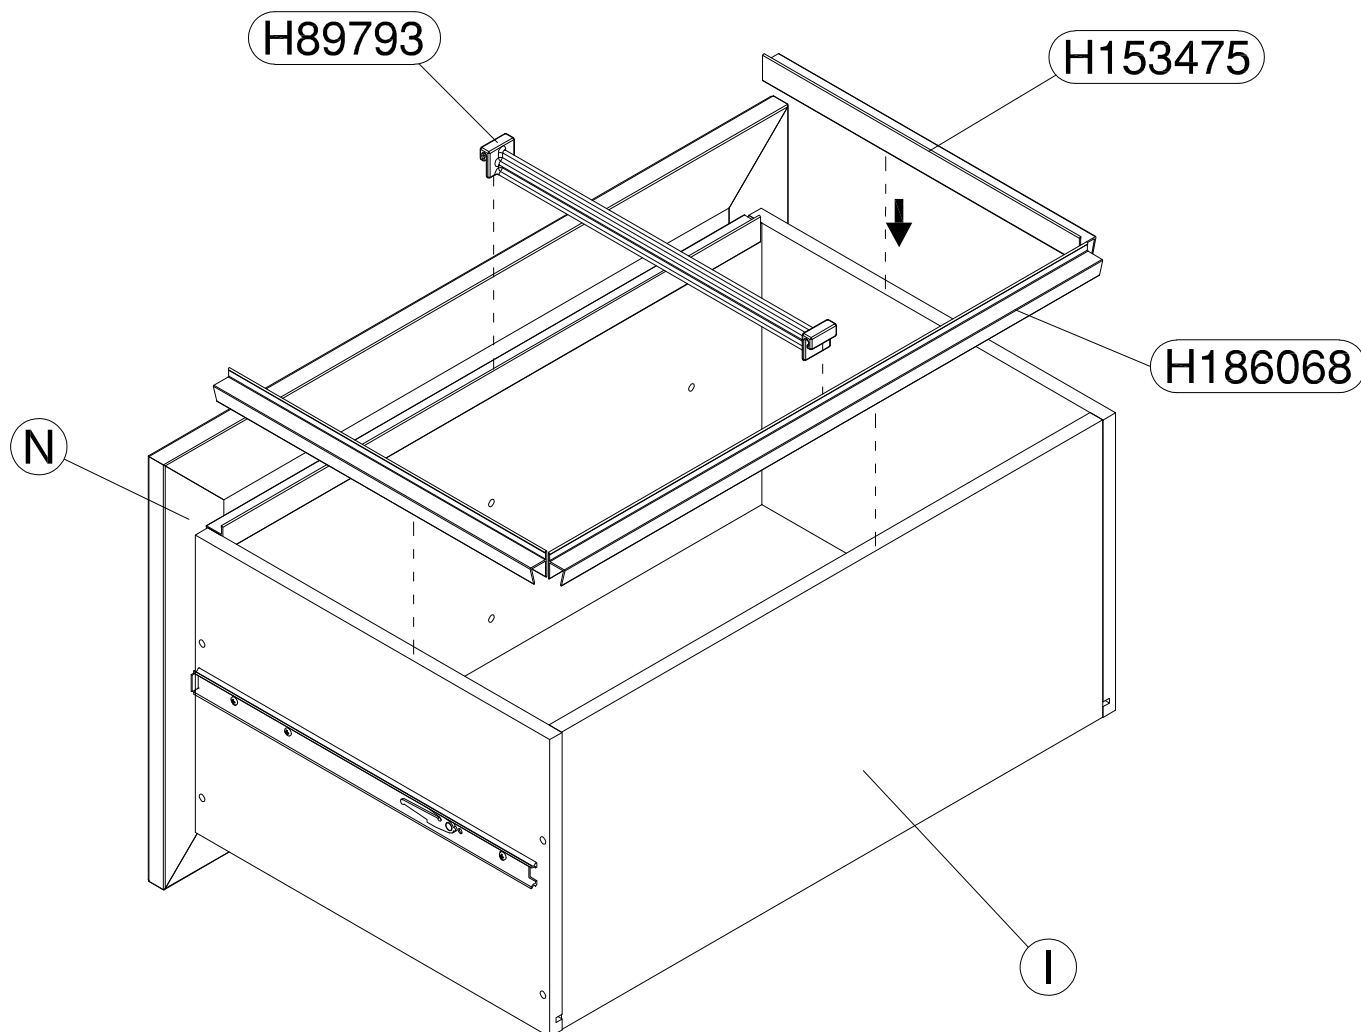

Have an assembly question or need a replacement part? Just call
1-800-950-4782, we are here to help.

STEP 8

 
 
 
 
Prepare Panel

A185970C

Scan QR Code to
Watch Video on:



How to Separate
and Install Drawer
Slides

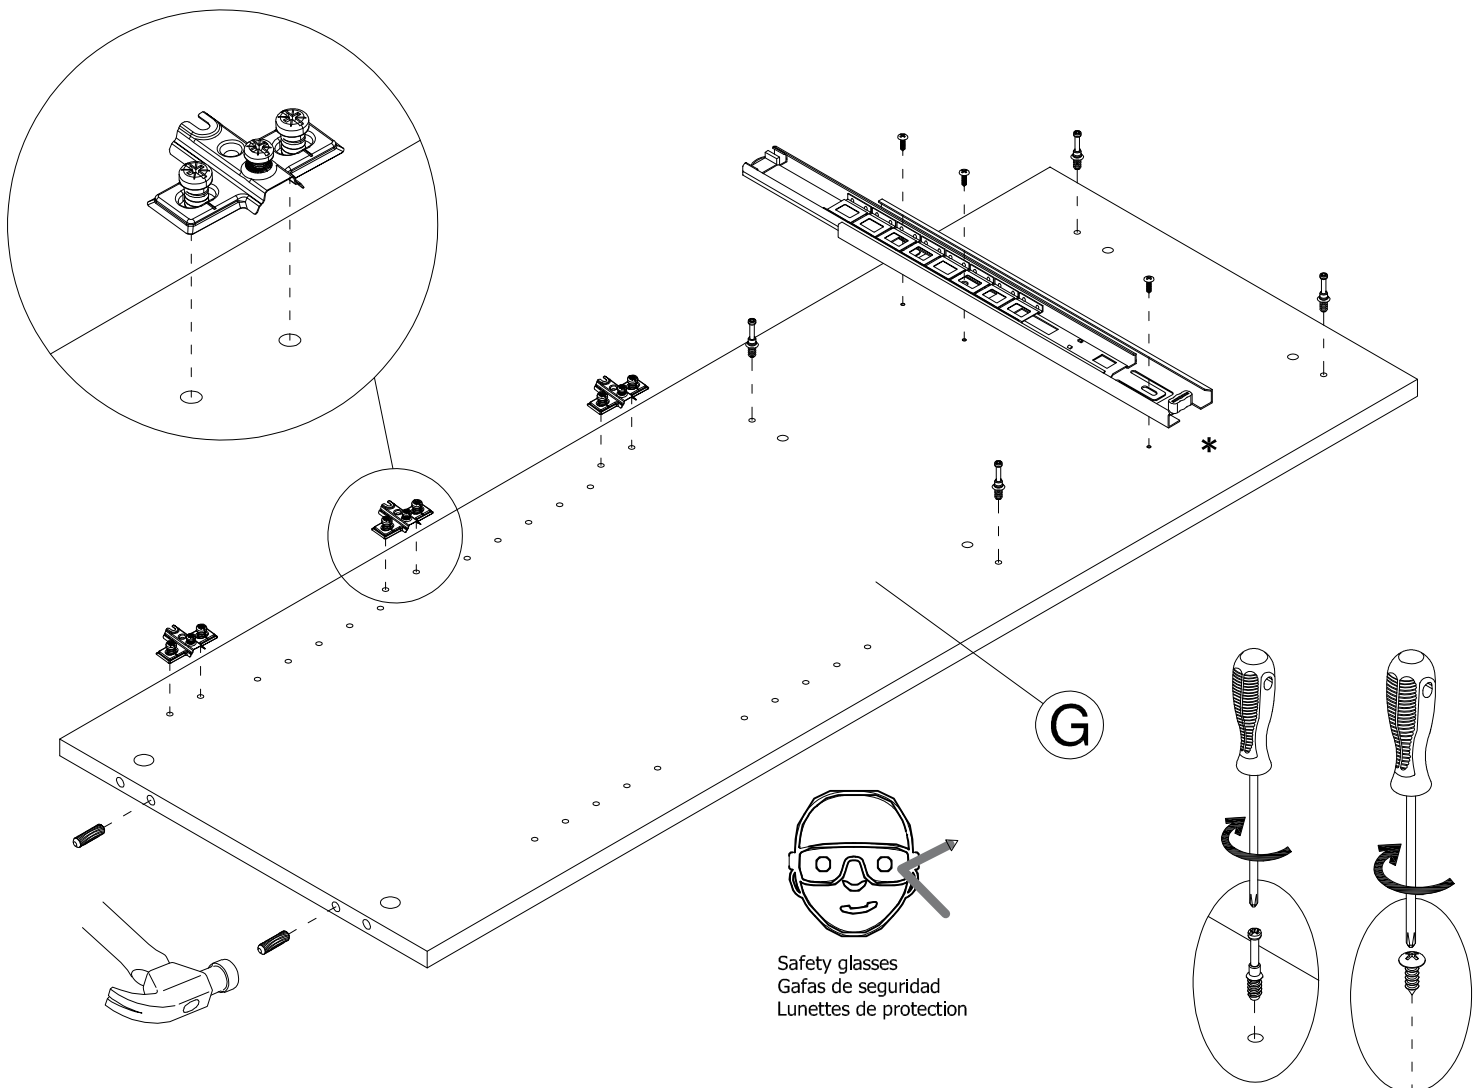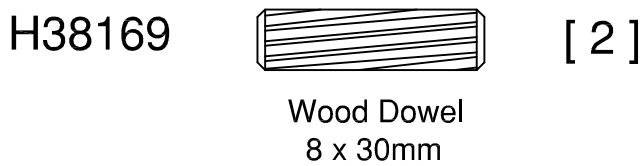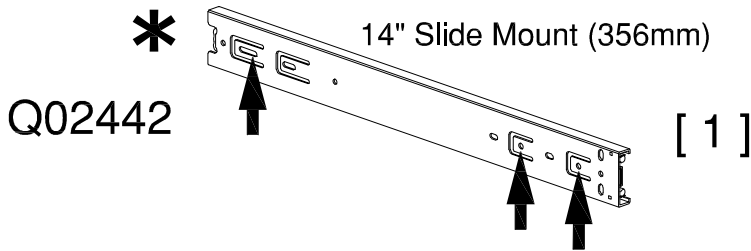

Have an assembly question or need a replacement part? Just call
1-800-950-4782, we are here to help.

STEP 9

Prepare Panels

A185970C

 
H38169



[8]

Wood Dowel
8 x 30mm


H180871

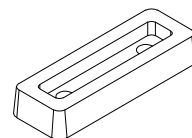

[1]

Door Stopper

 
H153243



[2]

#5 x 9/16"

 H180604




[4]

KD Bolt

2 X

 D

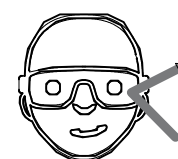

Safety glasses
Gafas de seguridad
Lunettes de protection

H153243

A

Have an assembly question or need a replacement part? Just call
1-800-950-4782, we are here to help.

STEP 10

Assemble Panels

 
A185970C

Scan QR Code to
Watch Video on:






How to Tighten
KD Cams

H181468

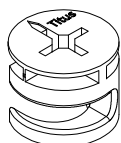

KD Cam

   [8]

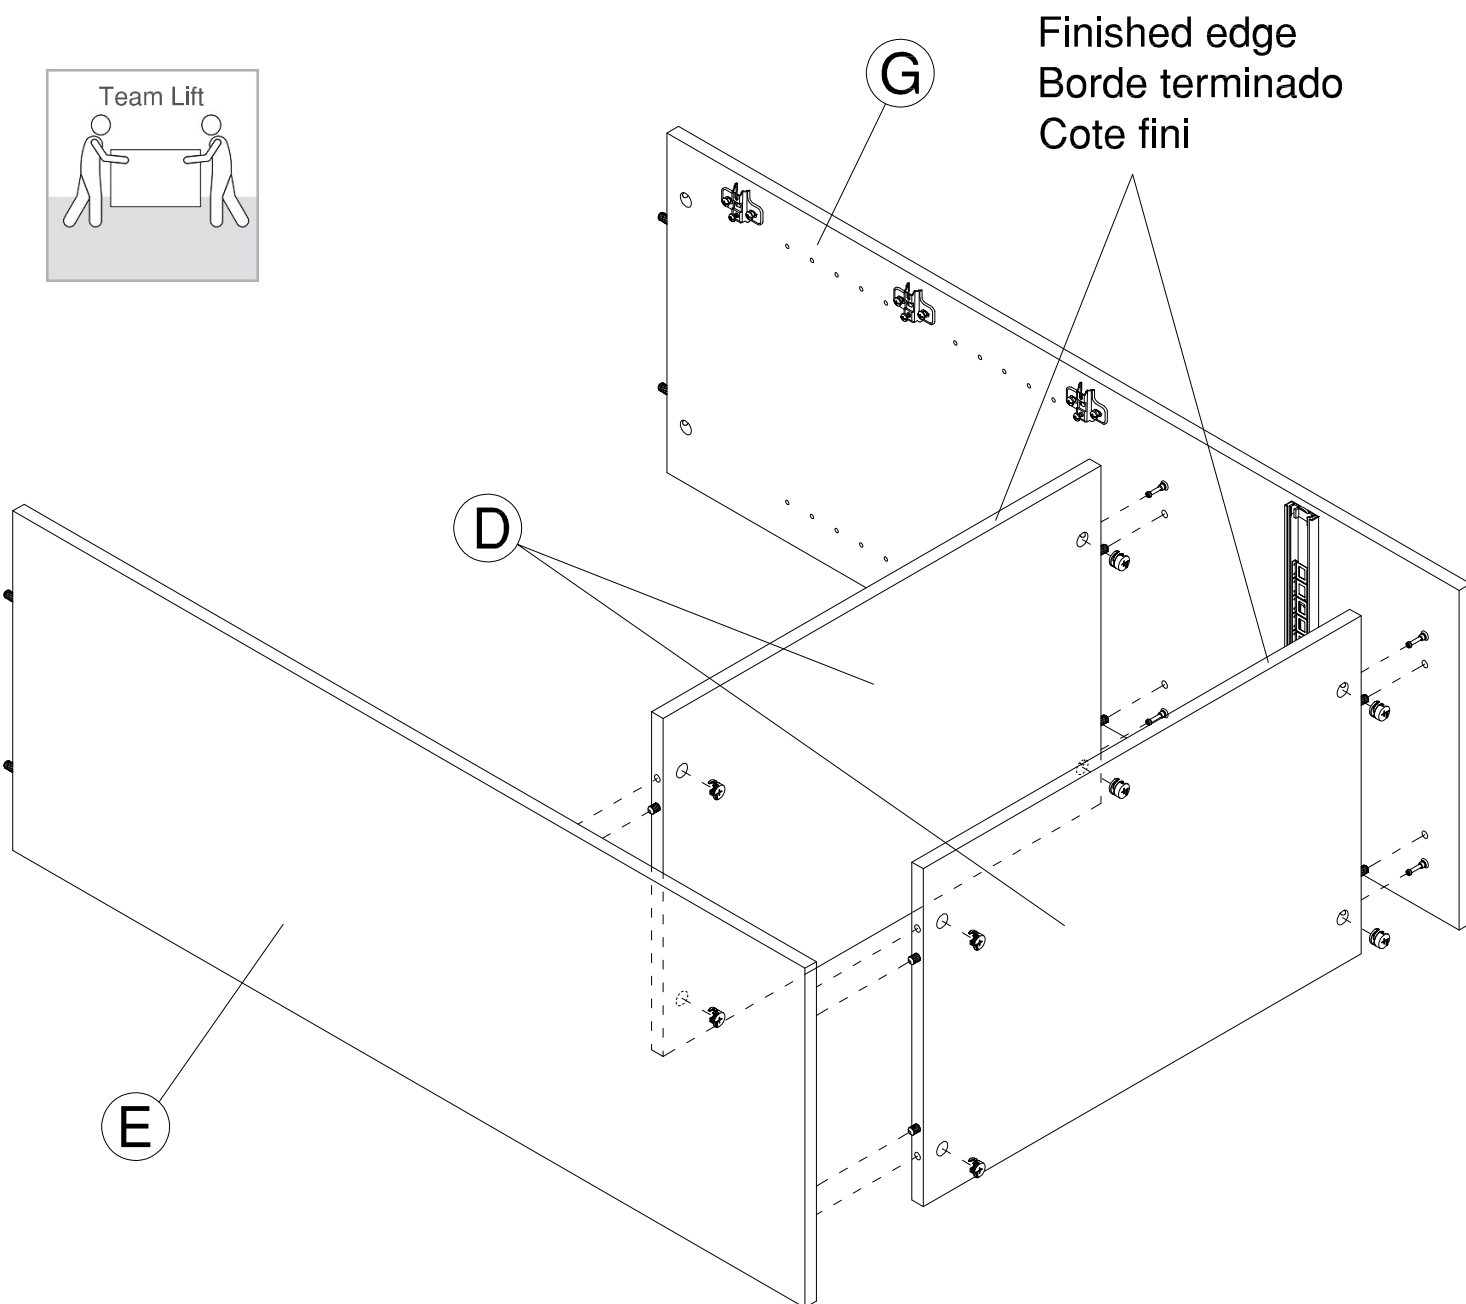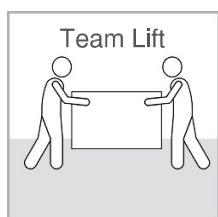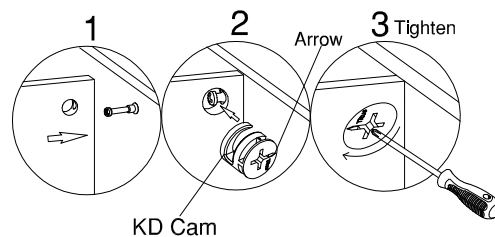

Have an assembly question or need a replacement part? Just call
1-800-950-4782, we are here to help.

STEP 11

 
Assemble Panel

A185970C




Scan QR Code to
Watch Video on:



How to Tighten
KD Cams

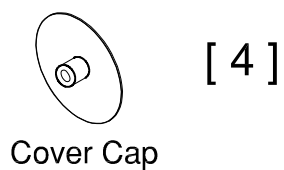

H181468

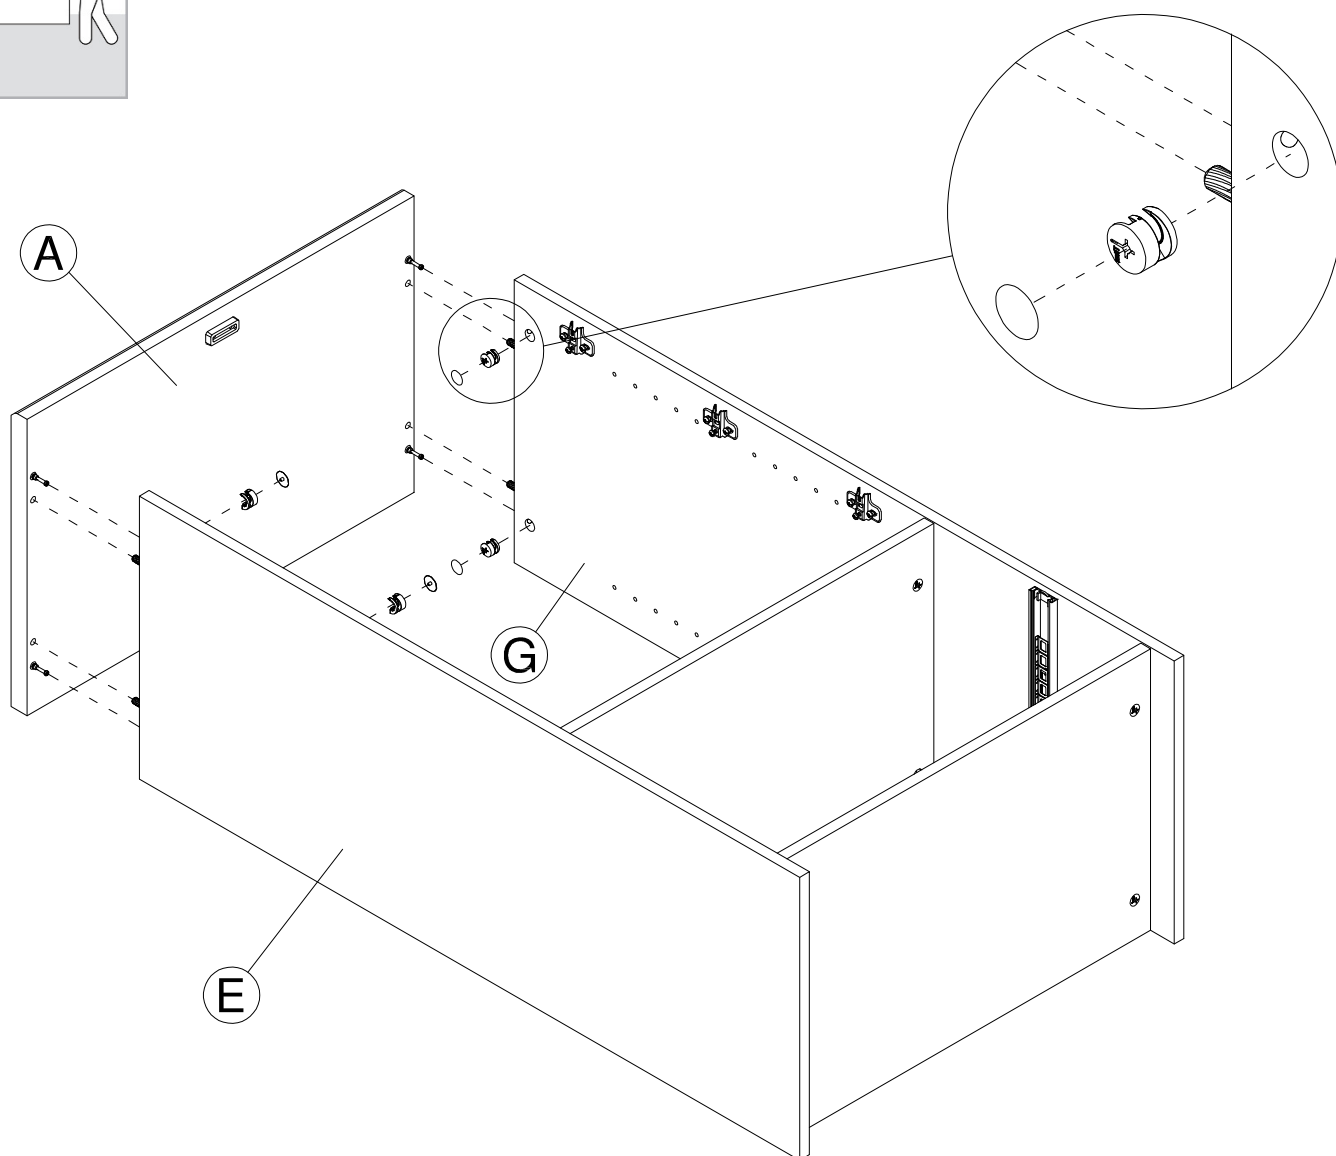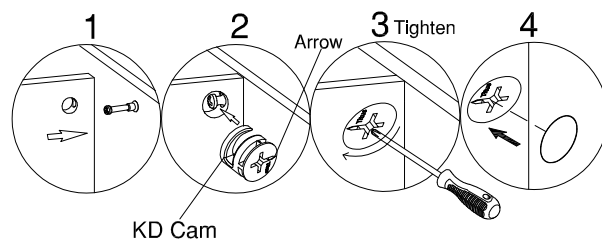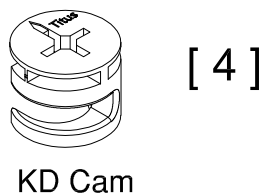   


Have an assembly question or need a replacement part? Just call
1-800-950-4782, we are here to help.

STEP 12

Assemble Panel

 A185970C

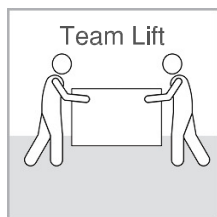


H34174



[26]

#3 x 3/4"

 H20385



[4]

 
Tack Glide

Grain to inside
Grano para el interior
Grain de l'intérieur

Center the back panel so that the back panel does not stick out past the edge of the unit.

Centrez le panneau arrière de manière à ce qu'il ne reste pas au-delà du bord de l'appareil.


Centre el panel posterior de modo que el panel posterior no se pegue más allá del borde de la unidad.

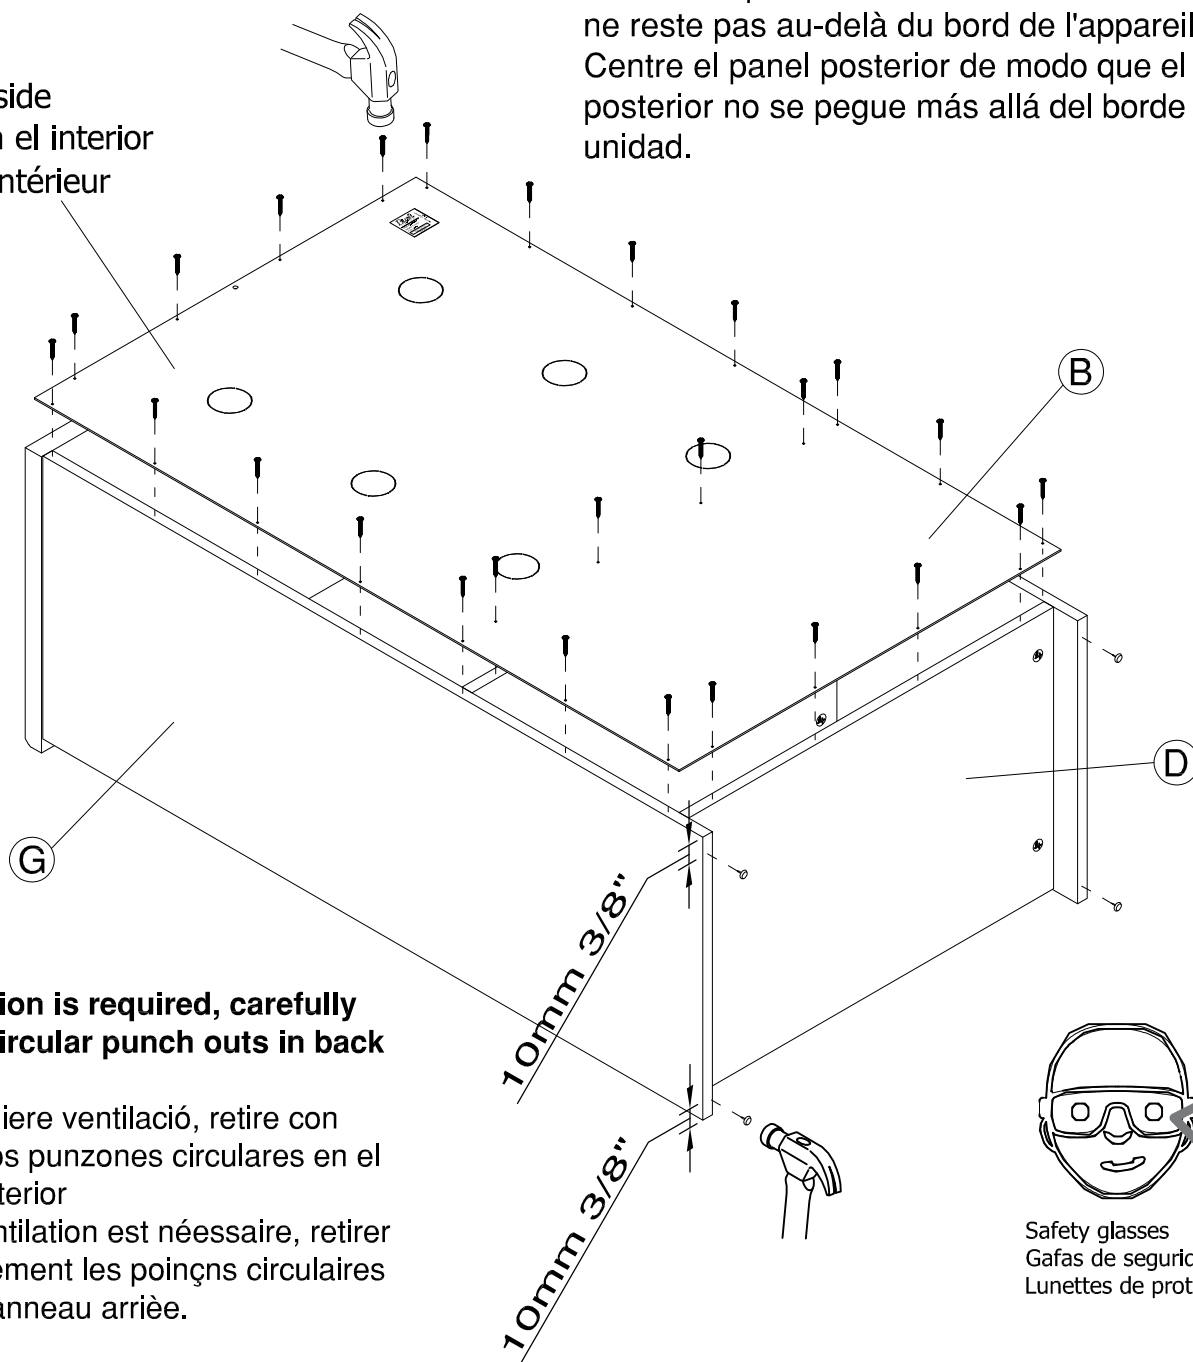

If ventilation is required, carefully remove circular punch outs in back panel.

Si se requiere ventilació, retire con cuidado los punzones circulares en el panel posterior

 Si une ventilation est néessaire, retirer soigneusement les poinçons circulaires dans le panneau arrière.

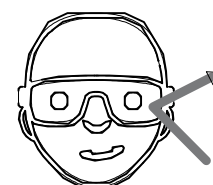

Safety glasses
Gafas de seguridad
Lunettes de protection

Have an assembly question or need a replacement part? Just call
1-800-950-4782, we are here to help.

STEP 13

 
 
Install Drawer

A185970C

Scan QR Code to
Watch Video on:



How to Separate
and Install Drawer
Slides

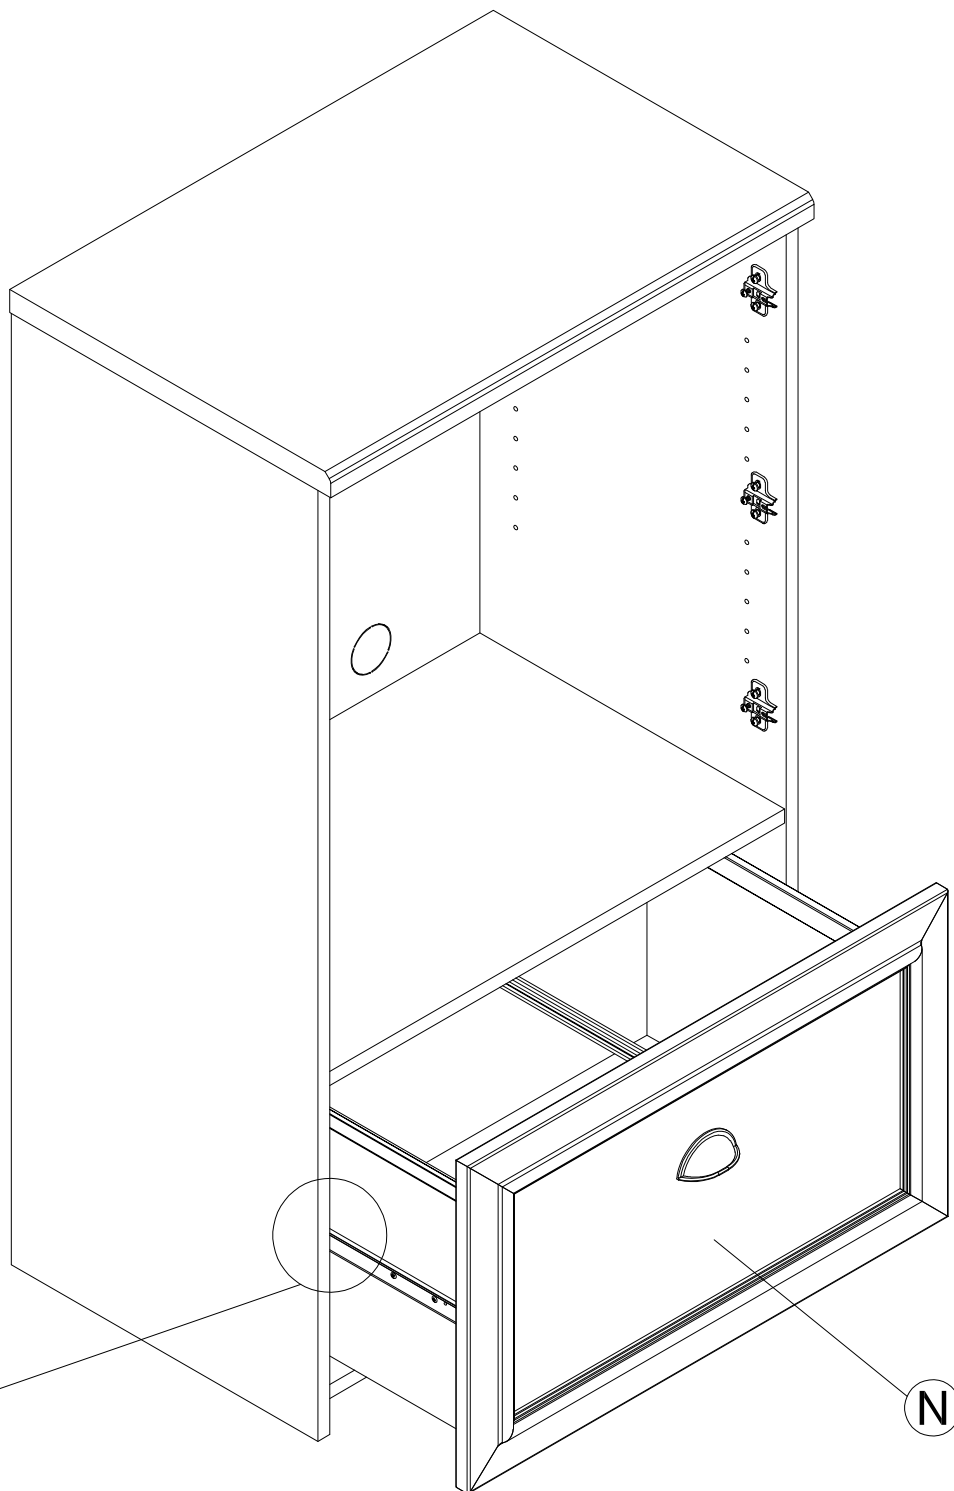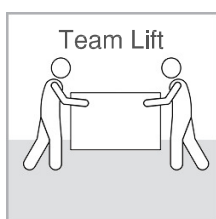

Have an assembly question or need a replacement part? Just call
1-800-950-4782, we are here to help.

STEP 14

Drawer Adjustment

 
 
 
 
 
 
A185970C

Scan QR Code to
Watch Video on:



How to Adjust
Drawer Fronts

DRAWER FRONT VIEW

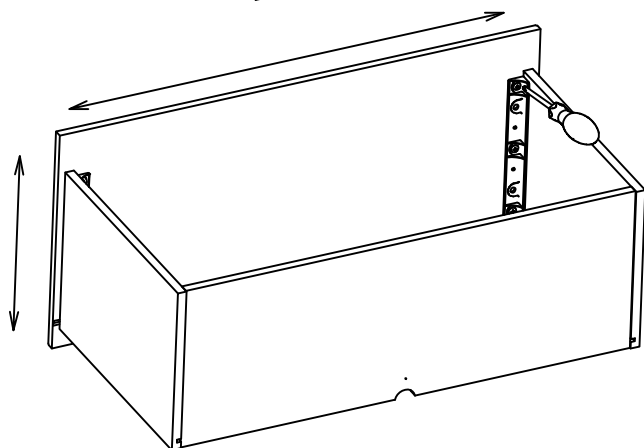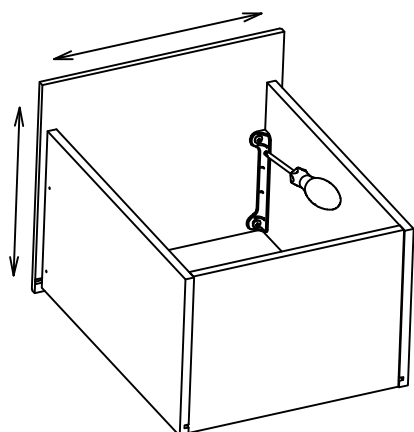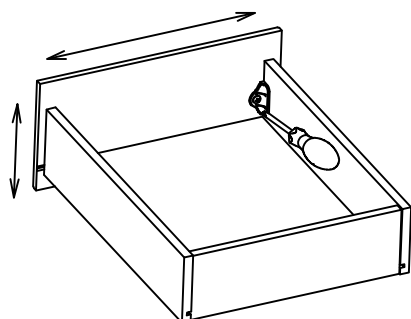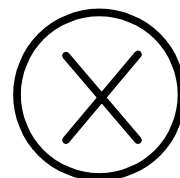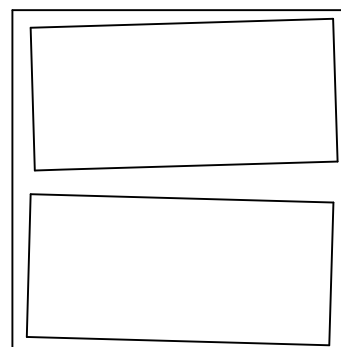

REQUIRED TOOL: PHILLIPS SCREWDRIVER

HERRAMIENTA REQUERIDA: DESTORNILLADOR PHILLIPS
OUTIL REQUIS: TOURNEVIS CRUCIFORME



1. LOOSEN SCREWS.
2. ADJUST DRAWER FRONTS.
3. TIGHTEN SCREWS.

1. Afloje los tornillos
2. Ajustar frentes de cajón
3. Apriete los tornillos

1. Desserrer les vis
2. Ajuster les façades des tiroirs
3. Serrer les vis

 
Have an assembly question or need a replacement part? Just call
1-800-950-4782, we are here to help.

STEP 15

Install Shelves


A185970C

H158707

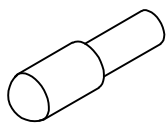

Shelf Pin

 [8]

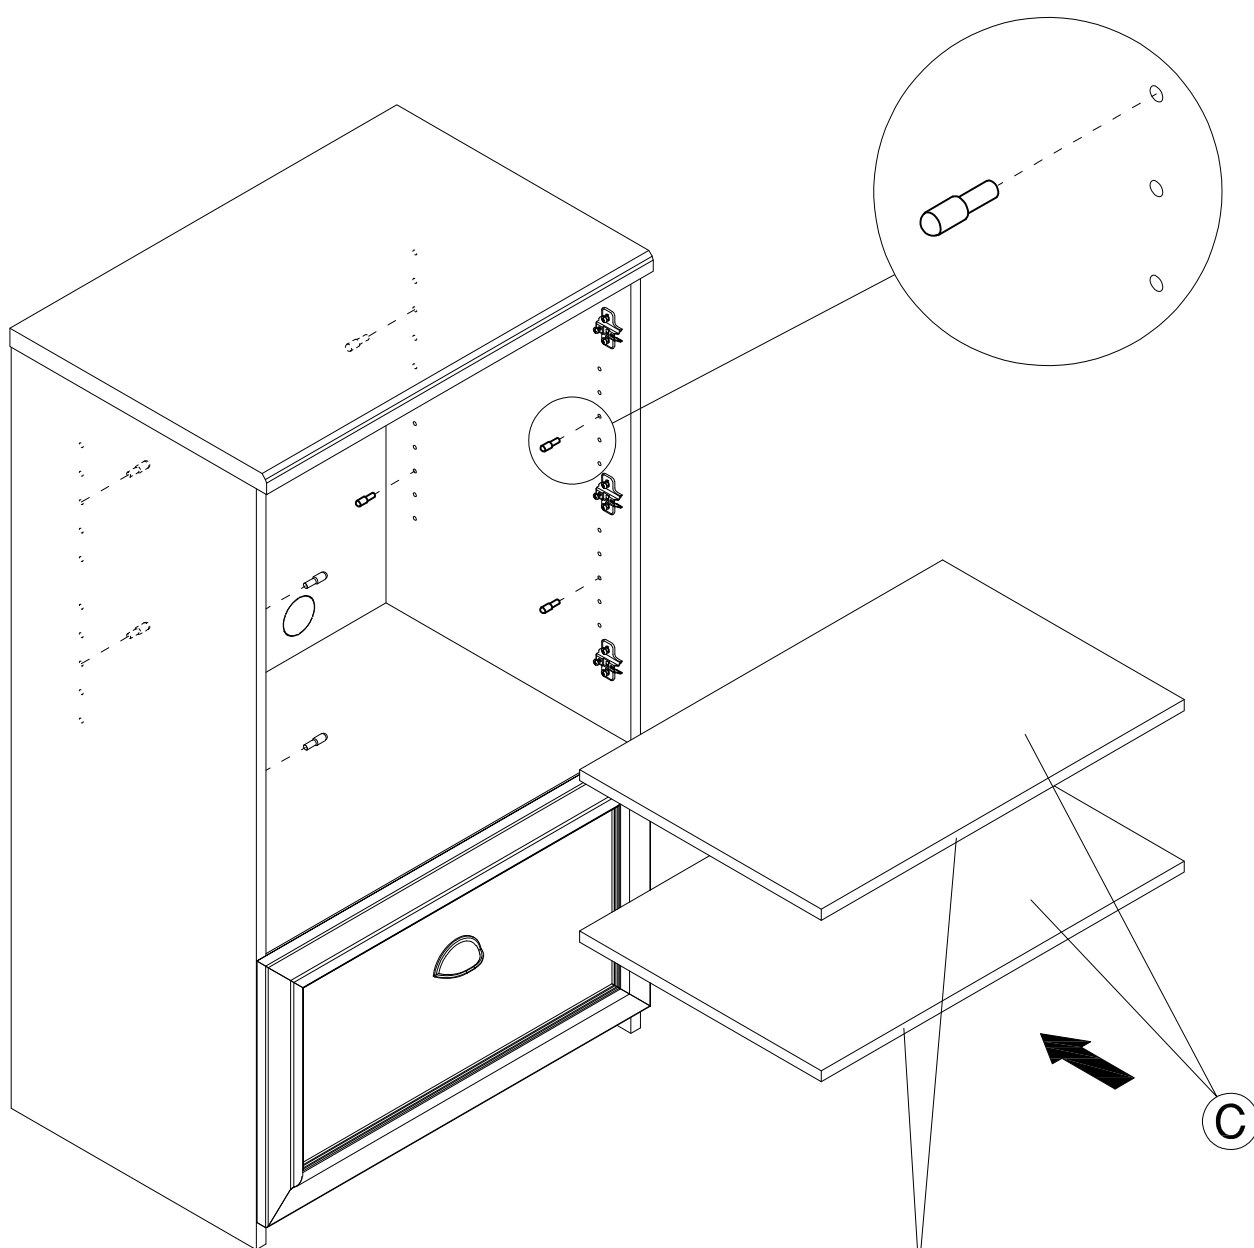

Finished edge
Borde terminado
Cote fini

 
Have an assembly question or need a replacement part? Just call
1-800-950-4782, we are here to help.

STEP 16

Prepare Panel

A185970C


H180927

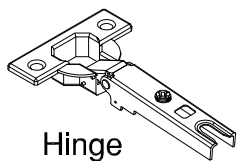

Hinge

[3]

 
H153242



#8 x 5/8"

[6]

 H158943



M4 x 25mm

 
 
 
[1]

H148805



Pull

[1]

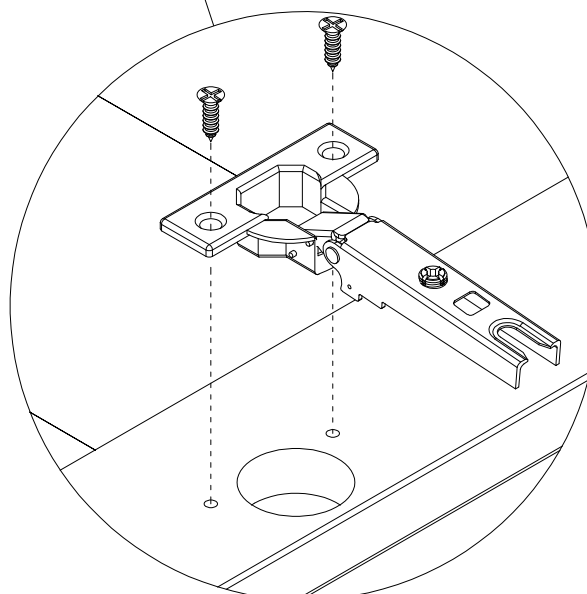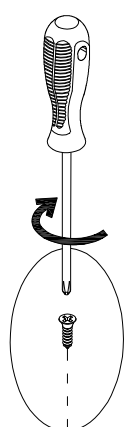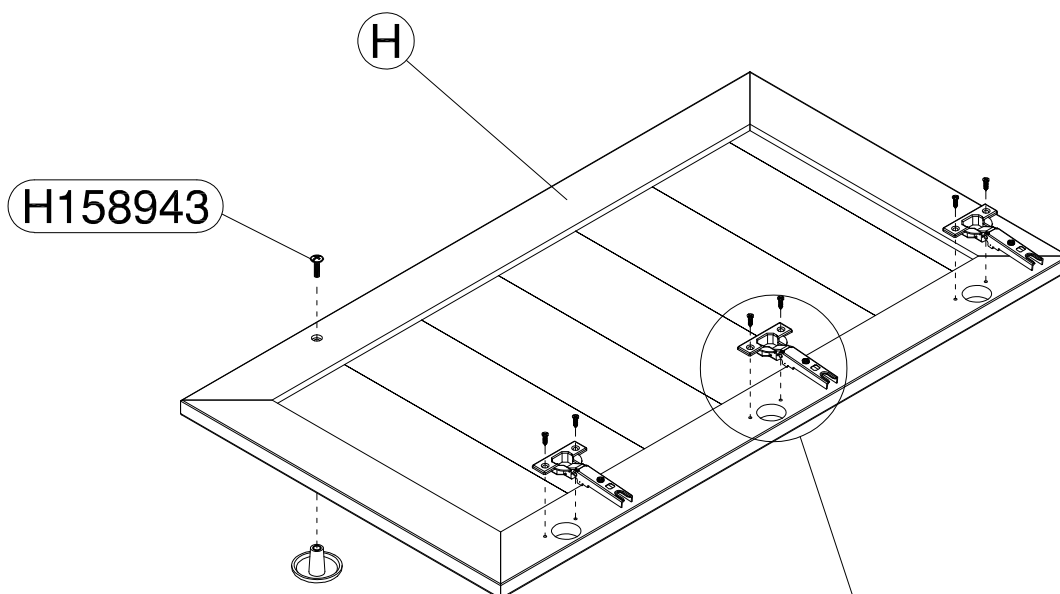


Have an assembly question or need a replacement part? Just call
1-800-950-4782, we are here to help.

STEP 17

Prepare Panel

A185970C

 
H180927

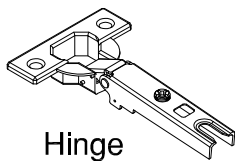

Hinge

[3]

 
H153242



#8 x 5/8"

[6]

 
H158943



M4 x 25mm




[1]

 H148805



Pull

   [1]

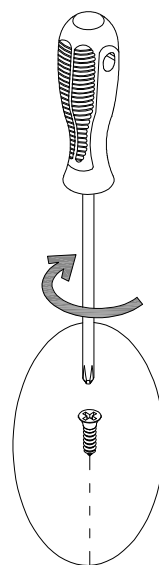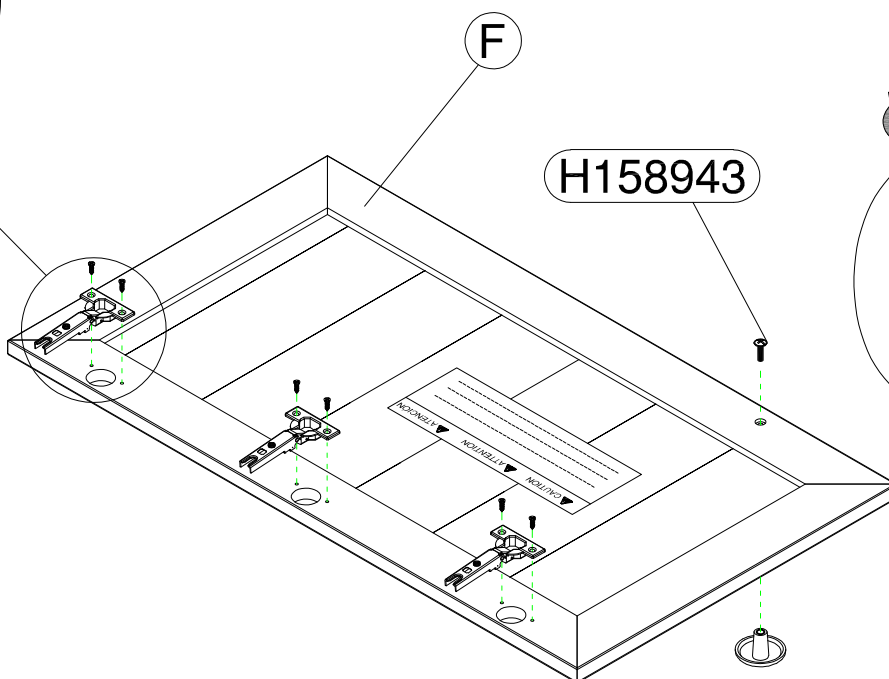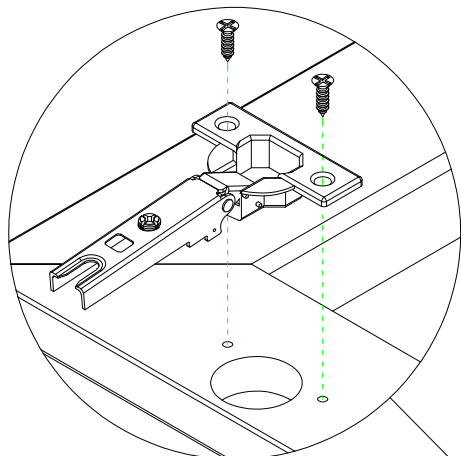

CAUTION



ATTENTION



ATENCIÓN

Electronic equipment may overheat causing damage.

When storing electronic equipment, remove all vent hole punch-outs to provide adequate cooling.

Do leave door open if power exceeds 400W.

El equipo electrónico puede sobrecalentarse y causar daños.

Cuando almacene equipos electrónicos, retire todos los orificios perforados de ventilación para proporcionar una refrigeración adecuada.

Deje la puerta abierta si la potencia excede los 400W.

L'équipement électronique peut surchauffer et causer des dommages.

Lors du stockage de l'équipement électronique, retirez tous les perforations des trous de ventilation pour assurer un refroidissement adéquat.

Ne laissez pas la porte ouverte si la puissance dépasse 400 W.

C190251

Have an assembly question or need a replacement part? Just call
1-800-950-4782, we are here to help.

STEP 18

 
 
 
Assemble and Adjust Door

A185970C

Scan QR Code to
Watch Video on:



How to Adjust
Door Hinges

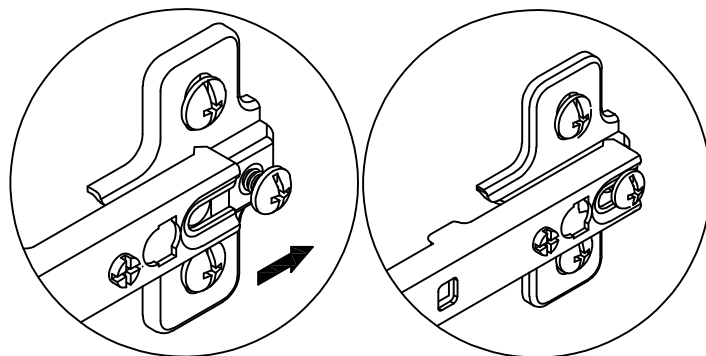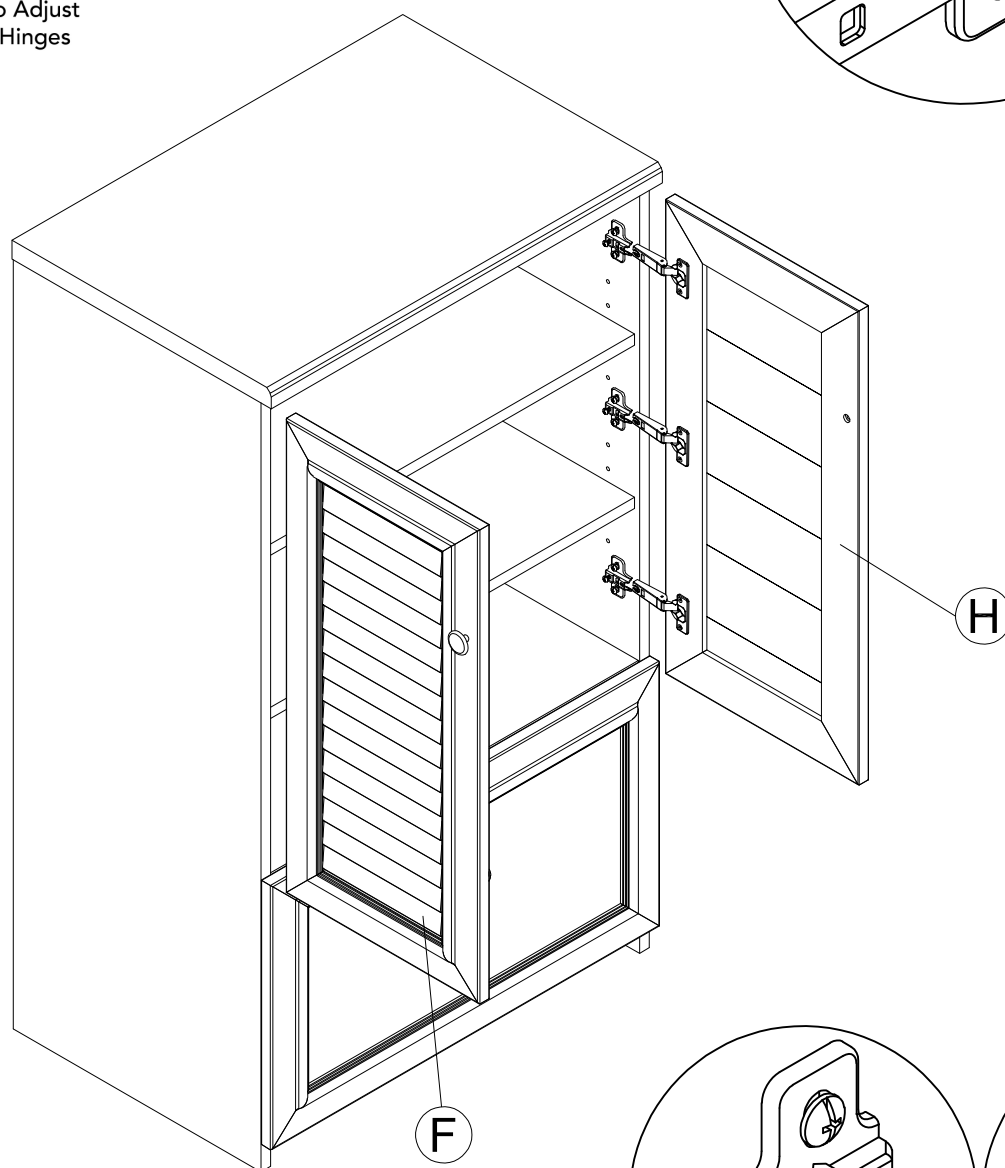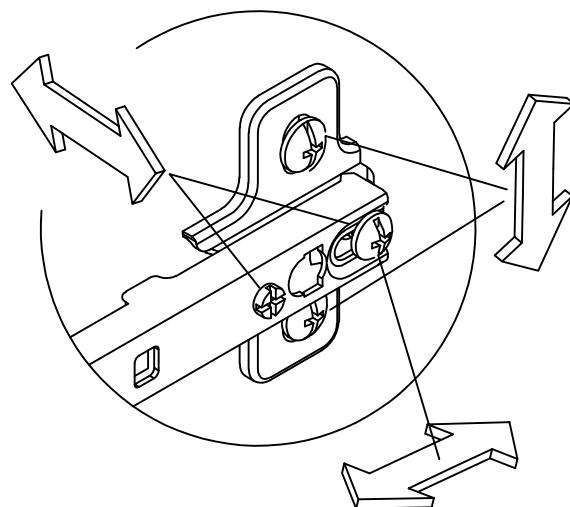

Have an assembly question or need a replacement part? Just call
1-800-950-4782, we are here to help.

STEP 19

Maximum Loading and Cleaning

A185970C

 
Scan QR Code to
Watch Video on:



How to Clean
the Surface

Gently clean
surfaces with a damp
sponge eraser.

MAXIMUM WEIGHT: 0 LBS (0 KG)
PESO MÁXIMO: 0 LIBRAS (0 KILOGRAMO)
POIDS MAXIMUM: 0 LIVRES (0 KILOGRAMME)

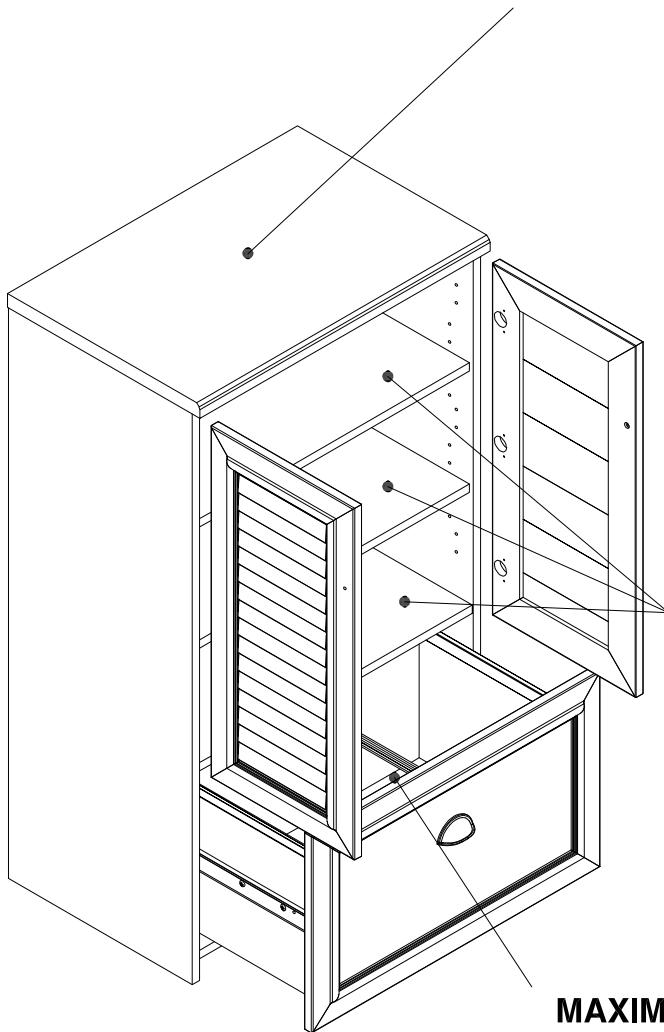

MAXIMUM WEIGHT: 50 LBS (22.68 KG)
PESO MÁXIMO: 50 LIBRAS (22.68 KILOGRAMO)
POIDS MAXIMUM: 50 LIVRES (22.68 KILOGRAMME)

MAXIMUM WEIGHT: 30 LBS (13.61 KG)
PESO MÁXIMO: 30 LIBRAS (13.61 KILOGRAMO)
POIDS MAXIMUM: 30 LIVRES (13.61 KILOGRAMME)


Congratulations! You are all done. If you
have any questions or concerns, please call.

Have an assembly question or need a replacement part? Just call
1-800-950-4782, we are here to help.

WC53280

A	[1]	W186032	H	[1]	S186039
B	[1]	W186033	I	[1]	W186040
C	[2]	W186034	J	[1]	W186041
D	[2]	W186035	K	[1]	W186042
E	[1]	W186036	L	[1]	W186043
F	[1]	S186037	M	[1]	W186044
G	[1]	W186038	N	[1]	S186045

 H160172



[4]

Cover Cap

WC53580

A	[1]	W194372	H	[1]	S194379
B	[1]	W194373	I	[1]	W194380
C	[2]	W194374	J	[1]	W194381
D	[2]	W194375	K	[1]	W194382
E	[1]	W194376	L	[1]	W194383
F	[1]	S194377	M	[1]	W194384
G	[1]	W194378	N	[1]	S194385

H186180



[4]


Cover Cap

Have an assembly question or need a replacement part? Just call
1-800-950-4782, we are here to help.

WC53980

A	[1]	W194386	H	[1]	S194393
B	[1]	W194387	I	[1]	W194394
C	[2]	W194388	J	[1]	W194395
D	[2]	W194389	K	[1]	W194396
E	[1]	W194390	L	[1]	W194397
F	[1]	S194391	M	[1]	W194398
G	[1]	W194392	N	[1]	S194399

 H160173




[4]

Cover Cap

WC53680

A	[1]	W198286	H	[1]	S198293
B	[1]	W198287	I	[1]	W198294
C	[2]	W198288	J	[1]	W198295
D	[2]	W198289	K	[1]	W198296
E	[1]	W198290	L	[1]	W198297
F	[1]	S198291	M	[1]	W198298
G	[1]	W198292	N	[1]	S198299

 H170595



[4]

Cover Cap

Have an assembly question or need a replacement part? Just call
1-800-950-4782, we are here to help.

THIS PAGE INTENTIONALLY LEFT BLANK

THIS PAGE INTENTIONALLY LEFT BLANK

WARRANTY INFORMATION/INFORMATIONS POUR LA GARANTIE/INFORMACIÓN DE GARANTÍA

BUSH FURNITURE'S WRITTEN WARRANTY TO YOU

In order to provide you with timely assistance, please thoroughly inspect your furniture for missing or defective parts immediately after opening the carton. To receive replacement or missing parts under this warranty, call our Consumer Service Department TOLL-FREE at 1-800-950-4782. Please have the Model, Part, and Lot Numbers found in the instruction manual available for your reference. You will also need your sales receipt or other proof of purchase. Replacement part(s) will be shipped to you at no charge with Bush Industries assuming all shipping and handling charges.

This Bush Furniture product is warranted to the original purchaser at the time of purchase and for a period of six years thereafter.

We warrant to you, the original purchaser, that our furniture and all its parts and components are free of defects in material or workmanship. "Defects," as used in this warranty, is defined as any imperfection which impairs the use of the furniture product.

Our warranty is expressly limited to the replacement of furniture parts and components. For six years after the date of purchase, Bush will replace any parts that are defective in material or workmanship.

This warranty applies under conditions of normal use. Our Bush Furniture products are not intended for outdoor use. This warranty does not cover: 1) defects caused by improper assembly or disassembly; 2) defects occurring after purchase due to product modification, intentional damage, accident, misuse, abuse, negligence or exposure to the elements; and 3) labor or assembly costs.

IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, SHALL NOT EXTEND BEYOND THE DURATION OF THE WRITTEN WARRANTY STATED ABOVE, AND IN NO EVENT SHALL BUSH BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM USE OF THE PRODUCT. Some states do not allow a limitation on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitation and exclusion may not apply to you.

This warranty gives you specific legal rights. You may also have other rights that may vary from state to state.

VOTRE GARANTIE BUSH FURNITURE

Afin de vous assister rapidement, veuillez inspecter votre mobilier en détail immédiatement après l'ouverture du carton en cas de pièces manquantes ou défectueuses. Pour recevoir une pièce de rechange ou manquante couverte par cette garantie, appelez notre département de service clientèle GRATUITEMENT au 1-800-950-4782. Veuillez tenir à disposition les numéros de modèle, de pièce et de lot qui se trouvent dans le manuel d'instruction pour votre référence. Vous aurez également besoin de votre reçu ou d'une autre preuve d'achat. La (les) pièce(s) de rechange vous sera (seront) envoyée(s) sans frais, Bush Industries se chargeant de tous les frais d'expédition.

Tout le produit Bush Furniture est garanti à l'acheteur original à partir de la date d'achat pour une période d'e six ans.

Nous vous garantissons, à vous l'acheteur original, que notre mobilier et toutes ses pièces et composants sont sans défaut de matériau ou de fabrication. Le terme "défauts" utilisé dans cette garantie, est défini comme étant toutes les imperfections qui compromettent l'utilisation du meuble.

Notre garantie est expressément limitée au remplacement des pièces et des composants du mobilier. Pendant six ans après la date d'achat, Bush remplacera toute pièce défectueuse dans le matériau ou sa fabrication.

Cette garantie d'applique sous des conditions d'utilisation normale. Nos produits ne sont pas destinés à être utilisés en plein air. Cette garantie ne couvre pas: 1) les défauts causés par un mauvais assemblage ou démontage; 2) les défauts ayant lieu après l'achat et dus à la modification du produit, des dommages intentionnels, des accidents, une mauvaise utilisation, un mauvais traitement, la négligence ou l'exposition aux éléments, et 3) les frais de main d'œuvre ou d'assemblage.

LES GARANTIES TACITES, Y COMPRIS LA GARANTIE DE QUALITE MARCHANDE, NE S'ETENDRONT PAS AU-DELA DE LA DUREE ECRITE CITEE CI-DESSUS, ET BUSH NE SERA EN AUCUN CAS RESPONSABLE DES DOMMAGES ACCESSOIRES OU INDIRECTS RESULTANT DE L'UTILISATION DU PRODUIT. Certains états ne permettent pas d'appliquer une limite à la durée de la garantie tacite, ni une exclusion ou limitation des dommages accessoires ou indirects; dans ce cas les limitations ou exclusion ci-dessus peuvent ne pas s'appliquer à vous.

Cette garantie vous donne des droits légaux spécifiques. Il se peut que vous ayez également d'autres droits qui peuvent varier d'un état à l'autre.

GARANTIA ESCRITA DE BUSH FURNITURE PARA USTED

Para brindarle asistencia oportuna, por favor, verifique detalladamente que a su mueble no le falte o tenga piezas defectuosas inmediatamente después de abrir la caja. Para recibir un reemplazo o la parte faltante bajo esta garantía, llame a nuestro Departamento de Servicio al Consumidor GRATIS al 1-800-950-4782. Sírvase traer los números de modelo, parte y lote que se encuentran en el manual de instrucciones disponible para su referencia. Además, necesitará el recibo de su compra u otra prueba de compra. La(s) pieza(s) de reemplazo le será(n) enviada(s) sin recargo por Bush Industries asumiendo los gastos de envío y manipuleo.

Todo mueble de Bush Furniture es garantizado al comprador original al momento de la compra y por un periodo de seis años en adelante.

Le garantizamos a usted, el comprador original, que nuestros muebles sus partes y componentes están libres de defectos en materiales o trabajo. "Defectos", según se usa en esta garantía, se define como una imperfección que perjudica el uso del producto mobiliario.

Nuestra garantía se limita expresamente al reemplazo de partes y componentes mobiliarios. Durante seis años después de la fecha de compra, Bush reemplazará cualquier parte defectuosa en material o trabajo.

Esta garantía se aplica bajo condiciones de uso normal. Nuestros productos de Bush Furniture no son para uso en exteriores. Esta garantía no cubre: 1) defectos causados por un ensamblaje o desensamblaje inadecuado; 2) defectos que ocurran después de la compra debido a modificación del producto, daño intencional, accidente, mal uso, abuso, negligencia o exposición a los elementos; y 3) costos de trabajo o ensamblaje.

LAS GARANTÍAS IMPLICADAS, INCLUYENDO LA GARANTÍA DE COMERCIABILIDAD, NO SE EXTENDERÁN MÁS ALLÁ DE LA DURACIÓN DE LA GARANTÍA ESCRITA MENCIONADA, Y EN NINGÚN CASO BUSH SERÁ RESPONSABLE POR DAÑOS INCIDENTALES O CONSIGUIENTES COMO RESULTADO DEL USO DEL PRODUCTO. Algunos estados no permiten una limitación sobre el tiempo de duración de la garantía implicada o la exclusión o limitación de daños incidentales o consiguientes, de manera que la limitación y exclusión mencionadas pueden no aplicarse para usted.

Esta garantía le otorga derechos legales específicos. Puede también tener otros derechos que pueden variar según los estados.

6-Year

Manufacturer's
Warranty

**Register your
product online at**

Scan the QR Code or go to
[http://www.bushfurniture.com/
ProductRegistration.aspx](http://www.bushfurniture.com/ProductRegistration.aspx)



**Assembly tips &
how to videos**

Scan the QR Code to access our video
guides [https://www.bushfurniture.com/
CustomerService/HowToAssemble.aspx](https://www.bushfurniture.com/CustomerService/HowToAssemble.aspx)

