




SINGLE-ZONE WINE COOLER WITH REVERSIBLE DOOR
(Approx. 188 Bottles)
Instruction Manual

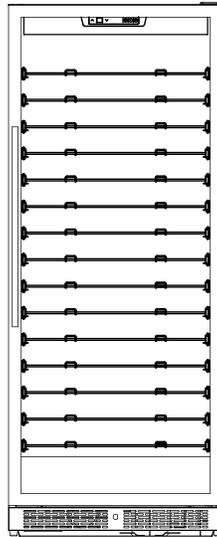

Register this and other Vinotemp® products through our website:
<https://vinotemp.thelegacycompanies.com/support/tickets/new>
Product registration is not required to activate warranty.

HELP US HELP YOU..... 3

IMPORTANT SAFEGUARDS..... 4

ELECTRICAL CONNECTION..... 5

PRODUCT DIAGRAM..... 6

INSTALLATION.....7-9

BOTTLE CAPACITY 9

OPERATING YOUR WINE COOLER.....10-11

CARE & MAINTENANCE.....12

PROBLEMS WITH YOUR WINE COOLER / TROUBLESHOOTING.....13

PRODUCT WARRANTY..... 14

SAVE THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE

YOUR WINE COOLER

CONGRATULATIONS on the purchase of your new Vinotemp wine cooler.

This unit can be used for storage and/or service. The unit has a solid door and soft interior light that you can use to display your wine.

SERVING WINES

Storing wines at the proper temperature is important. To preserve them as long as possible, wine should be stored at approximately 55° Fahrenheit. However, the chart below suggests the optimal drinking temperature for the different styles of wine.

°C	°F	Wine Style
19	66	Armagnac, Brandy, Cognac
18	64	Full Bodied Red Wines, Shiraz
17	62	Tawny Port
15	59	Medium Bodied Red Wines
14	57	Amontillado Sherry
13	55	Light Bodied Red Wines
12	54	Full Bodied White Wines
11	52	Medium Bodied White Wines
10	50	Rosé, Light Bodied White Wines
9	48	Vintage Sparkling
8	46	Fino Sherry
7	45	Non Vintage Sparkling

HELP US HELP YOU

Read this guide carefully.

It is intended to help you operate and maintain your new appliance properly.

Keep it handy to answer your questions. If you don't understand something or you need more help, please call:

Vinotemp Customer Service 954-686-4441

Keep proof of original purchase date (such as your sales slip) with this guide to establish the warranty period.

CAUTION:

THIS APPLIANCE IS NOT
DESIGNED FOR THE STORAGE
OF MEDICINE OR OTHER
MEDICAL PRODUCTS.

Write down the model and serial numbers.

You'll find them on a plate located on the rear outside wall of the appliance.

Please write these numbers here:

Date of Purchase

Model Number

Serial Number

Use these numbers in any correspondence or service calls concerning your appliance.

If you received a damaged appliance, immediately contact the dealer (or builder) that sold you the appliance.

Save time and money. Before you call for service, check the Troubleshooting Guide. It lists causes of minor operating problems that you can correct yourself.

IMPORTANT SAFETY INSTRUCTIONS



To reduce the risk of fire, electrical shock or injury when using your appliance, follow these basic precautions:

- Do not operate this or any other appliance with a damaged cord.
- Do not operate if housing is removed or damaged.
- Exercise caution and use reasonable supervision when appliance is used near children. Never allow children to operate, play with or crawl inside the appliance. Keep packing materials away from children.
- Before performing any maintenance or cleaning, ensure that the unit is unplugged or that the power line is disconnected.
- Do not clean appliance with flammable fluids. Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance. The fumes can create a fire hazard or explosion.
- Exercise caution when moving and installing the unit. The cooler is heavy and may require two or more people when moving the unit to prevent strain or injury.
- To ensure proper ventilation for your appliance, the front of the unit must be completely unobstructed.
- Choose a well-ventilated area with temperatures above 60°F and below 90°F.
- Locate the unit away from direct sunlight and sources of heat (stove, heater, radiator, etc). This unit is intended for indoor use only and must be installed in an area protected from the elements.
- Place the appliance on a solid, level surface.
- Do not attempt to repair or replace any part of your appliance unless it is specifically recommended in this manual. All other servicing should be referred to a qualified technician.
- Connect to properly polarized outlets only. It is recommended that a separate circuit, serving only your appliance be provided. Use receptacles that cannot be turned off by a switch or pull chain. Be sure that the plug is fully inserted into the receptacle.
- To protect against electric shock, do not immerse appliance, plug or cord in water or other liquids. Avoid locating the unit in moist areas.
- This appliance is designed to be built-in (fully-recessed) or freestanding.
- Do not use this appliance for other than its intended purpose. For indoor, household use only.
- Do not operate the unit with wet hands, while standing on a wet surface or while standing in water.
- Do not use solvent-based cleaning agents or abrasives on the interior of the cooler. These cleaners may damage or discolor the interior.
- Keep fingers out of pinch point areas and be careful when closing doors if children are around.
- This appliance is designed for storing and cooling wines. Do not store perishable food or medical products within the unit.
- When disposing of refrigerated appliances, special handling is often required. It is the consumer's responsibility to comply with federal and local regulations when disposing of this product.
- Do not slide your beverage cooler into place.
- **WARNING:** Risk of child entrapment and suffocation. Before you throw away this or an old unit, take off the door. Leave the shelves in place, so that children may not easily climb inside.
- **CAUTION:** Flammable refrigerant used! When handling, moving and use of the refrigerator, make sure to avoid either damaging the refrigerant tubing, or increasing the risk of a leak.



R600a
ISOBUTANE



FLAMMABLE LIQUID

CAUTION: Risk of fire or explosion due to flammable refrigerant used. Follow handling instructions carefully in compliance with U.S. government regulations.

ELECTRICAL CONNECTION




Improper use of the grounded plug can result in the risk of electrical shock. If the power cord is damaged, submit a warranty service request via our website at: <https://vinotemp.thelegacycompanies.com/support/tickets/new>

For your protection, this unit is equipped with a 3-conductor cord set that has a molded 3-prong grounding-type plug, and should be used in combination with a properly connected grounding-type outlet.


- Do not under any circumstances cut or remove the third ground prong from the power cord supplied. For personal safety, this appliance must be properly grounded.
- The cord should be secured behind the unit and not left exposed or dangling to prevent accidental injury.
- A standard electrical supply (115V AC only, 60Hz, 15A), properly grounded in accordance with the National Electrical Code and local codes and ordinances, is required.
- When a standard 2-pin wall outlet is encountered, it is your responsibility to have it replaced with a properly grounded 3-pin wall outlet.
- Never unplug the unit by pulling the power cord. To disconnect the appliance, always grip the plug firmly and pull straight out from the wall outlet. When moving the unit, be careful not to damage the power cord.
- The unit should always be plugged into its own individual electrical outlet with a voltage rating that matches the rating label on the unit.
- Do not pinch or kink the power supply cord.
- Repair or replace all power cords that have become frayed or damaged. Do not use a cord that shows cracks or abrasion damage along its length or at either end. When moving the appliance, be careful not to damage the power cord.

Extension Cord

CAUTION: It is strongly recommended that you do not use an adapter or an extension cord with this unit.

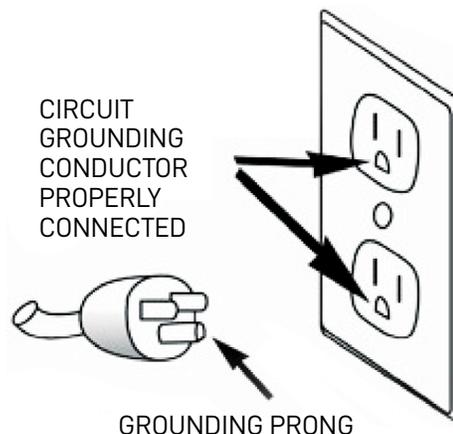

PRODUCT DIAGRAM

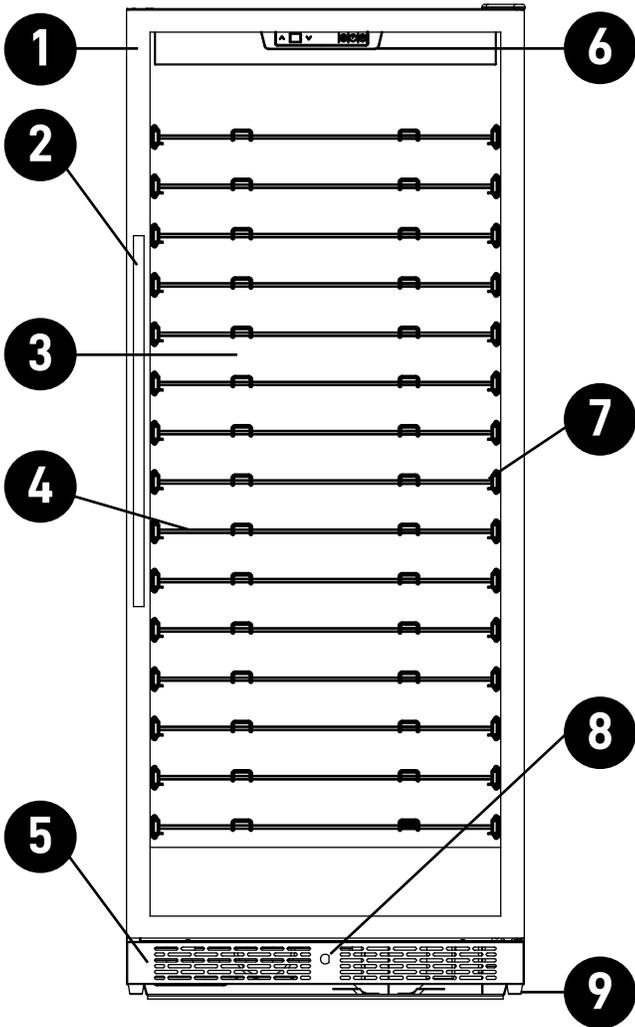

1. Full glass door
2. Stainless steel handle
3. Patented interior Backlit™ panel
4. Patent-pending adjustable label-forward, VinBo™ racks
5. Front exhaust
6. Control panel
7. Stainless steel gliding shelves
8. Lock
9. Leveling legs


MODEL No.	EL-300COMM
Voltage	AC 115V
Frequency	60Hz
Ambient Temp Range	41-100°F / Humidity 45-90%
Control Temp Range	41-65°F
Refrigerant	R600a / 1.690z
Power Consumption	0.88kWh / 24h
Input Power	200W
Volume	21.2 cu. ft.
Net Weight.	282 lbs.
Gross Weight	298 lbs.
Dimensions	29-1/2" X 27-1/10" X 74" (WxDxH)
Box Dimensions	30-9/10" X 29-1/10" X 75-3/5" (WxDxH)

INSTALLATION

INSTALLATION OF YOUR APPLIANCE

- Remove all packing material before using your cooler.
- **IMPORTANT:** Before connecting the unit to a power source, let it stand upright for approximately 24 hours. This will reduce the possibility of a malfunction in the cooling system from handling during transportation.
- This unit is designed for freestanding or built-in installation and intended for indoor use only. Place the unit in a dry and well-ventilated area, away from any source of heat or moisture, or in direct sunlight.
- For optimal performance, install the appliance in a location with an ambient temperature between 41-100°F. Do NOT install the unit in a location with an ambient temperature that will fall below 41°F as it may affect performance.

- **Built-In Installation:** Leave at least 0.8" of space on each side and at the top of the wine cooler to ensure proper air circulation for the compressor and condenser. Make sure the front exhaust vent is not blocked, as this can affect performance.
(See Diagram A)
- **Freestanding Installation:** Leave 2" of space at the back, 0.8" on each side, and unrestricted clearance at the top to allow proper airflow. Do not place the unit under a table, countertop, or similar obstruction, as this will prevent adequate ventilation and may impact performance.
- Do not slide the unit into place.
- Place the wine cooler on a level surface strong enough to support it when it is fully loaded. To level the wine cooler, adjust the front leveling legs at the bottom of the wine cooler.
- Plug the wine cooler into an exclusive, properly installed-grounded wall outlet.

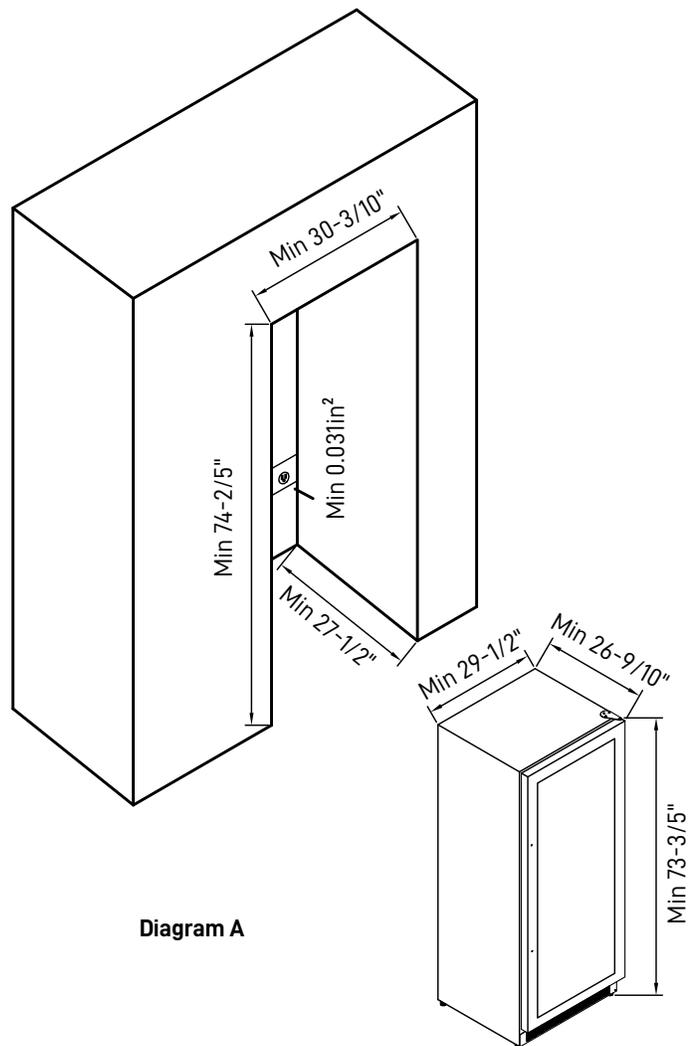

REVERSIBLE DOOR INSTALLATION

This wine cooler is designed with a reversible door, allowing you to change the door swing from right-hinged to left-hinged (or vice versa). The unit is preinstalled with a right-hinged door. To change the door swing, follow these steps:

Important: The door is heavy. We recommend having a second person assist during removal and installation.

- Carefully remove the hinge cover from the top right side of the unit.
- Using a screwdriver, loosen and remove the screws securing the top hinge. Support the door while removing the hinge.
- Carefully lift the door upward to release it from the bottom hinge, then place it on a soft, flat surface to prevent damage.
- Remove the door shaft from the right bottom hinge and install it into the left bottom hinge.
- Remove the plastic cap from the top left lock hole and move it to the top right side.
- Rotate the door 180° (upside down) and carefully place it onto the left bottom hinge.
- Position the top hinge on the left side, secure it with screws, and adjust as needed to ensure the door is properly aligned.
- Replace the hinge cover. Install the plastic caps on the unused hinge holes and install the stainless steel cap in the top lock hole.
- Open and close the door to confirm smooth operation and a proper seal.

INSTALLATION OF HANDLE

- Gently pull back the door gasket in the area where the handle will be installed. Two pre-drilled mounting holes will be visible. The gasket can be moved easily by hand—no tools are required.
- Secure the handle using the two provided screws, lock washers, and flat washers, as shown. Do not overtighten, as this may damage the handle assembly or the stainless steel surface of the glass door.
- Once the handle is installed, return the door gasket to its original position. (See Diagram B)

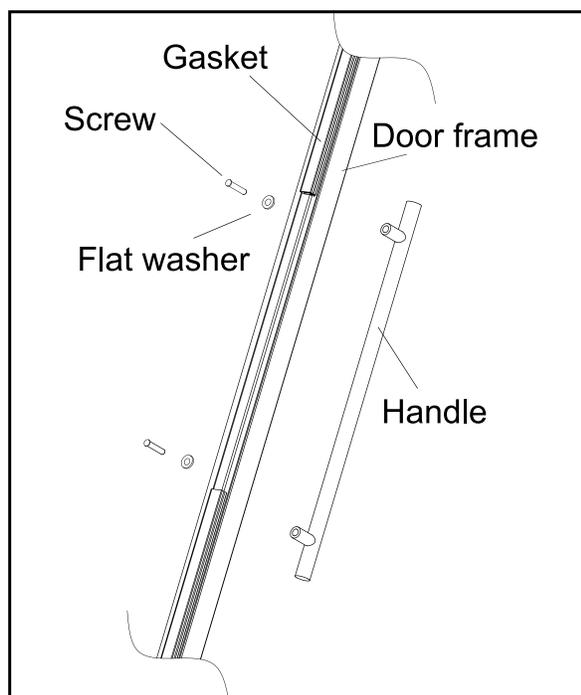


Diagram B

INSTALLING THE CHARCOAL FILTER

To install the charcoal filter,

- Place the carbon filter on the top of the shelf.
- The back of the filter has a 3M glue tape which you can affix to the shelf or the inside of the unit.
(See Diagram C)



Diagram C

BOTTLE CAPACITY


You may adjust the shelves of your wine cooler to accommodate more or less bottles.

If stacking bottles 2-3 high, please do not pull out the shelves.

NOTE:

Depending on how the bottles are placed, you can store approximately up to 188 bottles of wines with 15 pieces of sliding shelves.

The EL-300COMM bottle storage capacity is based on standard 750 ml wine bottles. Storing large and/or oddly shaped bottles (including champagne and sparkling wine bottles) will decrease the bottle capacity.

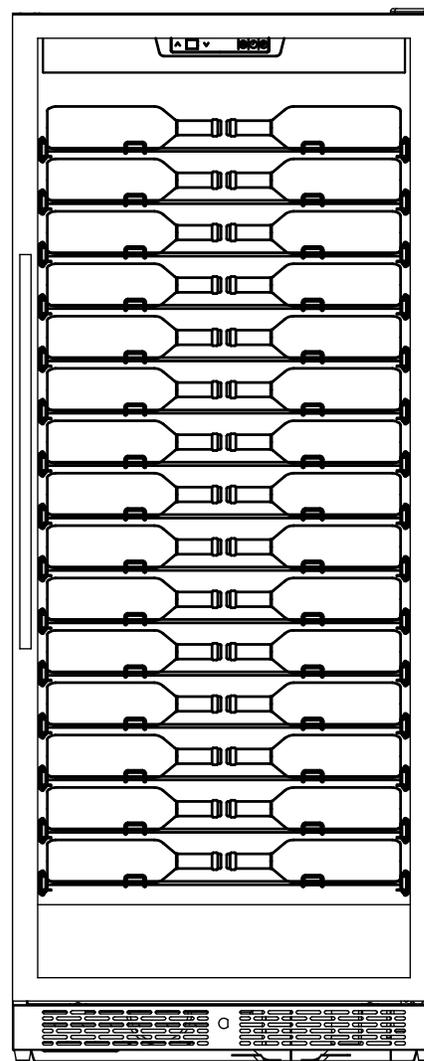


OPERATING YOUR WINE COOLER

The wine cooler should be placed in a position where the ambient temperature is between 5-38°C/41-100°F. Humidity level is between 45-90%. If the position is above or below this range, the performance of the unit may be affected. For example, placing your unit in extreme cold or hot conditions may cause interior temperature to fluctuate.

NOTE:

- During first use or after long periods off, the displayed temperature may vary slightly from the set temperature. This is normal and will stabilize after a few hours of operation. This unit is designed for freestanding or built-in installation and intended for indoor use only. Place the unit in a dry and well-ventilated area, away from any source of heat or moisture, or in direct sunlight.
- If the unit is unplugged, powered off, or loses power, wait 3-5 minutes before restarting. Restarting too soon may prevent the unit from turning on.

THE CONTROLS OF YOUR WINE COOLER

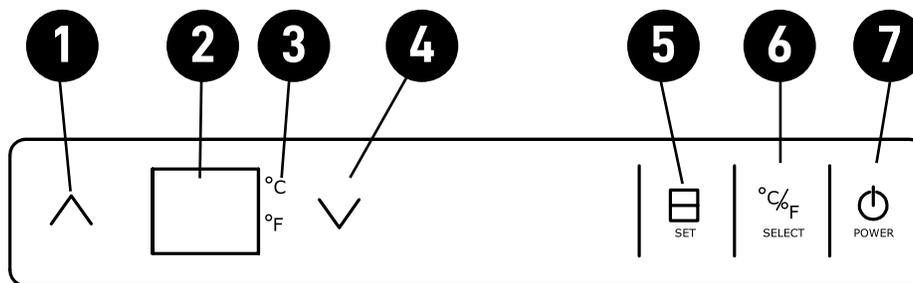


1. ^ v UP/DOWN: Increase or decrease temperature by 1° increments.
2. TEMPERATURE DISPLAY
3. °C/°F DISPLAY
Note: After restarting or a power outage, the LED display will show the previously set temperature.
4. ■ SET TEMPERATURE: Press Set, then use UP/DOWN ^ v to adjust. The set temperature will flash on the display for 5 seconds.
5. °C/°F: Switch between Celsius and Fahrenheit.
6. ⏻ POWER: Touch the ⏻ button to turn the appliance on or off. To turn off, press and hold ⏻ for 5 seconds.

SETTING A TEMPERATURE

You can select temperature display setting from Fahrenheit to Celsius degree by touching the °C/°F Selector mark. Fahrenheit or Celsius degrees indicator will appear in blue color in the temperature display window. You can set the temperature as you desire by touching the ^ and v marks. When you touch the two marks for the first time, the LED readout will show the original temperature set previously.

- The temperature that you desire to set will increase 1°C or 1°F if you touch the ^ mark once, on the contrary the temperature will decrease 1°C or 1°F if you touch the v mark once.
- Temperature range: 5-18°C/41-65°F.
- The temperature inside the unit will be appeared in blue color in the display window.

PATENTED INTERIOR BACKLIT™ PANEL OPERATION

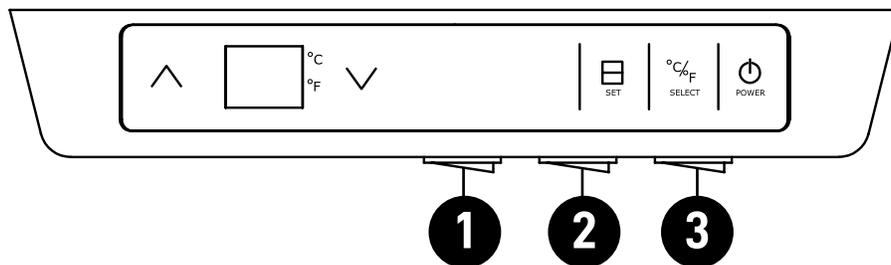

Your wine cooler features side mounted patented interior Backlit™ panel with 3 different lights for even, full-height illumination across all shelves. The light switches can be found under the control panel inside the unit.

Use the switches to turn the light on and off.

1. LED LIGHT 2. ORANGE BACKLIGHT 3. BLUE BLACKLIGHT

If the blue and orange backlights are turned on at the same time, the color may appear to shift due to optical effects. Avoid using both backlights together for extended periods, as this can increase power consumption.

SHELVES

- To prevent damaging the door gasket, make sure the door is fully open when pulling shelves out of the rail compartment.
- For easy access to the bottles stored, pull the shelves out approximately 90%.
- Only pull out one shelf at a time. Never attempt to pull more than one.

DOOR LOCK

The wine cooler comes with a combination key and lock. The keys are inside the plastic bag that contains the owner's manual. To unlock the door, insert the key into the lock and turn it counterclockwise. To lock the door, insert the key into the lock and turn it clockwise making sure the metal pin is fully engaged. Remove the key and place it in a secure place for safekeeping.

DEFROSTING

The cooler defrosts automatically. The evaporator behind the rear wall of the unit automatically defrosts and the condensate collects in the drainage channel behind the rear wall of the unit, and flows through the drainage hole into the drip tray by the compressor, where it evaporates.

CARE & MAINTENANCE

CLEANING YOUR APPLIANCE

IMPORTANT: Always unplug the unit before cleaning or performing maintenance. Never use harsh cleansers or scouring pads to clean any part of the unit.

- Turn off the power, unplug the appliance, and remove all items including shelves.
- Wash the inside surfaces with a warm water and baking soda solution. The solution should be about 2 tablespoons of baking soda to a quart of water.
- Wash the shelves with a mild detergent solution.
- Wring excess water out of the sponge or cloth before cleaning control panels or any electrical parts.
- Wash the outside cabinet with warm water and mild liquid detergent. Rinse well and wipe dry with a clean soft cloth.
- Do not connect or disconnect the electric plug when your hands are wet.
- Never clean appliance parts with flammable fluids. These fumes can create a fire hazard or explosion.

POWER FAILURE

Most power failures are corrected within a few hours and should not affect the temperature of your appliance if you minimize the number of times the door is opened. If the power is off for an extended period of time, proper steps should be taken to protect your contents.

If the unit is unplugged, loses power, or is turned off you must wait 3 to 5 minutes before restarting. Attempting to restart the wine cooler before this time has elapsed may prevent the wine cooler from starting.

INACTIVITY

If the unit will not be used for a period of less than three weeks, leave the cooler operating. If the period of inactivity is several months, remove all items and turn the unit off. Clean and dry the interior thoroughly. Leave the door open slightly to prevent any possible moisture build-up.

MOVING YOUR WINE COOLER

Before moving your wine cooler, first be sure to remove all items from the cooler.

- Securely tape down any loose items, such as shelves, inside the unit.
- Turn the adjustable leg up to the base to avoid damage.
- Tape the door shut.
- Ensure that the unit stays securely in the upright position during transportation. Protect the outside of the appliance with a blanket or similar item.

ENERGY SAVING TIPS

- The unit should be located in the coolest area of the room away from heat sources or direct sunlight.
- Ensure that the unit has proper allowances on all sides for proper ventilation. Never cover any air vents.
- Only open the cooler door for as long as necessary. Frequent opening of the door will affect internal temperature.

PROBLEMS WITH YOUR WINE COOLER

You can solve many common cooler problems easily, saving you the cost of a possible service call. Try the following suggestions to see if you can solve the problem before contacting Vinotemp at info@vinotemp.com.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE
Cooler does not operate	<ul style="list-style-type: none">• Not plugged in. Using wrong voltage.• The circuit breaker tripped or there is a blown fuse.
Cooler is not cold enough	<ul style="list-style-type: none">• Check the temperature control setting; external environment may require a higher setting.• The door is opened too often.• The door is not closed completely.• The door seal does not seal properly.• The wine cellar does not have the correct clearances to operate efficiently and safely.
Turns on and off frequently	<ul style="list-style-type: none">• The room temperature is hotter than normal.• A large amount of contents has been added to the appliance.• The door is opened too often.• The door is not closed completely.• The temperature control is not set correctly.• The door gasket does not seal properly.
Vibrations	<ul style="list-style-type: none">• Check to see that the wine cellar is level.
Cooler seems to make too much noise	<ul style="list-style-type: none">• The rattling noise may come from the flow of the refrigerant, which is normal.• As each cycle ends, you may hear gurgling sounds caused by the flow of refrigerant in your unit.• Contraction and expansion of the inside walls may cause popping and crackling noises.• The appliance is not level.
Door will not close properly	<ul style="list-style-type: none">• The wine cellar is not level.• The doors were not properly installed.• The seal is weak.• The shelves are out of position.
The light does not work	<ul style="list-style-type: none">• Not plugged in.• The circuit breaker tripped or a blown fuse.• The light switch is "OFF".

PRODUCT WARRANTY

YOUR VINOTEMP PRODUCTS WARRANTY

Staple your sales receipt here. Proof of original purchase date is needed to obtain service under warranty.

WHAT IS COVERED – LIMITED TWO-YEAR WARRANTY

Vinotemp Products warrants that the product is free from defects in materials and/or workmanship for a period of twenty-four (24) months from the later of the date of purchase by or delivery to the original owner, under normal use. The foregoing timeline begins to run upon the date of purchase, and shall not be stalled, tolled, extended, or suspended for any reason whatsoever unless described in detail in the warranty document. For two years from the date of purchase by the original owner, Vinotemp products will, at its option, repair or replace any part of the product which proves to be defective in material or workmanship under normal use. Vinotemp Products will provide you with a reasonably similar product that is either new or factory refurbished. During this period Vinotemp Products will provide all parts and labor necessary to correct such defects free of charge, so long as the product has been installed and operated in accordance with the written instructions in this manual. In rental or commercial use, the warranty period is 90 days. All Vinotemp appliances of 3.5 cubic feet capacity or less must be brought/sent to the appliance service center for repair.

LIMITED THIRD THROUGH FIFTH YEAR WARRANTY

For the third through the fifth year from the date of original purchase, Vinotemp Products will provide a replacement compressor free of charge due to a failure. You are responsible for the service labor and freight charges. In rental or commercial use, the limited compressor warranty is one year and nine months. Costs involved to move the product to the service center and back to the user's home, as maybe required, are the user's responsibility.

WARRANTY EXCLUSIONS / WHAT IS NOT COVERED:

The warranty coverage described herein excludes all defects or damage that are not the direct fault of Vinotemp Products, including without limitation, one or more of the following:

- A failure to comply with any applicable state, local, city, or county electrical, plumbing and/or building codes, regulations, or laws, including failure to install the product in strict conformity with local fire and building codes and regulations.
- Any external, elemental and/or environmental forces and factors, including without limitation, rain, wind, sand, floods, fires, mud slides, freezing temperatures, excessive moisture or extended exposure to humidity, lightning, power surges, structural failures surrounding the appliance, and acts of God.

- Content losses of food or other content due to spoilage.
- Incidental or consequential damages
- Parts and labor costs for the following will not be considered as warranty:
 - Light bulbs and/or plastic housing.
 - Plastic cabinet liners.
 - Punctured evaporator that voids the warranty on the complete sealed system.
- Repairs carried out by unauthorized repairers

- Shipping and handling costs associated with the replacement of the unit.
- Repairs performed by unauthorized servicers.
- Service calls that are related to external problems, such as abuse, misuse, inadequate electrical power, accidents, fire, floods, or any other acts of God.
- Failure of the product if it is used for other than it intended purpose.
- The warranty does not apply outside the Continental USA.
- Surcharges including but not limited to, any after hour, weekend, or holiday service calls, tolls, ferry trip charges, or mileage expense for service calls to remote areas.

In no event shall Vinotemp Products have any liability or responsibility whatsoever for damage to surrounding property, including cabinetry, floors, ceilings, and other structures and/or objects around the product. Also excluded from this warranty are scratches, nicks, minor dents, and other cosmetic damages on external surfaces and exposed parts; Products on which the serial numbers have been altered, defaced or removed; service visits for customer education, or visits where there is nothing wrong with the product; correction of installation problems (you are solely responsible for any structure and setting for the product, including all electrical, plumbing and/or other connecting facilities, for proper foundation/flooring, and for any alterations including without limitation cabinetry, walls, floors, shelving etc., as well as the resetting of breakers or fuses.

OUT OF WARRANTY PRODUCT

Vinotemp Products is under no obligation, at law or otherwise, to provide you with any concessions, including repairs, pro-rates, or product replacement, once this warranty has expired.

WARRANTY – REFRIGERATION - COMPRESSOR

SERVICE & IMPORTANT NOTICE

Upon receipt and inspection of unit, the supply cord must be replaced if it is damaged.

Contact our customer service at 954-686-4441 or info@vinotemp.com.

The manufacturer has a policy of continuous improvement on its products and reserves the right to change materials and specifications without notice.

WARNING:

Please do not place the unit within reach of children. For adult use only.

Contact Vinotemp Customer Service with any questions or visit www.vinotemp.com.



A PROUD HERITAGE OF EXPERIENCE & QUALITY

© 2026 The Legacy Companies, LLC
The Legacy Companies,
Weston, FL 33331 U.S.A.
www.vinotemp.com

Printed in China

011926LC