 



COZY CORNER KITCHEN PLAYSET TZX-6591

Review all assembly and care information before using this product. Save this manual for future reference.
Assemble components on a soft, clean surface to avoid damaging the finish.

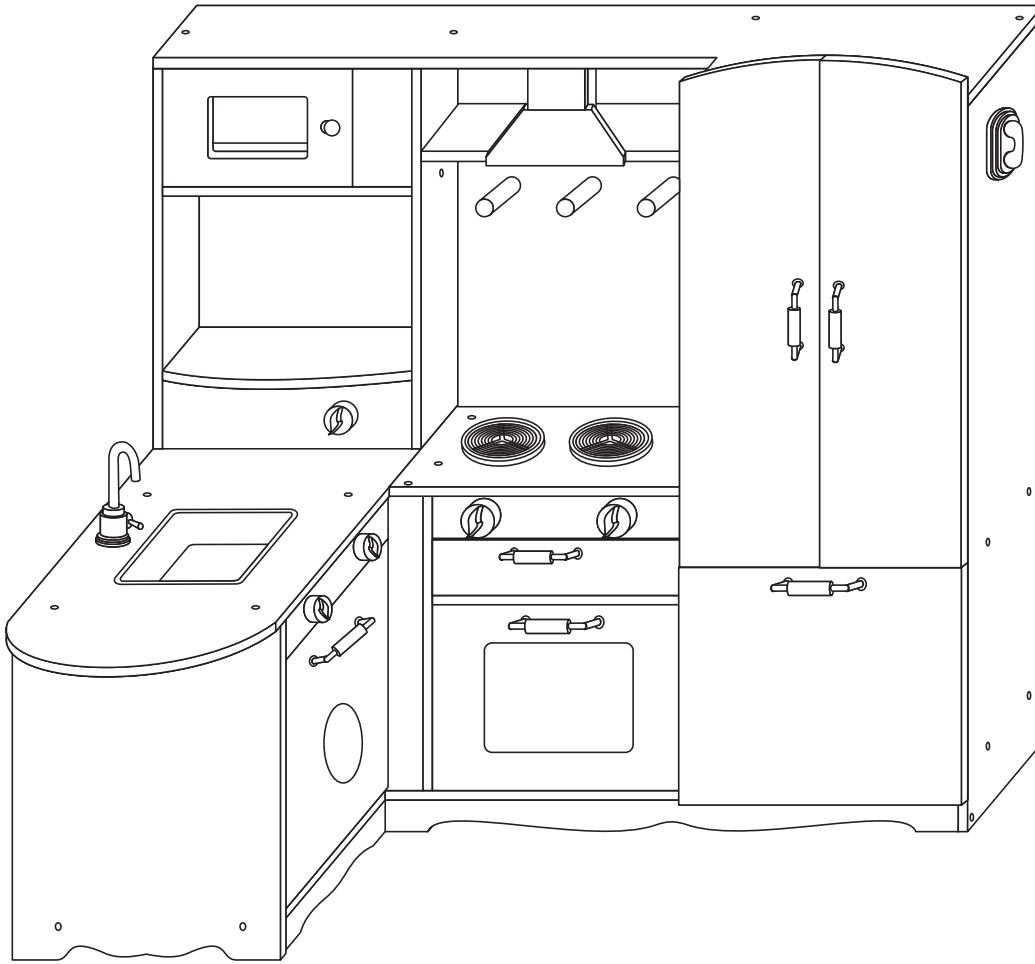

Inspect packaging to ensure all parts are accounted for before disposing of packing materials.
Save the packing slip.

 TOOLS REQUIRED (not included)



Phillips Screwdriver

! WARNING !

CHOKING HAZARD — This item contains small parts that can be swallowed. Keep children and pets away during assembly.



Not suitable for children under 3 years of age

IMPORTANT: Read all use, care and safety information before allowing children to use this playset. Adult assembly required.

! WARNING:

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.


COMPONENTS

1 	2 	3 	4 	5 	6 	7 	8 				
9 	10 	11 	12 	13 	14 	15 	16 	17 			
18 	19 	20 	21 	22 	23 	24 	25 	26 	27 		
28 	29 	30 	31 	32 	33 	34 	35 	36 	37 	38 	39
40 	41 	42 	43 	44 	45 	46 	47 	48 			
A: 44PCS M4x40mm	B: 3PCS M4x14mm	C: 4PCS M3x14mm	D: 2PCS M4x12mm	E: 17PCS M4x20mm	F: 60PCS M3x8mm	G: 34PCS M5x30mm	H1: 3PCS M4x30mm	H2: 3PCS M4x30mm	I: 2PCS M4x30mm		
J: 10PCS M4x30mm	K: 6PCS M4x30mm	L: 2PCS M4x30mm	M: 1PC M4x30mm	N: 2PCS M4x30mm	O: 1PC M4x30mm	P: 2PCS M5x25mm	Q: 1PC M4x30mm	R: 8PCS M4x30mm	S: 1SET M4x30mm		

ASSEMBLY


STEP 1

 - 2: 1
- E: 2
- M: 1

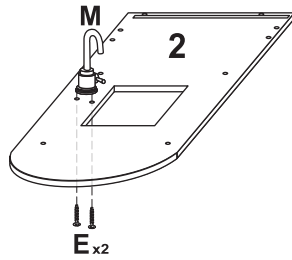


STEP 2

 - 1: 1
- A: 1
- G: 1

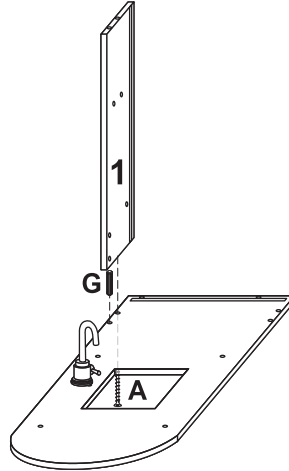


STEP 3

 - 3: 1
- A: 1
- G: 1

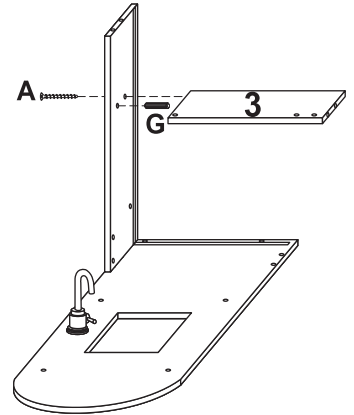


STEP 4

 - 4: 1
- 48: 1
- F: 4
- G: 5
- I: 1
- L: 1

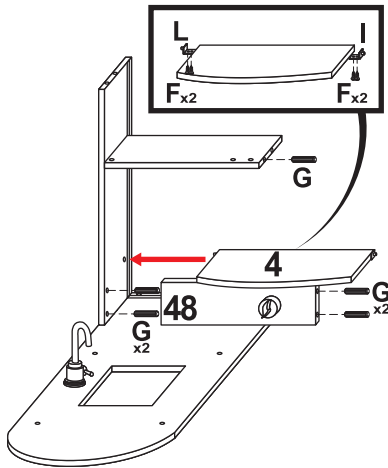


STEP 5

 - 6: 1
- A: 2
- G: 1

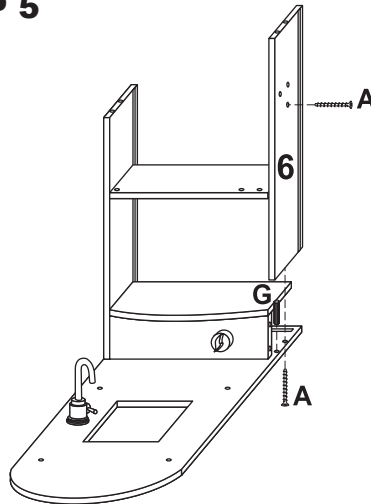


STEP 6

 - 5: 1
- A: 1
- G: 2

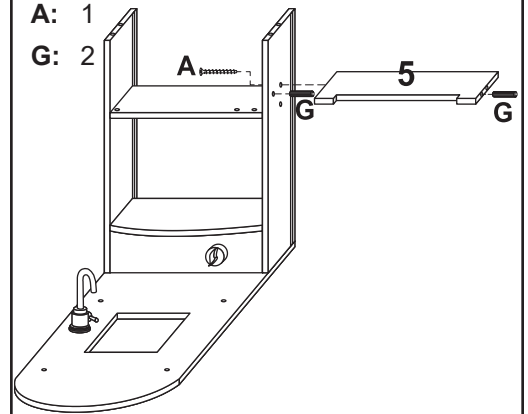


STEP 7

 - 7: 1
- 8: 1
- A: 2

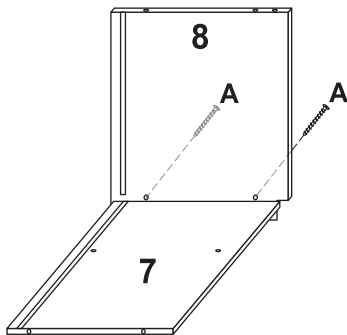


STEP 8

 - 9: 1
- A: 2

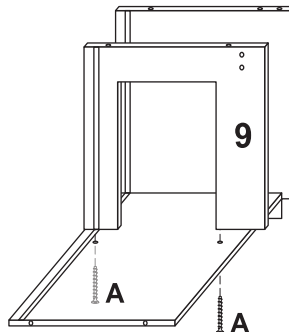

STEP 9

 - 10: 1
- 11: 1
- G: 4

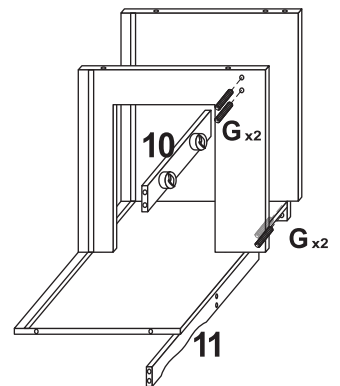


STEP 10

12: 1

A: 2

 
G: 4

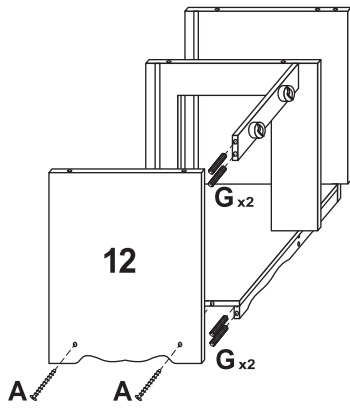

STEP 11

13: 1

 
A: 2

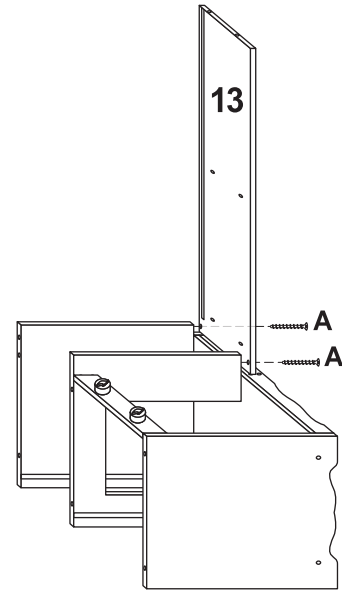

STEP 12

16: 1

 A: 2

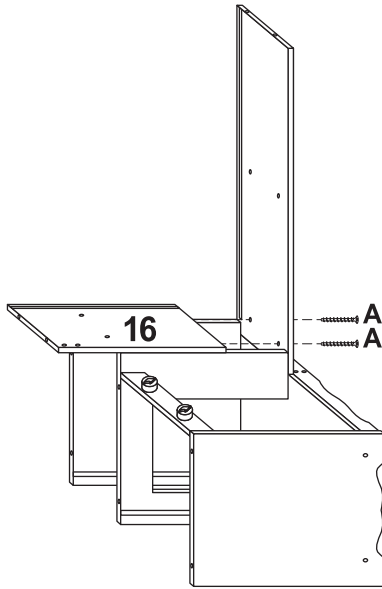


STEP 13

14: 1

15: 1

 
G: 8

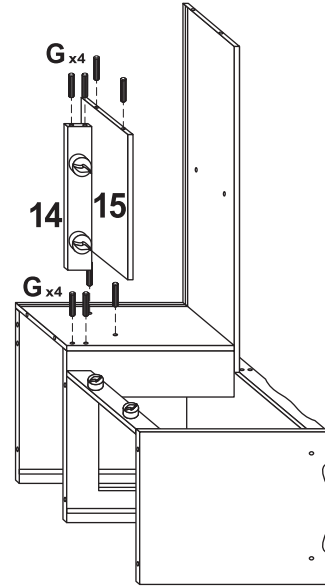

STEP 14

18: 1

 
A: 2

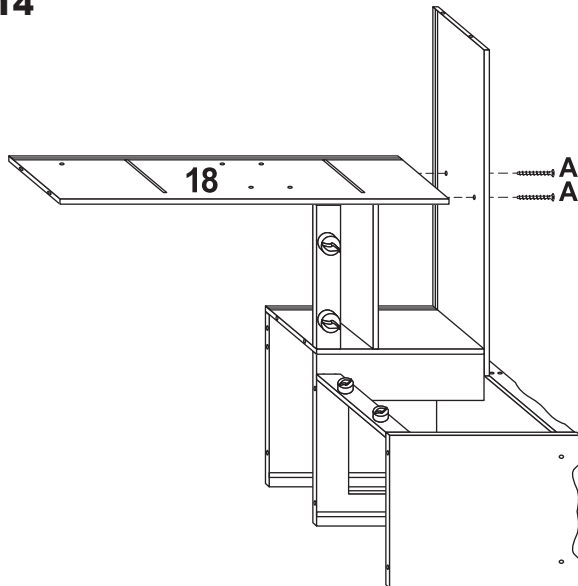

STEP 15

19: 1

 A: 2

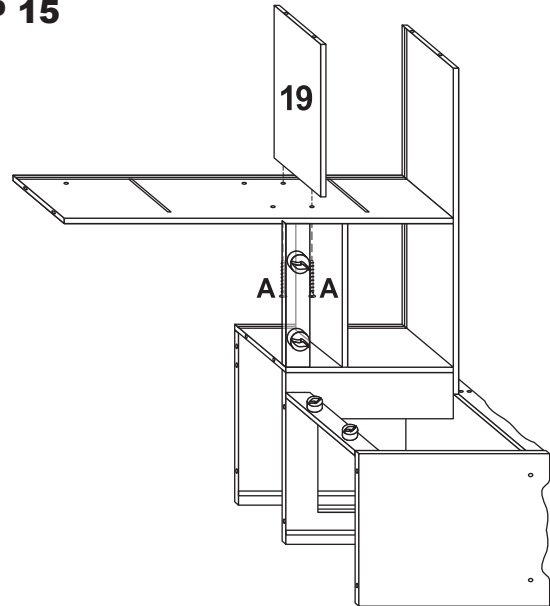


STEP 16

21: 1

A: 1

 
G: 1

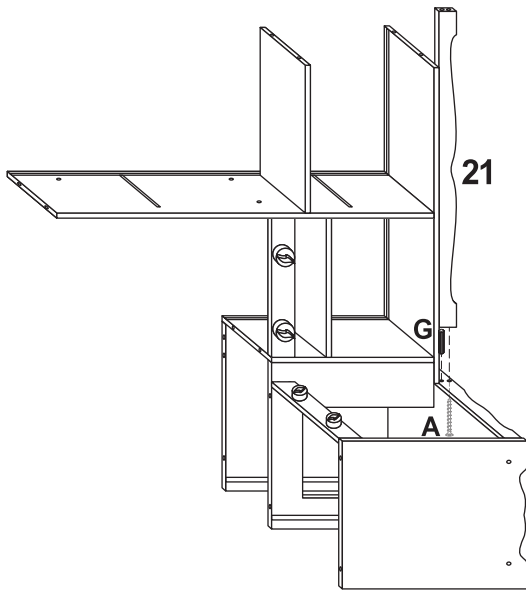

STEP 17

17: 1

 20: 1

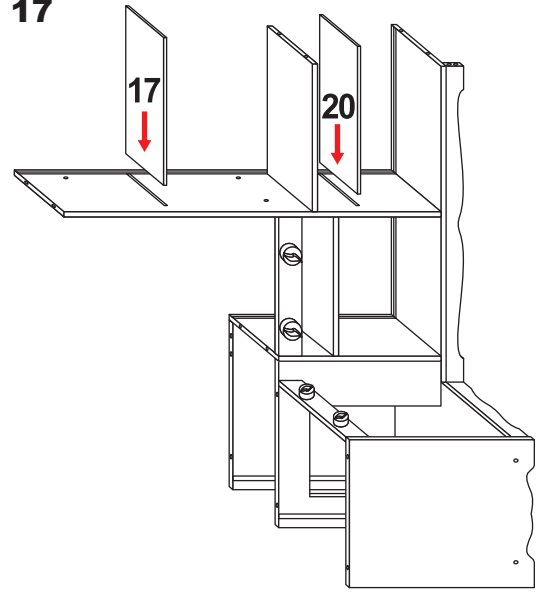


STEP 18

22: 1

A: 5

 G: 1

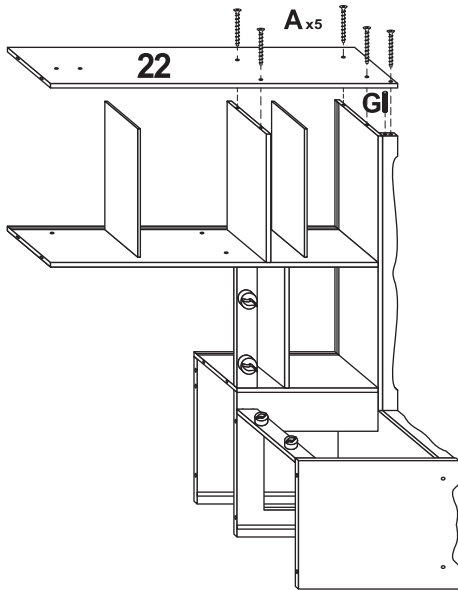


STEP 19

23: 1

24: 1

25: 1

 27: 1

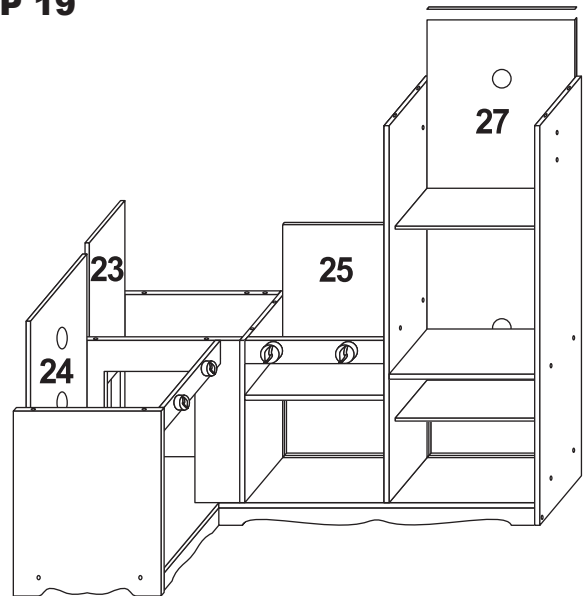


STEP 20

26: 1

A: 6

C: 4

 N: 2

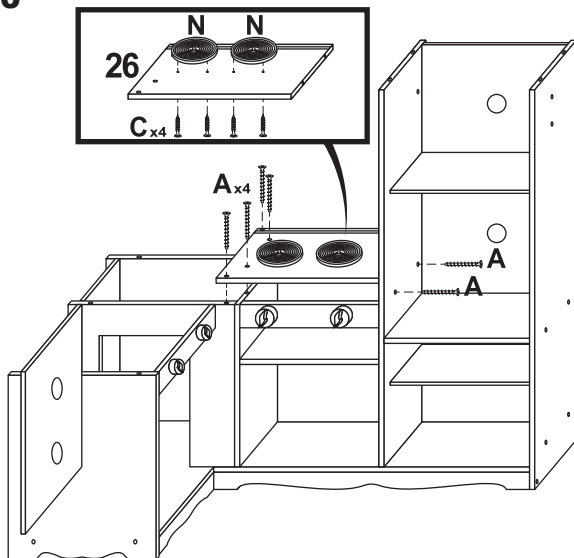


STEP 21

28: 1


46: 3

 B: 3

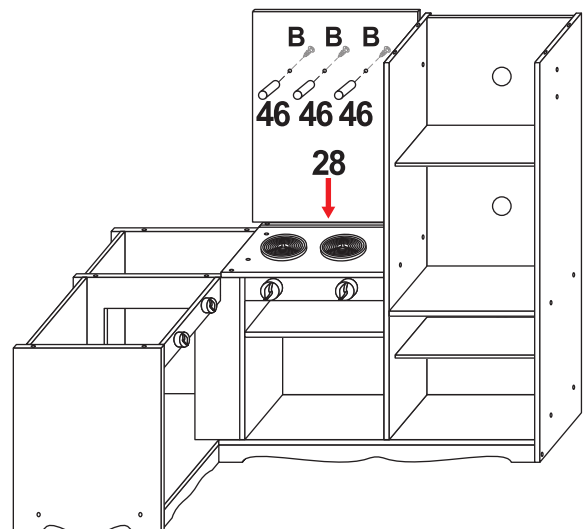


STEP 22

 A: 7

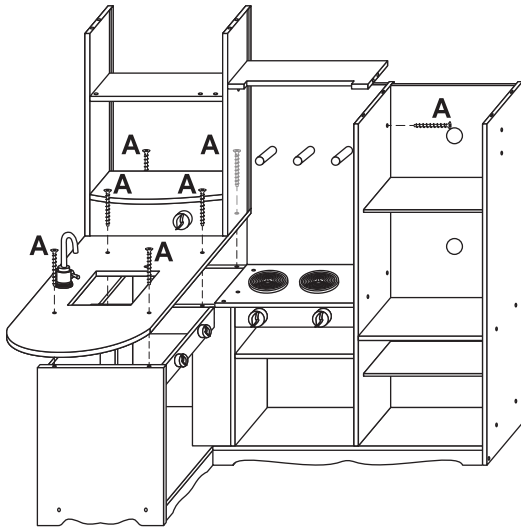**STEP 23**

 29: 1

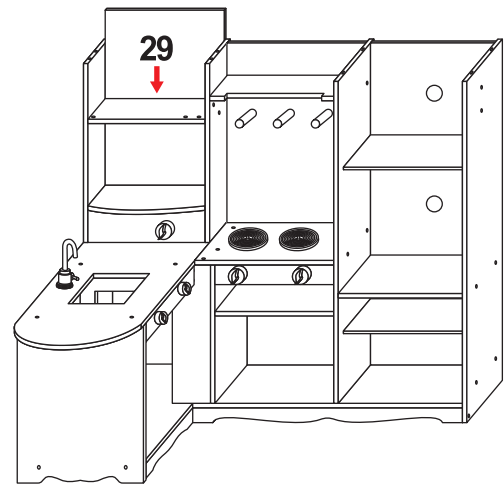**STEP 24**

30: 1

31: 1

32: 1

 
 
33: 1

D: 2

E: 2

P: 2

Q: 1

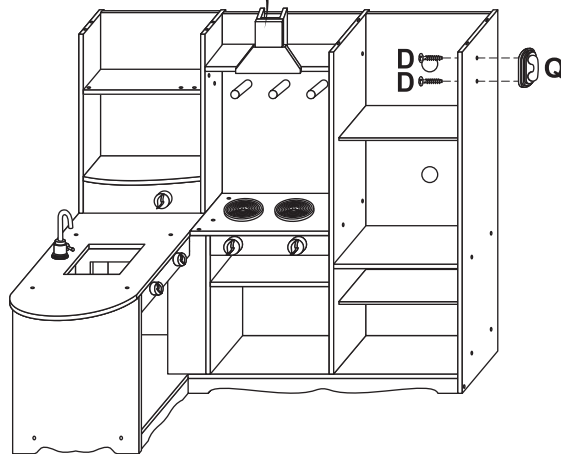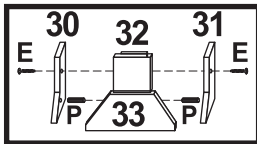**STEP 25**

34: 1

45: 1

47: 1

 
 
E: 1

F: 4

G: 2

I: 1


L: 1

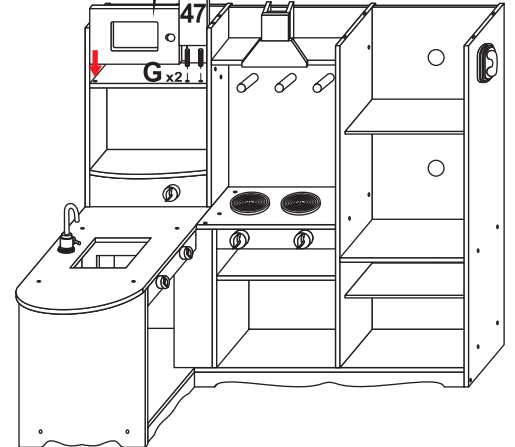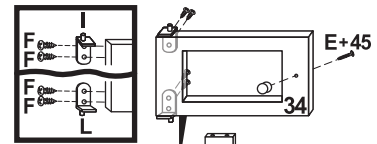**STEP 26**

40: 1


A: 6

 G: 4

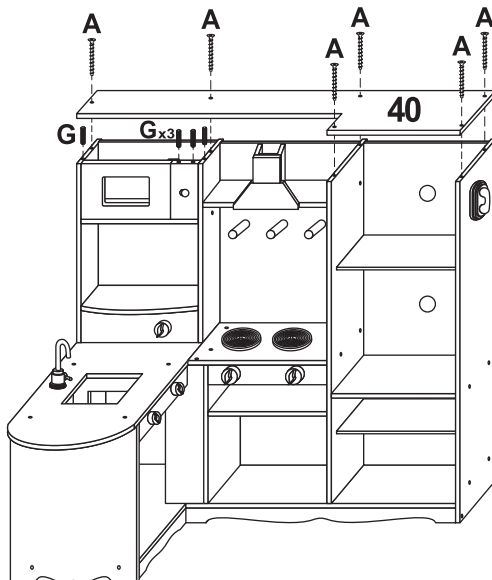**STEP 27**


F: 6

 H2: 3

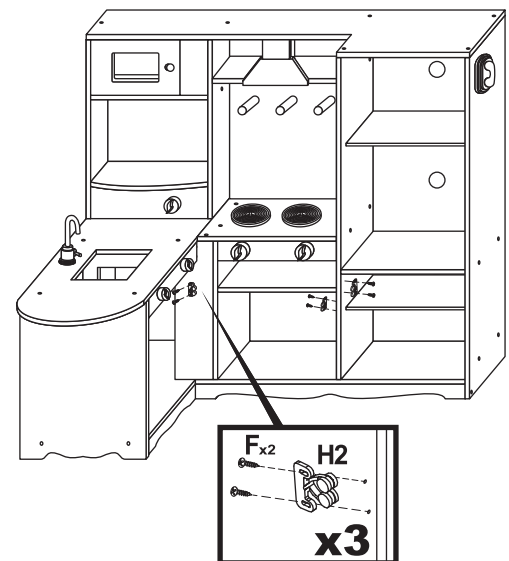


STEP 28

 - 35: 1
- E: 2
- F: 10
- H1: 1
- J: 2
- K: 1

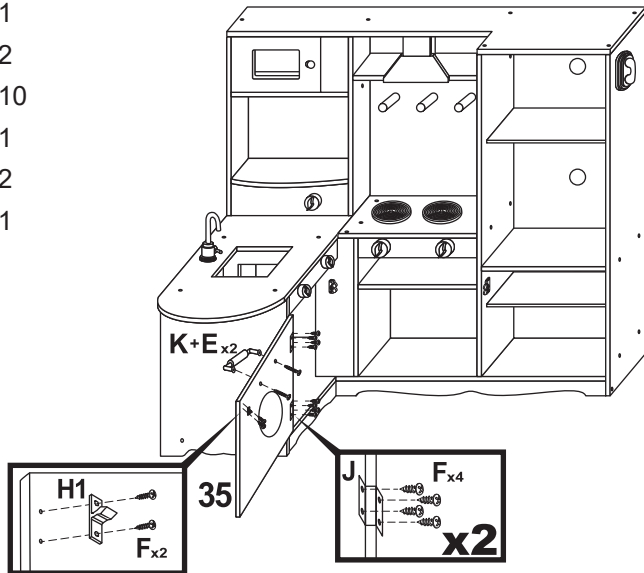


STEP 29

 - 36: 1
- E: 2
- F: 10
- H1: 1
- J: 2
- K: 1

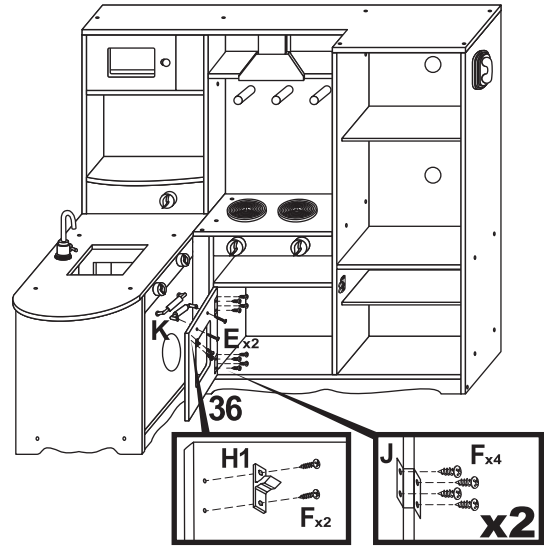


STEP 30

 - 37: 1
- E: 2
- F: 10
- H1: 1
- J: 2
- K: 1

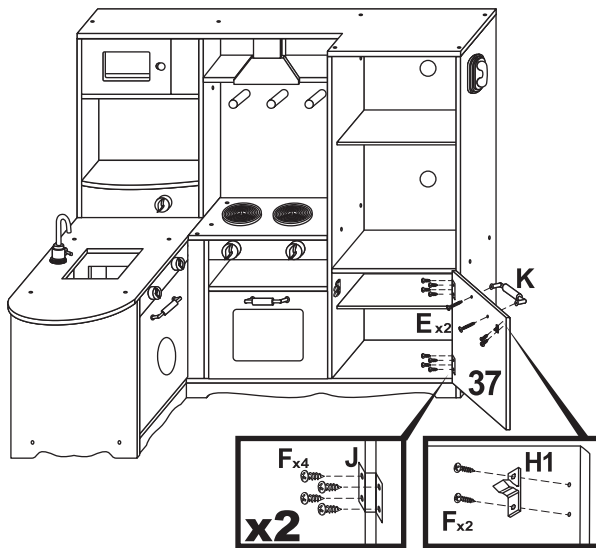


STEP 31

 - 38: 1
- 39: 1
- E: 4
- F: 16
- J: 4
- K: 2

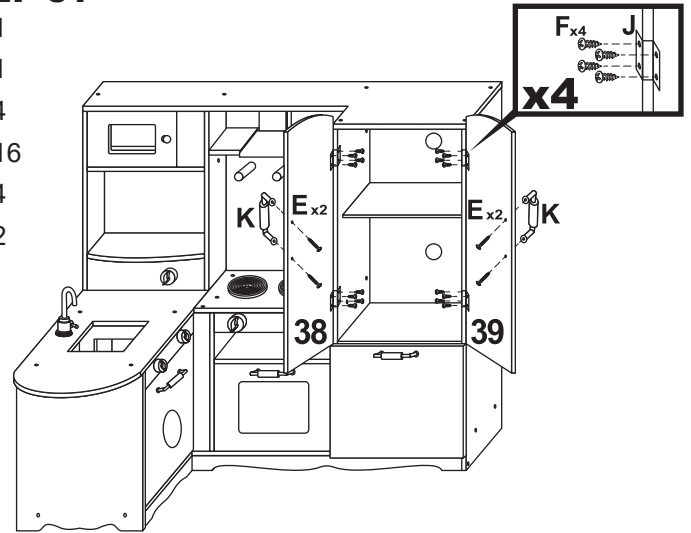


STEP 32

 - 41: 2
- 42: 1
- 43: 1
- 44: 1
- E: 2
- K: 1
- R: 8

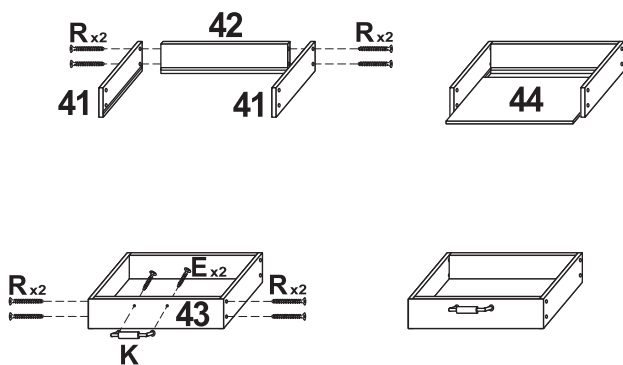

STEP 33

 - O: 1

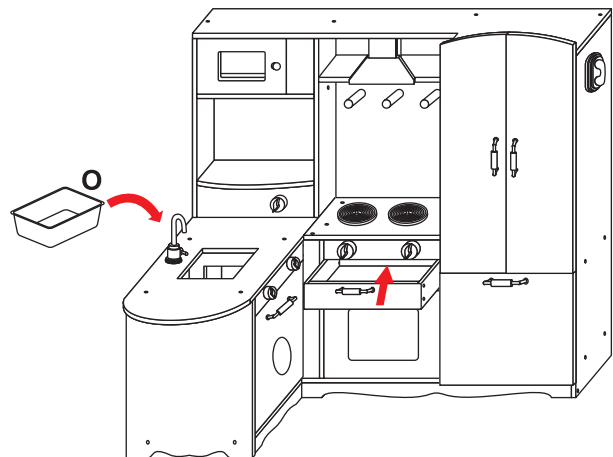

Care & Maintenance



! WARNING: PREVENT TIP OVERS!

- Do not allow children to pull, climb, sit, or stand on any part of the playset.
- Never place computers, televisions, or other heavy objects on the playset.
- The playset must be placed on a hard, flat, and level surface.
- If placing next to a wall, we recommend applying a stabilizing strap (not included).
- The playset must be assembled as instructed.

SAFE USE: Carefully review and follow all safety information.

CARE: Regular cleaning is recommended. Frequently inspect the playset and accessories for damage; immediately dispose of damaged and broken components.

CLEANING: Wipe soiled surfaces with a damp cloth. Do not use harsh chemicals or abrasive materials to clean any part or accessory of this unit.

! SAFETY STATEMENTS & WARNINGS !

- For indoor use only.
- Only use this unit on a hard, flat, and level surface.
- Not suitable for children under 3 years of age.
- Supervise children; do not allow children to pull, climb, sit, or stand on any part of the playset.
- Frequently inspect assembly points to ensure components are properly connected. Do not allow children to play with damaged or broken equipment and/or accessories.
- Playset accessories not intended for use with real food.
- Do not place liquids or hot items directly on the unit.
- Never use chemicals or abrasive materials to clean the unit.
- Avoid long-term exposure to sunlight.
- Avoid placing the unit near heating or cooling vents, long-term exposure to forced air can damage the unit.
- Keep the unit a safe distance away from all heat sources such as, but not limited to, heat vents, gas or electric heaters, fireplaces, etc.

Any modification to the product or failure to follow recommended care will void the product warranty.

If you experience issues with assembly or the product was damaged during shipping, please contact our customer service team directly through one of the methods mentioned at the top of page 1.

Please have the item number and order information ready to expedite response time.

! WARNING:

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.