 



# INSTRUCTIONS FOR SETUP

To contact NEMO Customer Service  
Email: [journey@nemoequipment.com](mailto:journey@nemoequipment.com)  
Phone: 800-997-9301




## 1 Insert Poles in Corner Anchors

 Lay the inner tent on the ground and arrange pole set so the short cross pole points toward the doors. Press the ball end of each corner pole into its corresponding Jake's Foot™ fitting.




## 2 Attach Inner Tent to Poles

Attach the inner tent canopy to the poles using the pole clips. Snap ridge pole tips into Ball Cap™ fittings on the sides of the tent above the doors.

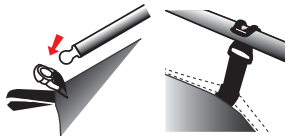

## 3 Attach Rain Fly

Cover the inner tent with the rain fly. Locate the SQ Ring™ fittings on the inside of the fly and attach to Ball Caps. Locate the webbing straps on the corners of the fly and clip to the outermost bar on the Jake's Foot™. Adjust tension in the fly using the webbing straps and ladder lock buckles.

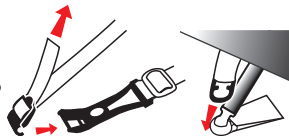


## 4 Stake in Place

Position your tent as desired and stake the four corner anchors. As you pull at the corners, watch the tension in the floor of the tent to keep it even. If the ground is too hard for stakes, tie anchors to rocks or other heavy objects.



## 5 Vestibule(s) and Tension

Secure poles to rain fly with internal pole wraps. Stake vestibule(s) and pull firmly on all adjustable corner anchors. Add guylines for additional strength. A properly tensioned tent ensures maximum water shedding and wind resistance.

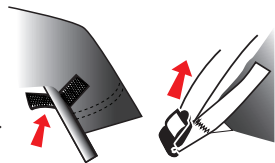

©2019 NEMO Equipment, Inc.

Remember to leave no trace. Before leaving your campsite, take a thorough look around making sure you have not left anything behind, out of place, or damaged.

**DAGGER™  
SERIES**