

CARLTON / RICHLAND / STERLING

---

DRESSER

MODEL # 3AXCCRL-12





FOR REPLACEMENT PARTS OR HELP WITH  
ASSEMBLY PLEASE CONTACT US AT:

[simpli-home.com/customer-support](https://simpli-home.com/customer-support)

PLEASE ENSURE TO HAVE THE MODEL #  
FROM THE PACKAGING OR INSTRUCTION BOOKLET

TO RETURN THE PRODUCT:  
PLEASE CONTACT THE RETAILER  
WHERE THE ITEM WAS PURCHASED FROM



ENTER  
TO WIN

Upload an image of our furniture  
in your home with a short review  
to our facebook page for a chance to

Win up to \$3000 of  
**Simpli Home** furniture!!!

[www.facebook.com/simplihomefurnishings](http://www.facebook.com/simplihomefurnishings)



**IMPORTANT :** Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

## SAFETY INFORMATION

**CAUTION:** Injuries and damage can occur from furniture tip over if product is not properly anchored to the wall. Use the Furniture Anti-Tipping Restraint provided with the product. Consult our assembly instructions for help. If the Furniture Anti-Tipping Restraint kit is not in the box, please contact our customer service department in order to obtain another kit before using the furniture.

Identify all the parts and hardware. Do not discard of the packaging until you have checked that you have all of the parts and hardware required. Hardware package may have spare parts.

**WARNING:** This item contains small parts which can be swallowed by children and pets. Keep children and pets away during assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets. We recommend that you assemble this unit on a carpeted floor to avoid scratches. If using power tools, set the tool to low torque to avoid damage.

 
**May require 2 people for ease of assembly.**

## CARE and MAINTENANCE


To clean, use a soft or slightly damp cloth, then wipe with a clean, dry cloth. Dust with soft dry cloth.  
Do not use ammonia-based cleaning products, as they will damage the finish. Do not leave liquids or damp cloths on this furniture.  
To avoid dulling of the finish, do not place furniture in direct sunlight. Please inspect and tighten all screws or bolts on a regular basis to ensure proper performance and safety of your item.

## PART DESCRIPTION


A

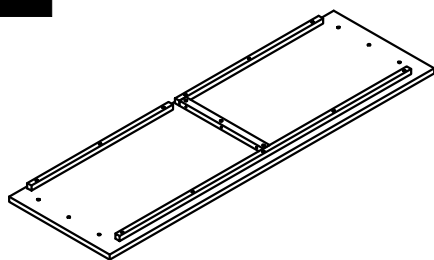TOP  
QTY 1

 
B

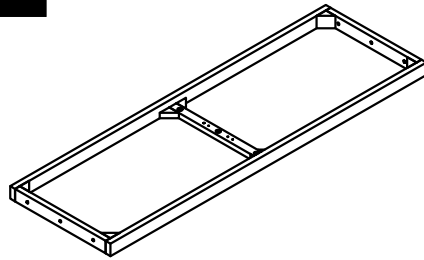BOTTOM FRAME  
QTY 1

 
C

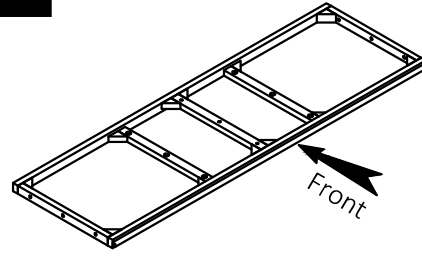TOP FRAME  
QTY 1

 
D

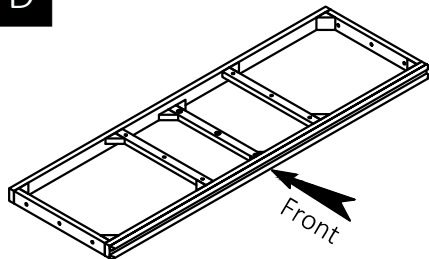MIDDLE FRAME  
QTY 1

 
E

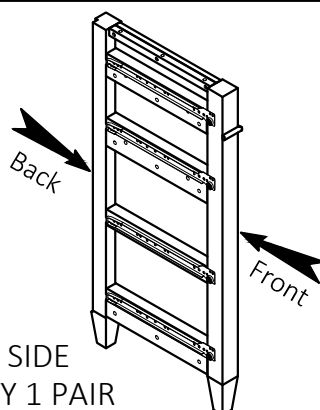SIDE  
QTY 1 PAIR

 
F

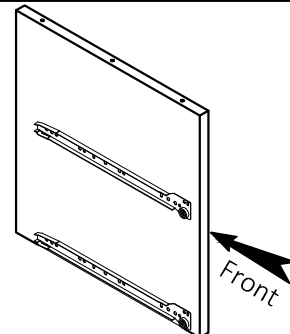LARGE DIVIDER  
QTY 1

 
G

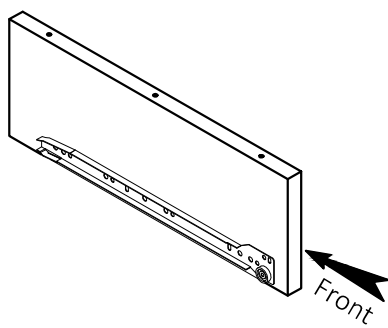MIDDLE DIVIDER  
QTY 2

 
H

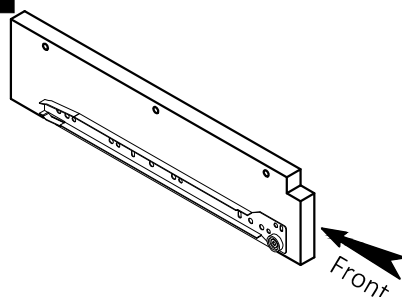SMALL DIVIDER  
QTY 1

 
I

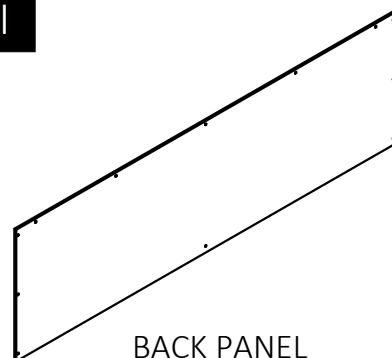BACK PANEL  
QTY 2

 
J

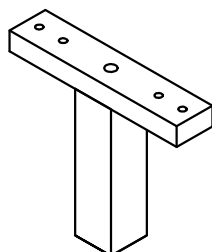BOTTOM SUPPORT LEG  
QTY 1

 K








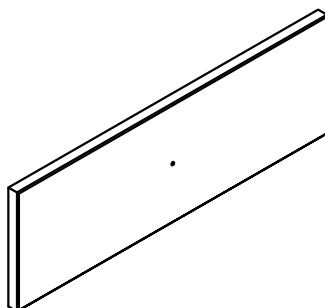
LARGE DRAWER FRONT  
QTY 4

 L

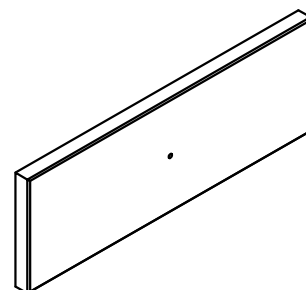SMALL DRAWER FRONT  
QTY 3

**NEED HELP?** For help with assembly or if you are missing a part,  
Please call customer service at 1-866-518-0120 ext. 262 (9 am to 4 pm EST)

        
PART DESCRIPTION
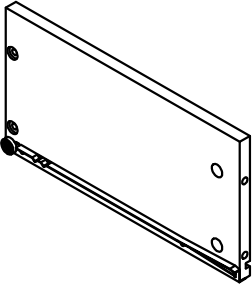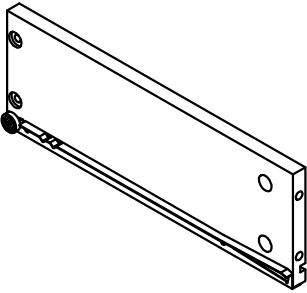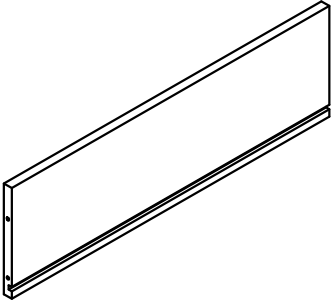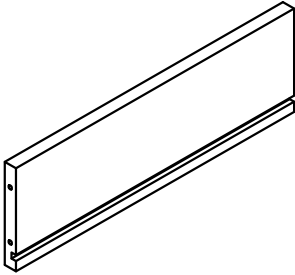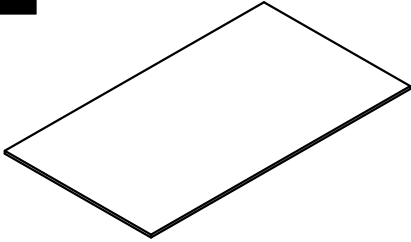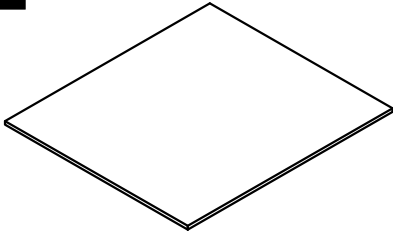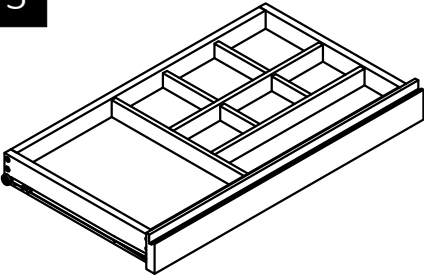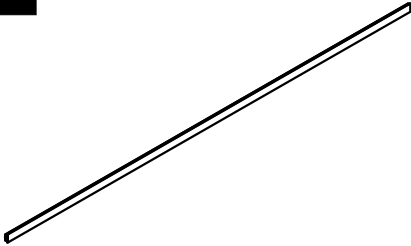
<div>M</div> <div></div> <div>LARGE DRAWER SIDE QTY 4 PAIR</div>	<div>N</div> <div></div> <div>SMALL DRAWER SIDE QTY 3 PAIR</div>	<div>O</div> <div></div> <div>LARGE DRAWER BACK QTY 4</div>
<div>P</div> <div></div> <div>SMALL DRAWER BACK QTY 3</div>	<div>Q</div> <div></div> <div>LARGE DRAWER BOTTOM QTY 4</div>	<div>R</div> <div></div> <div>SMALL DRAWER BOTTOM QTY 3</div>
<div>S</div> <div></div> <div>TRAY QTY 1 PAIR</div>	<div>T</div> <div></div> <div>PLASTIC JOINING STRIP QTY 1</div>	

**NEED HELP?** For help with assembly or if you are missing a part,  
Please call customer service at 1-866-518-0120 ext. 262 (9 am to 4 pm EST)


## HARDWARE DESCRIPTION

 1




ALLEN KEY BOLT  
M6 X 30mm  
QTY 24

 2




ALLEN KEY SCREW  
M6 X 30mm  
QTY 52

 3




CAM LOCK PIN  
CAM LOCK  
QTY 28 SETS

 4

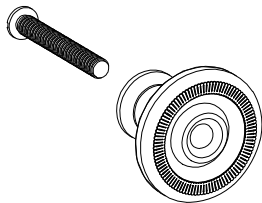


HANDLE  
M4 X 27 mm  
QTY 7 SETS

 5




ALLEN KEY  
QTY 1

 6




PHILLIPS SCREW  
ROUND HEAD  
M4 X 15mm  
QTY 24

  7






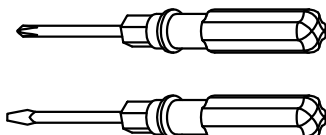 
PHILLIPS SCREW  
M4 X 30mm  
QTY 4

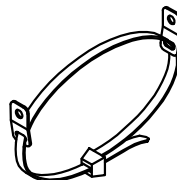8



 
FURNITURE ANTI-TIPPING RESTRAINT  
QTY 1 SET

- a.  M4 X 25mm - QTY 1
- b.  M4 X 15mm - QTY 1
- c.  M4 X 25mm - QTY 1




Required -  
Flathead screwdriver  
Phillips screwdriver  
**Not Included**

**NEED HELP?** For help with assembly or if you are missing a part,  
Please call customer service at 1-866-518-0120 ext. 262 (9 am to 4 pm EST)

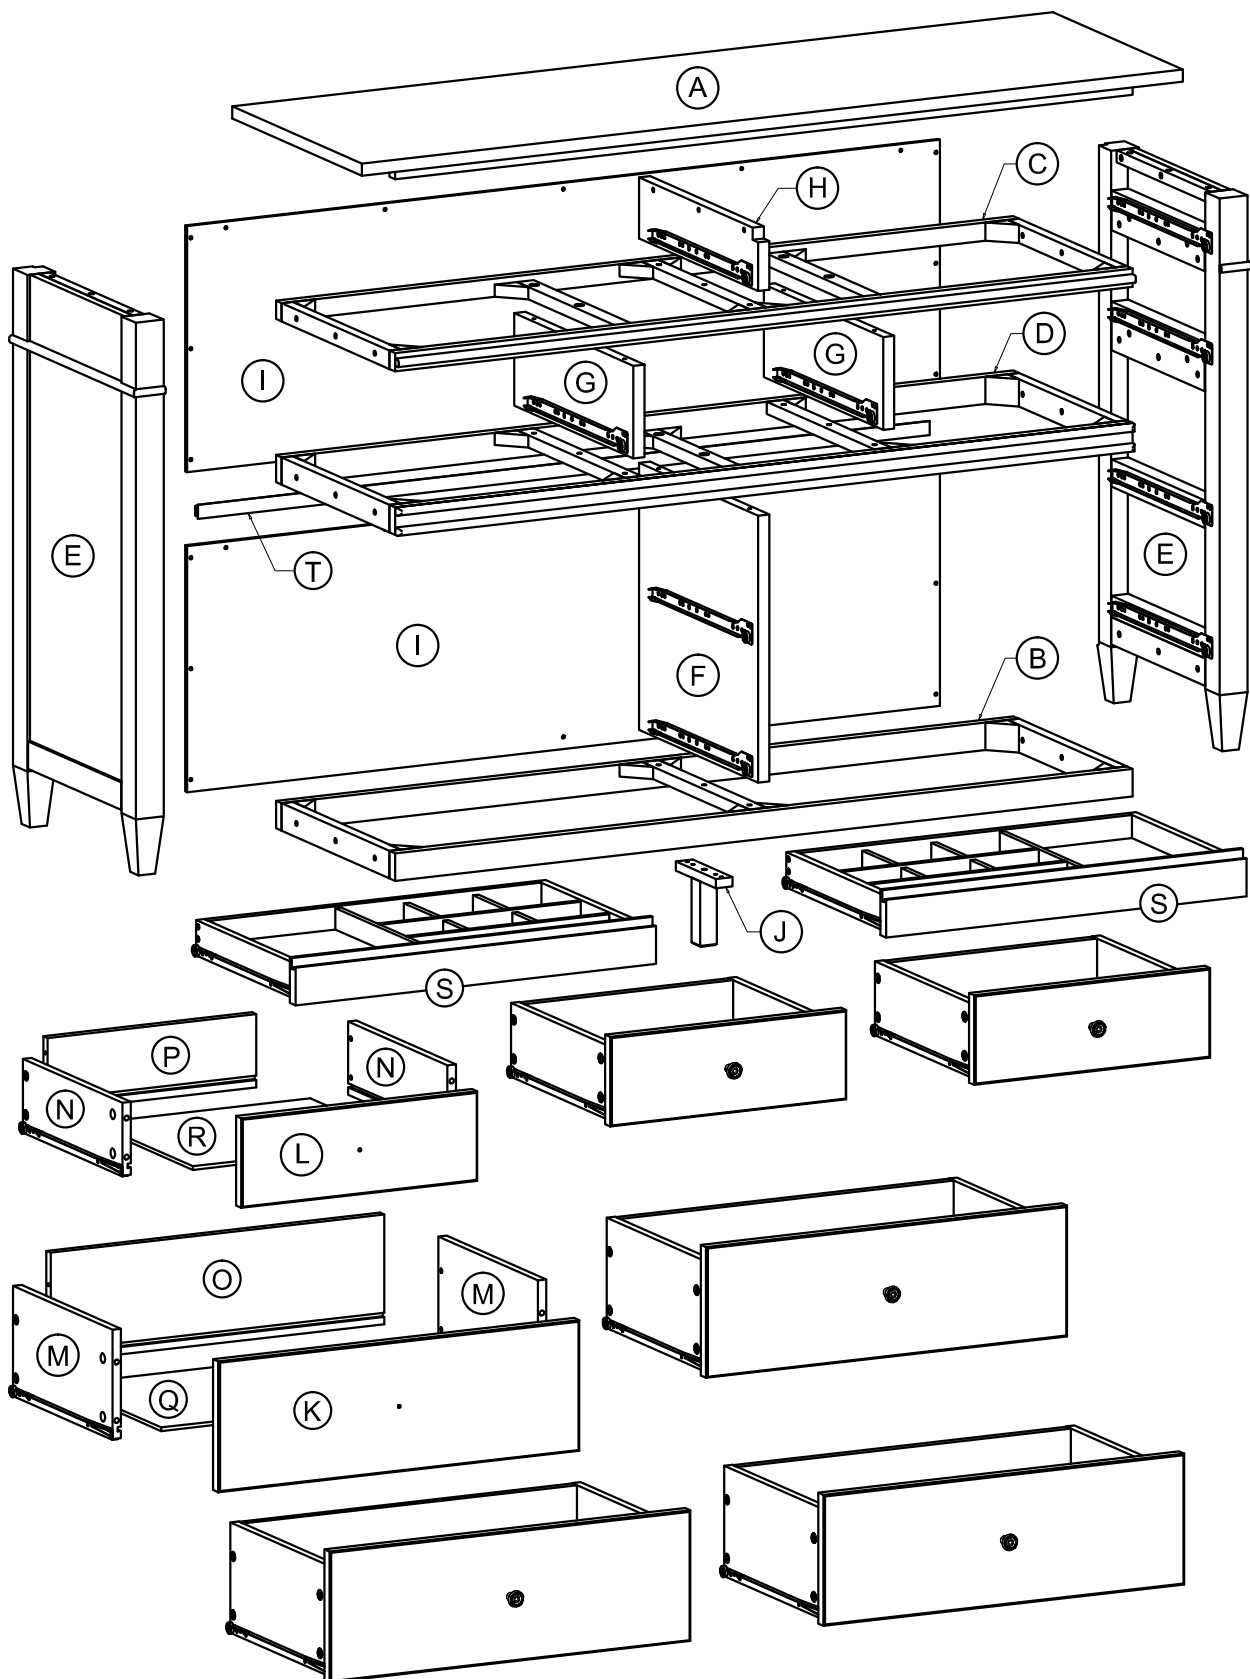




## STEP-1

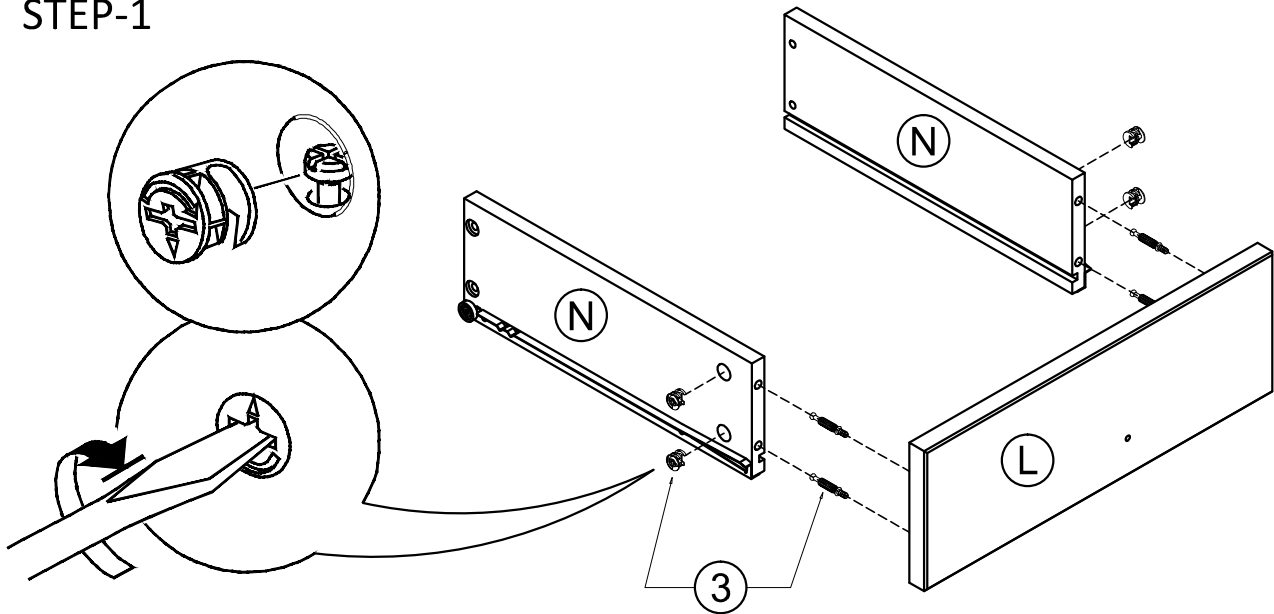 


1. Attach 4 Cam Lock Pins (3) to pre-drilled holes at back of Small Drawer Front (L).
2. Align Cam Lock Pins with pre-drilled holes and attach Small Drawer Sides (N).
3. Insert 2 Cam Locks (3) into pre-drilled holes on each Small Drawer Side (N).
4. Use flathead screwdriver secure Cam Locks.

## STEP-2

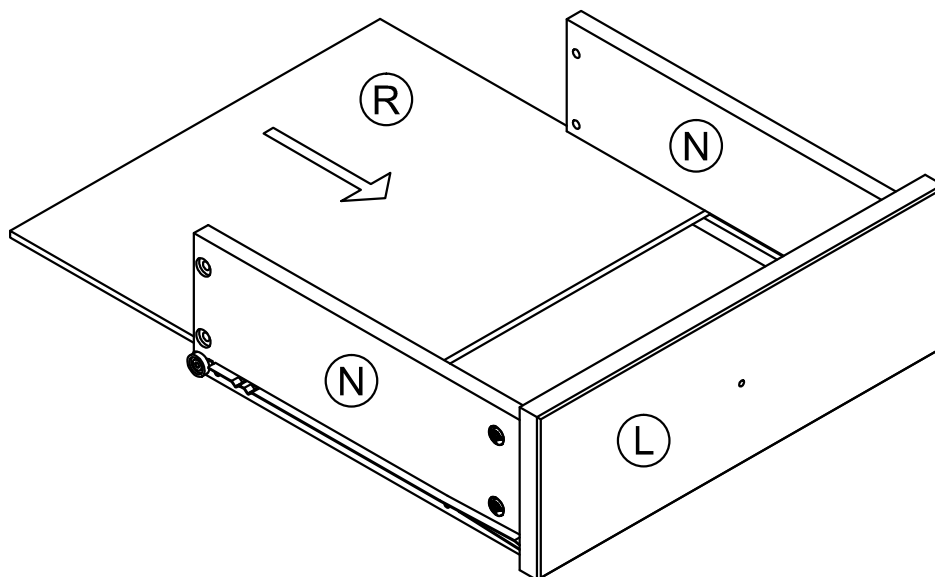 



1. Slide Small Drawer Bottom (R) firmly into slots on Small Drawer Sides (N) and Small Drawer Front (L).

## STEP-3

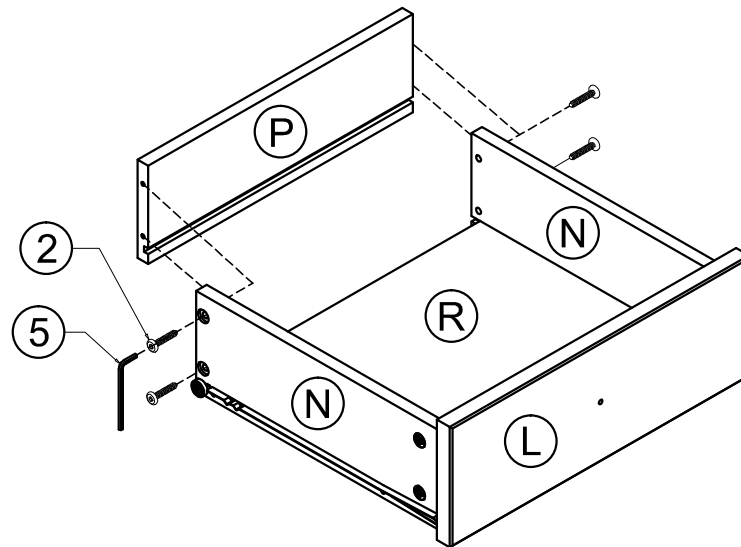 

1. Align Small Drawer Back (P) with Small Drawer Bottom (R) and press firmly into slot .
2. Attach Drawer Back using 2 Allen Key Screws (2) through pre-drilled holes on each Side (N).
3. Use Allen Key (5) to tighten screws. Do not over-tighten.


## STEP-4

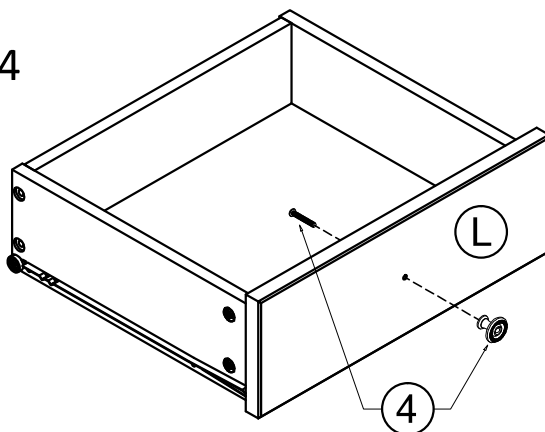  


**NOTE:** The screwdriver is not included in the hardware pack.

1. Use Phillips screwdriver to attach Handle (4) to Small Drawer Front (L).

 Repeat Step 1-4 for the other two small drawers .

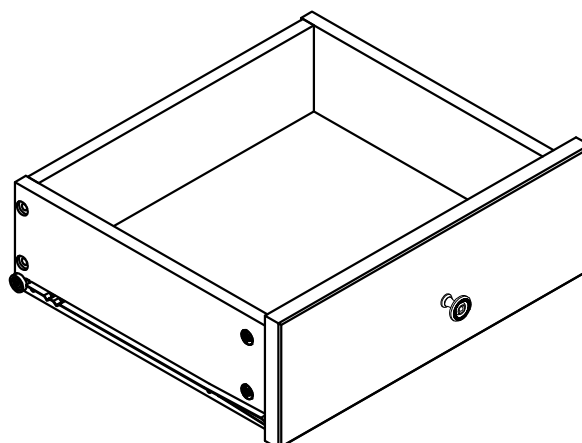


## STEP-5

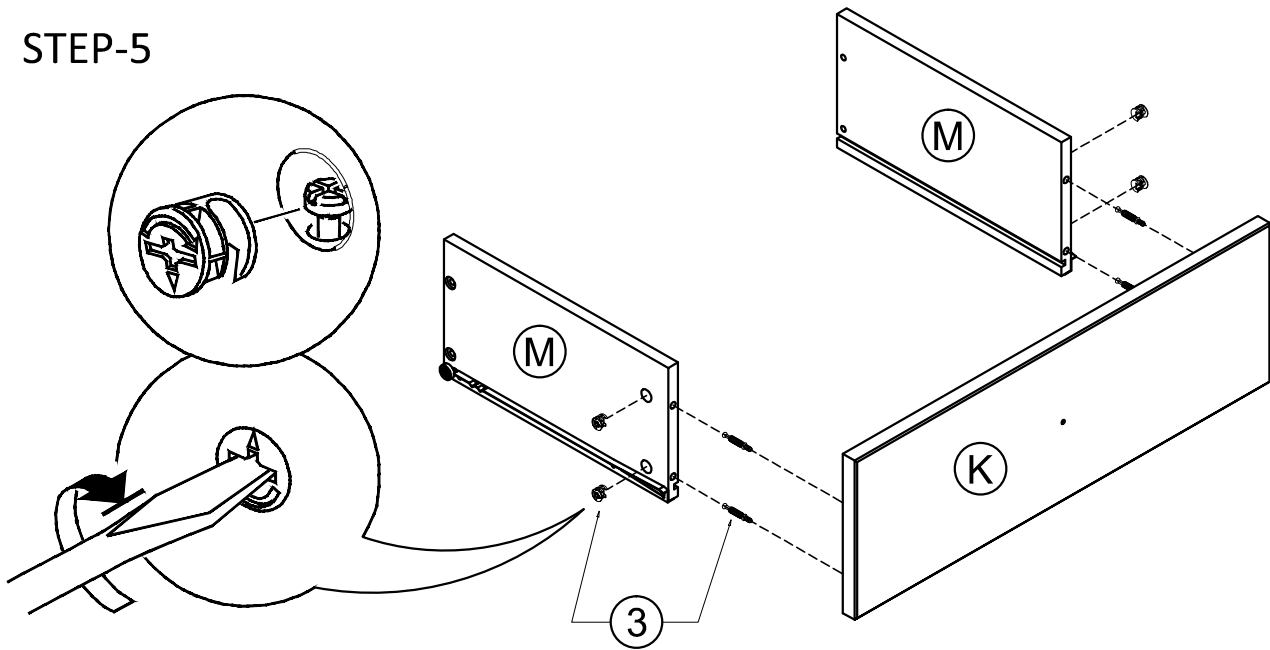 


1. Attach 4 Cam Lock Pins (3) to pre-drilled holes at back of Large Drawer Front (K).
2. Align Cam Lock Pins with pre-drilled holes and attach Large Drawer Sides (M).
3. Insert 2 Cam Locks (3) into pre-drilled holes on each Large Drawer Side (M).
4. Use flathead screwdriver secure Cam Locks.

## STEP-6

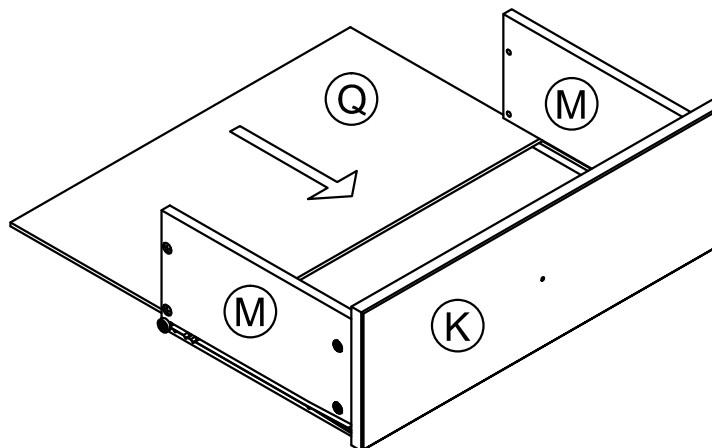 



1. Slide Large Drawer Bottom (Q) firmly into slots on Large Drawer Sides (M) and Large Drawer Front (K).

## STEP-7

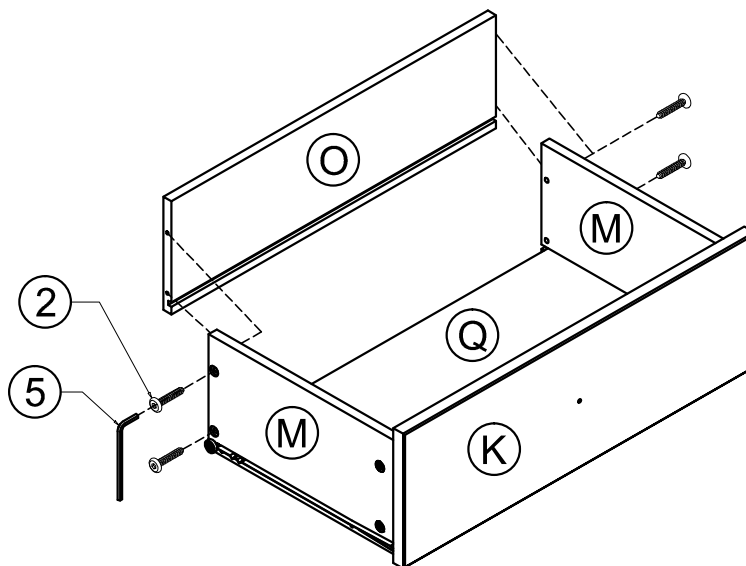 

1. Align Large Drawer Back (O) with Large Drawer Bottom (Q) and press firmly into slot .
2. Attach Drawer Back using 2 Allen Key Screws (2) through pre-drilled holes on each Side (M).
3. Use Allen Key (5) to tighten screws. Do not over-tighten.


## STEP-8

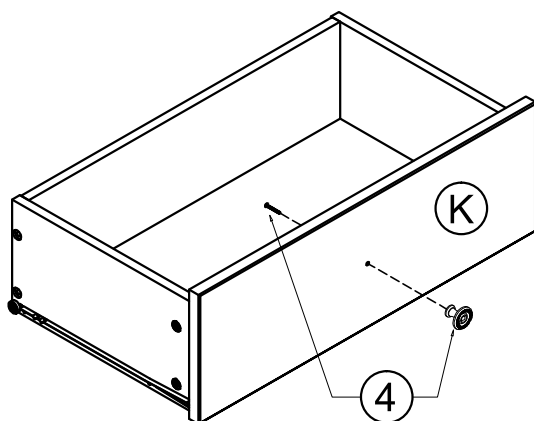  


**NOTE:** The screwdriver is not included in the hardware pack.

1. Use Phillips screwdriver to attach Handle (4) to Large Drawer Front (K).

 Repeat Step 5-8 for the other three large drawers .

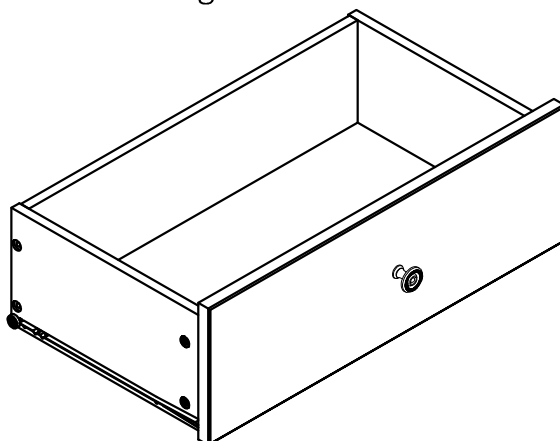


## STEP-9

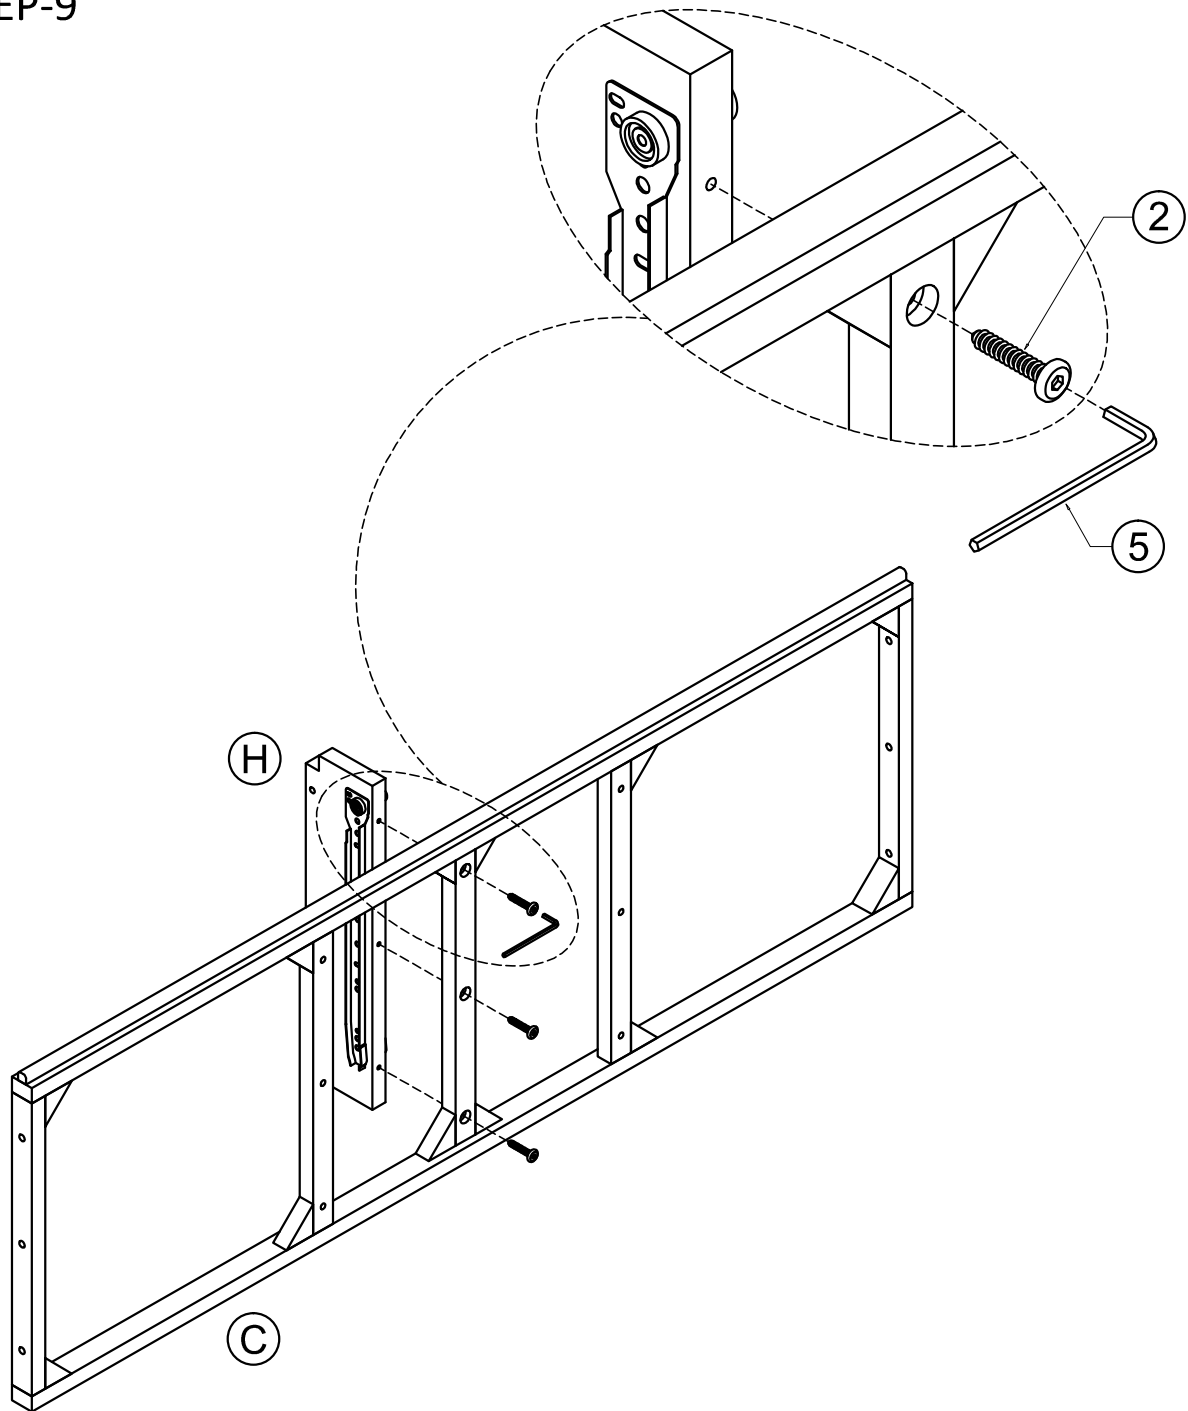 


1. Attach Small Divider (H) to Top Frame (C) using 3 Allen Key Screws (2)
2. Use Allen Key (5) to tighten screws. Do not over-tighten.

## STEP-10

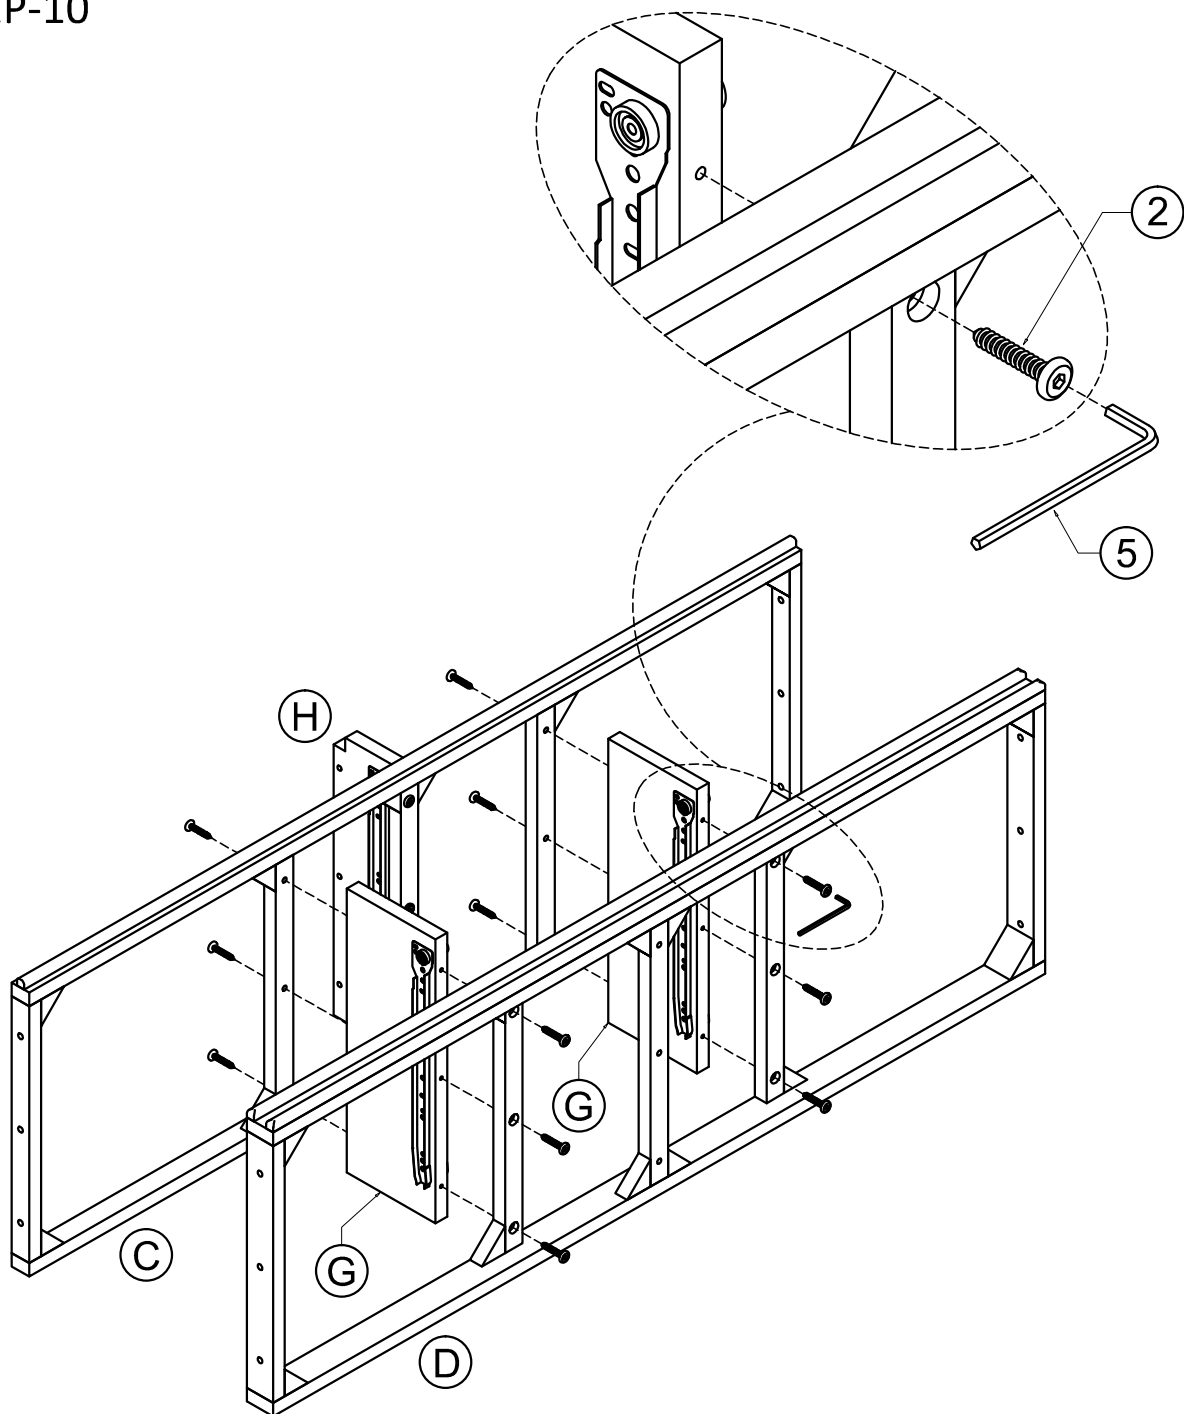 


1. Attach Middle Dividers (G) to Top Frame (C) and Middle Frame (D) using 12 Allen Key Screws (2) (6 Screws / each Divider ).
2. Use Allen Key (5) to tighten screws. Do not over-tighten.

## STEP-11

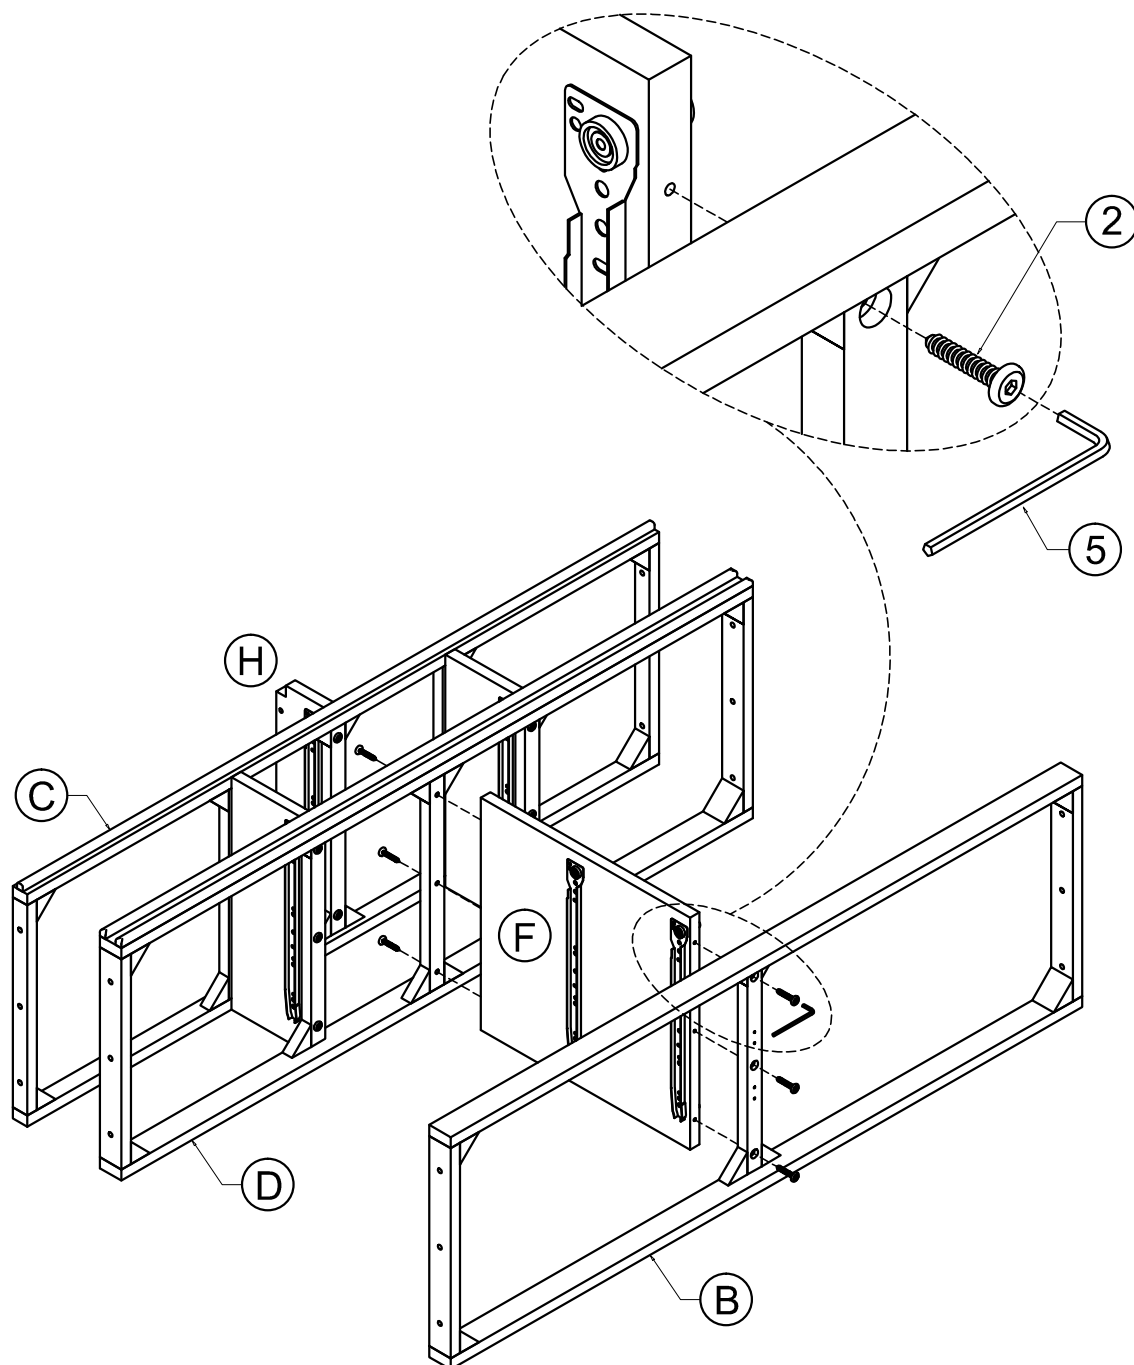 


1. Attach Large Divider (F) to Middle Frame (D) and Bottom Frame (B) using 6 Allen Key Screws (2) (3 Screws / each Frame ).
2. Use Allen Key (5) to tighten screws. Do not over-tighten.

## STEP-12

 

 
NOTE: The screwdriver is not included in the hardware pack.

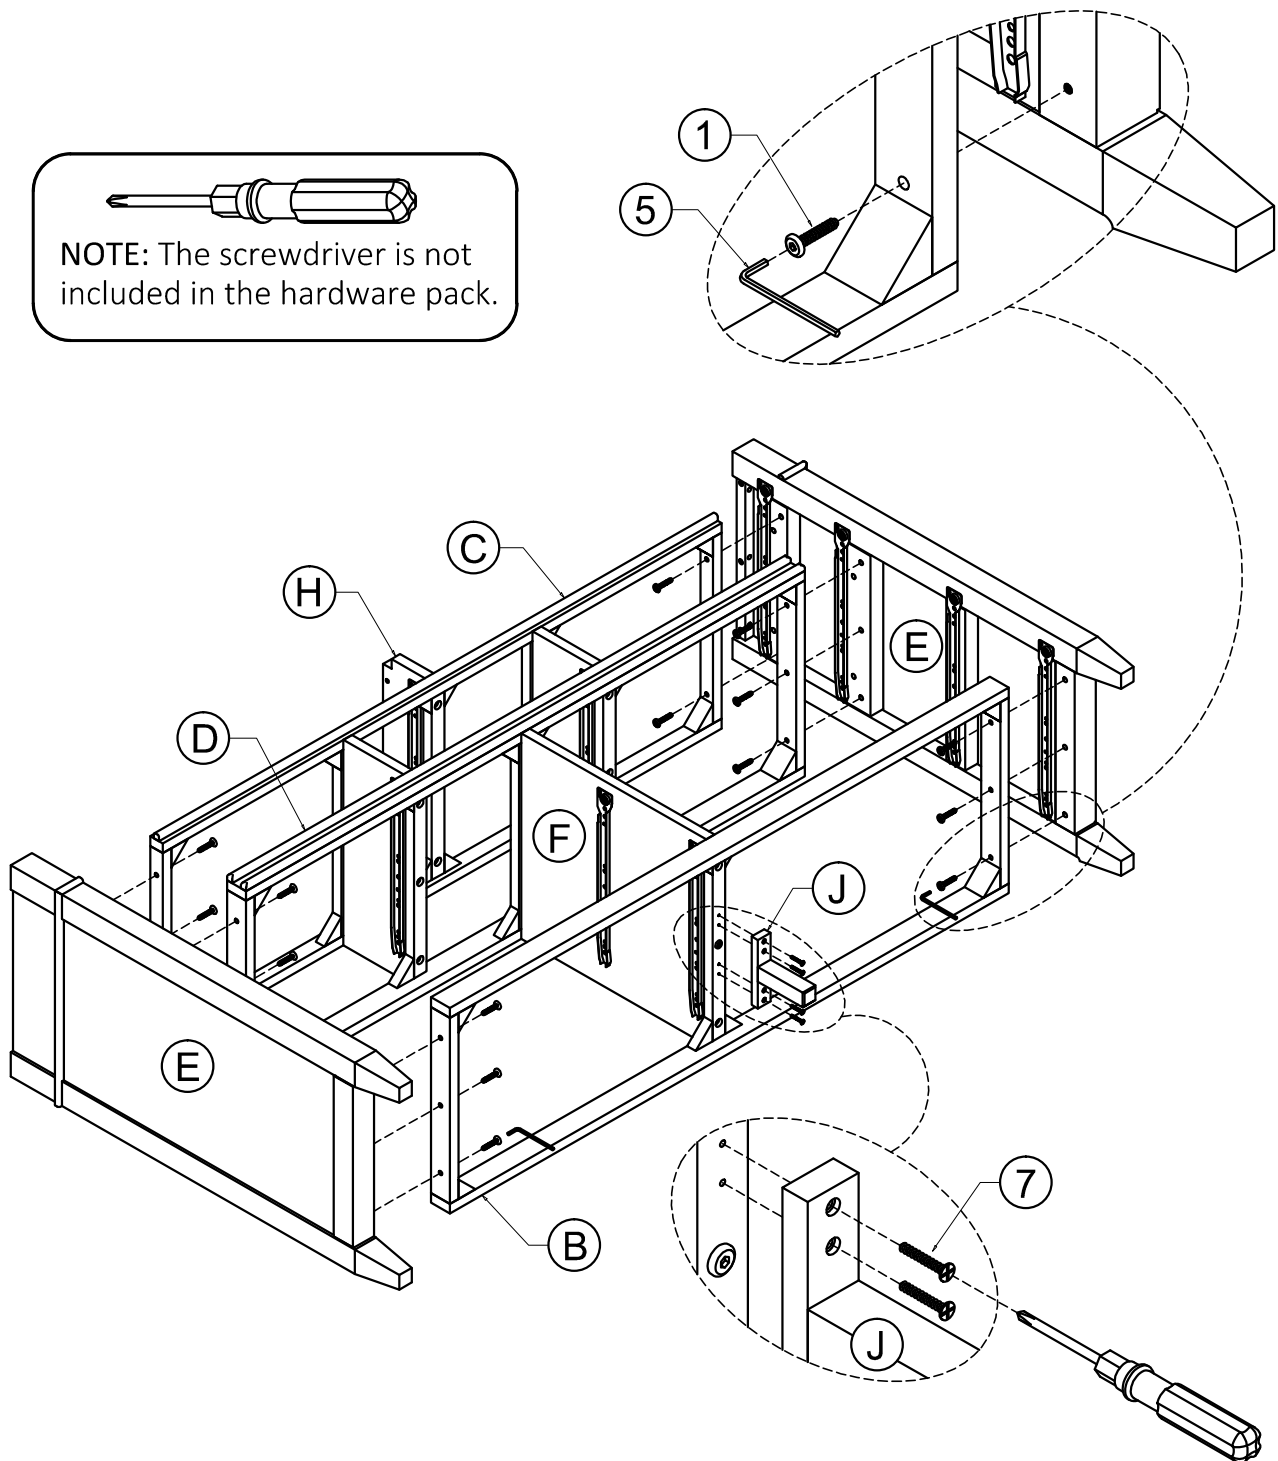

1. Attach Top Frame (C), Middle Frame (D) and Bottom Frame (B) to Sides (E) using 18 Allen Key Bolts (1) ( 9 Bolts / each Side ).
2. Use Allen Key (5) to tighten screws. Do not over-tighten.
3. Attach Bottom Support Leg (J) to Bottom Frame (B) using 4 Phillip Screws (7) .




## STEP-13

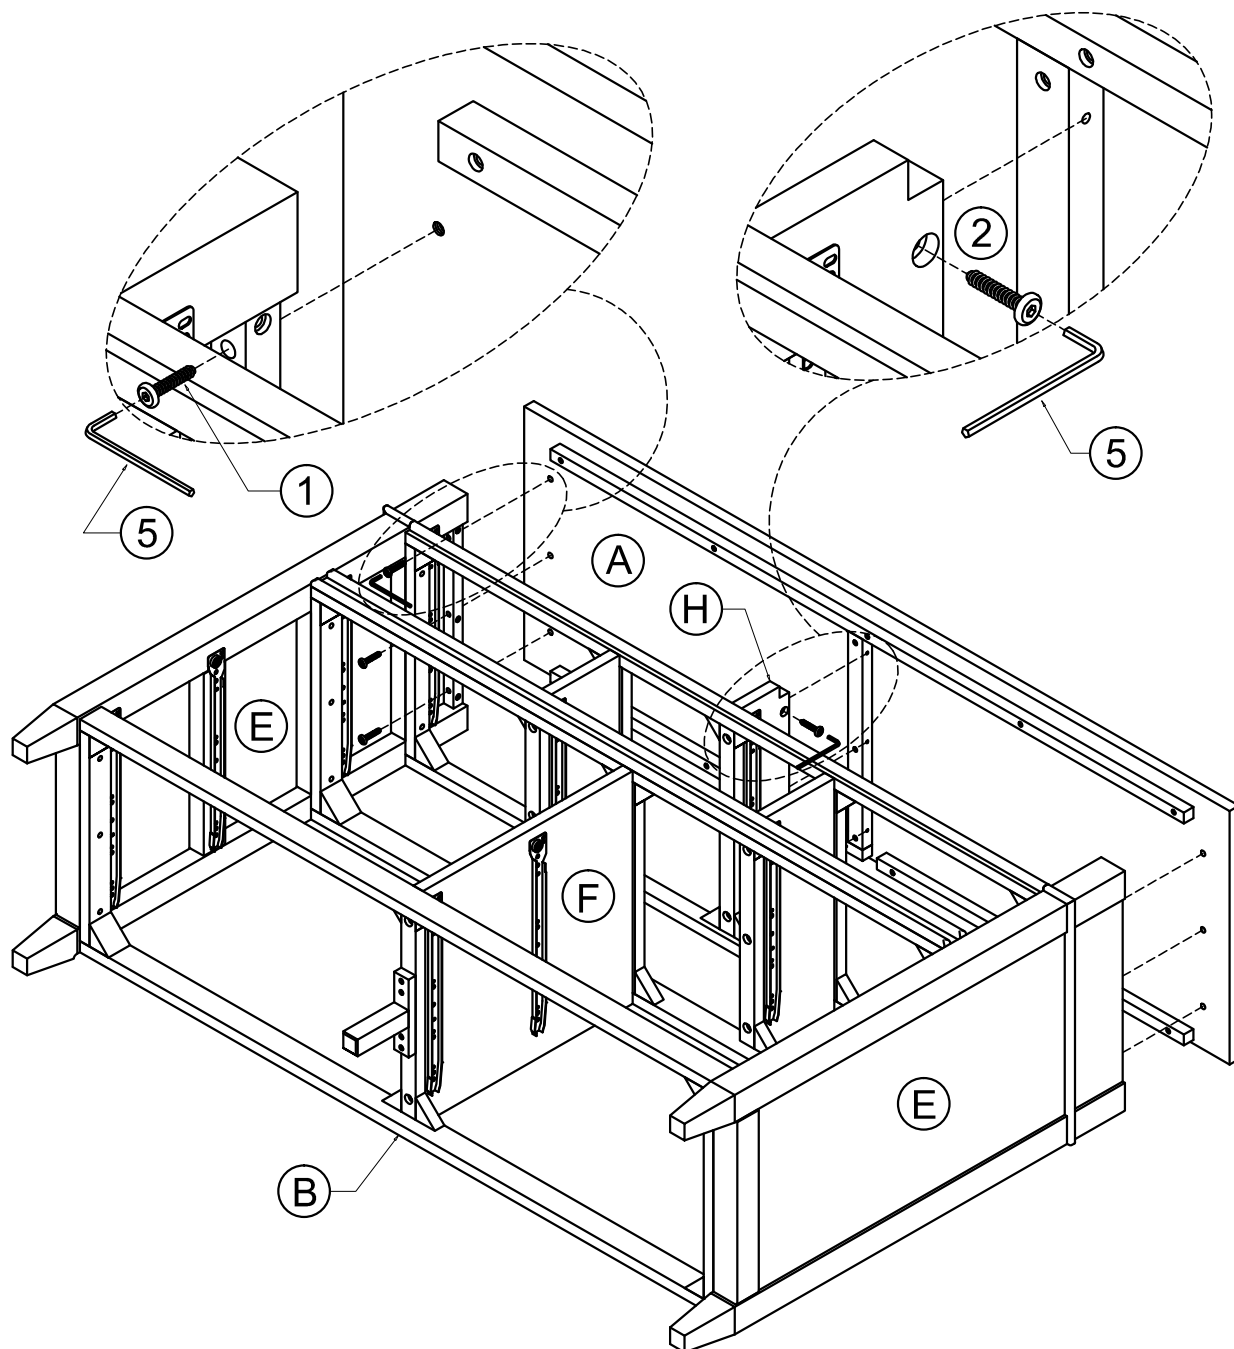 


1. Attach Top (A) to Sides (E) using 6 Allen Key Bolts (1) ( 3 Bolts / each Side ).
2. Attach Top (A) to Divider (H) using 3 Allen Key Screws (2).
3. Use Allen Key (5) to tighten screws and bolts. Do not over-tighten.

## STEP-14

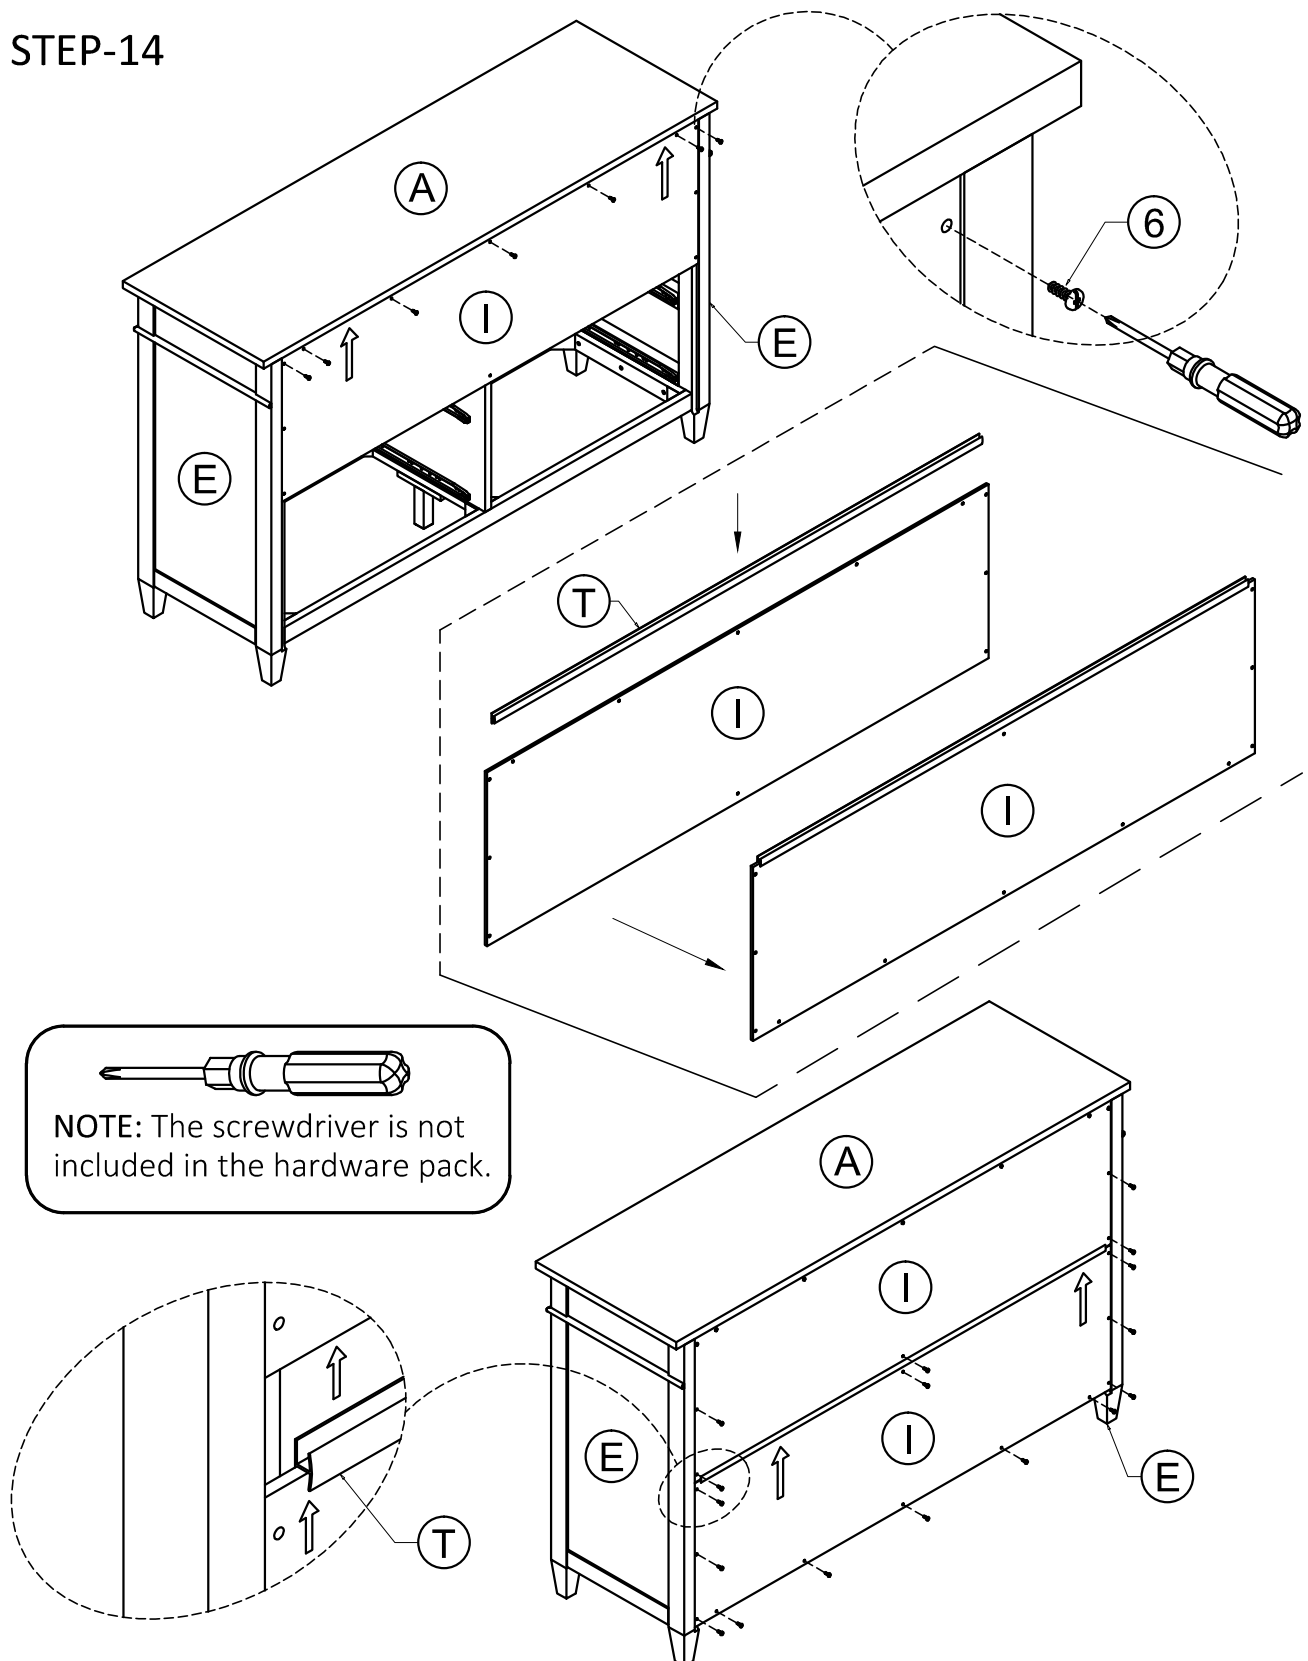 

1. Attach the upper Back Panel (I) to back frame by using Phillips Screws (6). Only 1st top row of screws ( 7 screws ) to be screwed in advance.
2. Insert the lower Back Panel (I) into the slot of Plastic Joining Strip (T).
3. Insert the entire set of Step 2 into bottom edge of upper Back Panel (I) and attach both panels (I) with screws (6).

## STEP-15

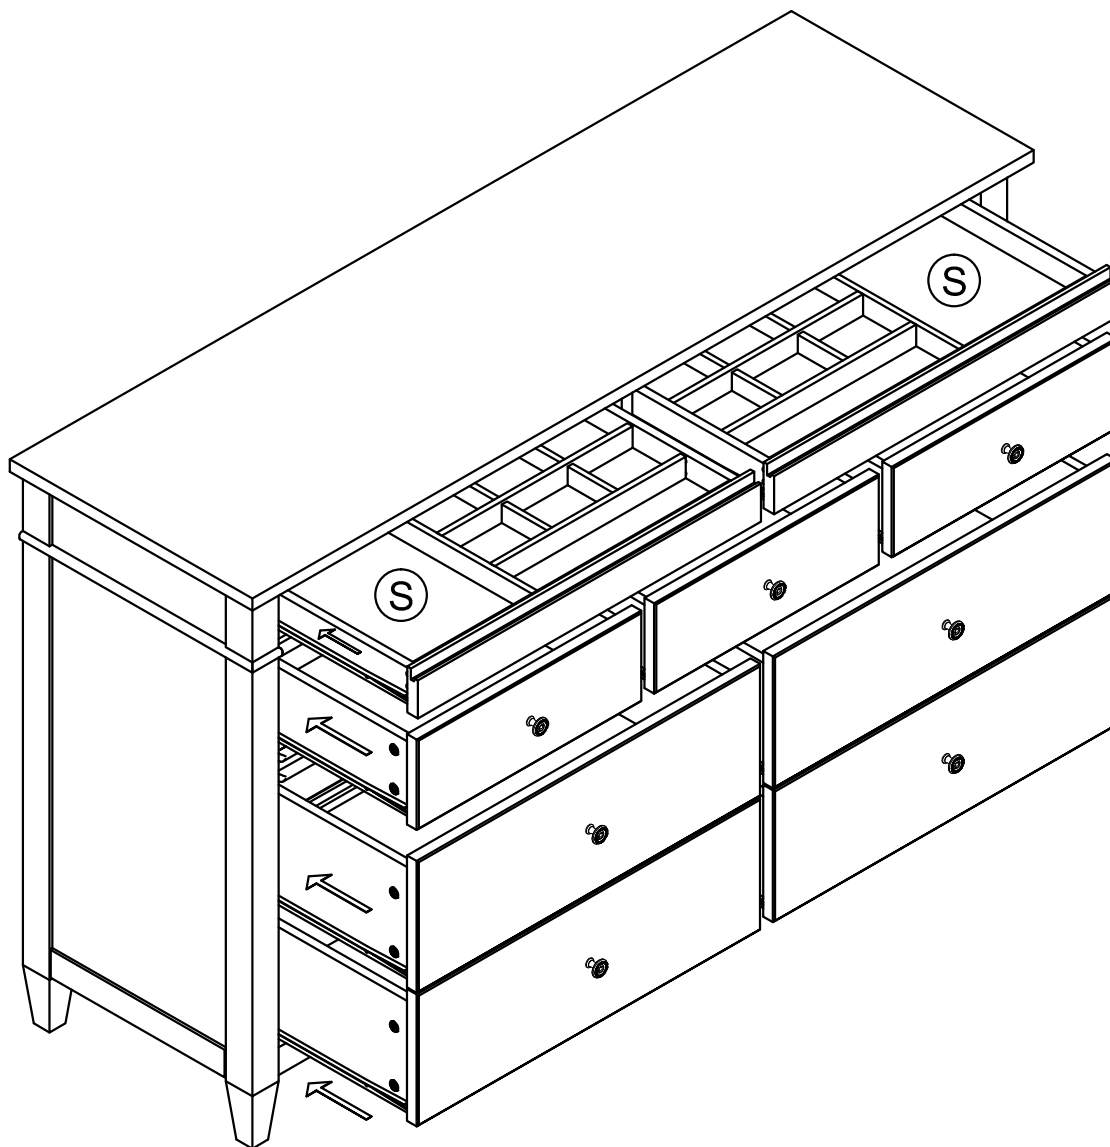 


1. Insert assembled drawers and trays (S) into glides on assembled dresser.


## FURNITURE ANTI-TIPPING RESTRAINT ASSEMBLY

 **NOTE:** Injuries and damage can occur from furniture tip-over. It is important to use the safety bracket included. If the tipping restraint kit is not in the box, please contact our customer service department in order to obtain another kit before using the furniture.

### STEP-16



 **NOTE:** The screwdriver is not included in the hardware pack.

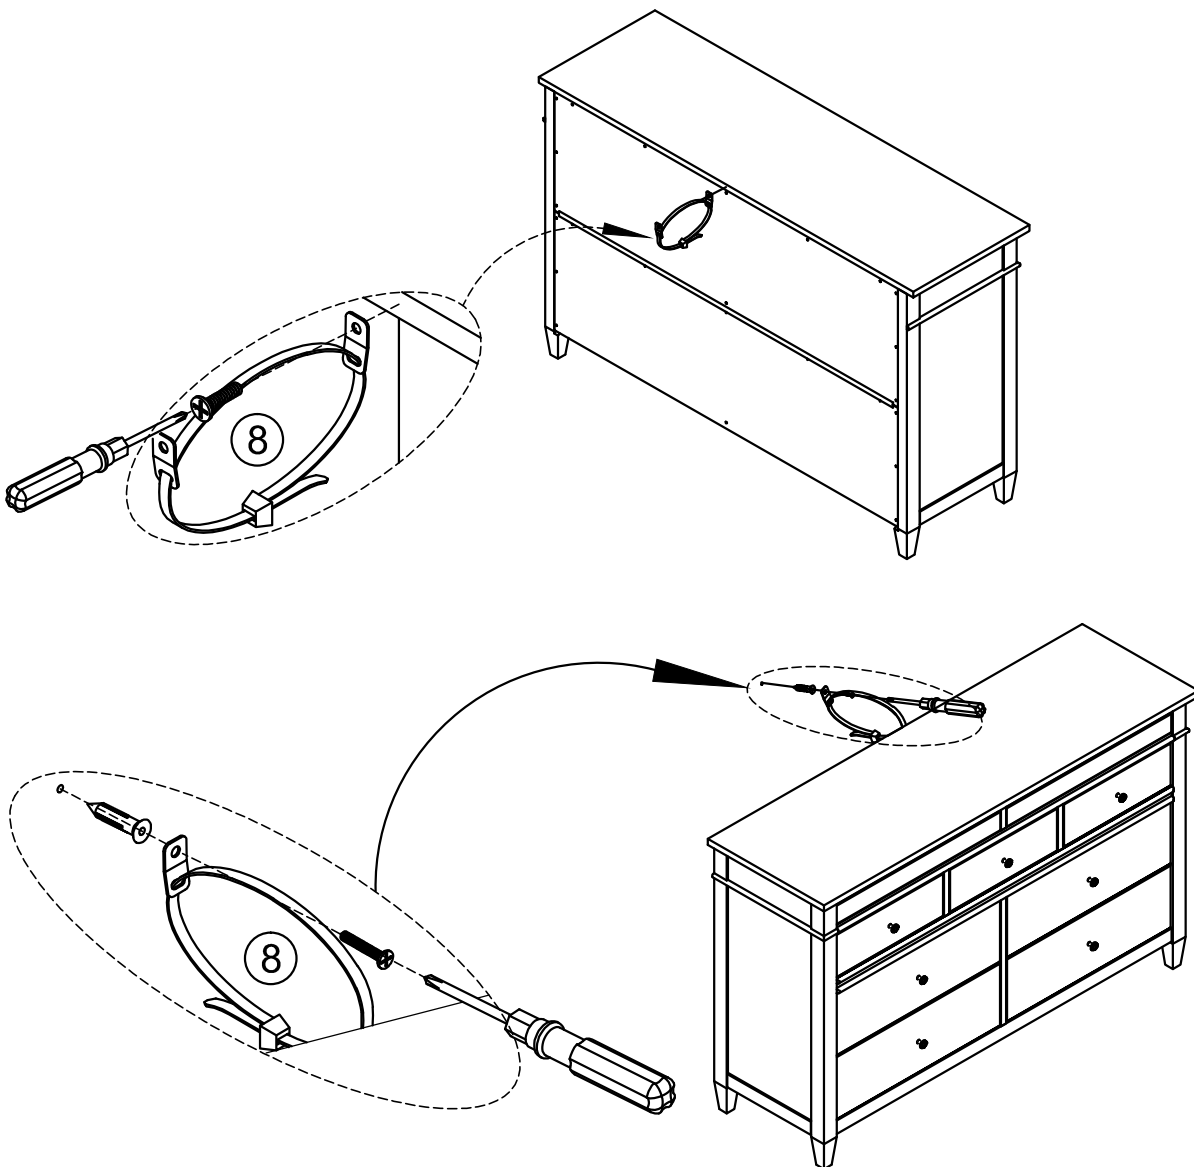

## FURNITURE ANTI-TIPPING RESTRAINT ASSEMBLY

### Furniture Anti-Tipping Restraint Instructions:

1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the shorter screw.
  2. Determine where furniture is to be placed and mark location on the wall for mounting bracket screw hole approximately 2 inches below the bracket mounted to the furniture.
  3. Drill a 3/16 inch hole in the wall. Press the plastic anchor into the hole and gently tap until the flange on the anchor is against the wall surface.
  4. Position the bracket over the anchor and use the longer screw to securely attach the bracket to the wall.
  5. Place the furniture so the back edge is in line with the bracket on the wall.
  6. Lace an end of the nylon restraint down through each bracket. Bring both ends together and slide the beaded end of the strap through the keyhole shaped slot in the other end until snug. Pull down on the beaded end until it snap locks into the keyhole slot.
  7. To double lock, return the beaded end back through the keyhole as shown.
  8. Check to make sure the strap is securely laced and locked to the brackets.
- **DO NOT** put a TV or other heavy objects on top of a Dresser or any other furniture not intended for use with a TV
  - **DO NOT** place heavy objects in top drawers
  - **DO NOT** let children climb or hang on drawers, doors or shelves



## WARRANTY

Thank you for purchasing a Simpli Home – Wyndenhall – Brooklyn + Max product. These products have been made to demanding, high-quality standards and are guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase. This warranty does not affect your statutory rights.

In case of any malfunction of your product (failure, missing parts, etc.) please contact us at our toll free service line at 1-866-518-0120 ext. 262 from 9 am to 4 pm, Monday to Friday, Eastern Standard Time or by email at [simpli-home.com/customer-support](https://www.simpli-home.com/customer-support).

We reserve the right to repair or replace the defective product, at its discretion.

This product is guaranteed for 12 months if used for normal purposes. Any warranty is invalid if the product has been overloaded or subject to neglect, improper use or an attempted repair by other than an authorized agent. Heavy-duty or daily professional/commercial usage are not guaranteed.

Due to continuous product improvement, we reserve the right to change the product specifications without prior notice.



Question, problems, missing parts?

Before returning your product  
please email Customer Support at  
[simpli-home.com/customer-support](mailto:simpli-home.com/customer-support)

or call

Customer Support at 1-866-518-0120 ext. 262  
Monday to Friday between 9 am – 4 pm EST

For more information visit us on our website  
[www.simpli-home.com](http://www.simpli-home.com)

Like us on facebook  
[www.facebook.com/simplihomefurnishings](http://www.facebook.com/simplihomefurnishings)