

FLEXSTEEL®


W1447-06B

Entertainment Base


IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent damage to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

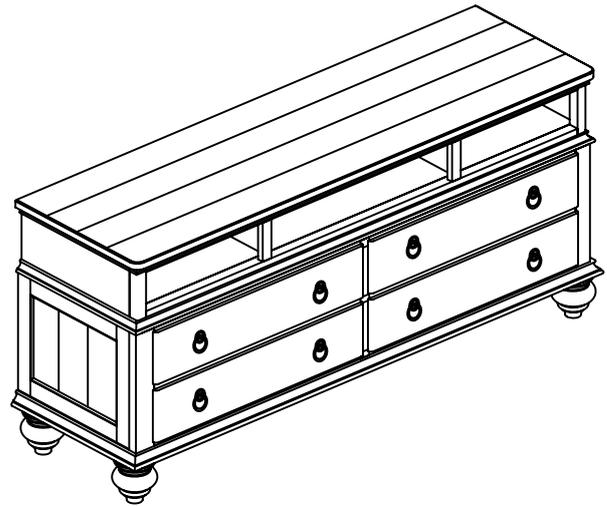

Part List

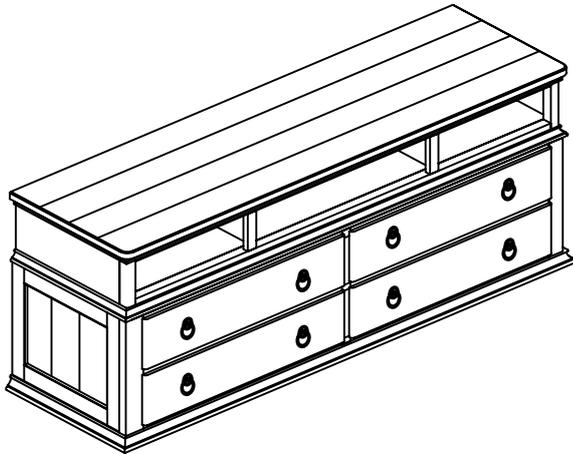

A. Entertainment Base
1 piece




B. Leg
4 pieces




C. Support Leg
1 piece

Hardware List

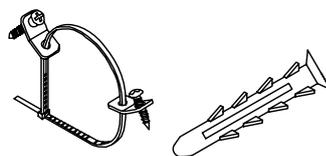

Anti-Tipping Device
1 set

Tool(s) recommended for assembly: Level

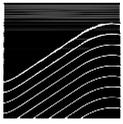

IMPORTANT


- Use a soft cloth between these parts and the floor.

STEP 1

Place the Entertainment Base (A) upside down on a soft surface and screw in the Legs (B), Support Leg (C). (See Figure 1.)

Taking care not to put any undue pressure on the legs, carefully position the Entertainment Base in an upright position.

Note: We recommend at least two adults assemble this item.

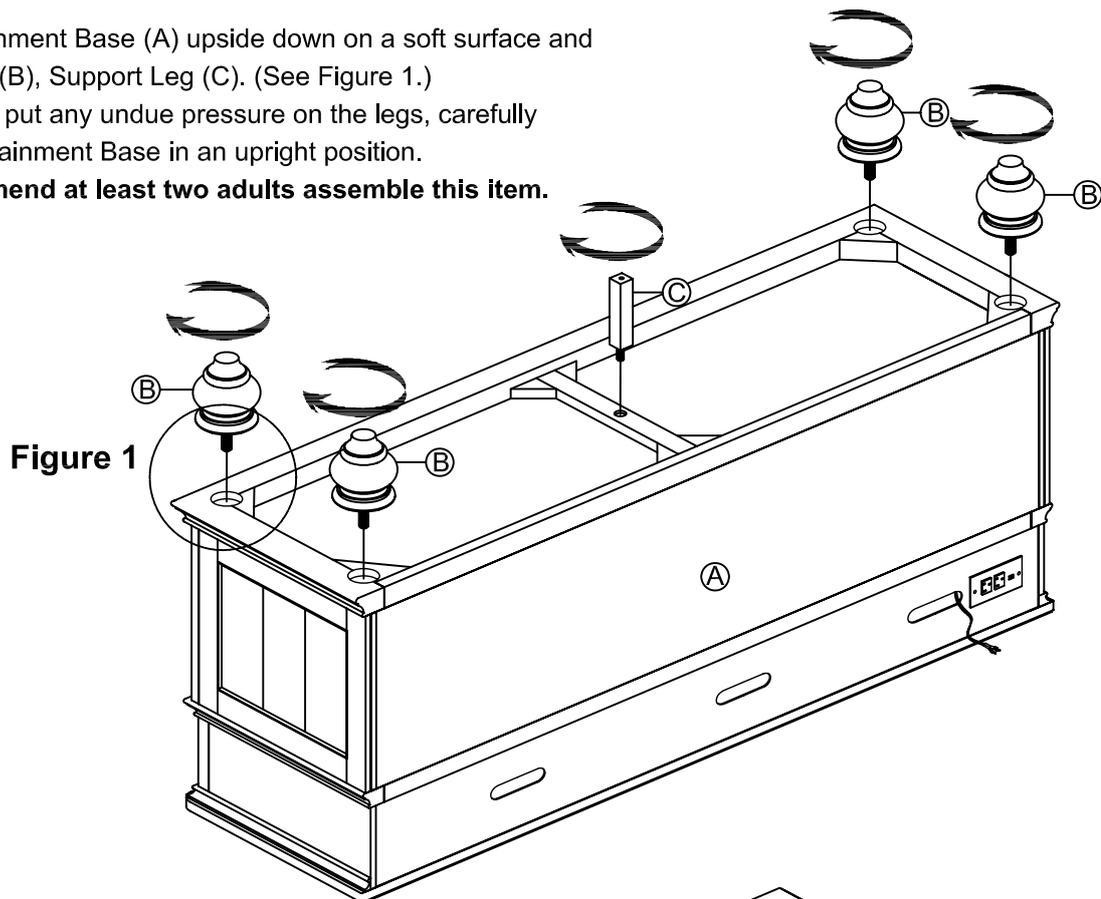

STEP 2

Adjust the levelers on the feet until the furniture is level. (See Figure 2.)

