88 5528 651


Colonial Classic Pantry


IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.



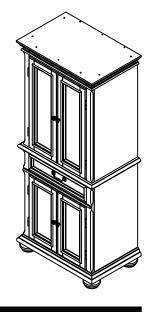

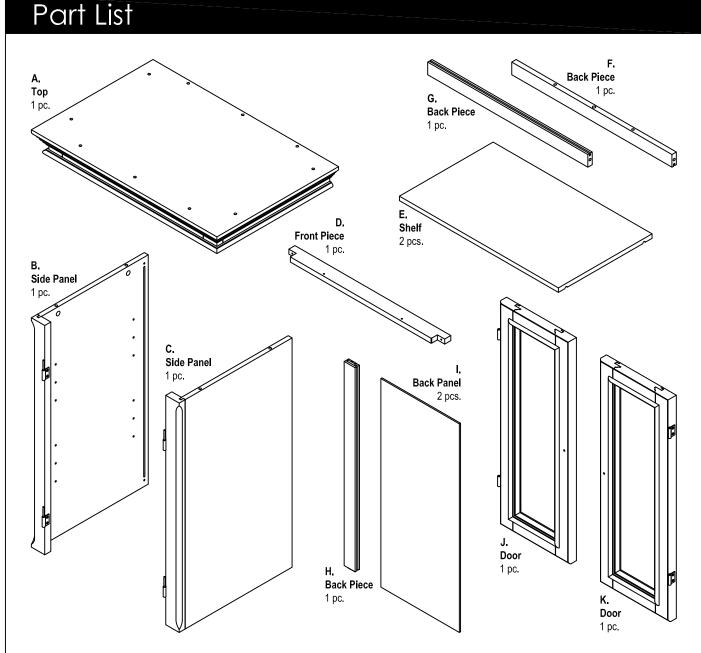

Tools Required For Assembly : Phillips screwdriver

Tools Recommended For Assembly : Level


Home Styles Consumer Assistance: www.homestyles-furniture.com, servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319

Also need the Parts and Hardware in carton 88 5528 652

Assembly Instructions 2/14

IMPORTANT

- * Do not tighten up all the screws until each part is properly assembled.
- * Use a soft cloth between these parts and the floor.
- * After assembly, item must be level to work properly. Use the included adjustable levellers to level.

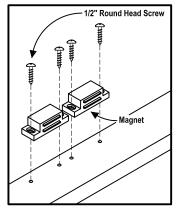

STEP 1

Attach Magnets to Front Pieces (D) and (P) with 1/2" Round Head Screws. (see Figure 1)


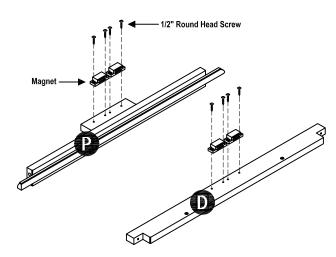


Figure 1

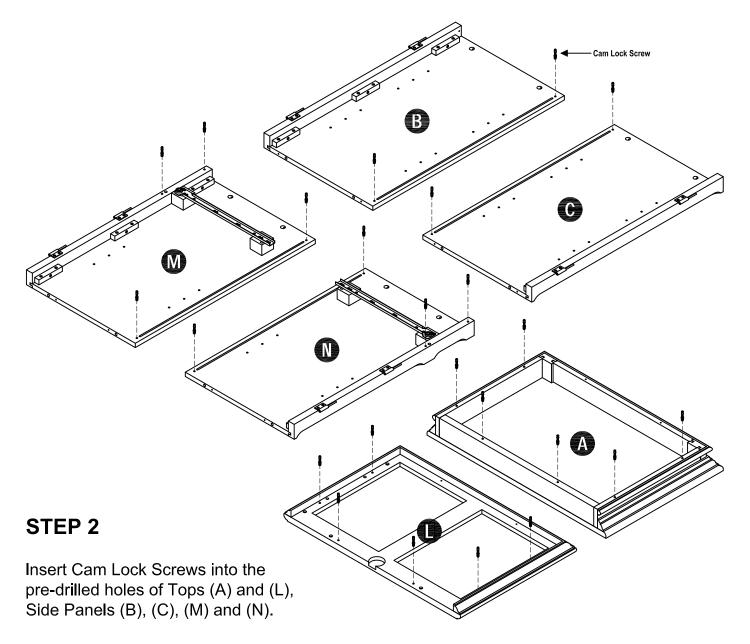



Assembly Instructions 3/14

STEP 3


Attach Back Pieces (F) and (G) to Back Piece (Q) with 1 1/4" Round Head Screws.


Slide Back Panels (R) into the grooves.

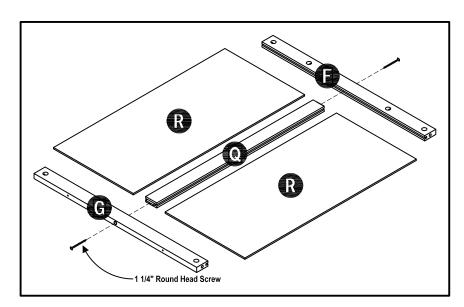

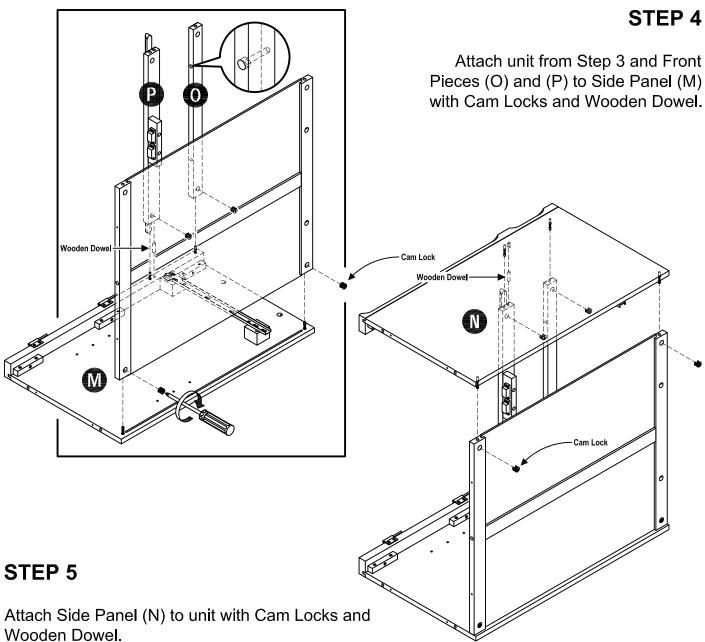

Assembly Instructions 4/14

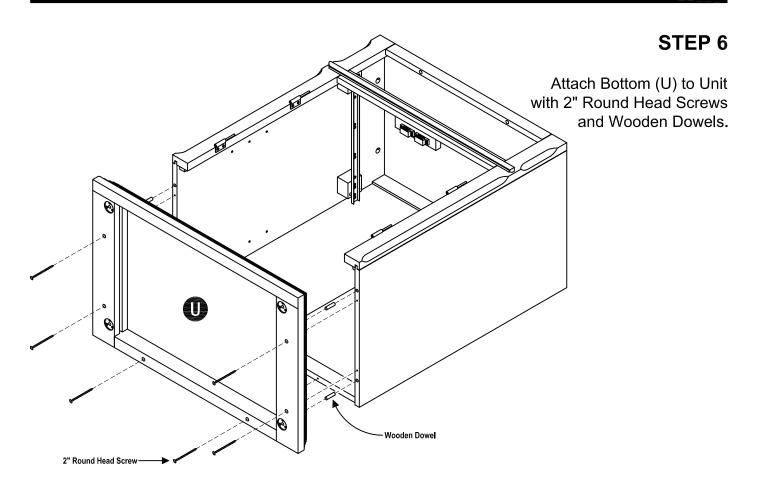

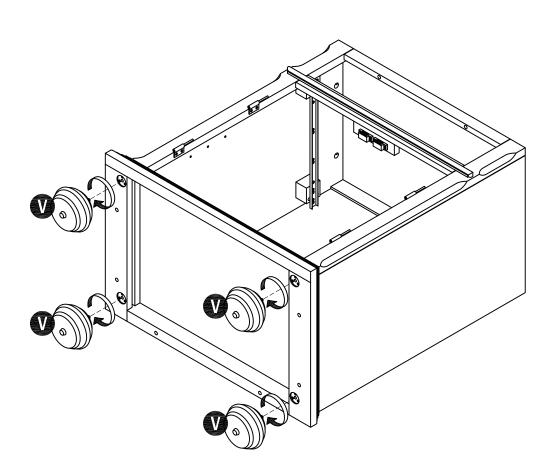

STEP 7

Attach Legs (V) to unit.

Assembly Instructions 5/14


Machine Screw Knob

STEP 8

Attach Knobs to Doors (S) and (T) with Machine Screws (Long).

STEP 9

Attach Doors (S) and (T) by sliding the Doors lift hinges into the Side Panels lift hinges.

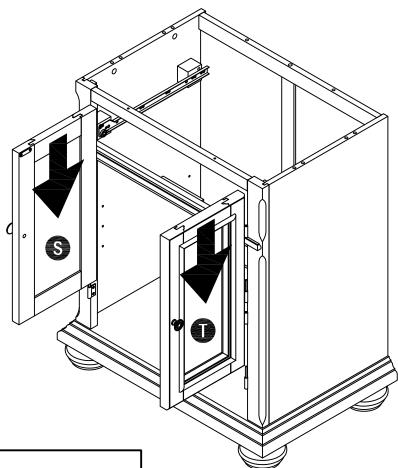


G 11/4" Round Head Screw

STEP 10

Attach Back Pieces (F) and (G) to Back Piece (H) with 1 1/4" Round Head Screws.

Slide Back Panels (I) into the grooves.


Assembly Instructions 6/14

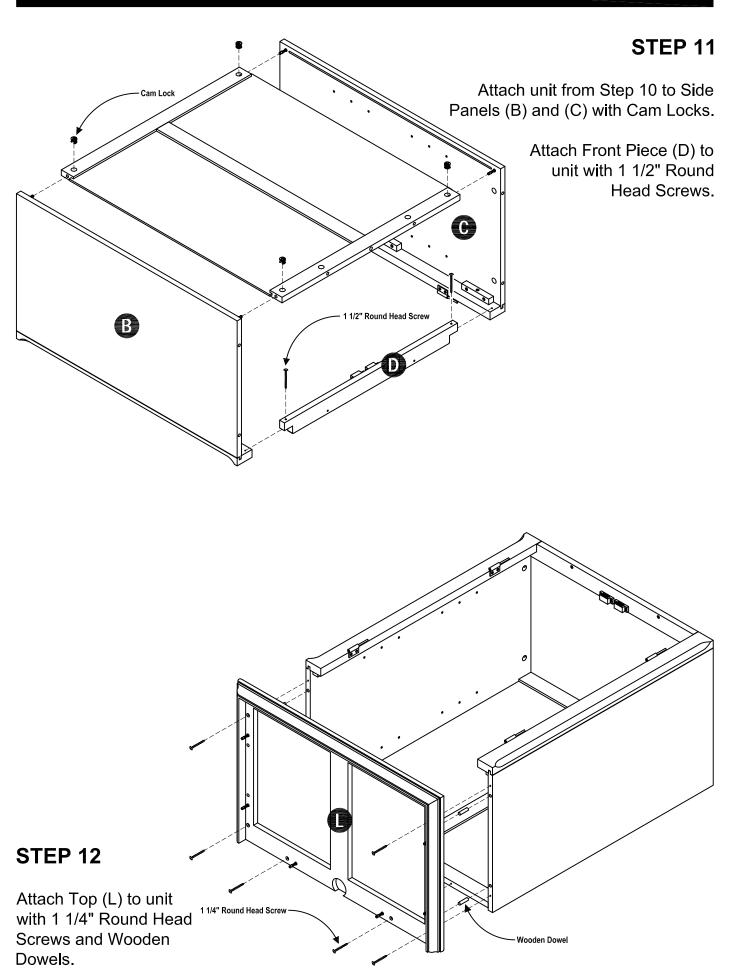



Assembly Instructions 7/14

STEP 13

Attach unit from Step 12 to unit from Step 9 with 1 1/2" Round Head Screws, Cam Locks and Wooden Dowels.

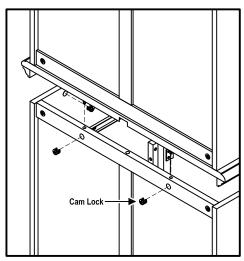

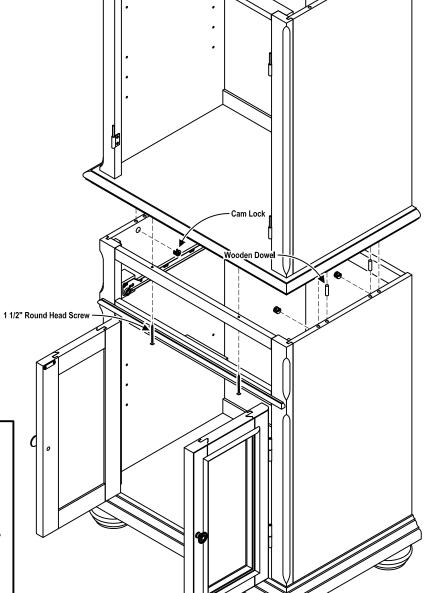

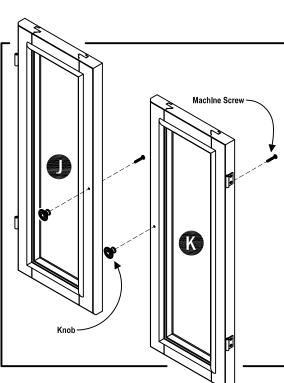

STEP 14

Attach Knobs to Doors (J) and (K) with Machine Screws (Long).

Assembly Instructions 8/14

STEP 15

lift hinges into the Side Panels lift hinges.

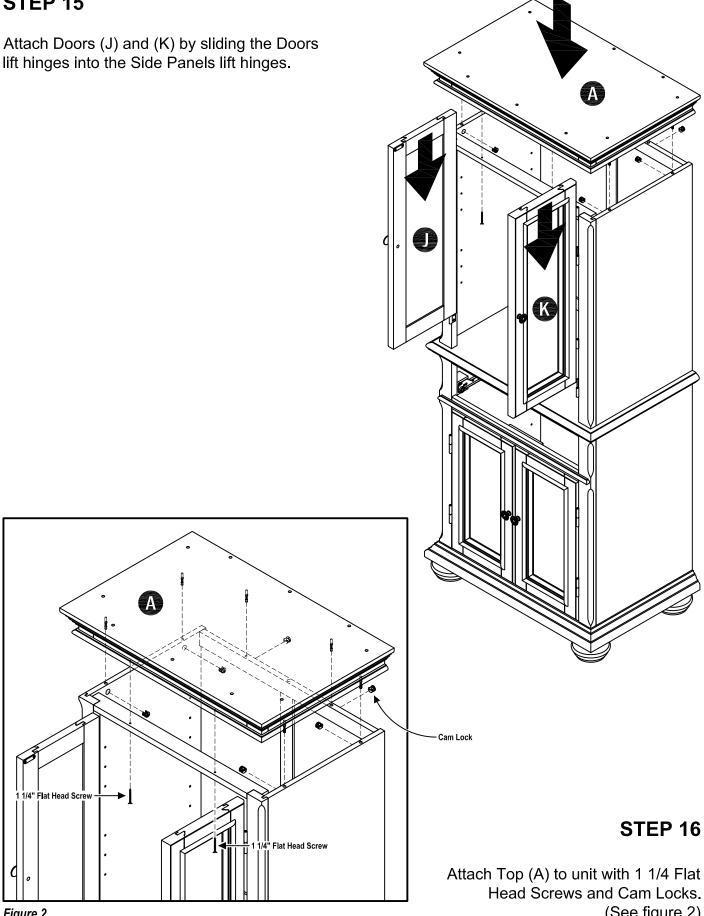


Figure 2

(See figure 2)

Assembly Instructions 9/14

Adjustable Pin


Figure 3

STEP 18

To level the unit, adjust the adjustable levelers on the bottom.

Note: Unit must be level to work properly.

(see Figure 4)

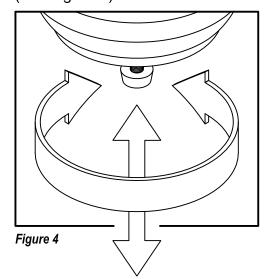


STEP 17

Insert Adjustable Pins into Side Panels at the desired level. (see Figure 3)

Place Shelves (E) into position.

Slide Drawer (W) into place.

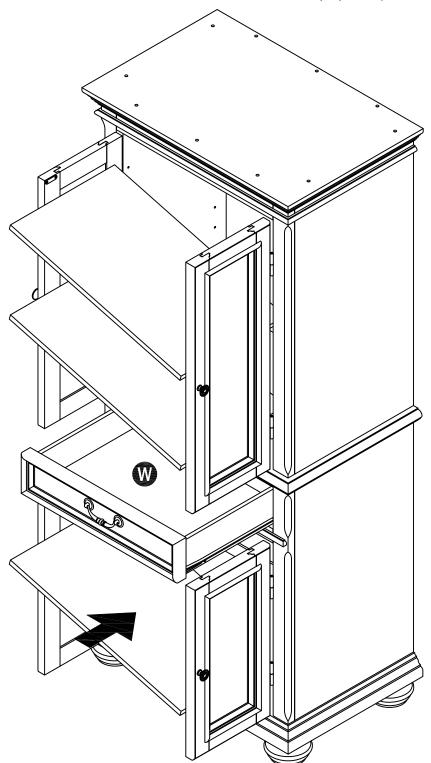


Assembly Instructions 10/14

Wedge 1/2" Flat Head Screw

Figure 5


STEP 19

Attach Wedges to unit with 1/2" Flat Head Screws. (see Figure 5)

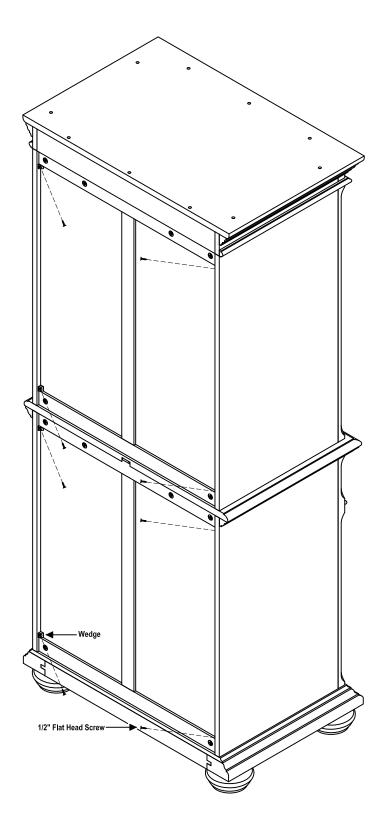

Assembly Instructions 11/14


Remove Drawer (W) from unit.

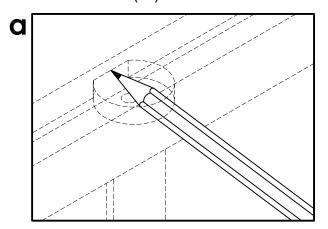


Place the Unit on the wall at desired location. Mark with pencil to show the position of hole at Top (L).

ATTENTION!


For safety reasons, please follow these instructions to prevent the unit from tipping over.

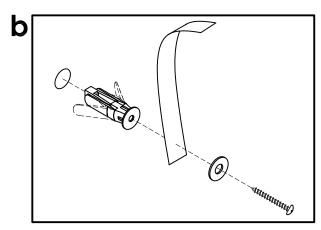

Move Unit, attach Tipping Restraint to the wall with 1 1/2" Round Head Screw, Flat Washer & Anchor. Use the Mark as a guidance.

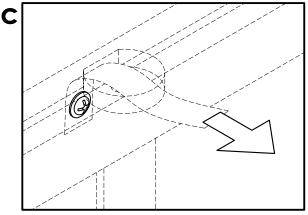


Insert Tipping Restraint to unit through the hole of Top (L).

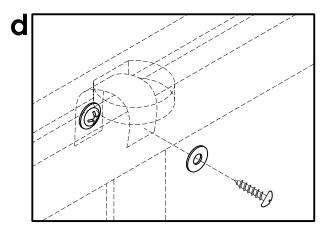

Screw Tipping Restraint to unit with 1/2" Round Head Screw & Small Flat Washer.
Slide Drawer (W) into place.

Assembly Instructions 12/14

Drawer (W)

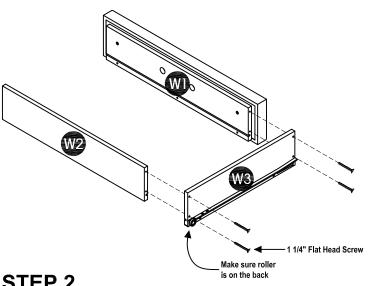


STEP 1


Attach Side Part (W3) to Front Part (W1) and Back Part (W2) with 1 1/4" Flat Head Screws.

STEP 2


Insert Base Part (W5) into the groove.

Attach Side Part (W4) to unit with 1 1/4" Flat Head Screws.

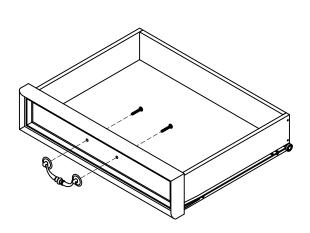

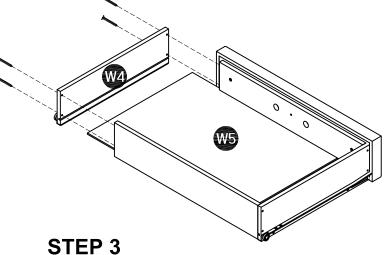

Attach Handle with Machine Screws (Short).

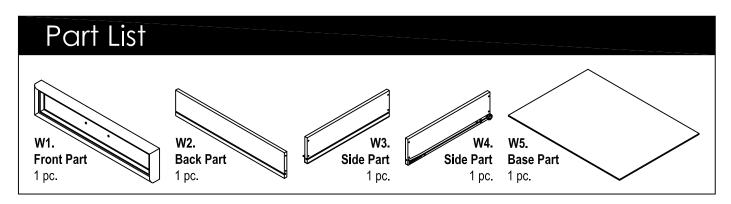


Assembly Instructions 13/14


I. IF A DRAWER DOES NOT ALIGN

STEP 1

Loosen slighty the upper screws.

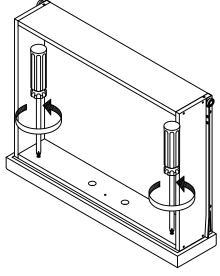

 
STEP 2



Insert the drawer into the main body, then adjust the drawer front panel left or right and up or down, until the drawer gaps look proportional.

II. IF A DRAWER ALREADY ALIGNS

Pull out drawer slowly. Lock the drawer front panel into position with 3/4" Flat Head Screws.

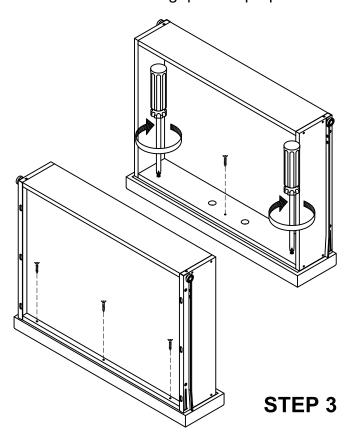


Pull the drawer open slowly and tighten the upper screws. Make sure the front panel does not move and lock the drawer front panel into position with 3/4" Flat Head Screws.

Assembly Instructions 14/14

IMPORTANT NOTICE

* If the magnetic door catches are too strong and the door difficult to open, the magnetic power can be reduced and the door made easier to open by doing the following:

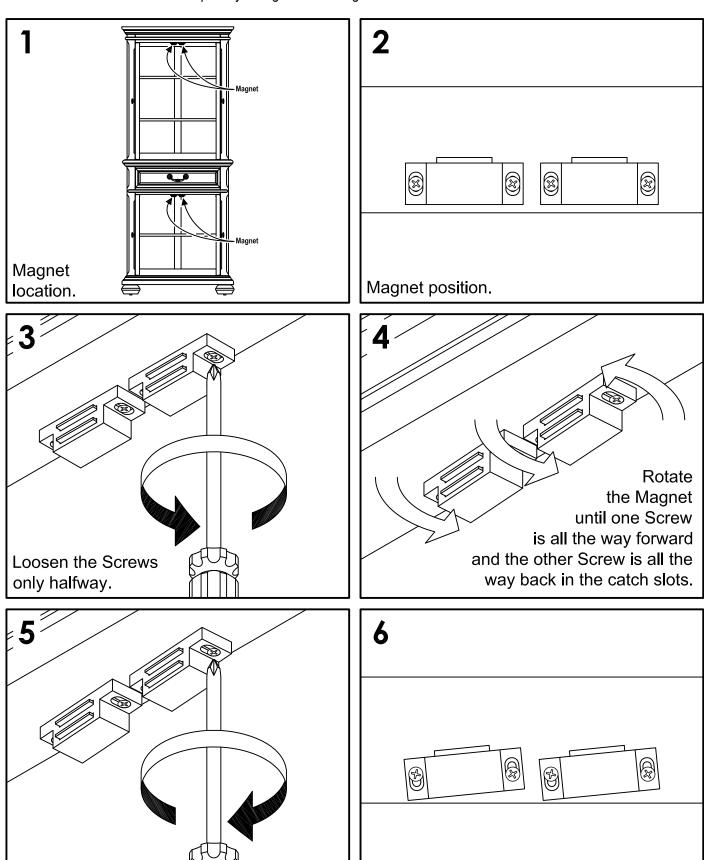

New position.

Tighten the Screws.

VERY IMPORTANT!!

CARE INSTRUCTIONS

NEVER-

USE GLASS CLEANERS ON FINISHED FURNITURE. AMMONIA WILL CHEMICALLY ATTACK THE LACQUER.

NEVER-

ALLOW LIQUIDS OF ANY KIND TO REMAIN ON THE FURNITURE. ABSORPTION CAUSES WOOD TO WARP AND SPLIT AND FINISHES TO DELAMINATE.

DO NOT WRITE DIRECTLY ON SURFACE.



PREVENT MARKING

DO NOT PLACE IN DIRECT SUNLIGHT.



PREVENT FADING

DO NOT USE COMMERCIAL WAXES AND POLISHES.



PREVENT YELLOWING DO NOT PLACE HOT OBJECTS ON SURFACE.




PREVENT FINISH DAMAGE

DO NOT
USE
RUBBER (
BASED
PLACE MATS



TO CLEAN

USE A SOFT CLOTH MOISTENED IN LEMON OIL POLISH OR LUKEWARM SOAP AND WATER, THEN BUFF WITH A DRY CLEAN CLOTH.

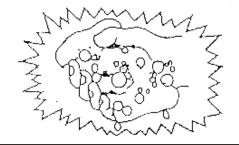

Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If this product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

www.homestyles-furniture.com/customer_service

Home Styles Consumer Assistance: www.homestyles-furniture.com, servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319