


PREPARATION

1. Record your model number for future reference.
2. **DANGER: Risk of electric shock.** To avoid electric shock, the power must be turned off at the circuit breaker or fuse box before beginning the installation procedure.
3. **DANGER: Risk of electric shock.** To avoid electric shock, the outlet box must be properly grounded.
4. **Important Information.** Inspect the product for any damages. This product is for indoor use only. Observe all local codes.


Please see next page for a larger installation image

TOOLS AND MATERIALS NEEDED

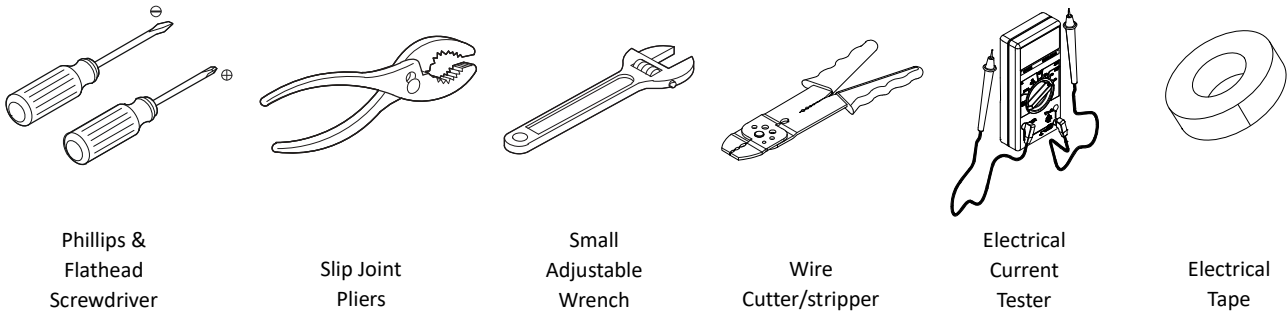

FIXTURE INSTALLATION

1. Remove the fixture and parts bag(s) from the carton. Put them onto a clean and soft cloth to protect finish. Confirm all parts are included.
2. Attach mounting plate (B) onto outlet box with screws (C).
3. **NOTICE:** To avoid short circuit, make sure wires are not exposed. Fasten fixture green or bare ground wire to the green or bare copper wire in outlet box with wire nut (A) or fasten onto ground screw (M) on mounting plate.
4. **NOTICE:** To avoid short circuit, make sure wires are not exposed. Fasten fixture white wire to the white wire in outlet box with wire nut (A). Wrap the wire connector with electrical tape so that the tape seals the end of wire nut (A), see diagram.
5. **NOTICE:** To avoid short circuit, make sure wires are not exposed. Fasten the fixture black wire to the black wire in outlet box with wire nut (A). Wrap the wire connector with electrical tape so that the tape seals the end of wire nut (A), see diagram.
6. Press together the two connectors (D).
7. Tuck wires carefully inside outlet box. Attach the canopy (F) onto mounting plate (B) by securing screws (E).
8. **NOTICE:** Product will operate with or without liquid. Pour liquid into the glass (K), 90% full is recommended. For recommended liquids visit www.kohler.com.
9. Seal the glass (K) by securing rubber ring (J) and cap (I) firmly. Next install glass (H) onto glass holder (G) by turning until the connection is tight and be careful not to over-tighten.
TO AVOID SHORT CIRCUIT AND RISK OF ELECTRIC SHOCK, DO NOT FILL GLASS BALL NEAR ELECTRIC SOCKET OR ELECTRICAL JUNCTION POINT.
10. Restore power to circuit at breaker or fuse box.

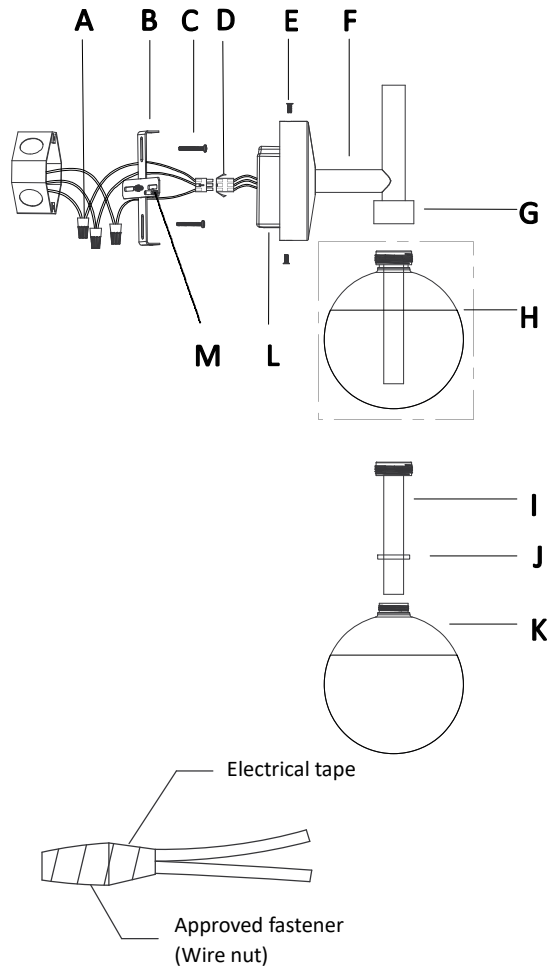

WARNING: For dimming of this fixture, only compatible dimming devices as outlined on the spec sheet are allowed. Visit www.kohler.com to view the spec sheet.

CLEANING

Please clean fixture with a soft and dry cloth ONLY. Clean glass with a mild soap.

