

KINGSTON

REPAIR KIT FOR
KINGSTON MEMORY CARDS

CONTENTS



REPAIR PROCEDURE

1. Remove the Kingston memory card from the device.
2. Carefully remove the top cover of the memory card.
3. Inspect the internal components for damage.
4. Replace any damaged components with the corresponding parts from the repair kit.
5. Reassemble the memory card and test it in the device.



WARNING:
Do not touch the internal components of the memory card. Only qualified technicians should perform repairs. Use the repair kit only for the purpose of repairing the memory card.