









Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products can be requested within the 1-year warranty period. Proof of purchase must be provided. This includes the date of the purchase as well as photos of the product defect. Photos are used to determine the cause of the defect and to provide future quality control. The request will be reviewed, and replacement pieces will be sent at our discretion. For warranty information, visit <https://tiny.cc/SunnydazeWarranty>


If you have any questions, comments or concerns, feel free to contact us by phone at 833-982-1977, by email: customerservice@sunnydazedecor.com, or via our contact us page at <https://tiny.cc/SunnydazeContact>

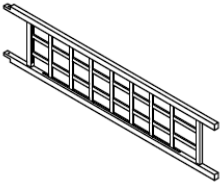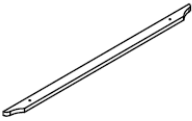DSL-698 Instructions


PARTS:

					
A (2PCS)	B (2PCS)	C (7PCS)	D (4PCS)	Ø 6X45MM 1 (4PCS)	Ø 3.5X35MM 2 (22PCS)


Step 1: Attach the two headers (Part B) to the top of the two side lattices (Part A). Use the four included bolt sets (Hardware 1) to attach the two headers to the side lattices as shown in the diagram to the right.

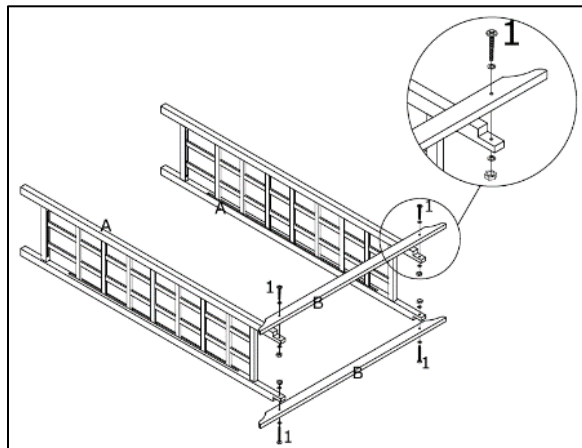

Step 2: Attach the seven slats (Part C) to the top of the headers (Part B). Use 14 of the included screws (Hardware 2) to fasten the slats to the top of the headers.

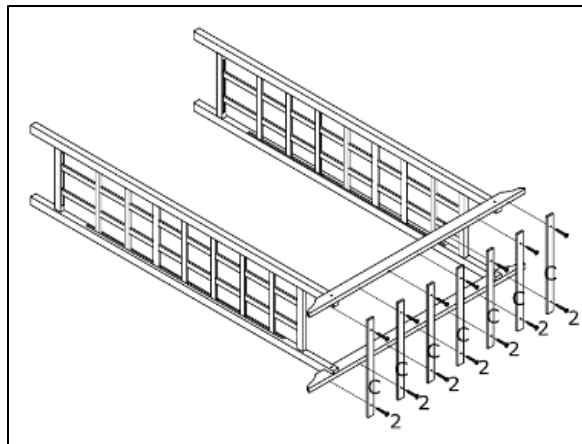

Step 3: Attach the four support brackets (Part D) to the headers (Part B) and the side lattices (Part A) as shown. Use the remaining eight screws (Hardware 2) to fasten the support brackets to the headers and side lattices.

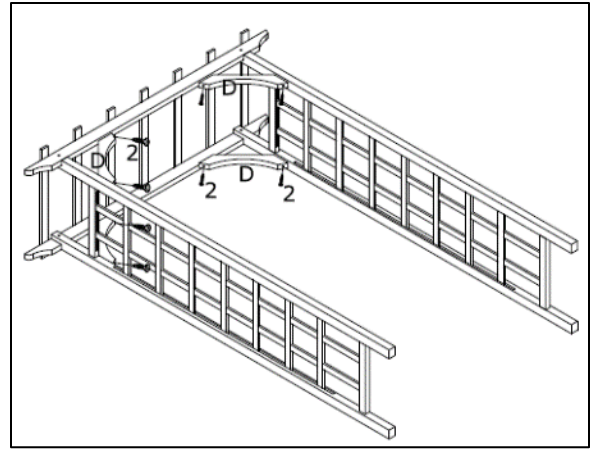

Step 4: Stand the garden arch up and move it to your preferred location.

