


SIMPLIHOME

Banting / Devlin / Argyle

Mid Century 72 inch Wide TV Stand

Model # AXCBAN-08

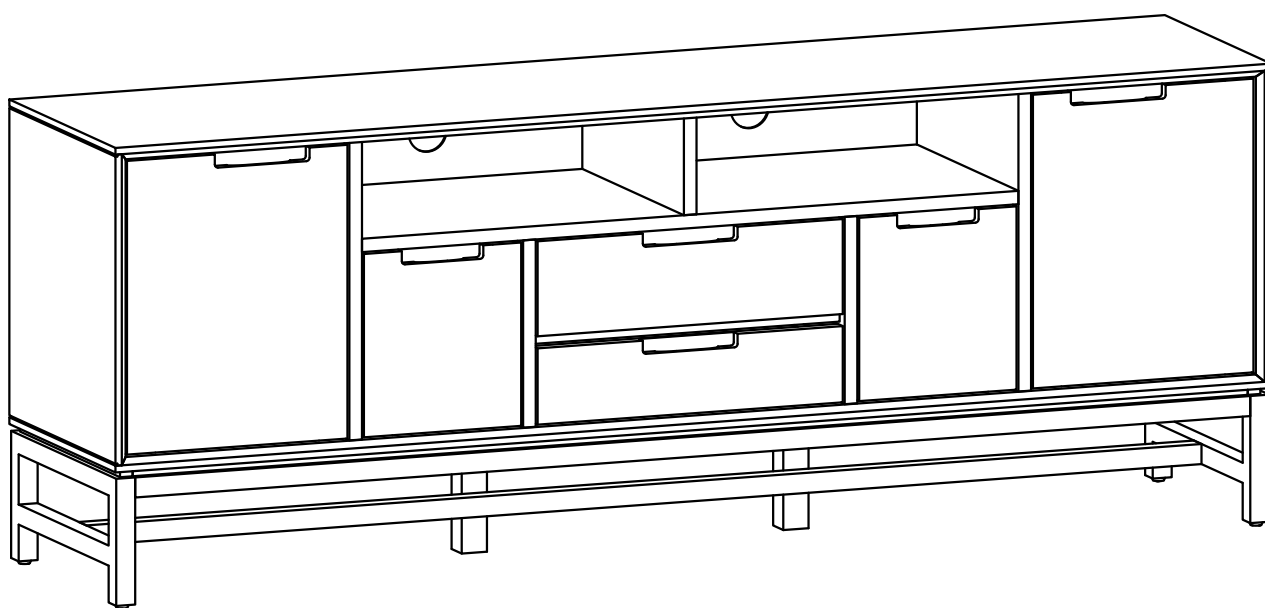

SIMPLIHOME

Great quality is a right.

Thank you for shopping with Simpli Home,
America's top brand for high-value furniture.



It's time to register your product warranty.

It's quick and easy. And you'll be happy you did.



- ✓ Activate your **1-year** warranty
- ✓ Automatic entry to win a **\$500** gift certificate
- ✓ Earn instant rewards and **save**

simpli-home.com/product-registration

SIMPLIHOME

Review your product and collect rewards!


Thank you for your purchase! We hope you enjoy it. We'd love your feedback. Please share a review and get instant rewards!




simpli-home.com/product-review



Share photos and get your cash back!

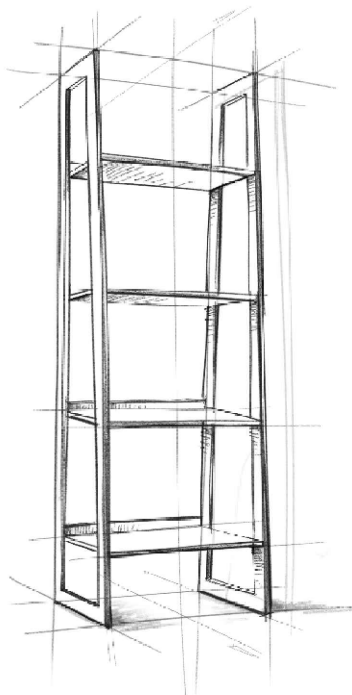

Send us images or share them on social and qualify for instant rewards. You may even receive store credit on your entire purchase!

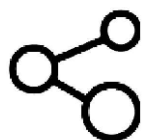

simpli-home.com/share-images

SIMPLIHOME®

For Fastest Customer Service:



1. Open your phone's camera.
2. Point your phone's camera at the QR code to scan.
3. Click on the pop up.
4. You'll be taken to our customer service page.
5. Fill the form with your order information and issue.
6. Submit form.
7. A customer service associate will contact you.

Other ways to contact us...



Email Us

customerservice@simpli-home.com



Visit Us

Visit our site directly at
www.simpli-home.com



Call Us

1-866-518-0120
Monday to Friday
9am to 5pm EST

***If you've purchased from a retailer and you wish to return the product, please contact the retailer directly.**

IMPORTANT : Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

Safety Information

CAUTION: Injuries and damage can occur from furniture tip over if product is not properly anchored to the wall. Use the Furniture Anti-Tipping Restraint provided with the product. Consult our Assembly instructions for help.

If the Furniture Anti-Tipping Restraint kit is not in the box, please contact our customer service department in order to obtain another kit before using the furniture.

Identify all the parts and hardware. Do not discard of the packaging until you have checked that you have all of the parts and hardware required. Hardware package may have spare parts.

WARNING: This item contains small parts which can be swallowed by children and pets. Keep children and pets away during Assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets. We recommend that you assemble this unit on a carpeted floor to avoid scratches. If using power tools, set the tool to low torque to avoid damage.

May require 2 people for ease of Assembly.

Care & Maintenance

This furniture is designed for indoor use.

Damage to furniture can come from temperature changes in relative humidity (RH) in our homes. Humid air oxidizes metal which results in rusting, corrosion, tarnishing and roughness. Wood absorbs water as relative humidity rises and falls, and in doing so it swells and shrinks.

To protect against the humidity effect, the metal is powder coated. The powder coat layer protects the metal from oxidizing, corrosion, tarnishing and scratching and keeps it looking good for years to come. The wood is sealed and lacquered to protect against humidity.


To help protect your furniture, follow these steps:




- Use a humidifier, preferably one with an automatic control system that can sense the humidity level and adjust itself accordingly
- Dust with soft dry cloth
- Wipe up spills promptly
- Clean with a dry cloth
- Do not use abrasive cleaners, chemical solvents, strong detergents, cleaners with bleach, and furniture polish
- Use soft felt base coasters, placemats to help prevent scratches
- Keep furniture out of direct sunlight, which can cause cracking or roughness on the protective layer
- If it can be avoided, do not put furniture near heating vents
- Keep the furniture 3 to 4 inches away from the wall, giving heat and air space to circulate.

WARNING

The maximum diagonal CRT television screen size is 25 inch to 27 inch (63.50 cm to 68.58 cm). For use with televisions weighing 220 lbs or less. Using larger or heavier televisions may cause instability or tip over which can lead to serious injury or even death.

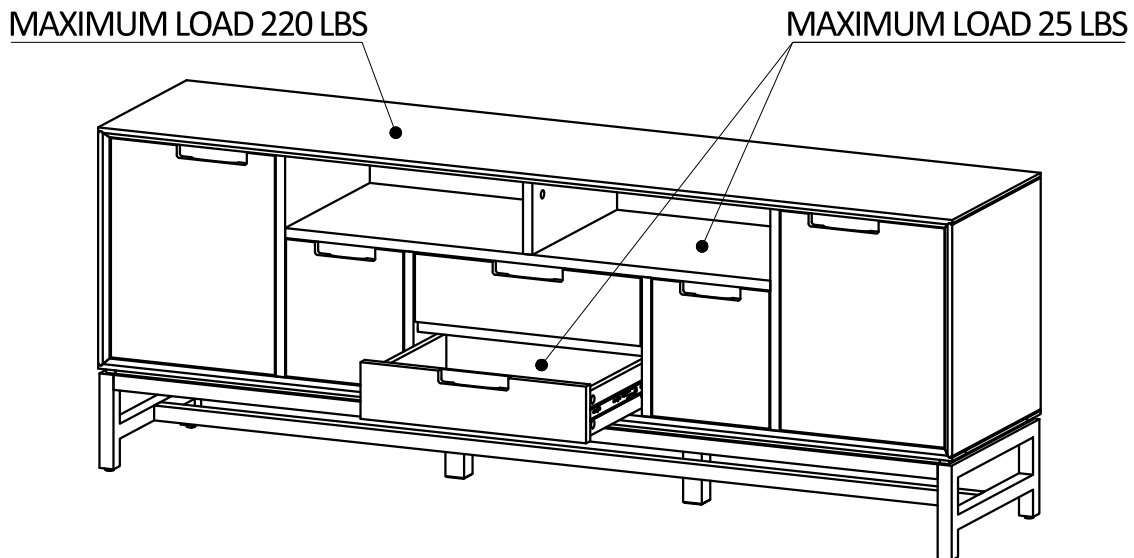The recommended maximum width of the television intended for use is 80 inch (203.2 cm).




-  **WARNING** Do not place toys, food, etc. on the top shelves or upper drawers. Serious injury or death may occur when children climb on furniture. A remote control or items placed on the furniture may encourage a child to climb on the furniture and as a result make it top-heavy and cause it to tip over on the child.
-  **WARNING** Do not place a TV that exceeds the weight limits or size guidelines shown in the instructions specified for the furniture. Do not overload shelves or place heavy items on top shelves or drawers. Improper use of furniture to support TVs may result in serious injury or death.
-  **WARNING** Do not relocate audio and/or video equipment to furniture not specifically designed to support audio and/or video equipment. Do not move furniture without shelves or drawers unloaded. Furniture can collapse or tip over onto a child and cause physical injury or death.

This TV Stand does not come with legible instructions pertaining to the risk of fire and electric shock that is associated with the use of electrical components such as operation, user-maintenance, loading, storage and as applicable electrical issues including grounding or double-insulation. Any use of this item other than that recommended by the manufacturer in this manual may cause fire, burns, electric shock and/or serious injuries or death.


Part Description

A

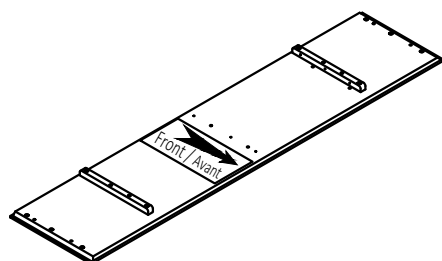


TOP
QTY 1

BL

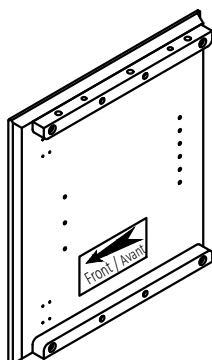


LEFT SIDE
QTY 1

BR

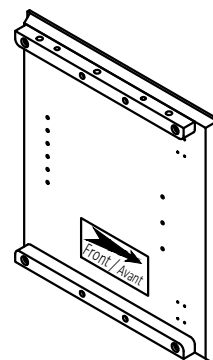


RIGHT SIDE
QTY 1

C

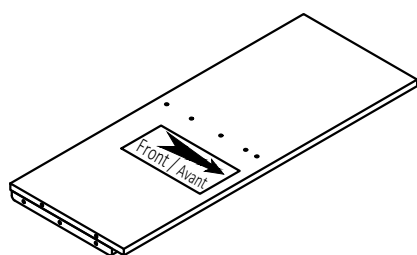


TOP SHELF
QTY 1

D

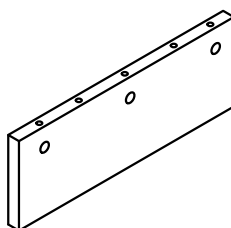


TOP DIVIDER
QTY 1

EL

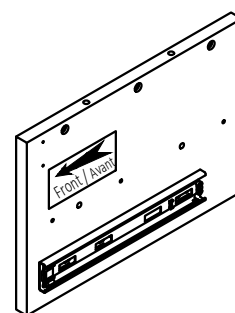


LEFT MIDDLE DIVIDER
QTY 1

ER

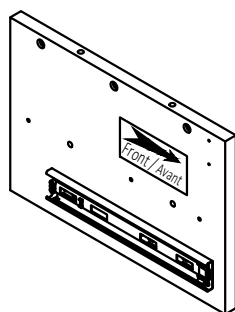


RIGHT MIDDLE DIVIDER
QTY 1

F

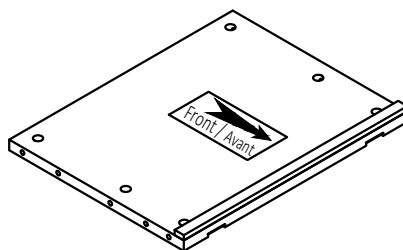

MIDDLE SHELF
QTY 1


G

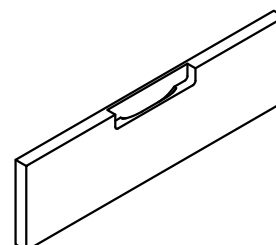

FLIP DOWN DOOR
QTY 1


Part Description

HL

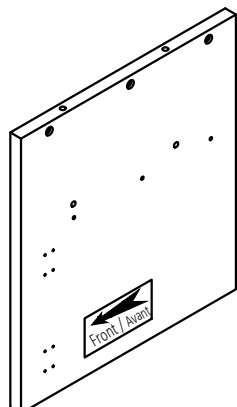


LEFT DIVIDER
QTY 1

HR

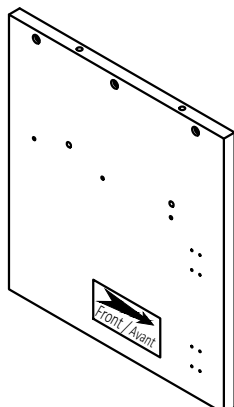


RIGHT DIVIDER
QTY 1

I

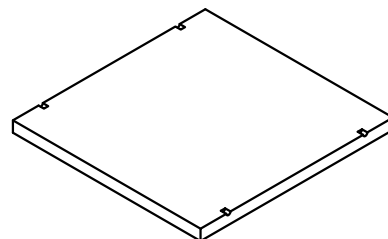


SHELF
QTY 2

J

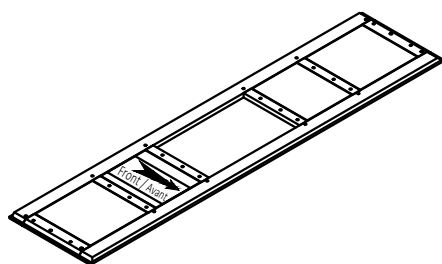


BOTTOM SHELF
QTY 1

K

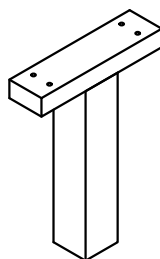


BOTTOM SUPPORT LEG
QTY 2

L

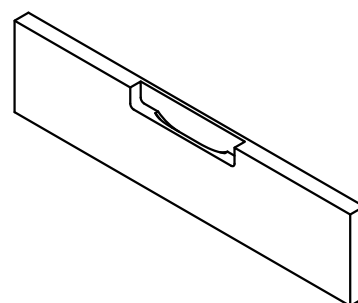


DRAWER FRONT
QTY 1

ML

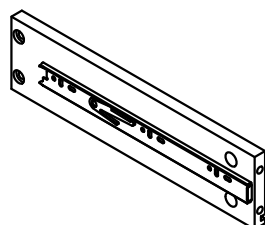


LEFT DRAWER SIDE
QTY 1

MR

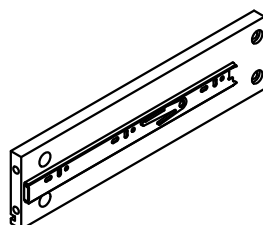

RIGHT DRAWER SIDE
QTY 1


N

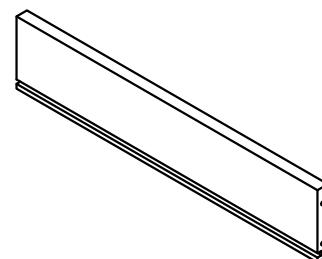

DRAWER BACK
QTY 1


Part Description

O

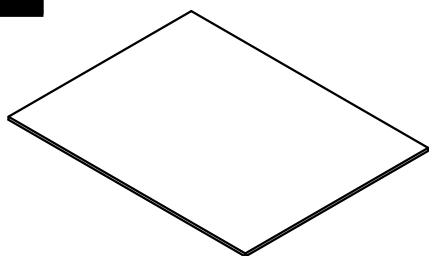


DRAWER BOTTOM
QTY 1

PL

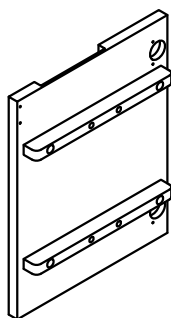


LEFT LARGE DOOR
QTY 1

PR

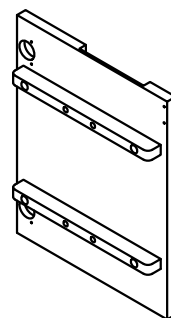


RIGHT LARGE DOOR
QTY 1

QL

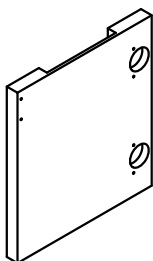


LEFT SMALL DOOR
QTY 1

QR

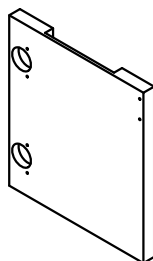


RIGHT SMALL DOOR
QTY 1

RL

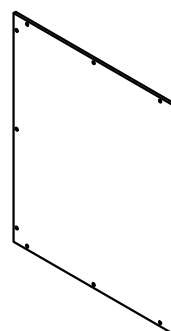

LEFT BACK PANEL
QTY 1


RR

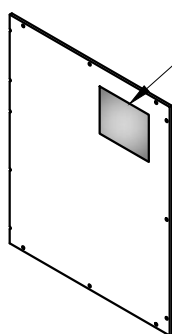

RIGHT BACK PANEL
QTY 1


Warning
Label

R1

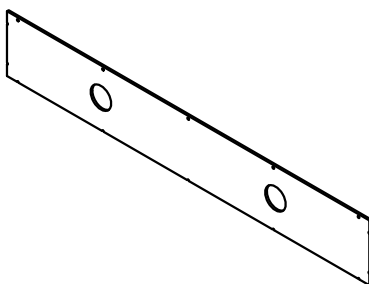


TOP BACK PANEL
QTY 1

R2

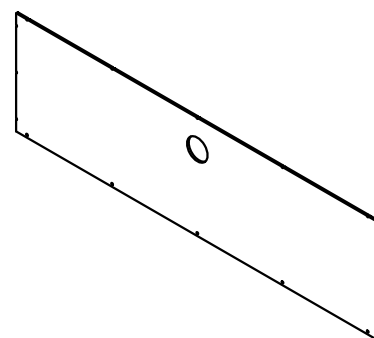


BOTTOM BACK PANEL
QTY 1

S

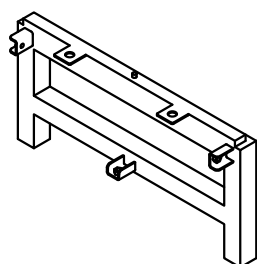


LEG (L&R Same)
QTY 2

T

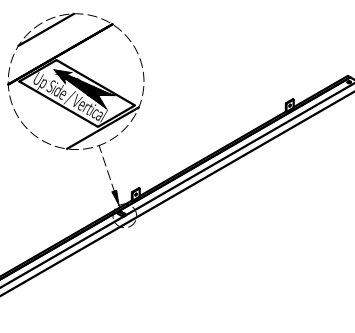

LEG UPPER CONNECTOR
QTY 2


U

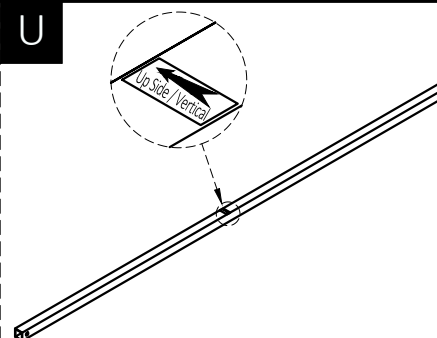

LEG LOWER CONNECTOR
QTY 1

Hardware Description

 1




WOOD DOWEL
Ø8 X 30mm
QTY 36

2




ALLEN KEY
QTY 1

 3




CAM LOCK PIN
CAM LOCK
QTY 13 SETS

 4




ALLEN KEY SCREW
M6 X 30mm
QTY 37

 5



ALLEN KEY BOLT
M6 x 30 mm
QTY 12

 6




ALLEN KEY BOLT
M6 x 15 mm
QTY 10

7




LOCK WASHER
Ø10 / Ø6.5 x 1.5 mm
QTY 10

 8




WASHER
Ø16 / Ø6.5 x 1.5 mm
QTY 16

 9




PHILLIPS SCREW
ROUND HEAD
M4 X 15mm
QTY 37

10

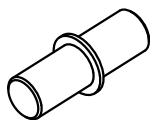


SHELF SUPPORT
QTY 12

11

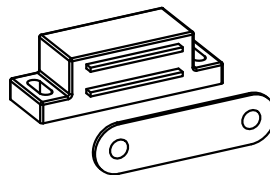

MAGNET AND PLATE
QTY 6 SETS

 
12



PHILLIPS SCREW
M3 X 15mm
QTY 24


Hardware Description

13

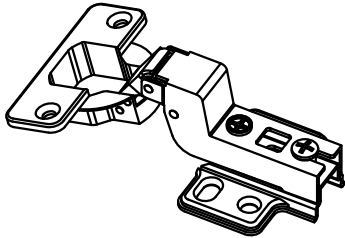


ADJUSTABLE HINGE
QTY 8 SETS

 14




PHILLIPS SCREW
M3.5 X 15mm
QTY 48

15

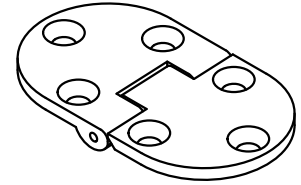


HINGE
QTY 2

 16




PHILLIPS SCREW
M3.5 X 12mm
QTY 12

 


17




PHILLIPS SCREW
M4 X 30mm
QTY 8

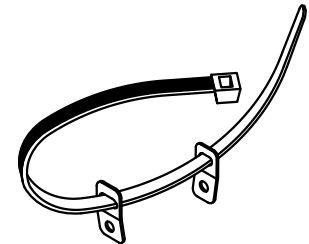18





- a.  M4 X 25mm - QTY 2
(1 is extra)
- b.  M4 X 15mm - QTY 1
- c.  M4 X 25mm - QTY 1

FURNITURE TIP OVER RESTRAINT
QTY 1 SET

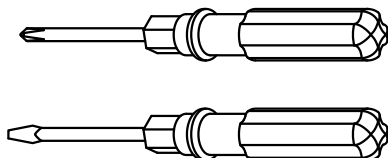


Required -
Flathead screwdriver
Phillips screwdriver
Rubber mallet
Not Included

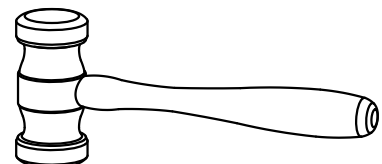

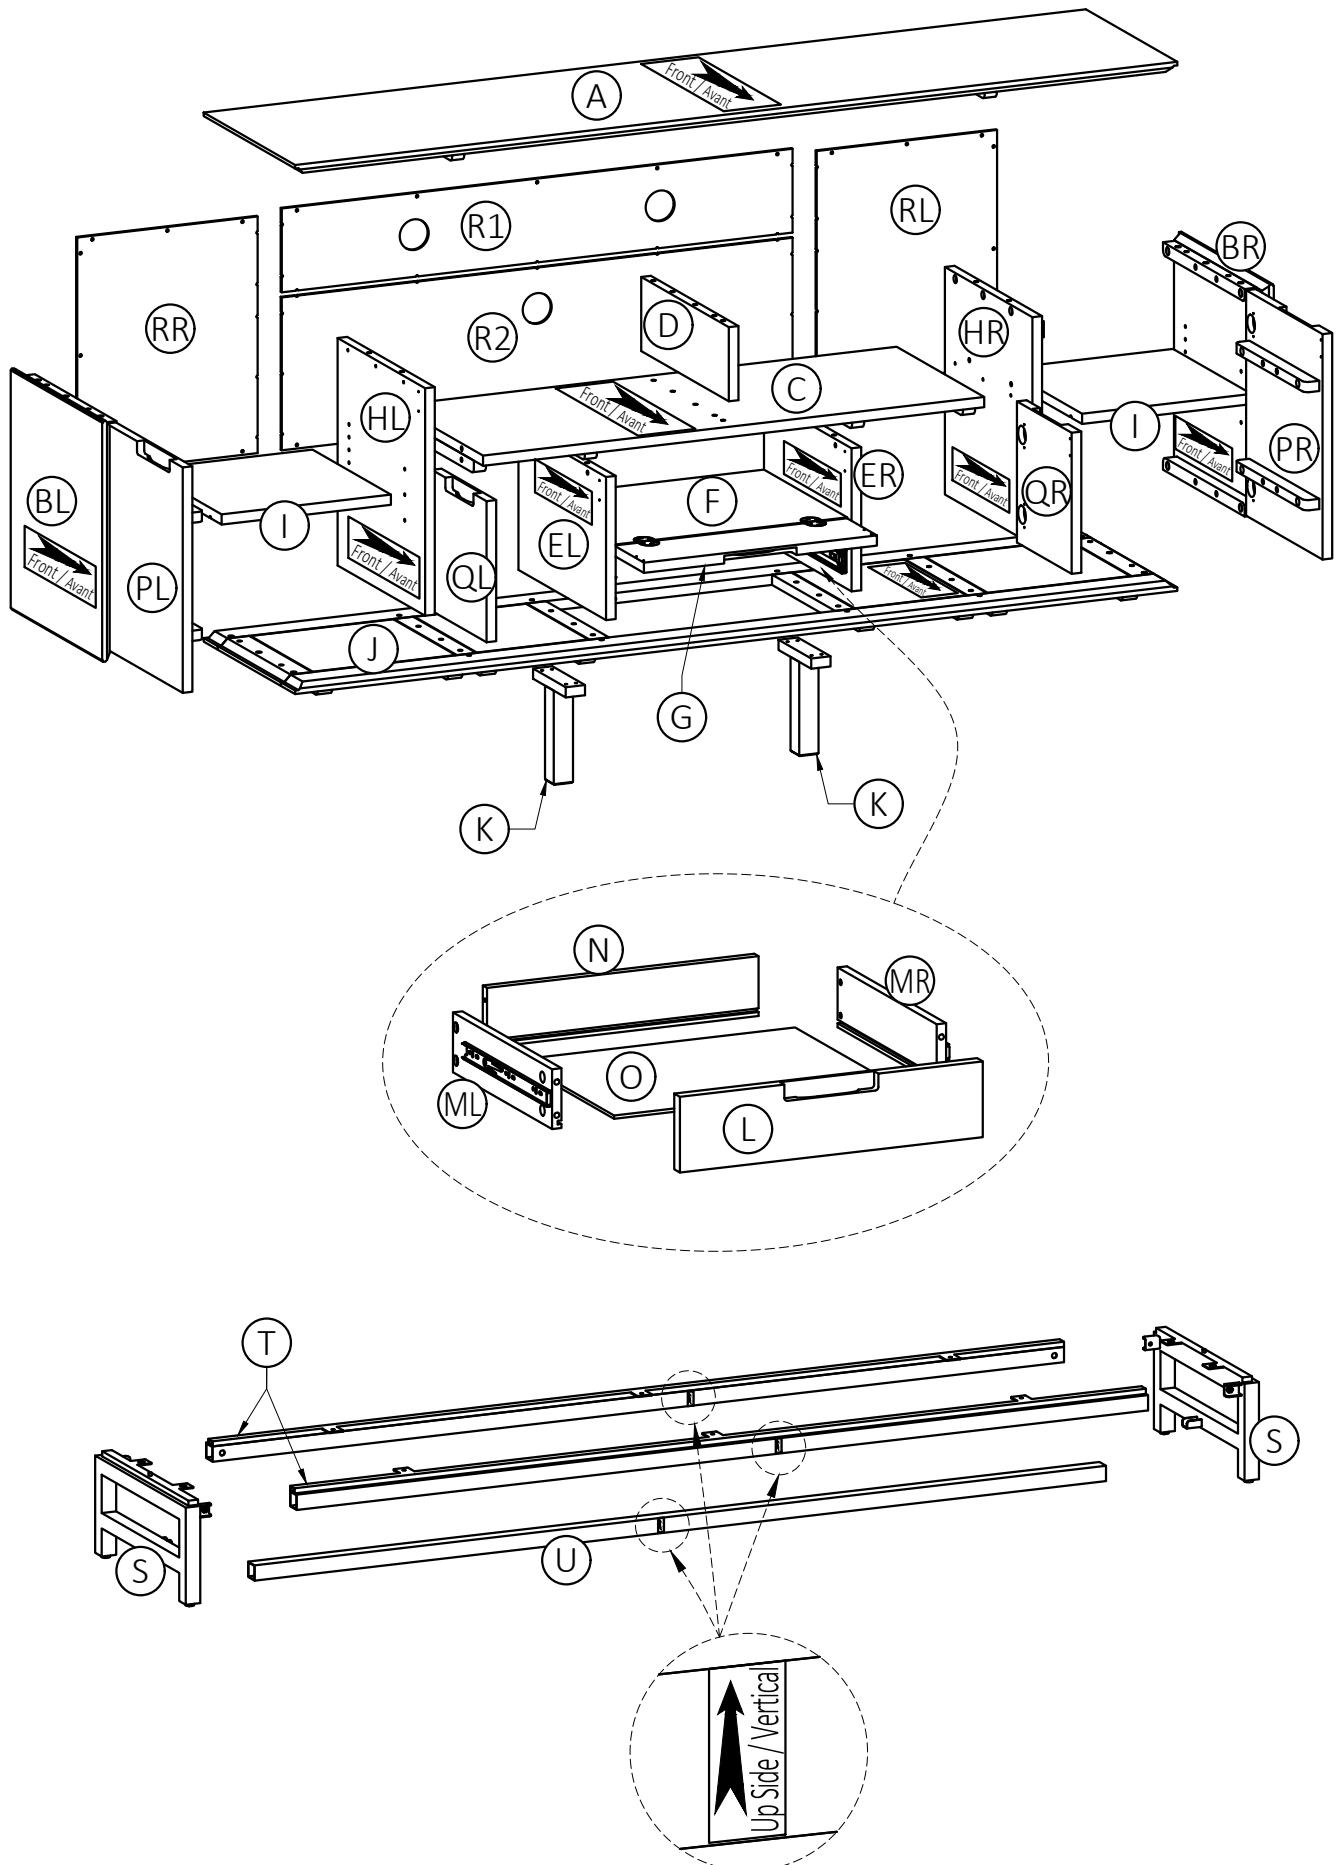


Step 1

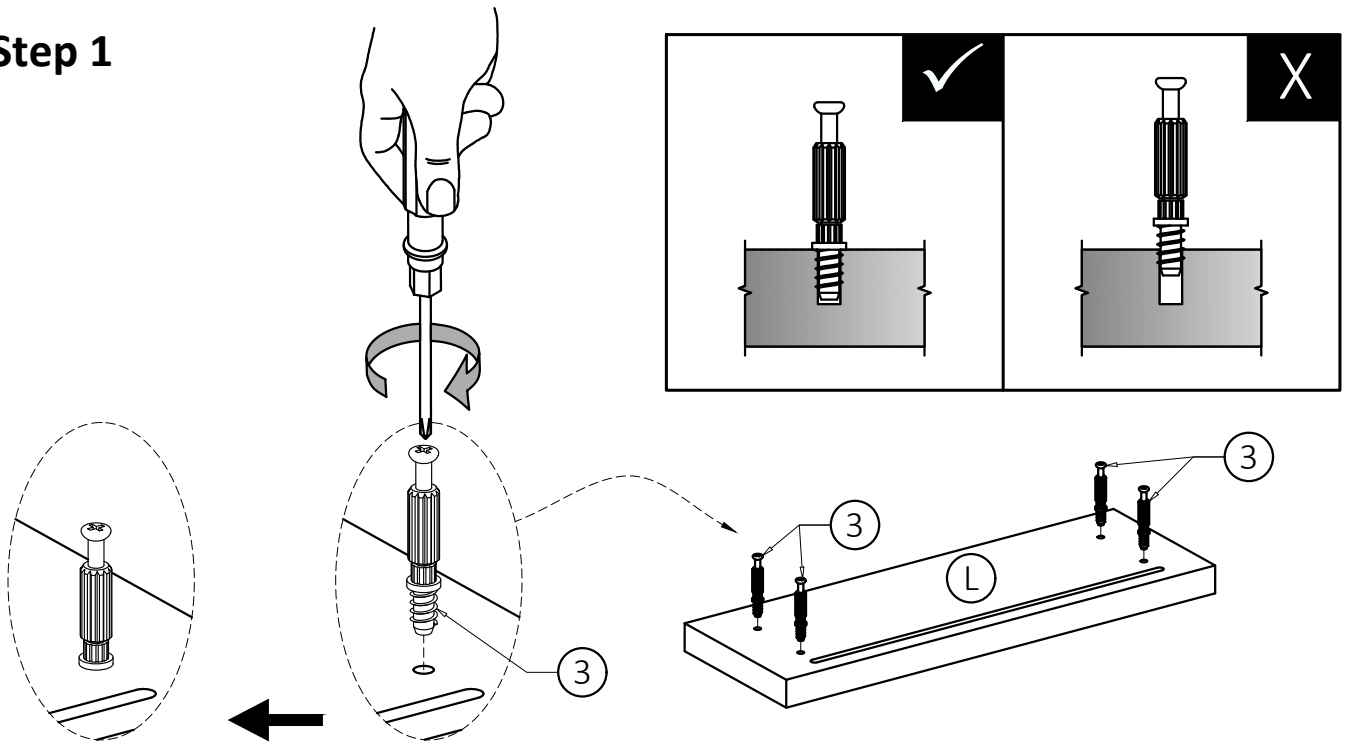


1. Attach four Cam Lock Pins (3) into pre-drilled holes on back of Drawer Front (L).
2. Use Phillips screwdriver to secure Cam Lock Pins. Do not over-tighten.


Step 2

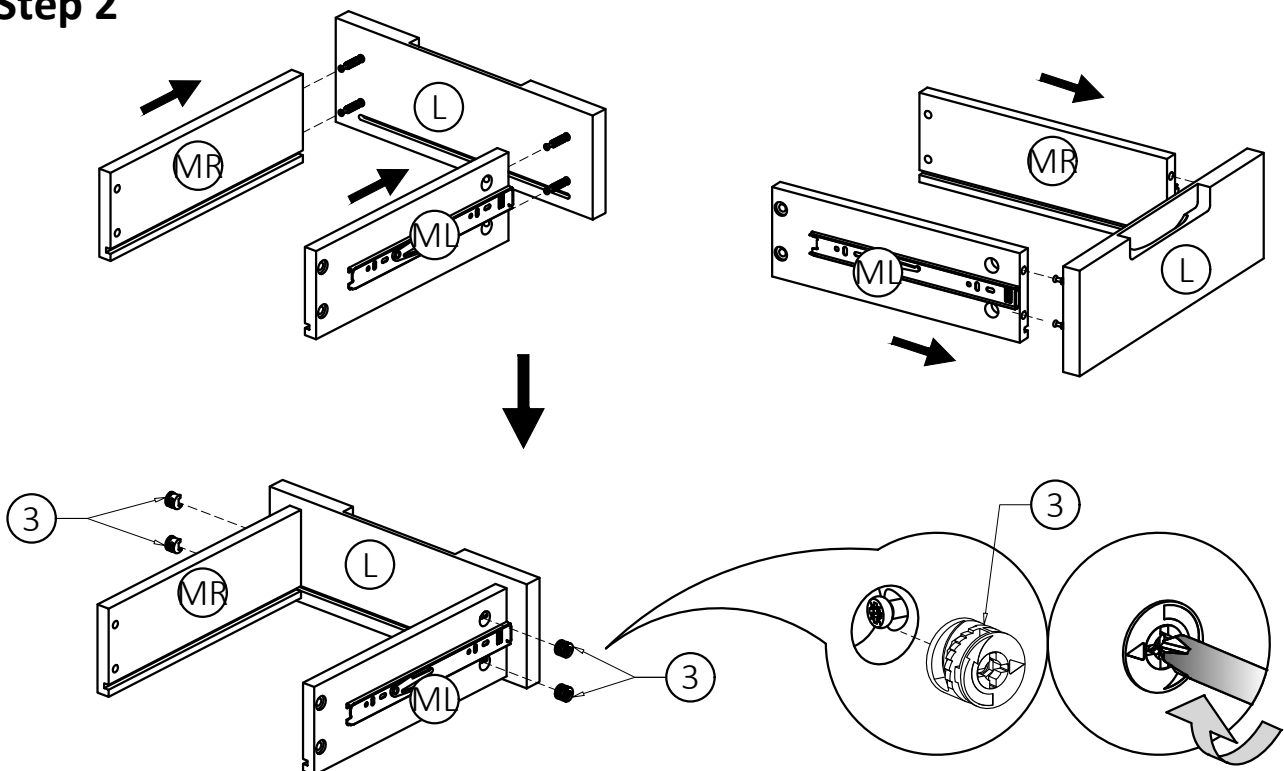

1. Align Cam Lock Pins with guide holes and attach Drawer Sides (ML, MR) to Drawer Front (L).
2. Insert two Cam Locks (3) into guide holes on each Drawer Side (ML, MR).
3. Use Phillips screwdriver to secure Cam Locks. Do not over-tighten.

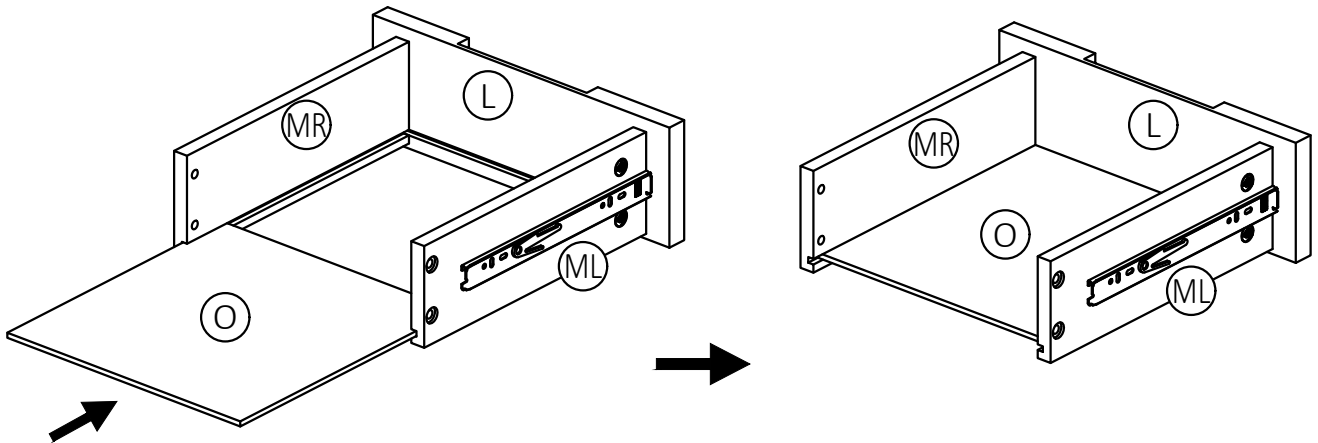
Step 3

1. Slide Drawer Bottom (O) firmly into slots on Drawer Sides (ML, MR) and Drawer Front (L).

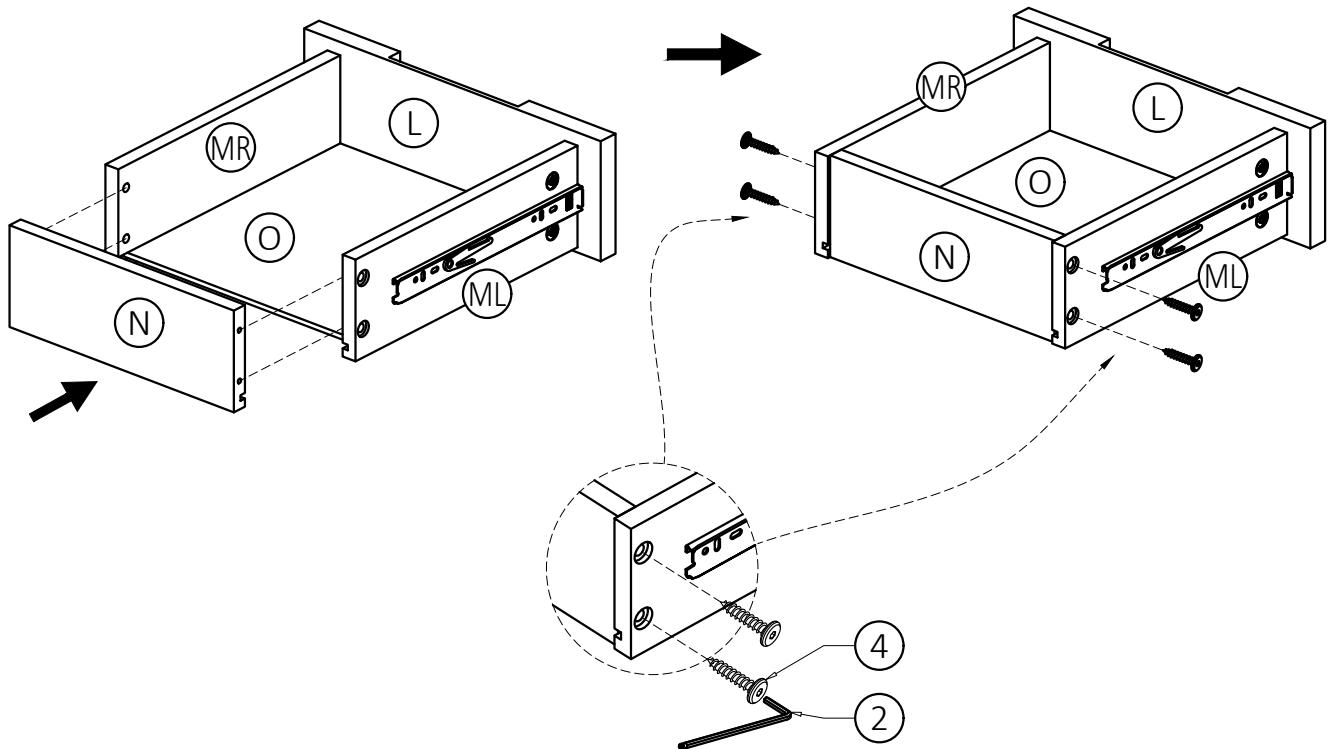Step 4


1. Align Drawer Back (N) with Drawer Bottom (O) and press firmly into slot .
2. Attach Drawer Back using two Allen Key Screws (4) through drilled holes on each Drawer Side (ML, MR).
3. Use Allen Key (2) to tighten Screws. Do not over-tighten

Step 5

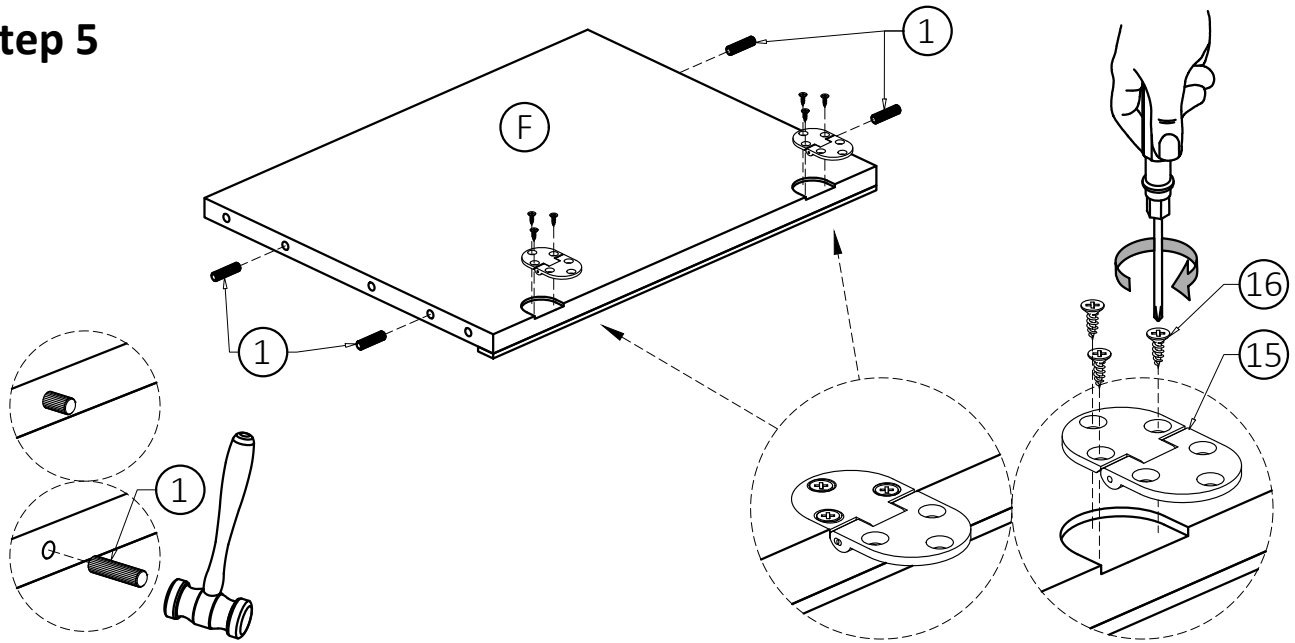


1. Insert four Dowels (1) into guide holes on Middle Shelf (F).
2. Use rubber mallet to tap Dowels (1) into bottom of holes securely. 1/2 length of Dowels should be exposed.
3. Attach Hinge (15) to Middle Shelf (F) by using Phillips Screws (16) to attach Middle Shelf (F) through guide holes.
4. Use Phillips Screwdriver to tighten screws. Do not over-tighten.

Step 6

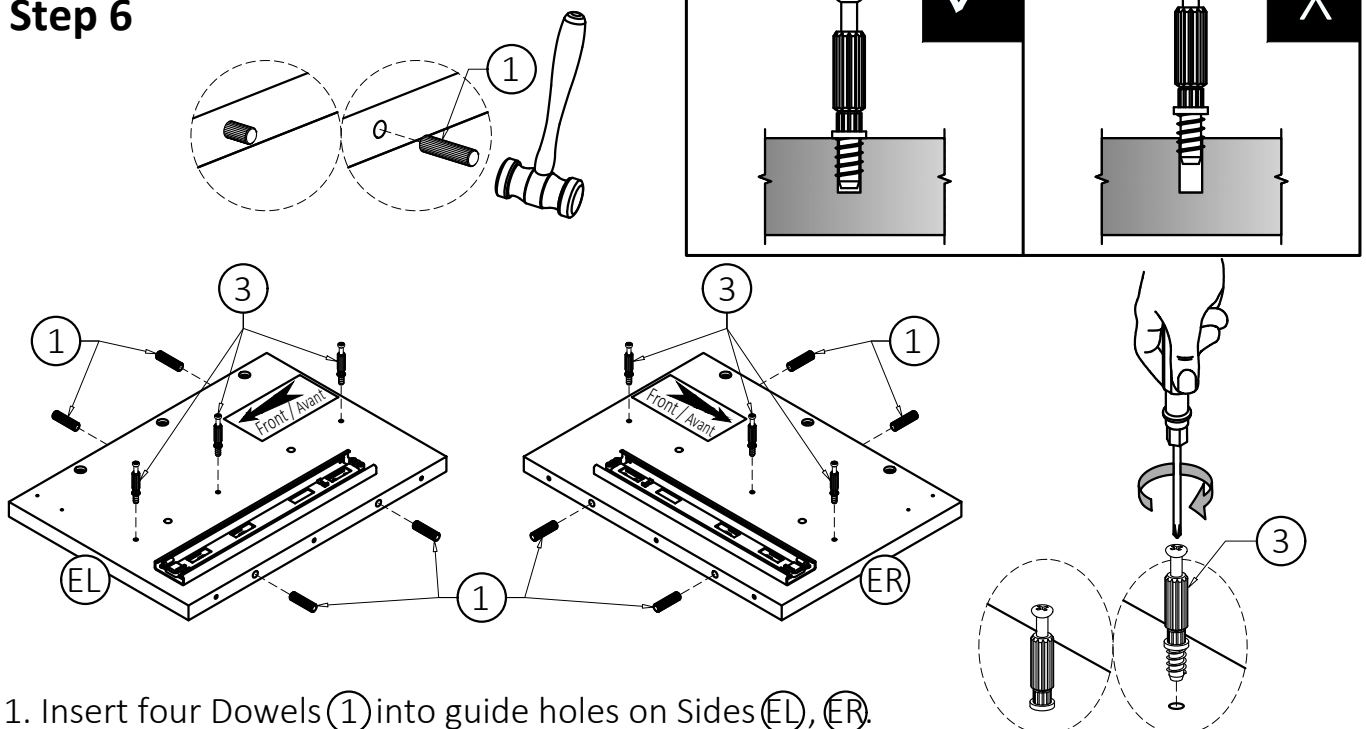


1. Insert four Dowels (1) into guide holes on Sides (EL, ER).
2. Use rubber mallet to tap Dowels (1) into bottom of holes securely. 1/2 length of Dowels should be exposed.
3. Attach three Cam Lock Pins (3) into pre-drilled holes on Sides (EL, ER).
4. Use Phillips screwdriver to secure Cam Lock Pins. Do not over-tighten.

Step 7

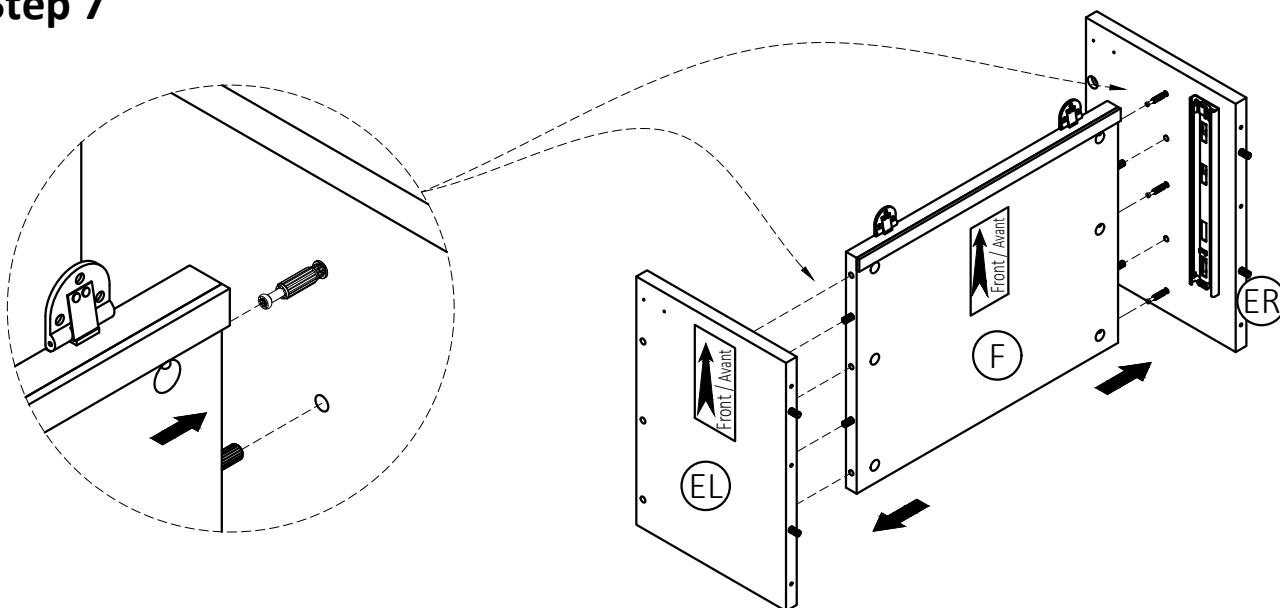


1. Align Cam Lock Pins and Wood Dowels with guide holes and attach Middle Shelf (F) to Dividers (EL, ER).

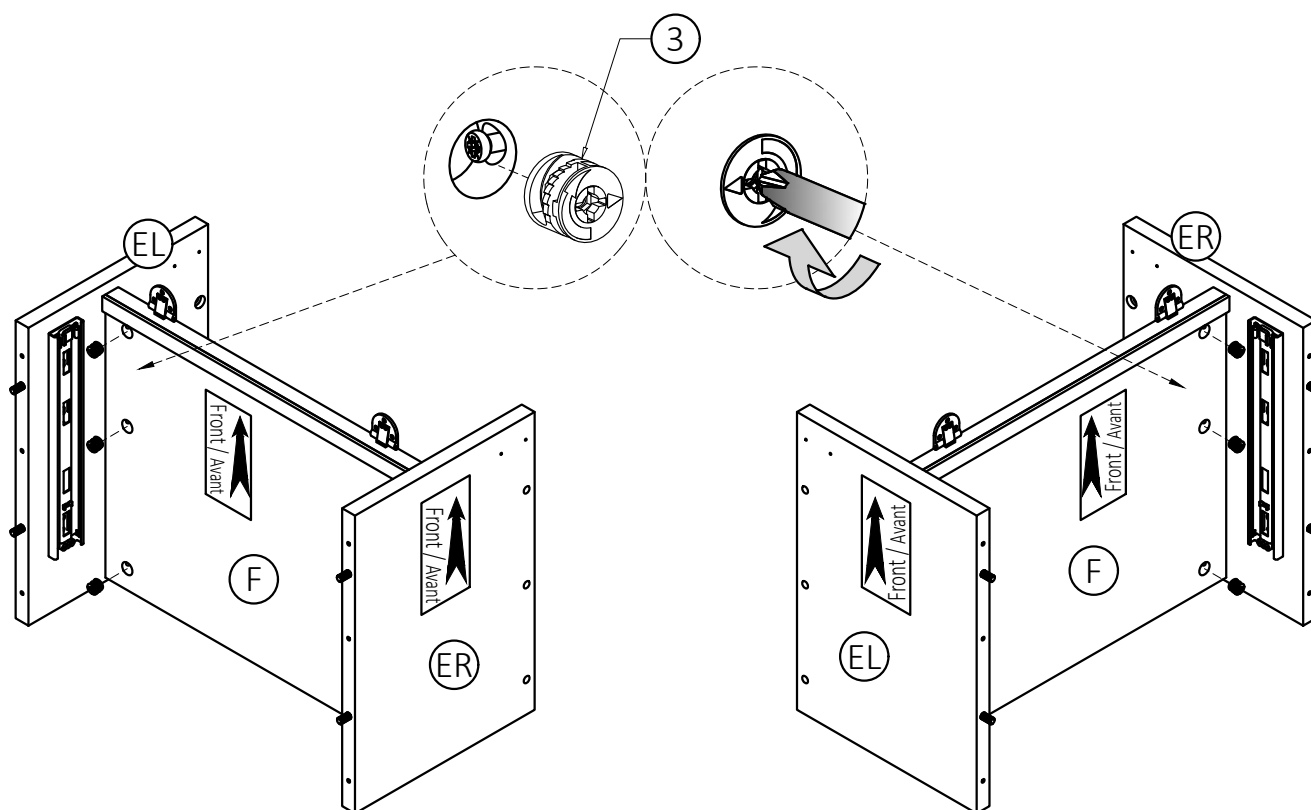


2. Insert six Cam Locks (3) into guide holes on Middle Shelf (F).
3. Use Phillips screwdriver to secure Cam Locks. Do not over-tighten.

Step 8

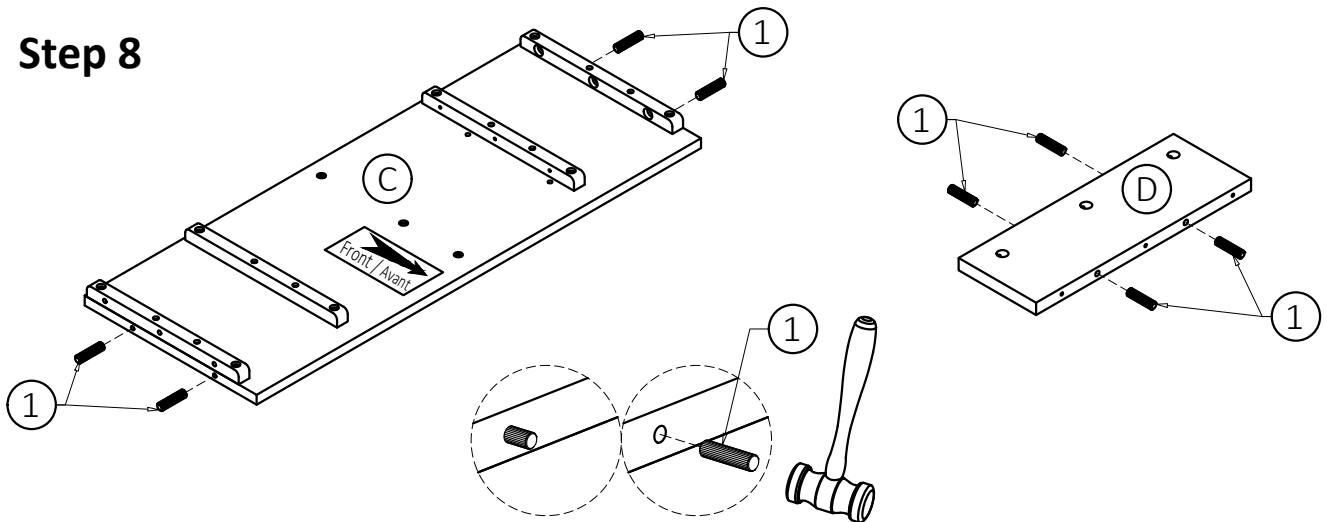


1. Insert four Dowels (1) into guide holes on Top Shelf (C), Top Divider (D).
2. Use rubber mallet to tap Dowels (1) into bottom of holes securely. 1/2 length of Dowels should be exposed.

Step 9

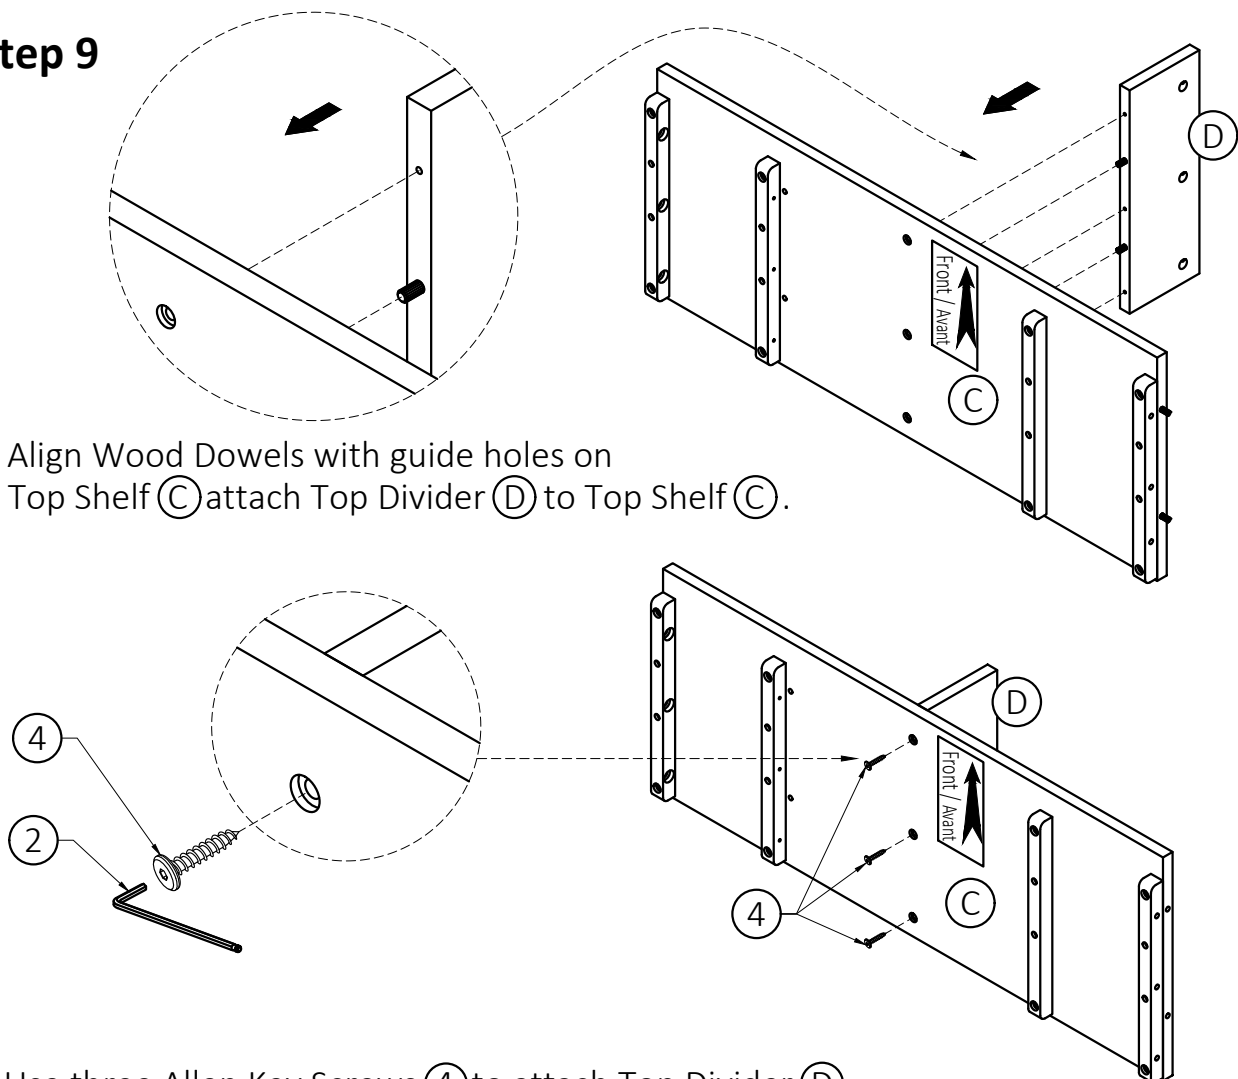


1. Align Wood Dowels with guide holes on Top Shelf (C) attach Top Divider (D) to Top Shelf (C).
2. Use three Allen Key Screws (4) to attach Top Divider (D) through guide holes from Top Shelf (C) to pre-drilled holes of Top Divider (D).
3. Use Allen Key (2) to tighten Screws and Bolts. Do not over-tighten.

Step 10

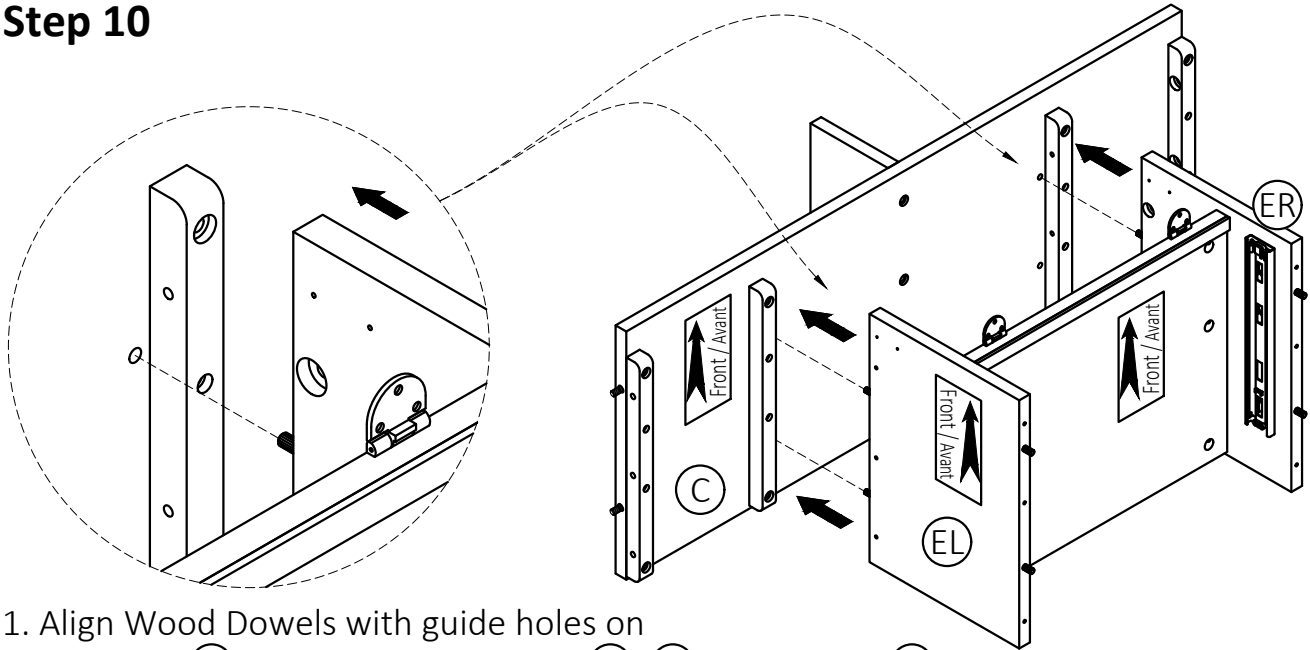


1. Align Wood Dowels with guide holes on Top Shelf (C) attach Middle Dividers (EL), (ER) to Top Shelf (C).

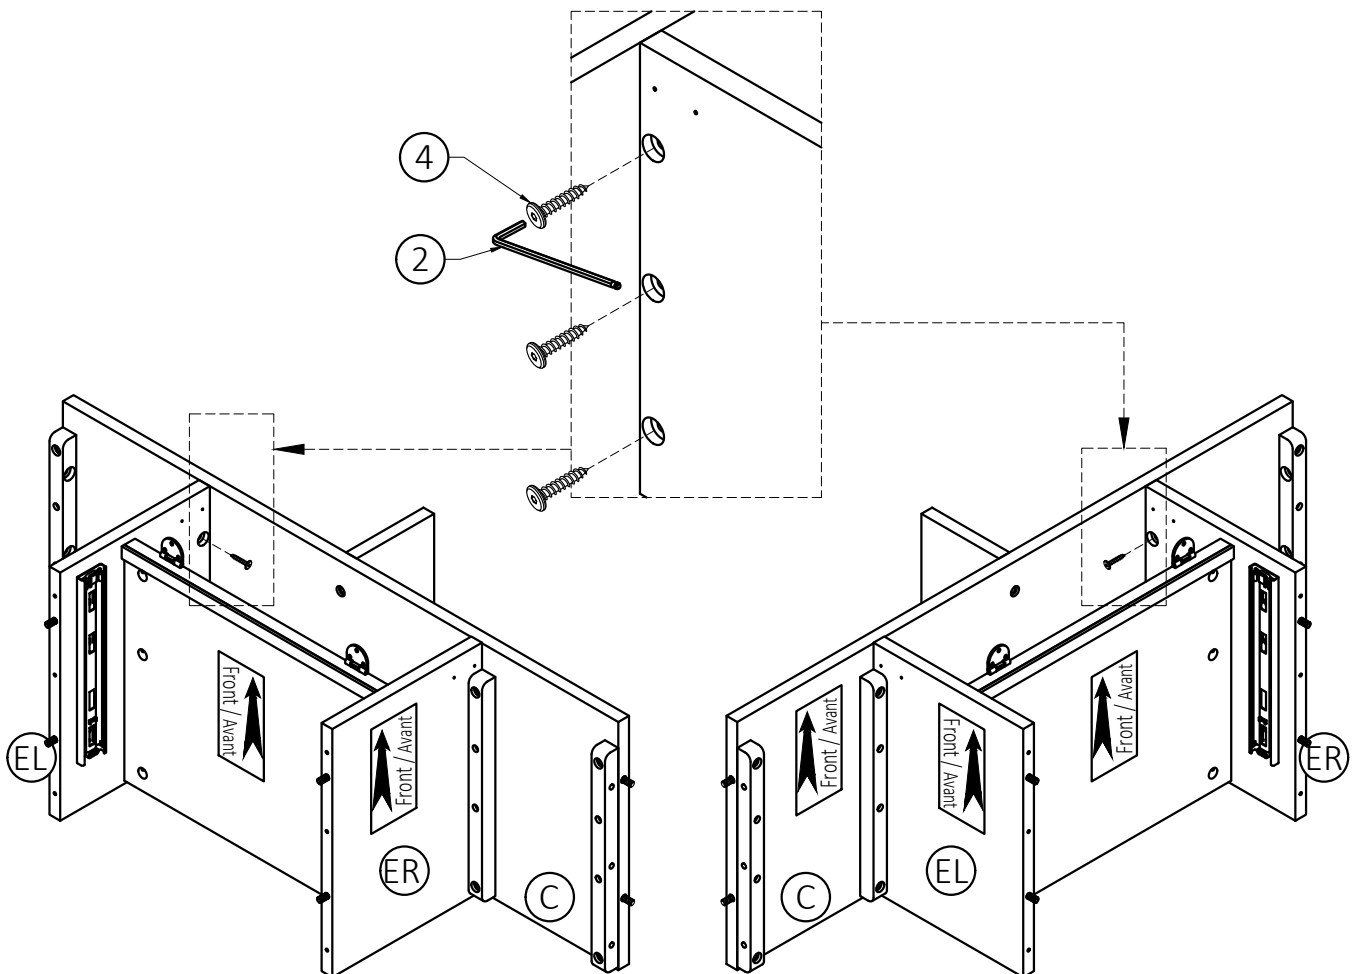


2. Use three Allen Key Screws (4) to attach each Middle Divider (EL), (ER) through guide holes from Middle Dividers (EL), (ER) to pre-drilled holes of Top Shelf (C).
3. Use Allen Key (2) to tighten Screws and Bolts. Do not over-tighten.

Step 11

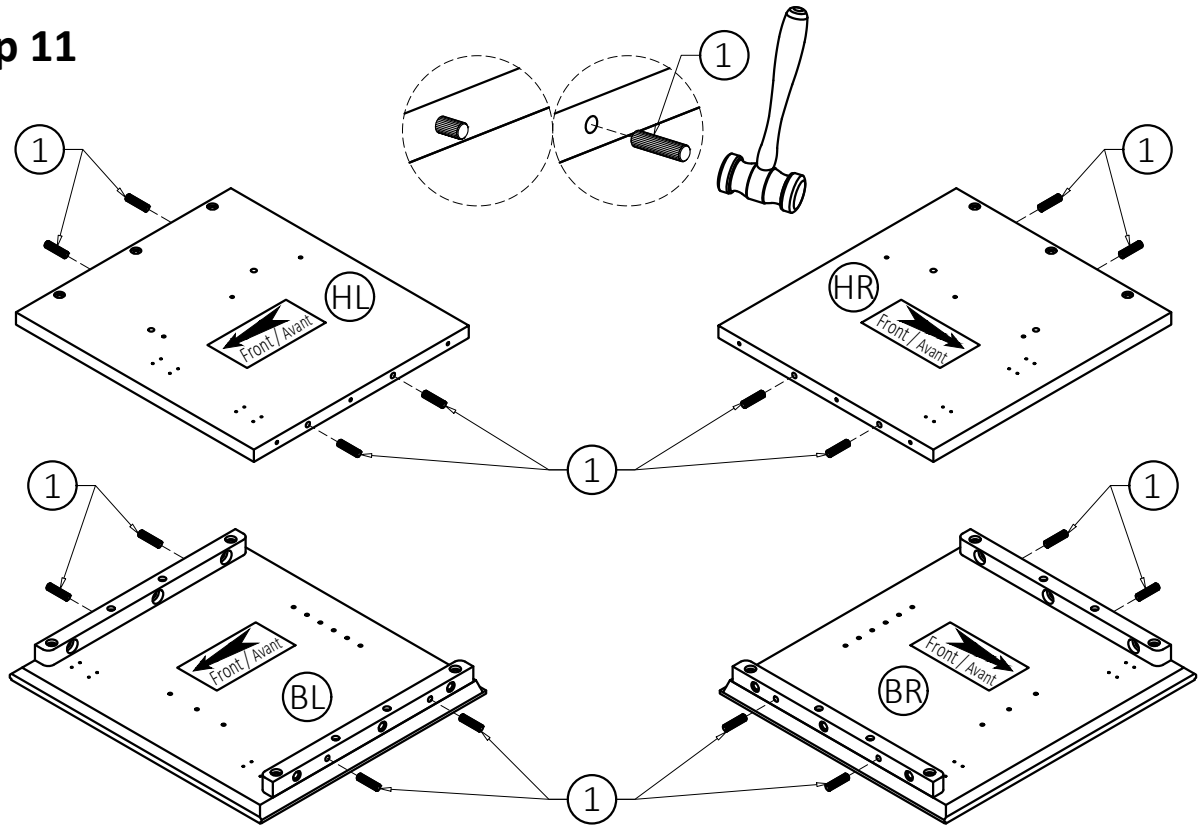


1. Insert four Dowels (1) into guide holes on each Sides (BL, BR) and Dividers (HL, HR).
2. Use rubber mallet to tap Dowels (1) into bottom of holes securely. 1/2 length of Dowels should be exposed.

Step 12

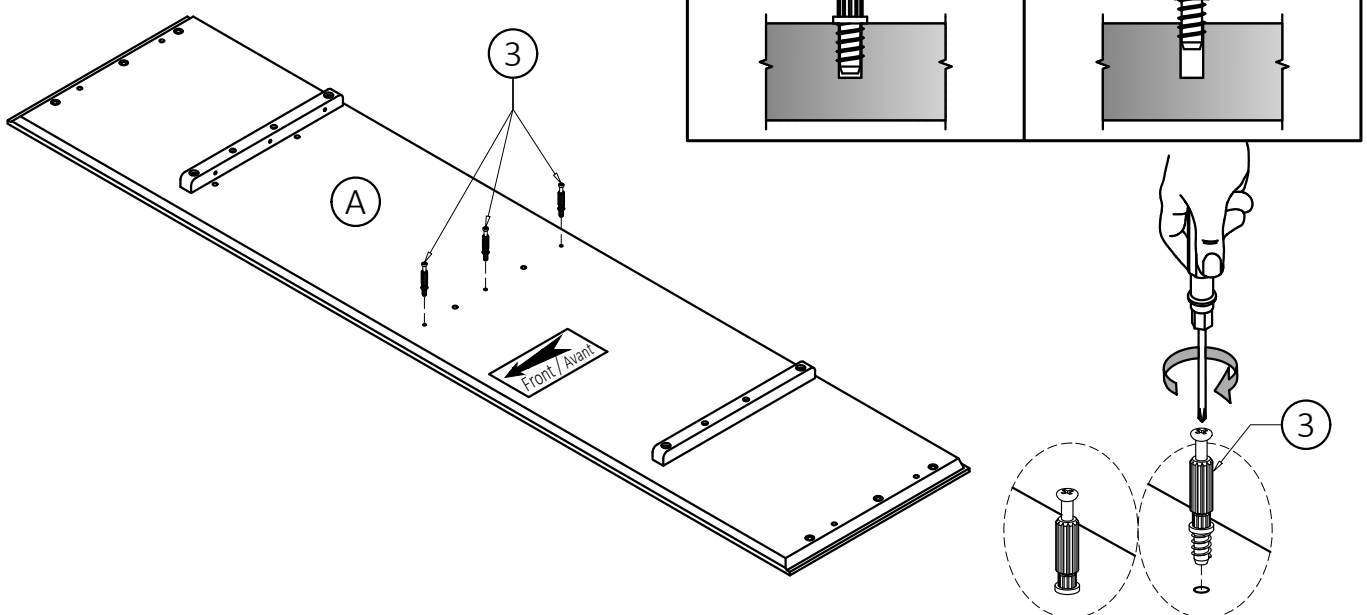


1. Attach three Cam Lock Pins (3) into pre-drilled holes on Top (A).
2. Use Phillips screwdriver to secure Cam Lock Pins. Do not over-tighten.

Step 13

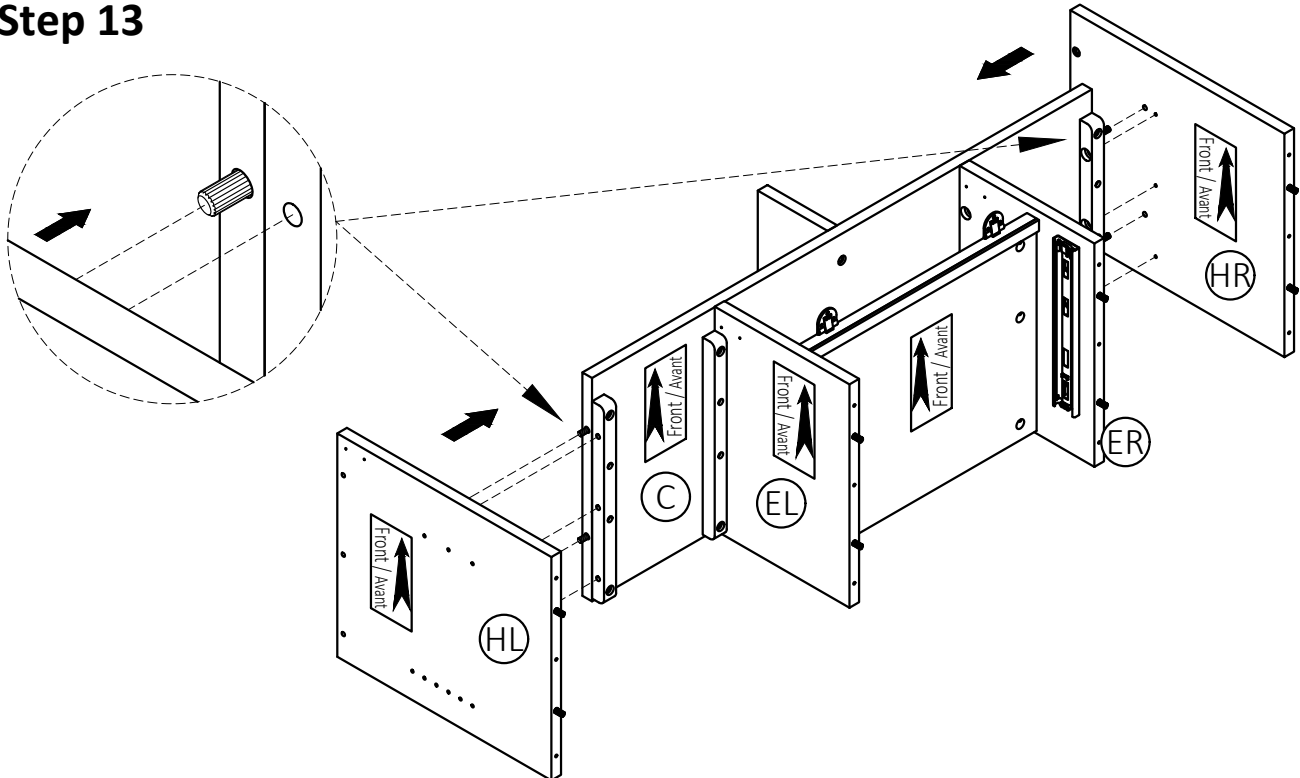


1. Align Wood Dowels with guide holes on Dividers (HL), (HR) and attach Dividers (HL), (HR) to Top Shelf (C).

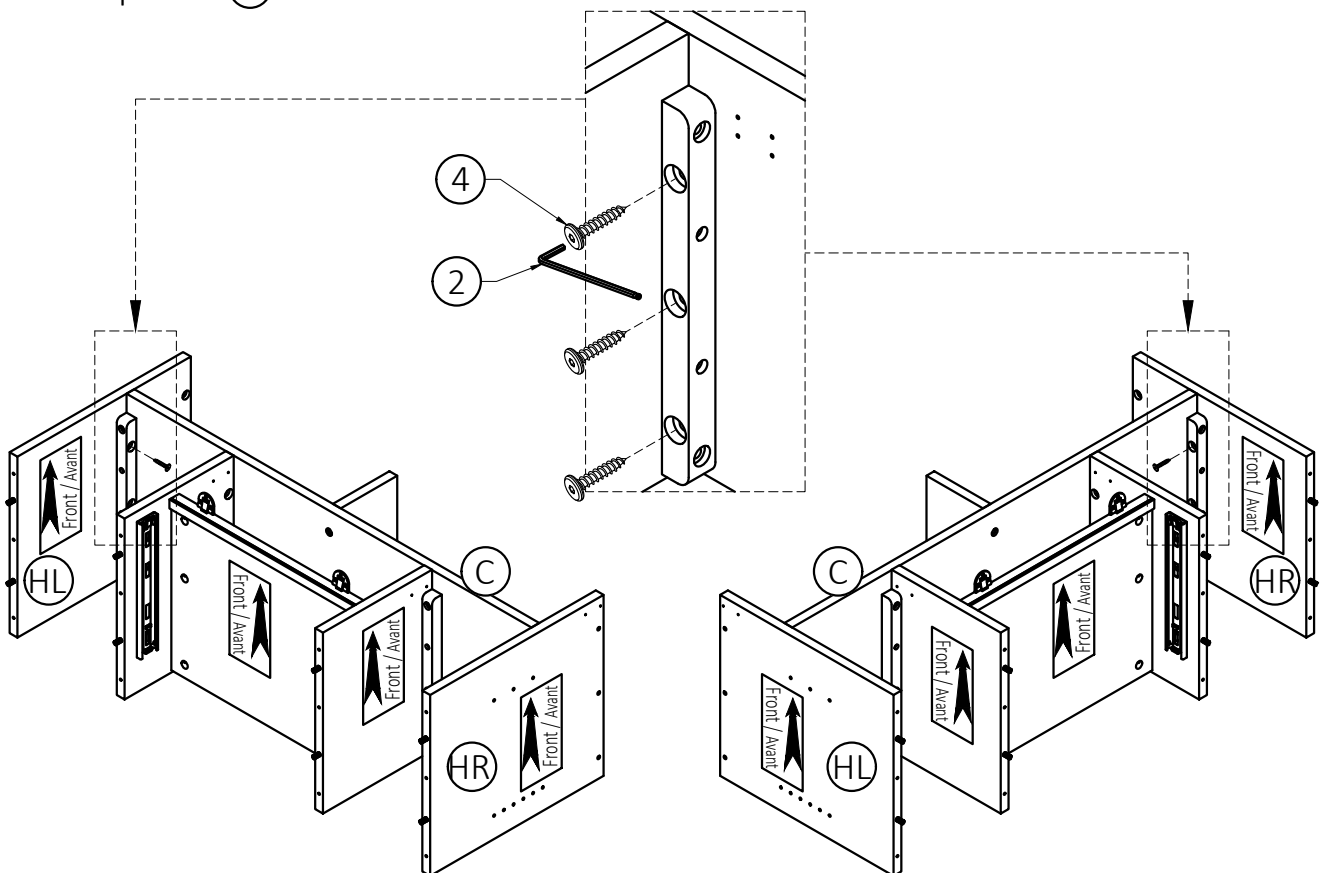


2. Use six Allen Key Screws (4) to attach each Divider (HL), (HR) through guide holes from Top Shelf (C) to pre-drilled holes of Dividers (HL), (HR).
3. Use Allen Key (2) to tighten Screws and Bolts. Do not over-tighten.

Step 14

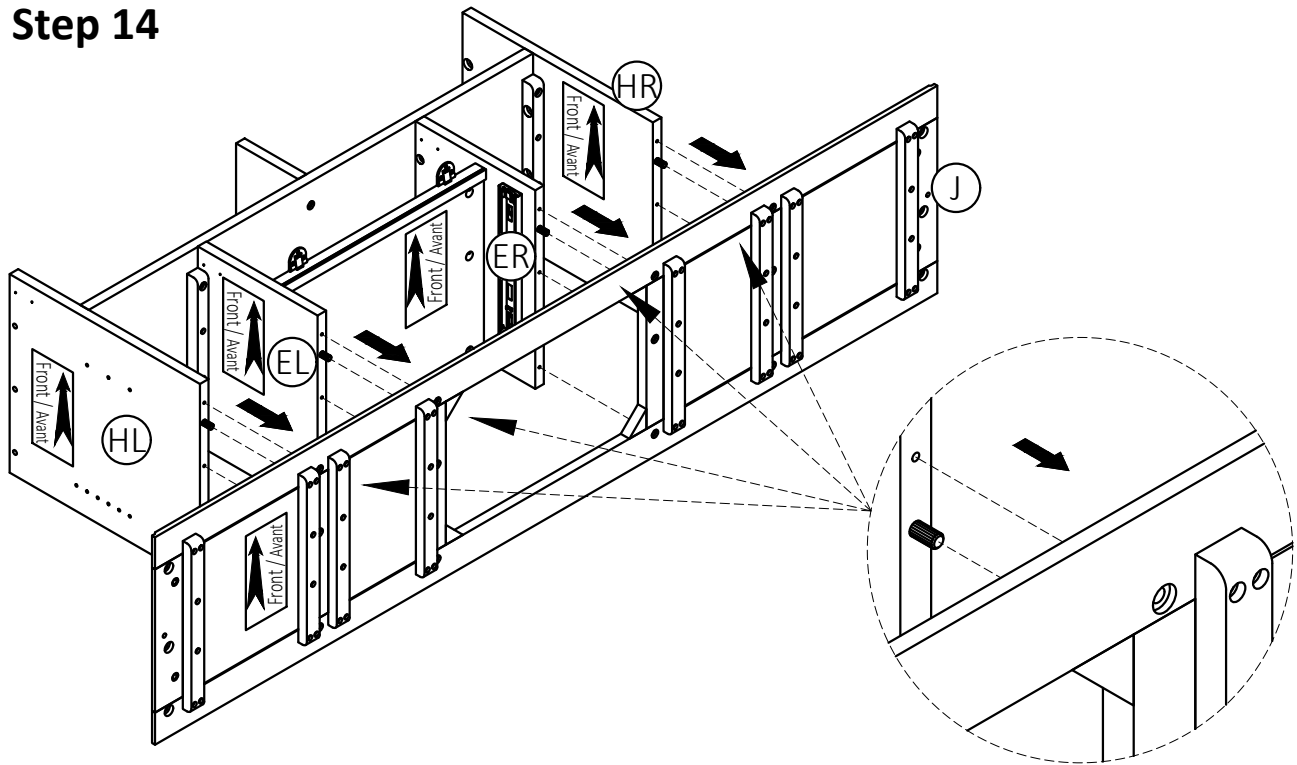


1. Align Wood Dowels with guide holes on Bottom Shelf (J) and attach parts (HL), (HR), (EL), (ER) to Bottom Shelf (J).

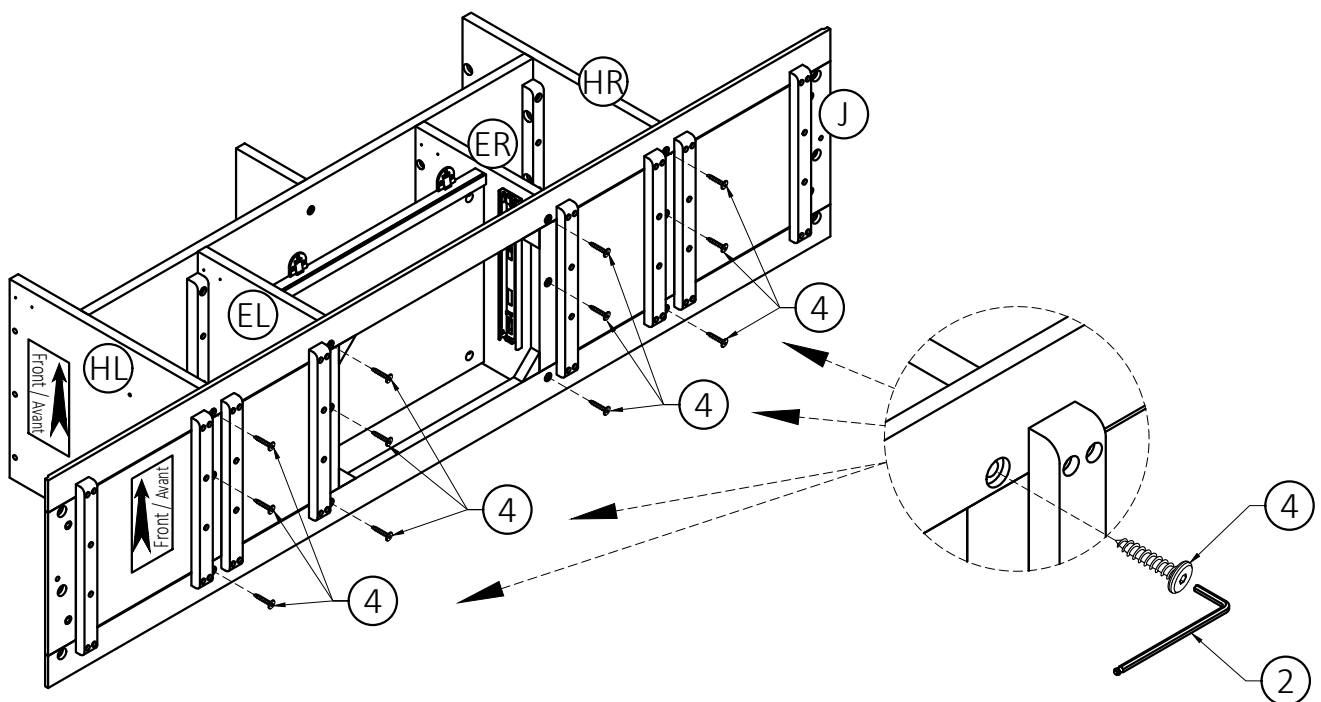


2. Use three Allen Key Screws (4) to attach each part (HL), (HR), (EL), (ER) through guide holes from Bottom Shelf (J) to pre-drilled holes of parts (HL), (HR), (EL), (ER).
3. Use Allen Key (2) to tighten Screws and Bolts. Do not over-tighten.

Step 15

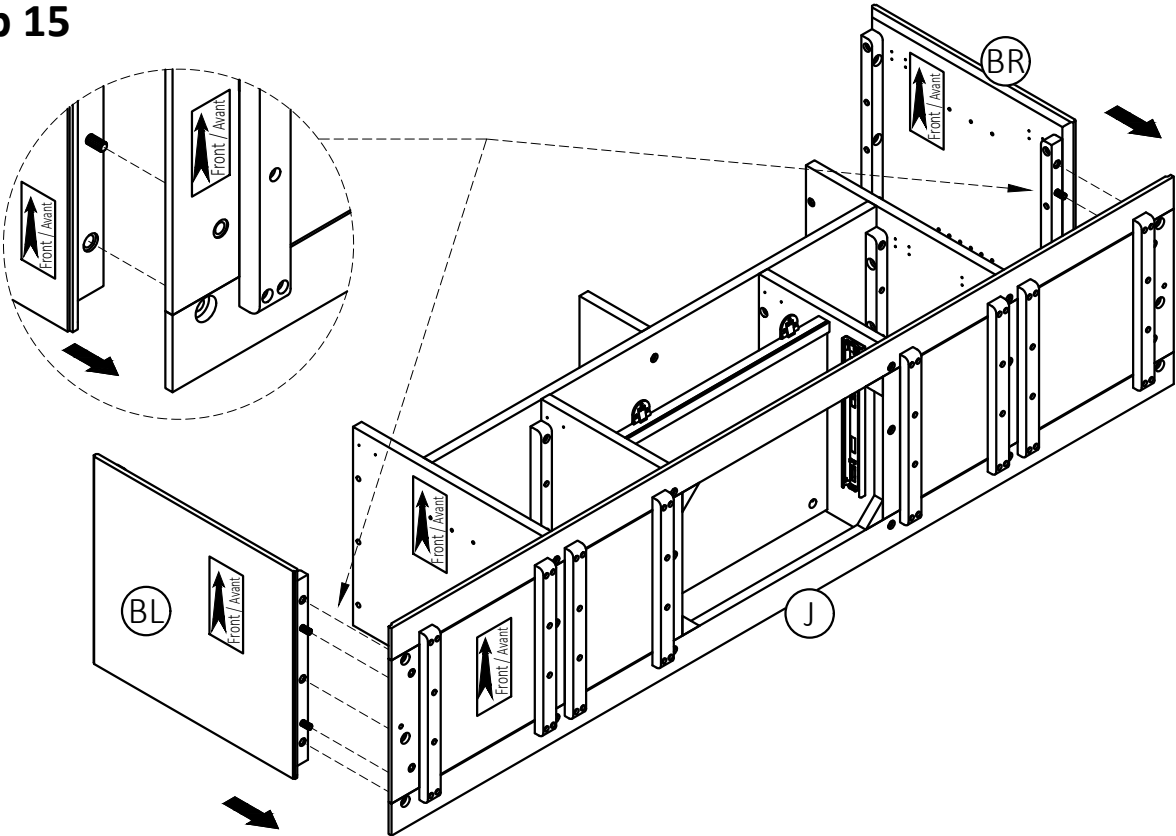


1. Align Wood Dowels with guide holes on Bottom Shelf (J) and attach Sides (BL, BR) to Bottom Shelf (J).

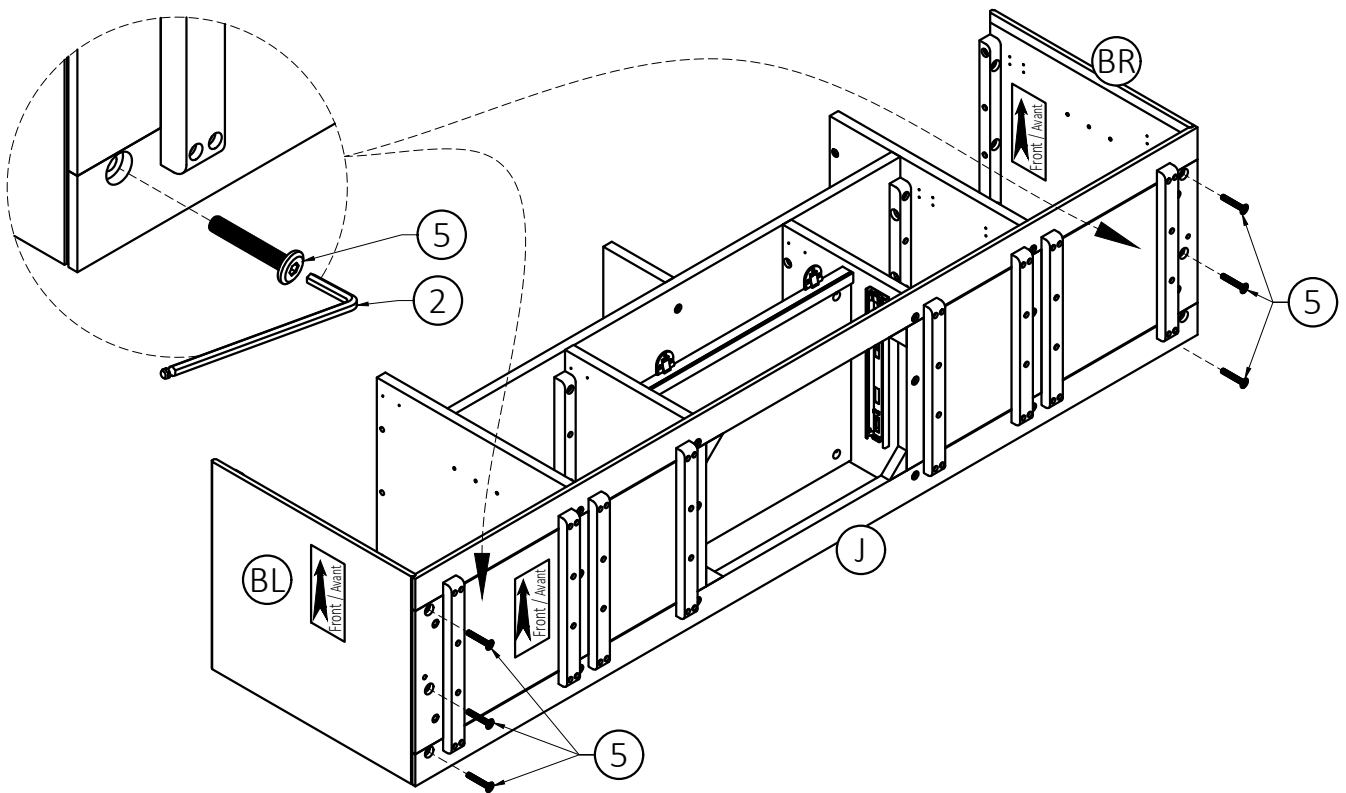


2. Use three Allen Key Bolts (5) to attach Sides (BL, BR) through guide holes from Bottom Shelf (J) to Sides (BL, BR).
3. Use Allen Key (2) to tighten Screws and Bolts. Do not over-tighten.

Step 16

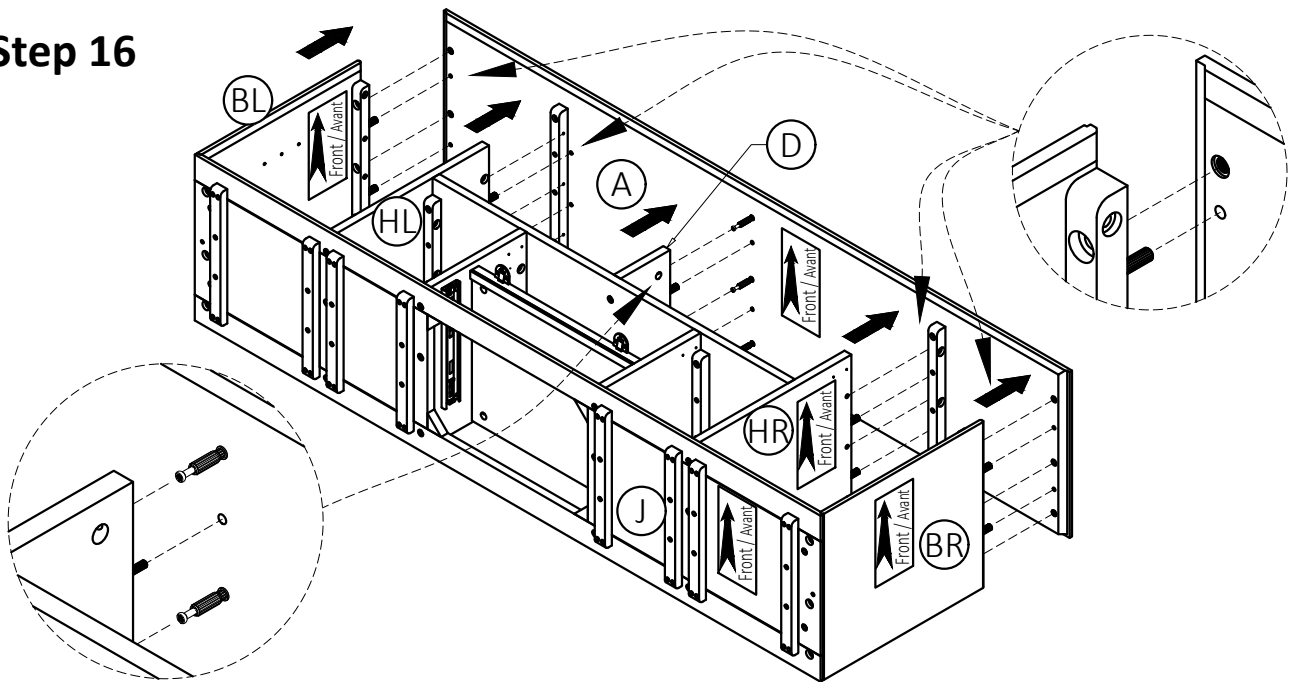


1. Align Wood Dowels with guide holes on Top (A); align Cam Lock Pins with guide holes on Top Divider (D) and attach Top (A).


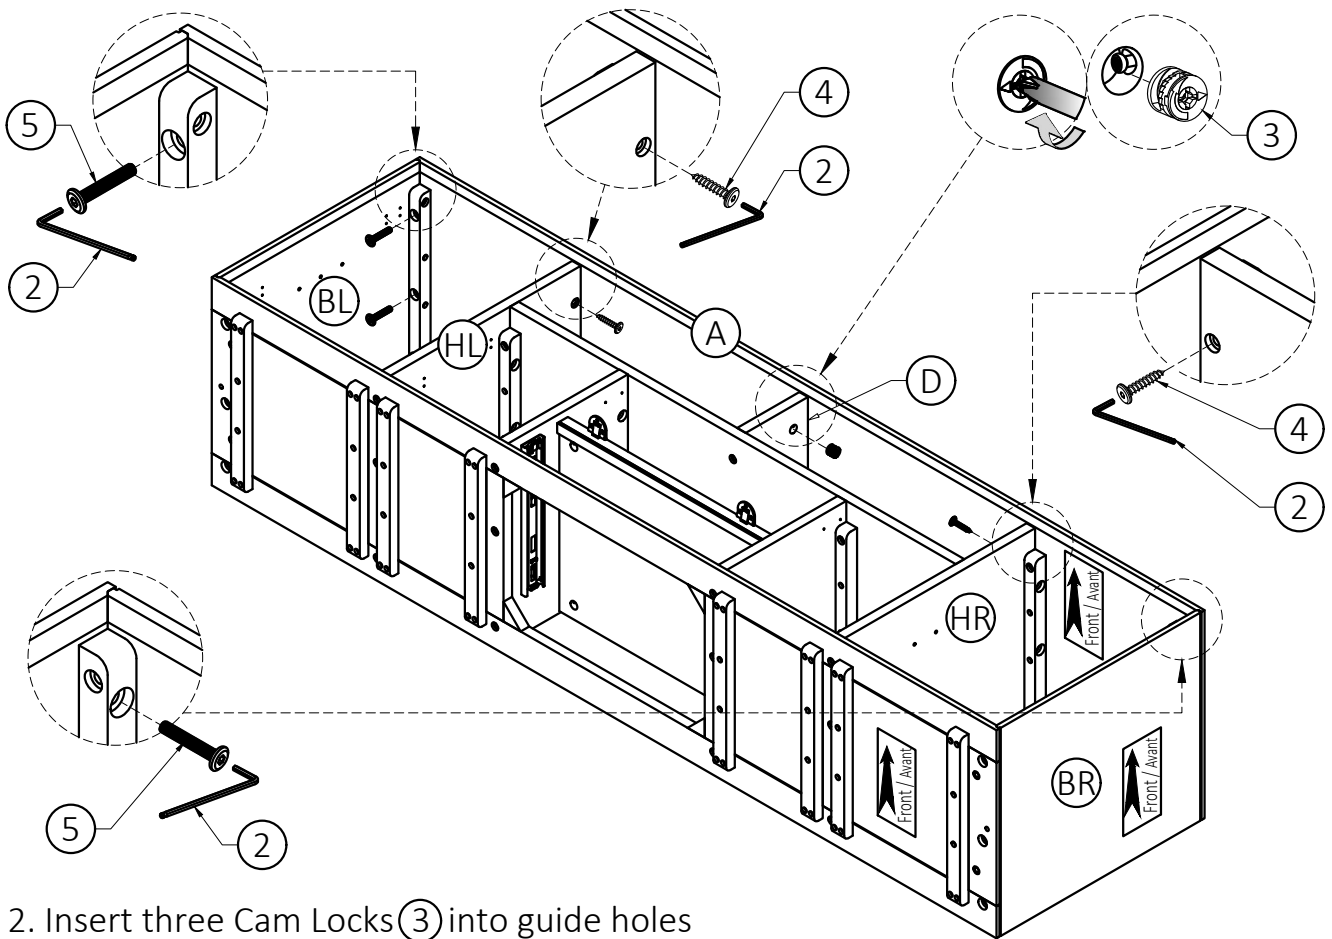


2. Insert three Cam Locks (3) into guide holes on Top Divider (D). Use Phillips screwdriver secure Cam Locks.
3. Use three Allen Bolts (5) to attach each Sides (BL, BR) through guide holes to Top (A).
4. Use three Allen Key Screws (4) to attach each Dividers (HL, HR) through guide holes to pre-drilled holes of Top (A).
5. Use Allen Key (2) to tighten Bolts. Do not over-tighten.


Step 17

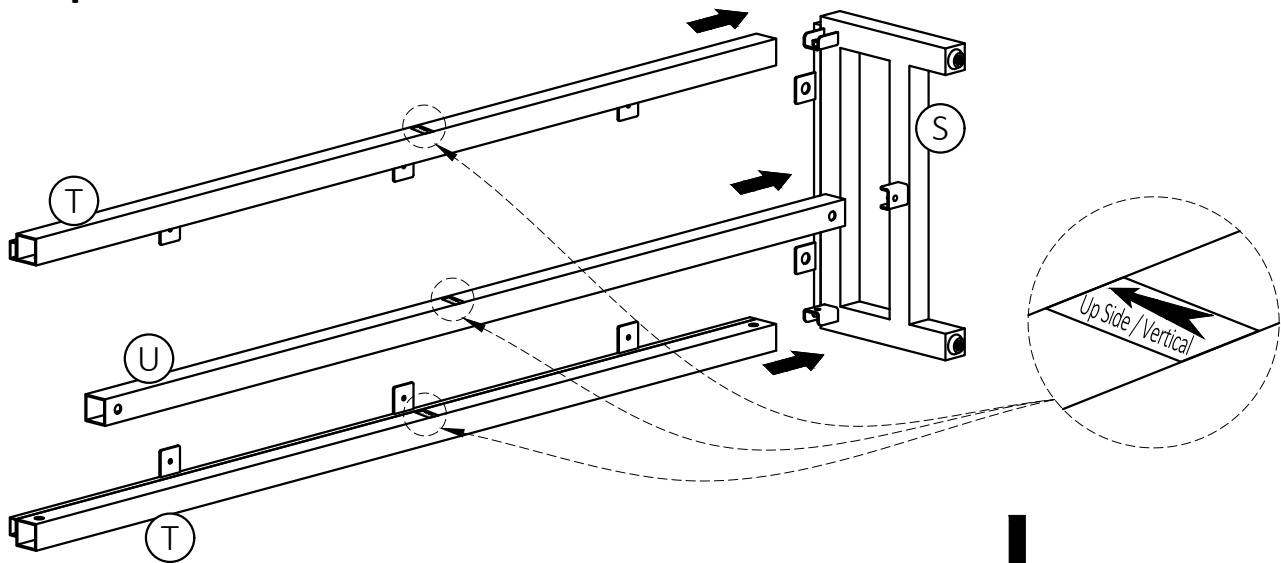


1. Align Parts (T), (U) to Leg (S).

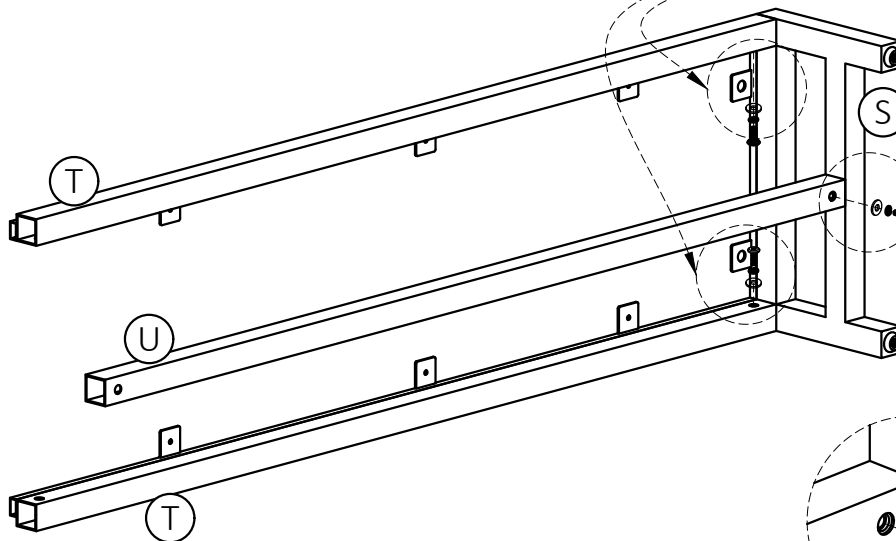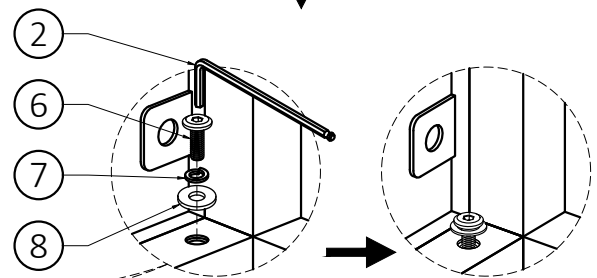


2. Use one Bolt (6), one Lock Washer (7) and one Washer (8) to secure each part (T), (U) with (S).
3. Use Allen Key (2) to tighten Bolts. Do not over-tighten.

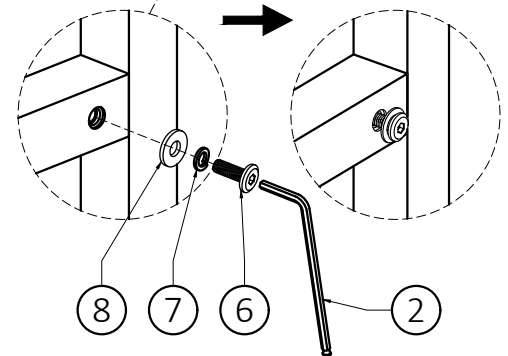

Step 18

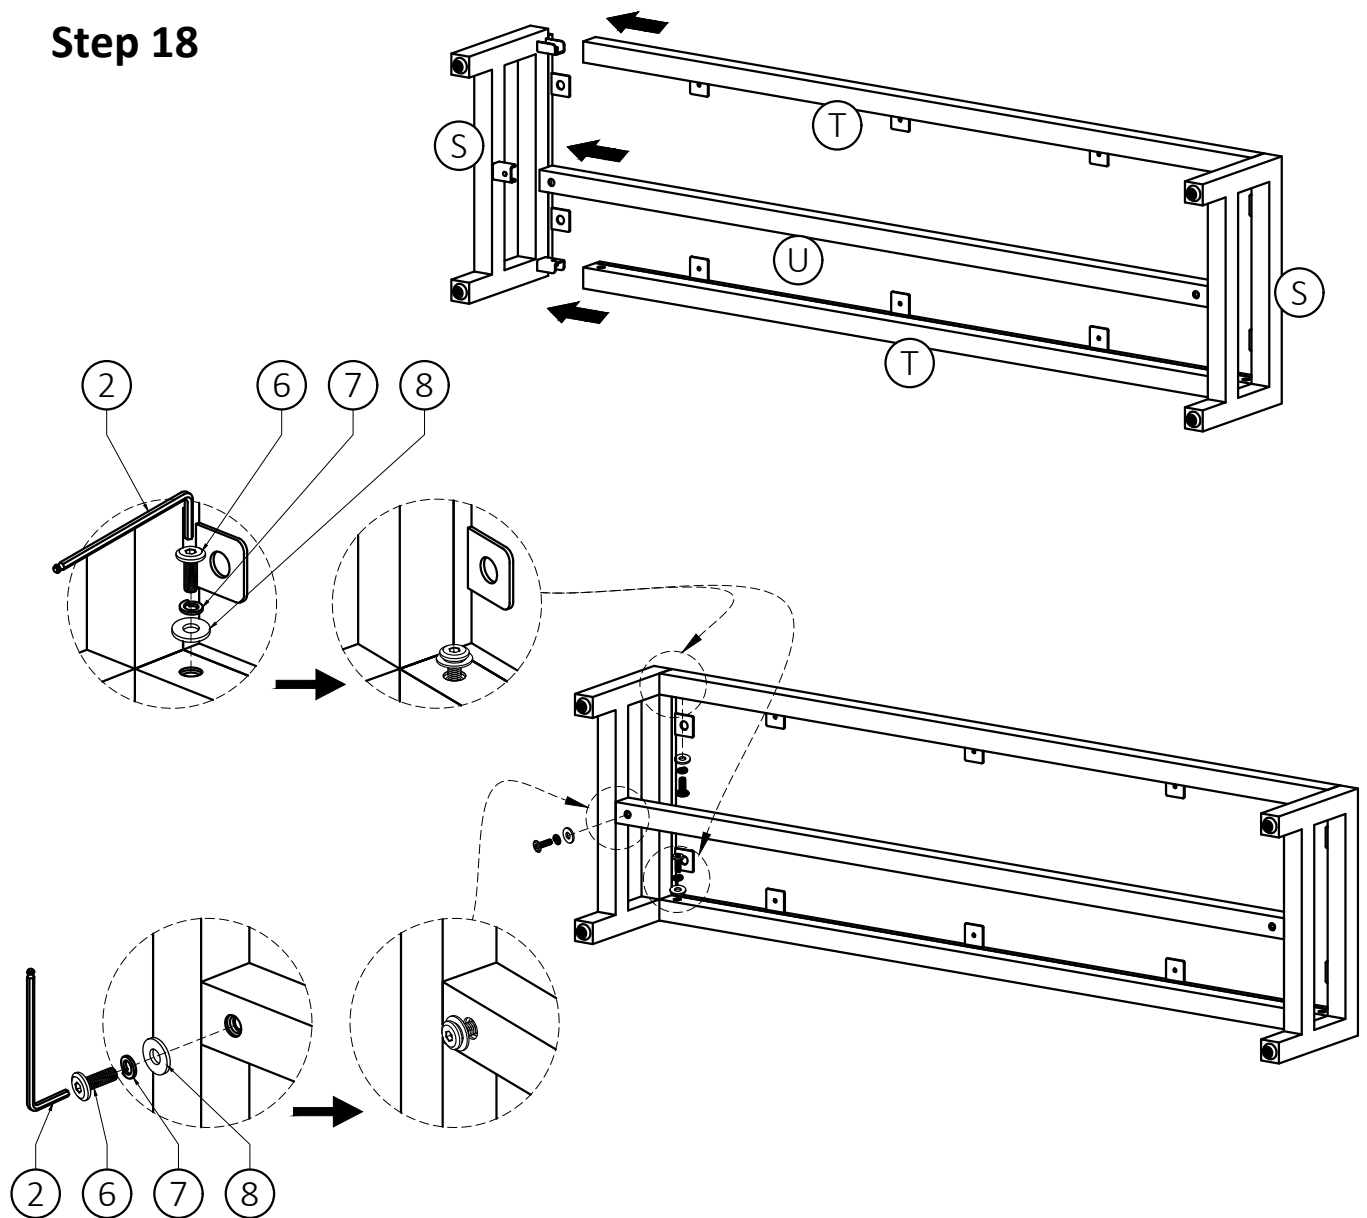


1. Repeat Step 10 for second Leg (S).

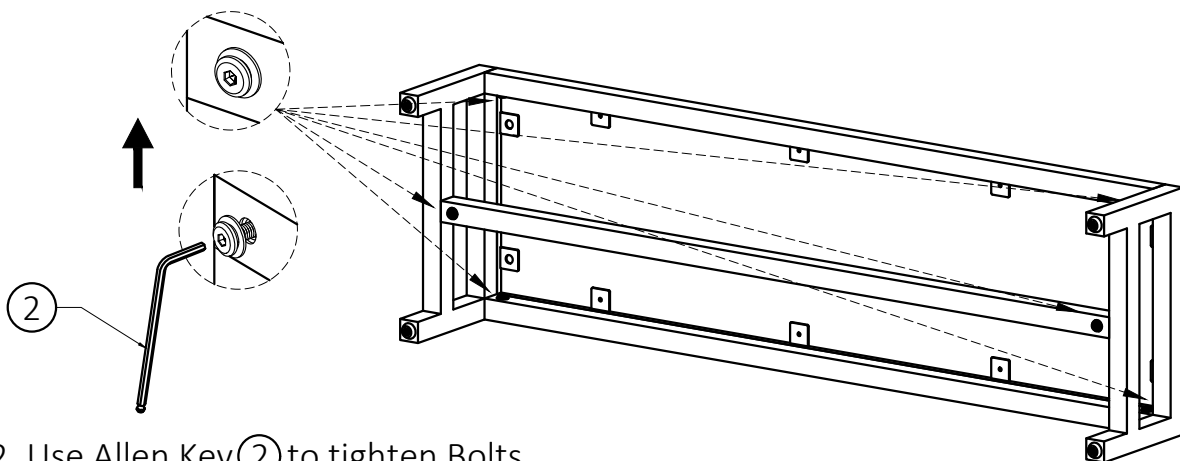


2. Use Allen Key (2) to tighten Bolts.

Step 19

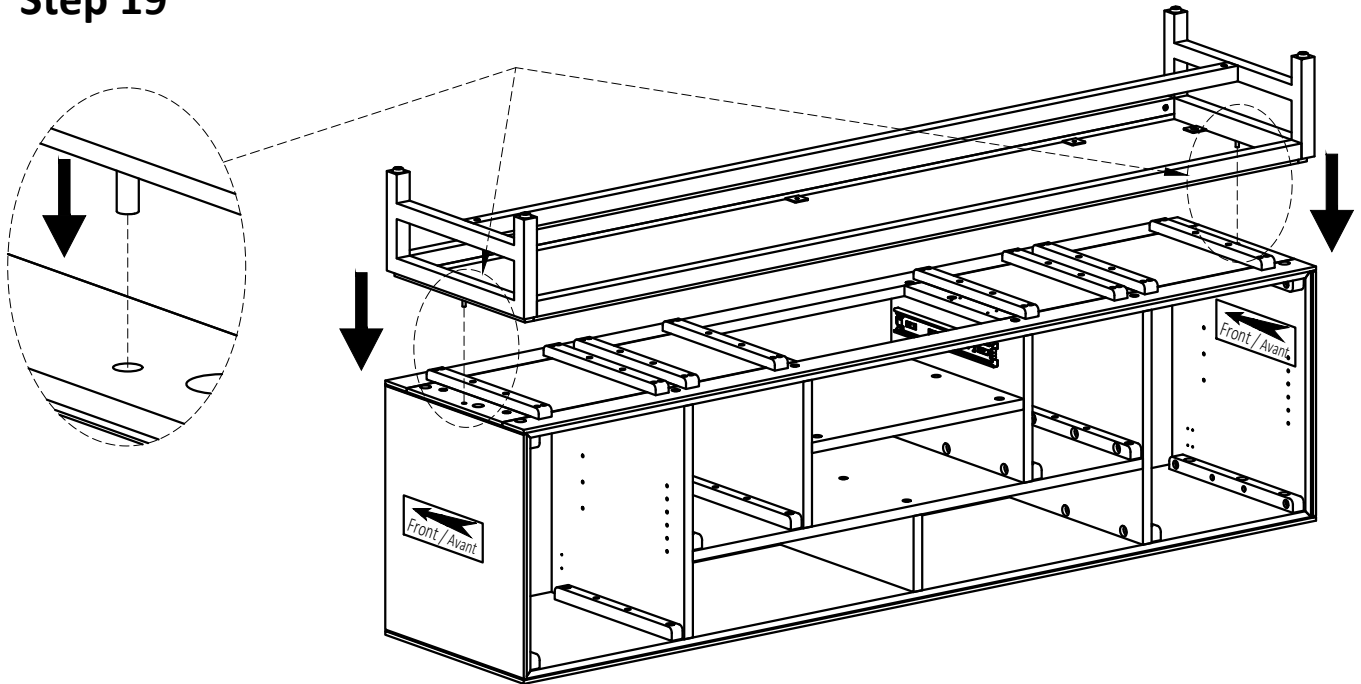


1. Align iron dowels with guide holes on wooden frame and attach the assembled metal frame to bottom wooden frame .

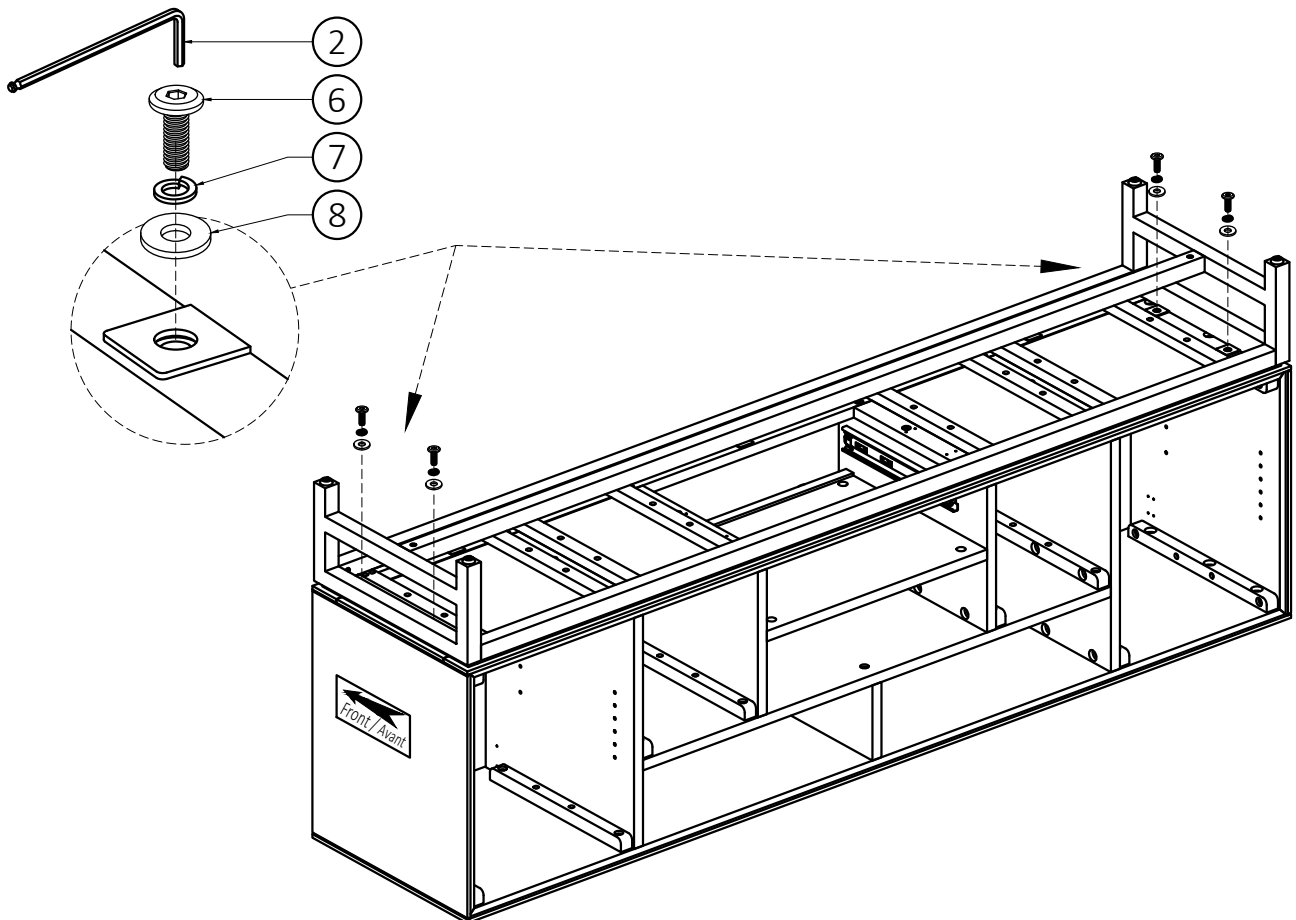


2. Use four Bolts ⑥, four Lock Washers ⑦ and four Washers ⑧ to secure metal frame and wooden frame .
3. Use Allen Key ② to tighten Bolts.

Step 20

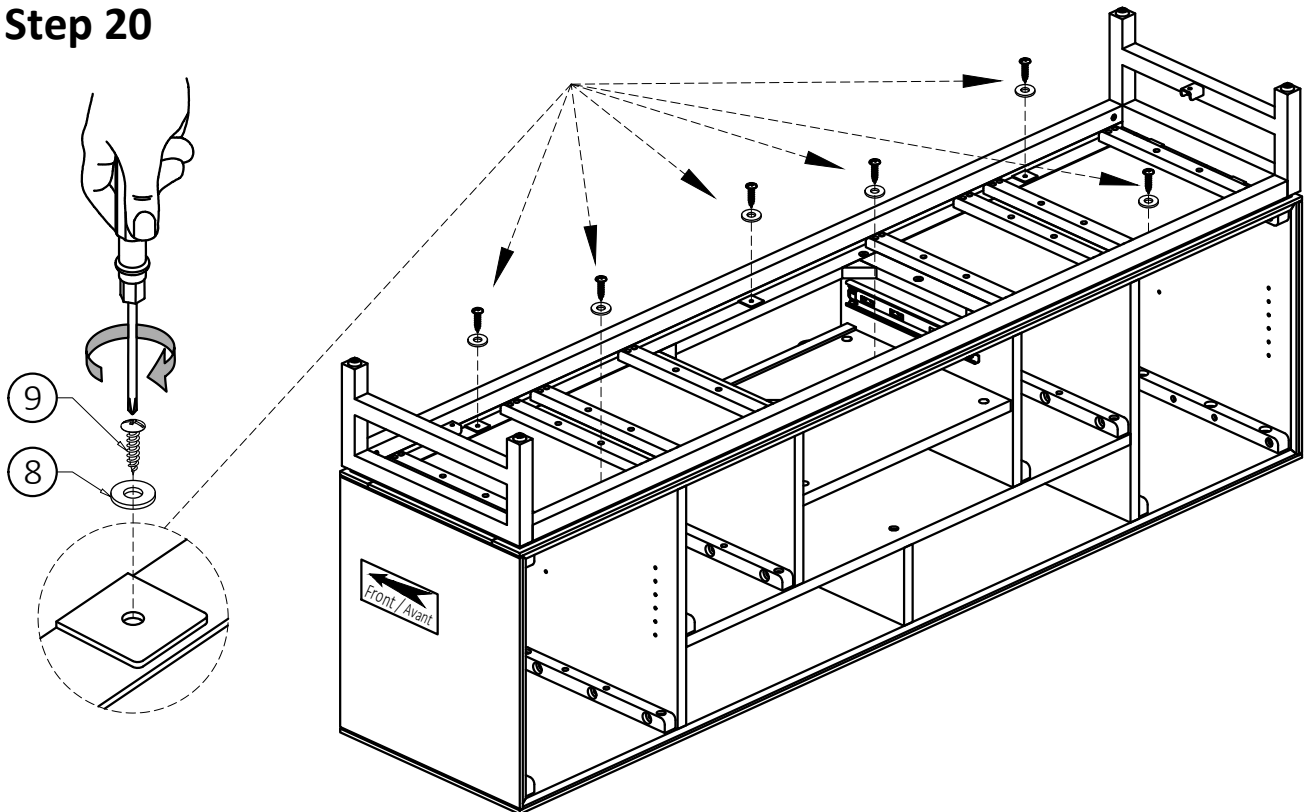


1. Use six Phillips Screws Round Head (9) and four Washers (8) to secure wooden frame and metal frame.
2. Use Phillips screwdriver to snugly tighten Screws.

Step 21

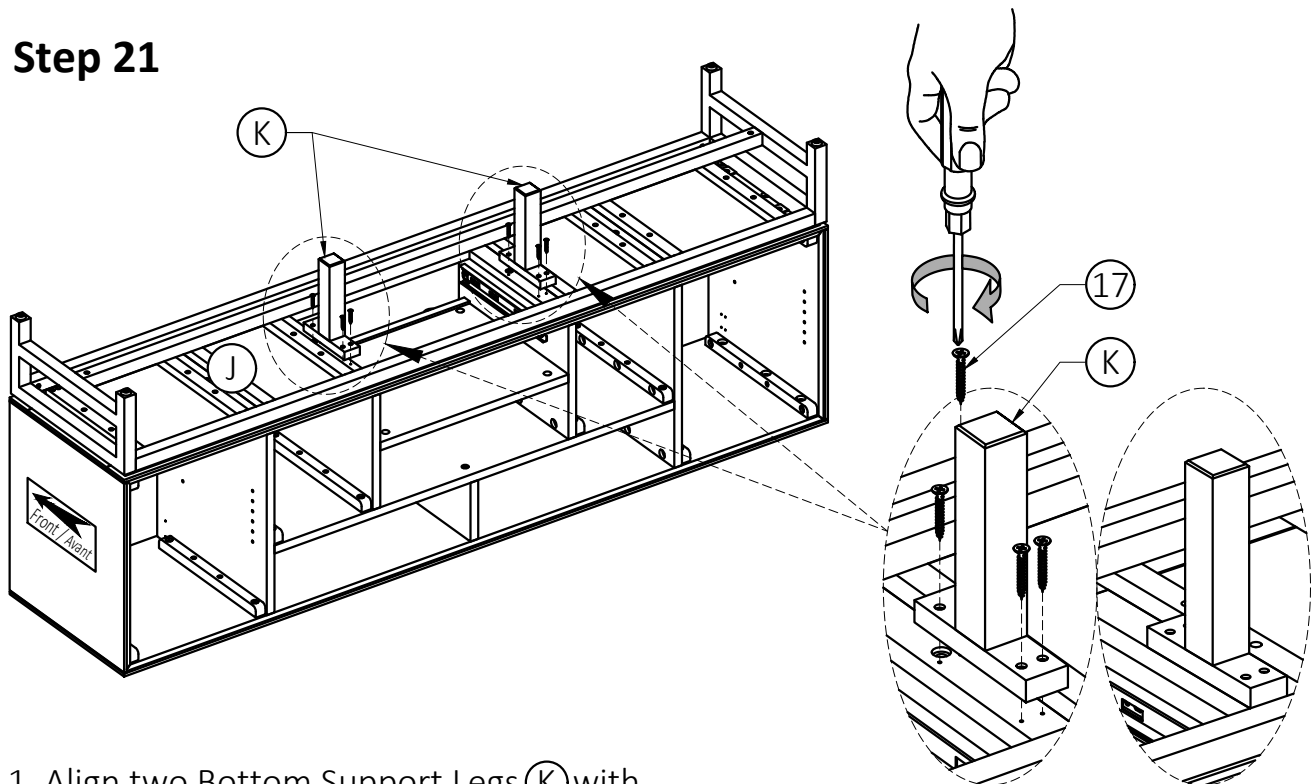


1. Align two Bottom Support Legs (K) with pre-drilled holes on back of Bottom Shelf (J). Using Phillips Screwdriver to tighten four Phillips Screws (17).

Step 22

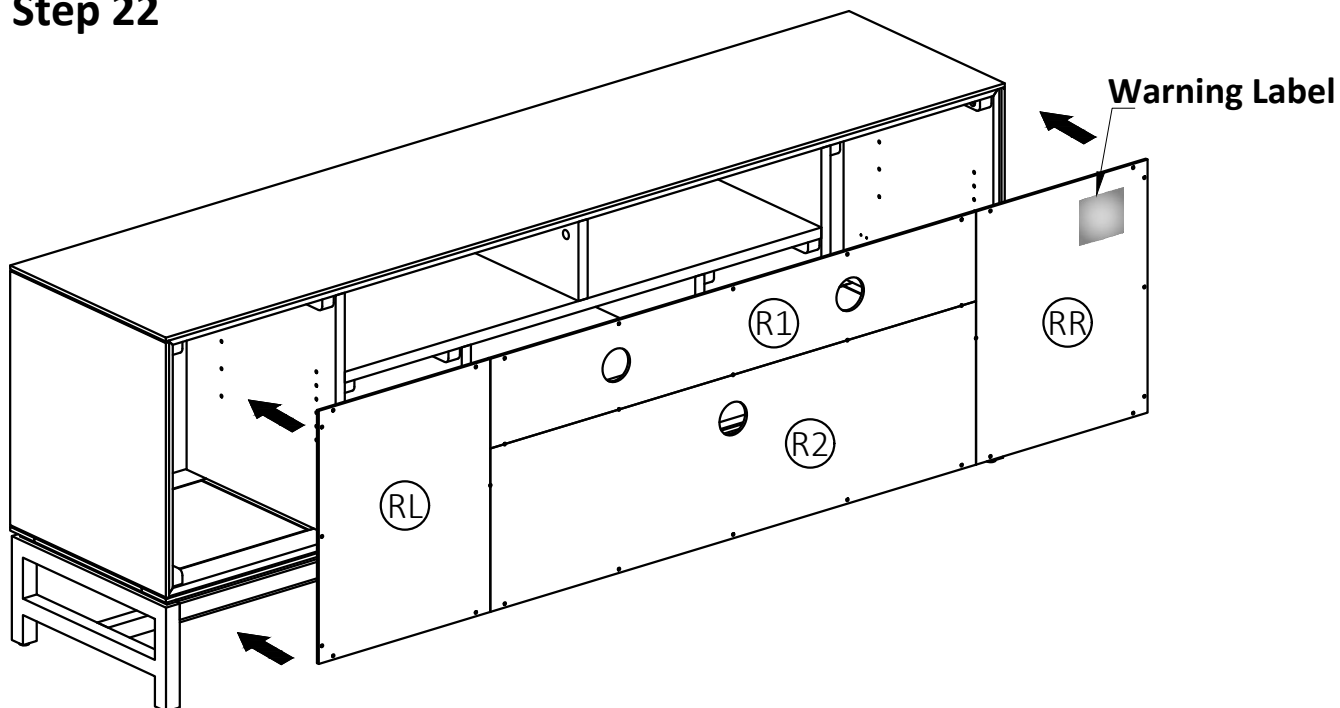


Note:

The back of the cabinet frame does not have pre-drilled holes to attach the back panels

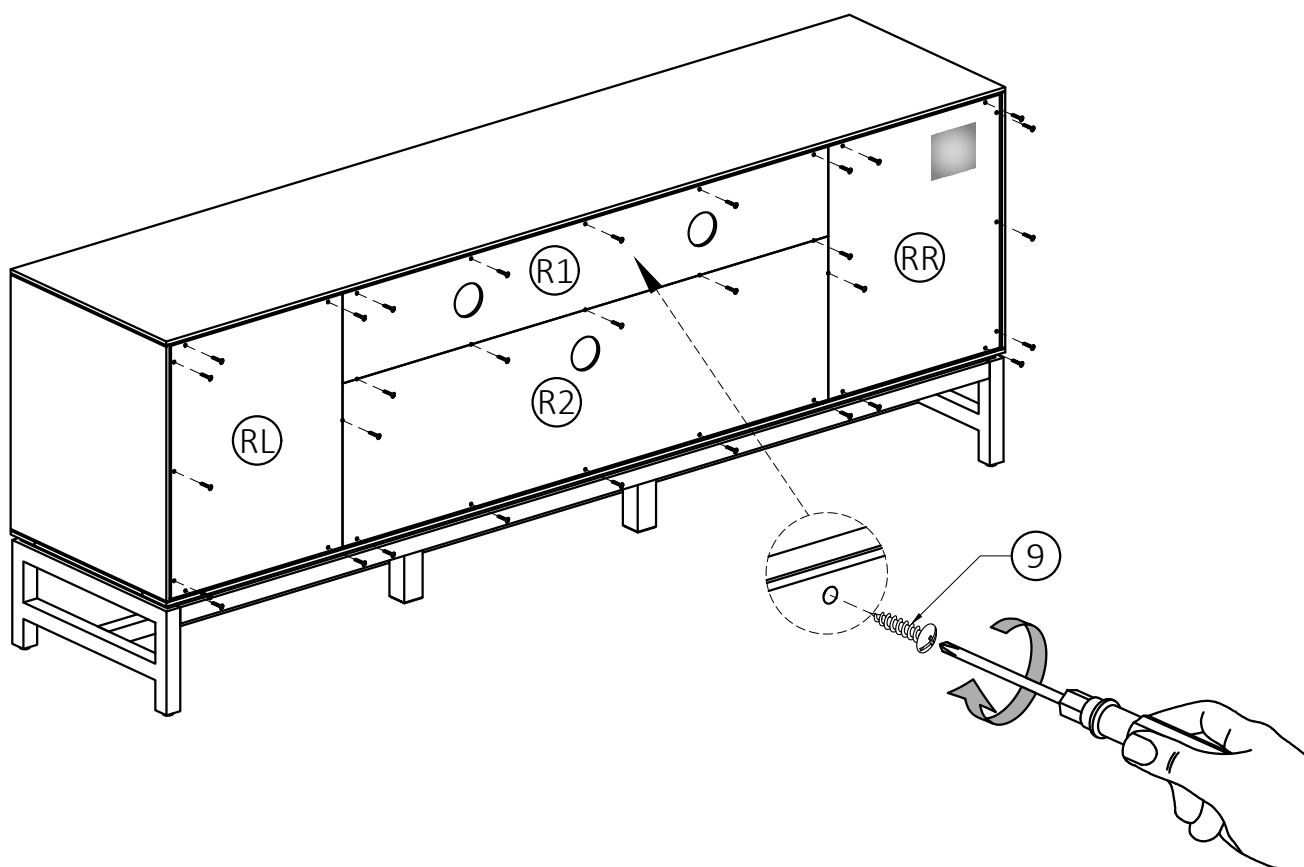


1. Attach the Back Panels (RL, RR, R1, R2) to back frame using Phillips Screws Round Head (9) through guide holes.
2. Use Phillips Screwdriver to tighten screws. Do not over-tighten.

Step 23


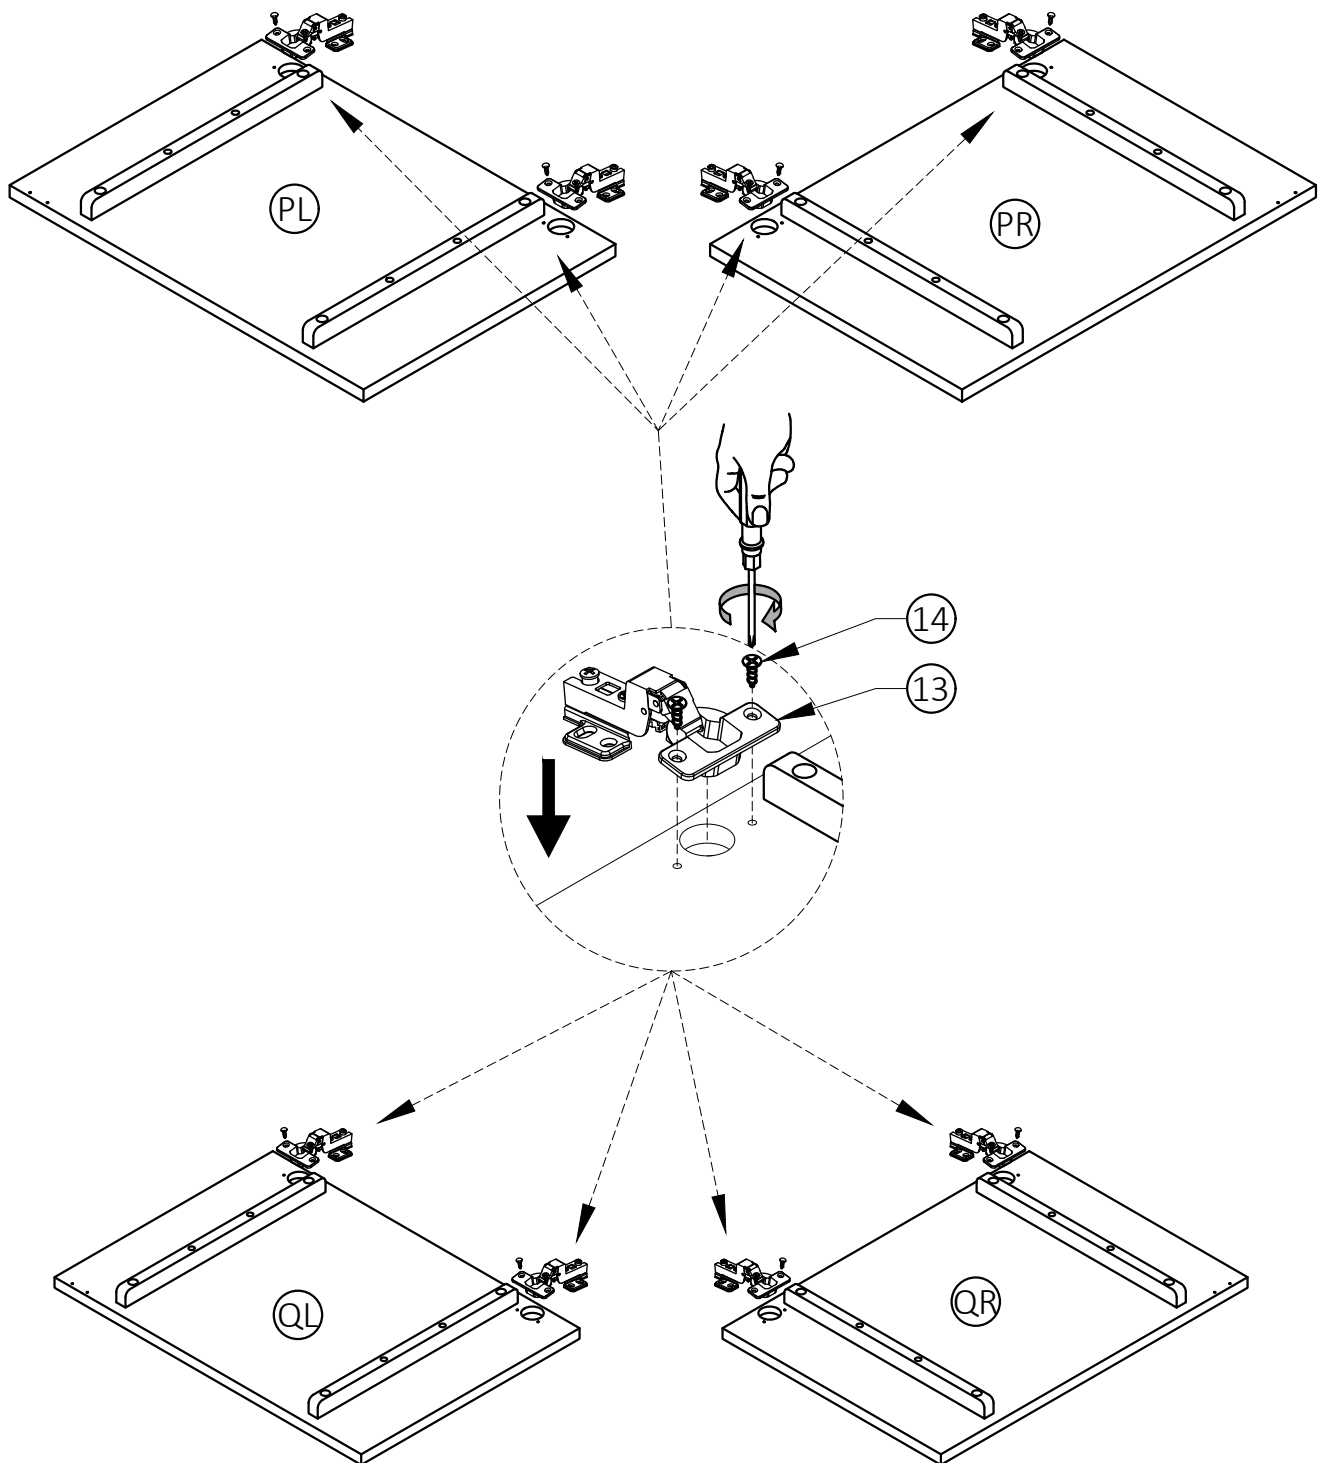


1. Attach Adjustable Hinges (13) to Doors (PL), (PR), (QL), (QR) .
using Phillips Screws (14) into pre-drilled holes on Doors (PL), (PR), (QL), (QR) .

Step 24

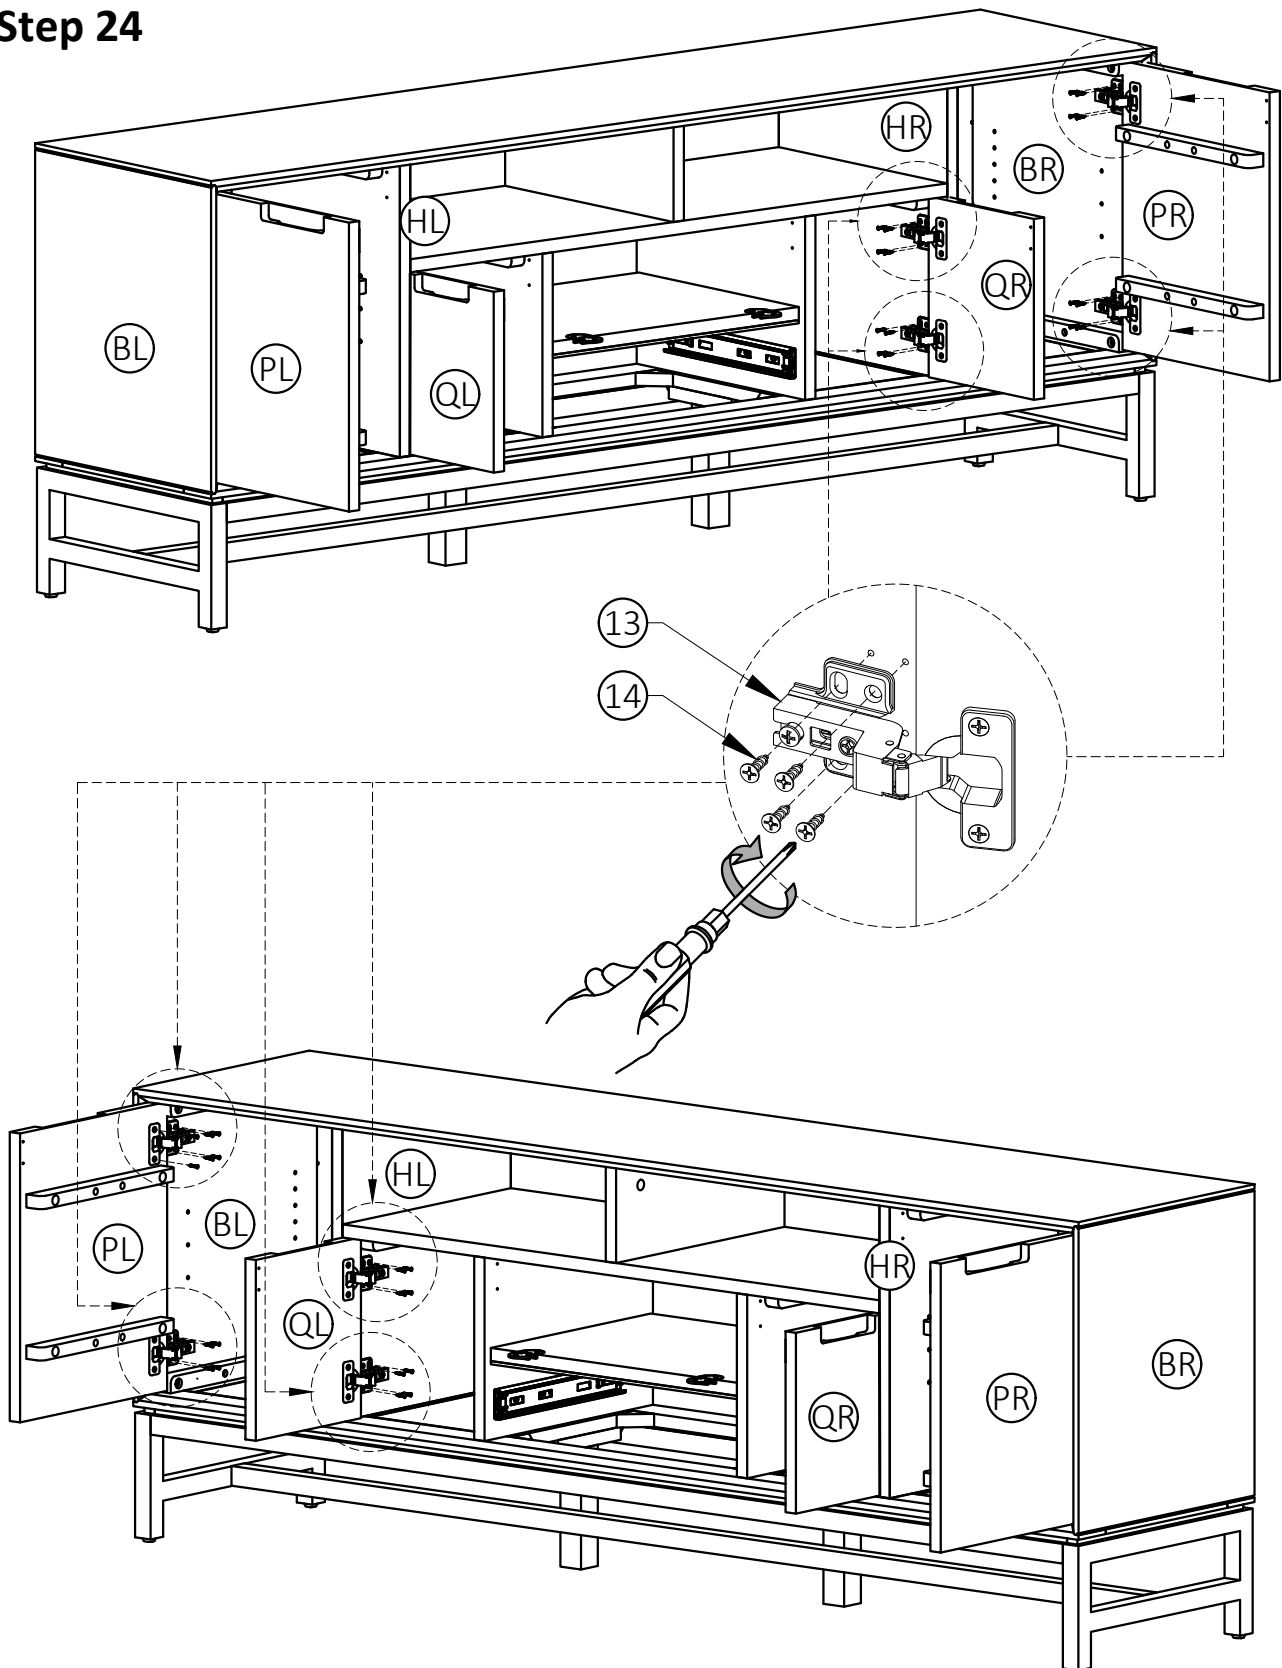

1. Attach Adjustable Hinges (13) on Doors (PL, PR) to Sides (BL, BR) using Phillips Screws (14) into pre-drilled holes on Sides (BL, BR).
2. Attach Adjustable Hinges (13) on Doors (QL, QR) to Dividers (HL, HR) using Phillips Screws (14) into pre-drilled holes on Dividers (HL, HR).
3. Use Phillips screwdriver to snugly tighten screws.

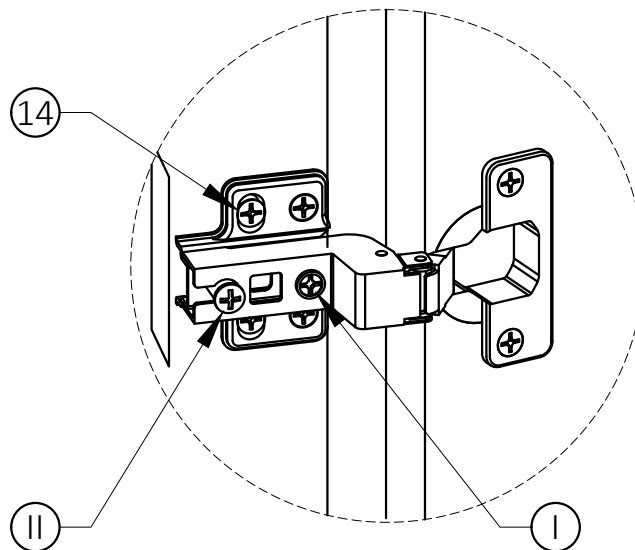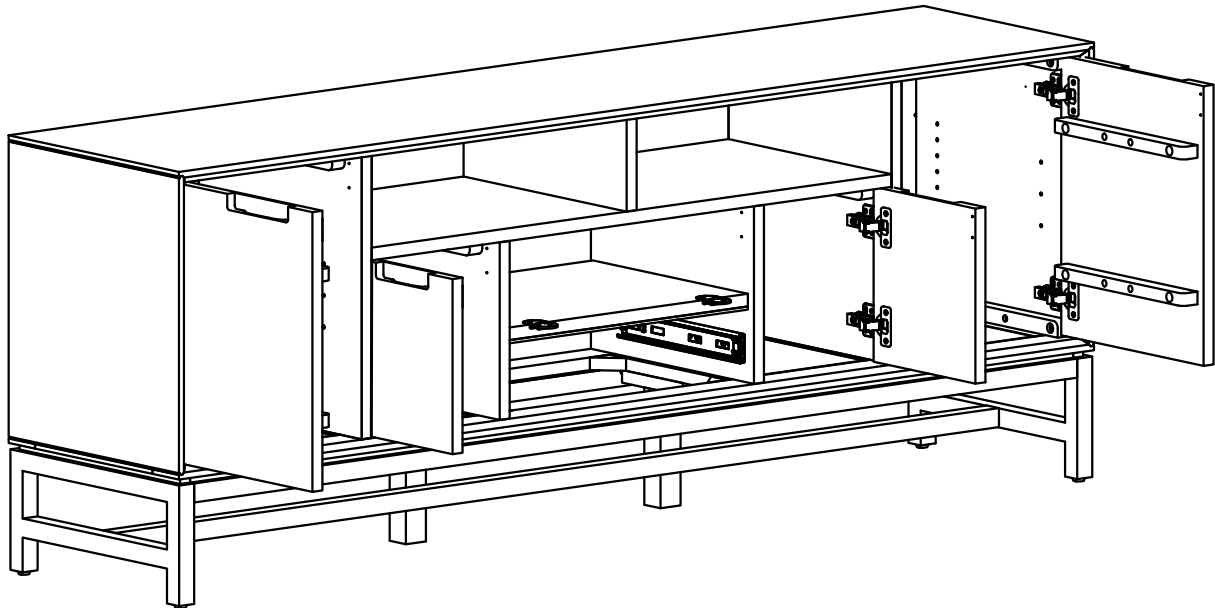IMPORTANT NOTE:

Tighten the Screw marked ⑪ to fasten hinge. The door may need to be adjusted so that all the spaces between the door and the unit sides are equal.

To adjust, follow instructions:

1. Side adjustment 4 mm

To move the door towards the side panel, loosen screw ① and tighten screw ⑪.

To move the door away from the side panel, loosen screw ⑪ and tighten screw ①.


2. Depth adjustment 4 mm

Loosen screw ⑪ (just one turn), adjust door to desired position, re-tighten screw .


3. Height adjustment

Loosen screw ⑭ , adjust door to desired position, re-tighten screw .

Step 25

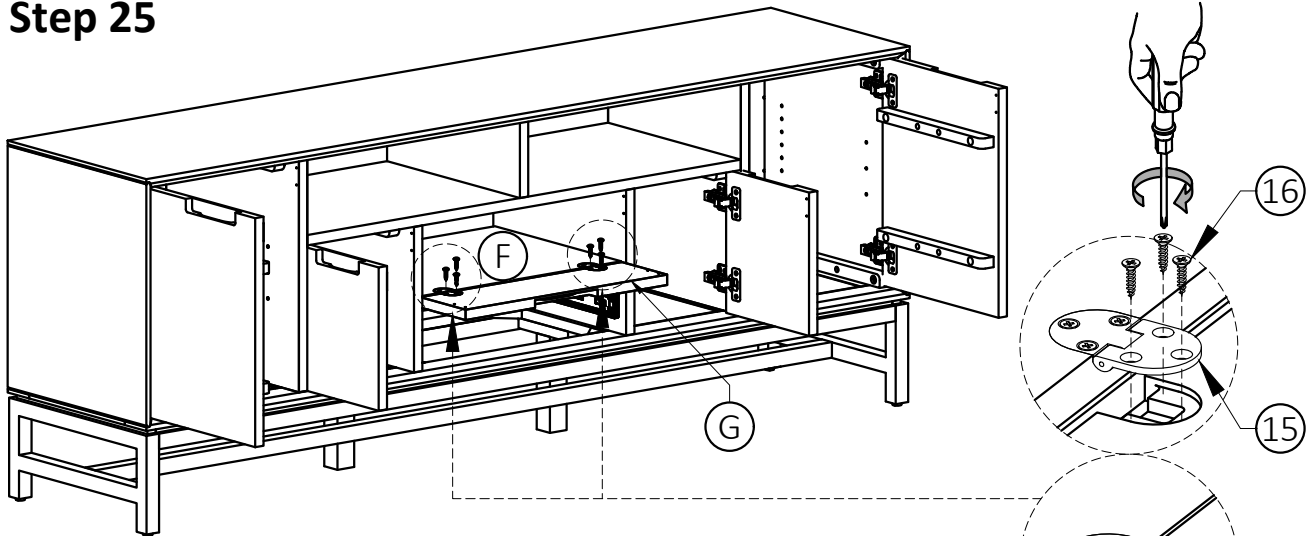


1. Attach Hinges (15) on Middle Shelf (F) to Flip Down Door (G) using Phillips Screws (16) into pre-drilled holes .
2. Use Phillips screwdriver to snugly tighten screws.

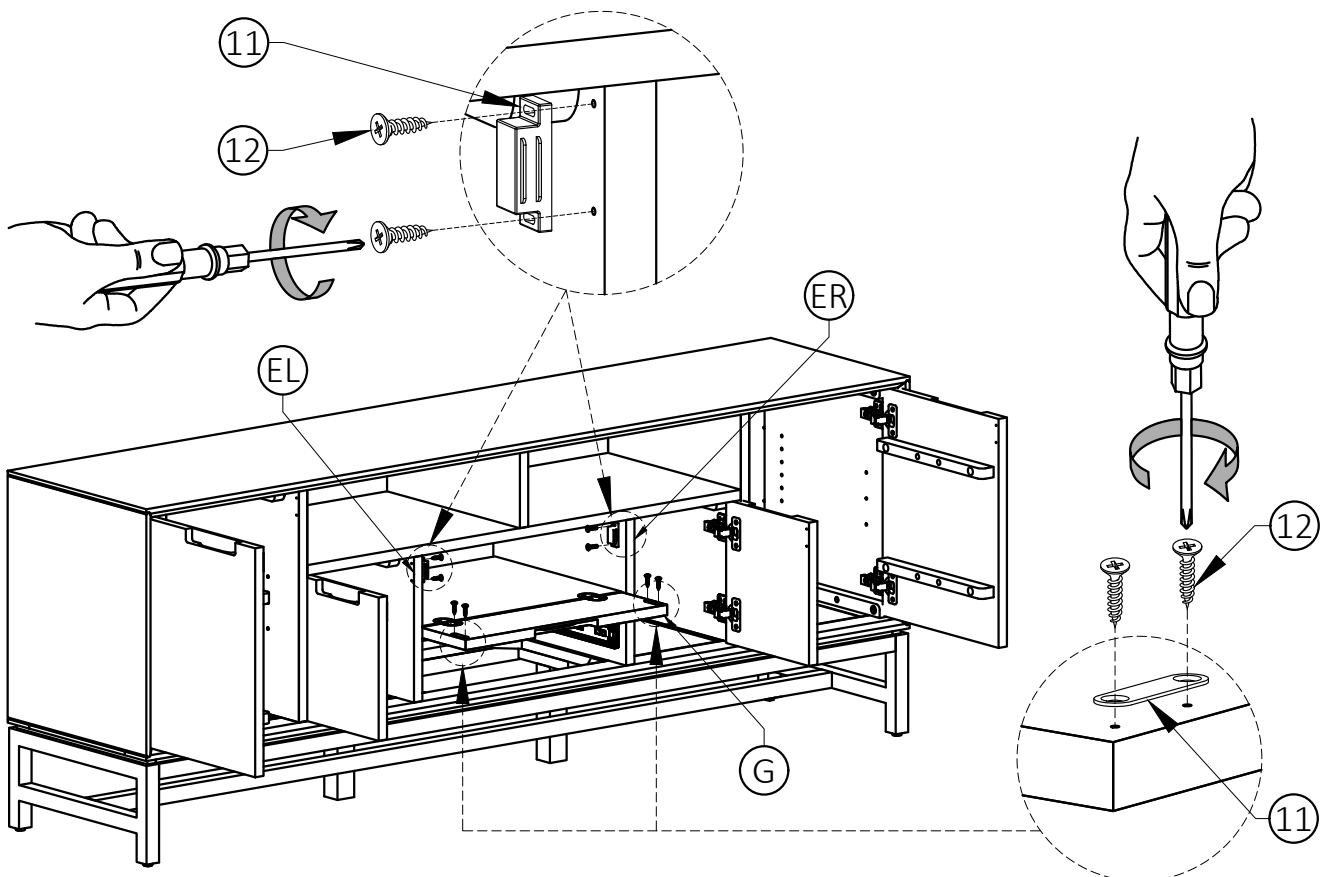



1. Attach Magnet Plates (11) to top corner of Flip Down Door (G) using Phillips Screws (12) into pre-drilled holes on Flip Down Door (G).
2. Attach Magnets (11) using Phillips Screws (12) into pre-drilled holes on Dividers (EL), (ER).
3. Use Phillips screwdriver to snugly tighten screw.

Step 26

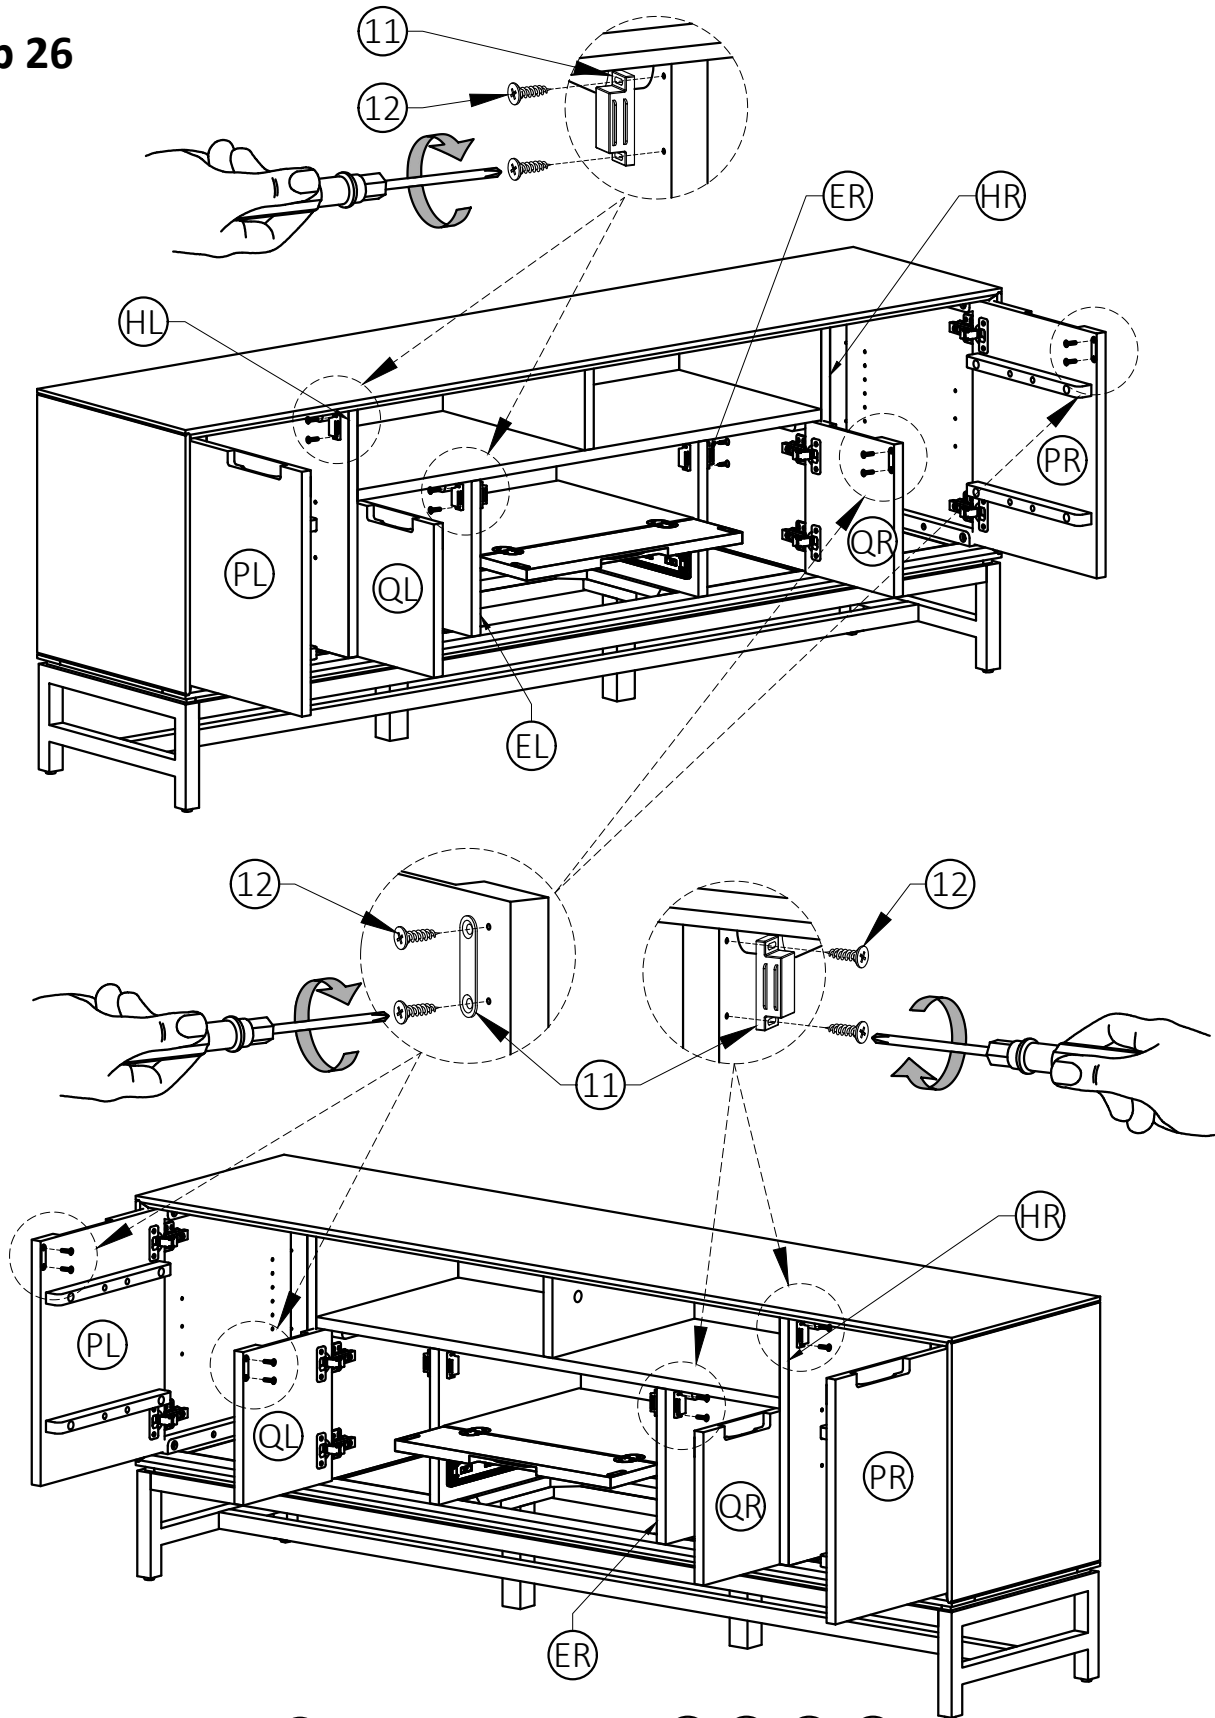


1. Attach Magnet Plates ⑪ to top corner of Doors ①, ②, ③, ④ using Phillips Screws ⑫ into pre-drilled holes on Doors ①, ②, ③, ④.
2. Attach Magnets ⑪ using Phillips Screws ⑫ into pre-drilled holes on Dividers ⑤, ⑥, ⑦, ⑧.
3. Use Phillips screwdriver to snugly tighten screw.

Step 27

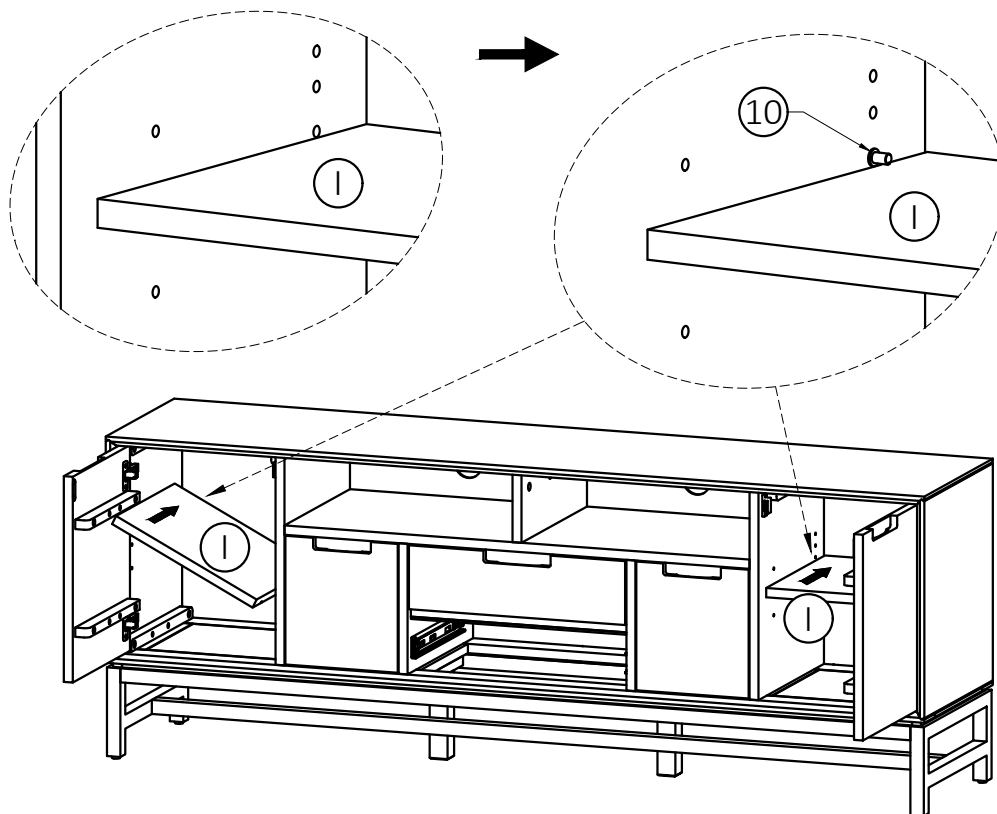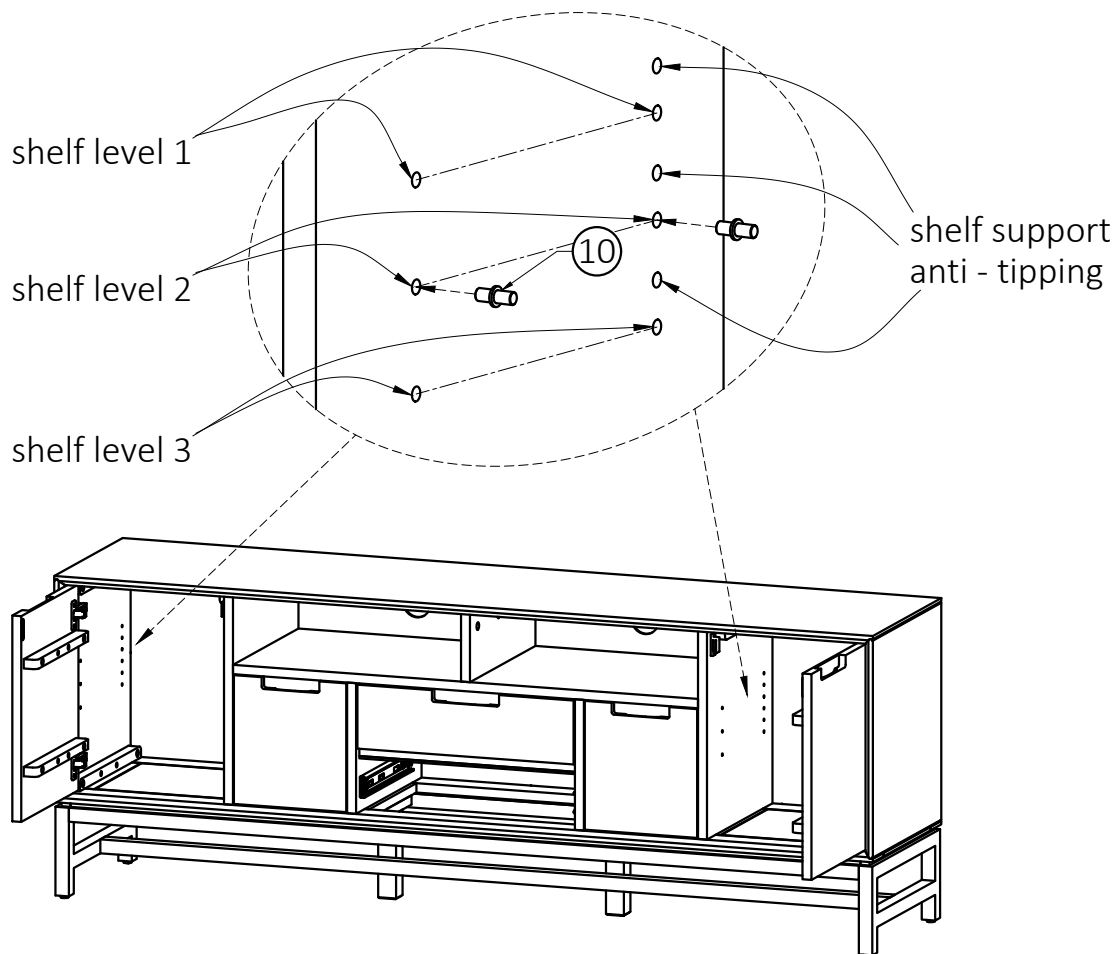


1. Use four Shelf Supports ⑩ for each Shelf ① in desired location .
2. Two Shelf Supports ⑩ may be used on back top of each Shelf ① as a tipping restraint.

Step 28

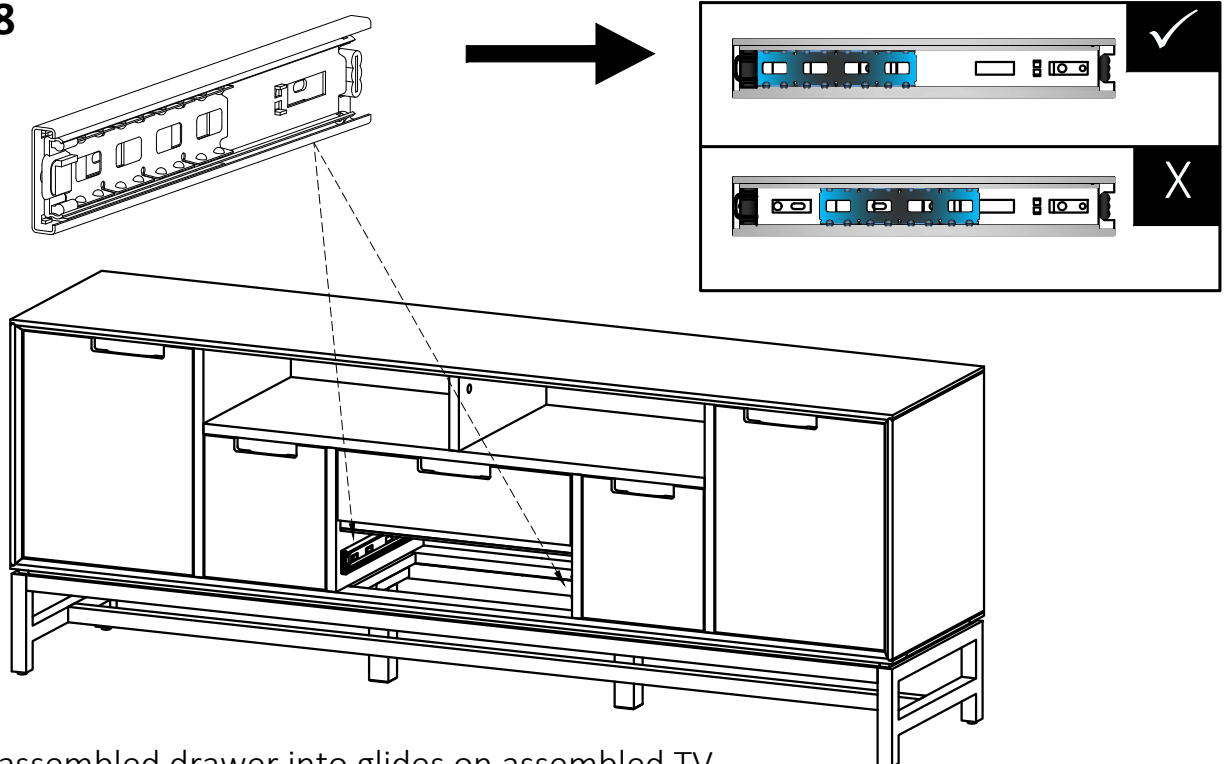

1. Insert assembled drawer into glides on assembled TV.

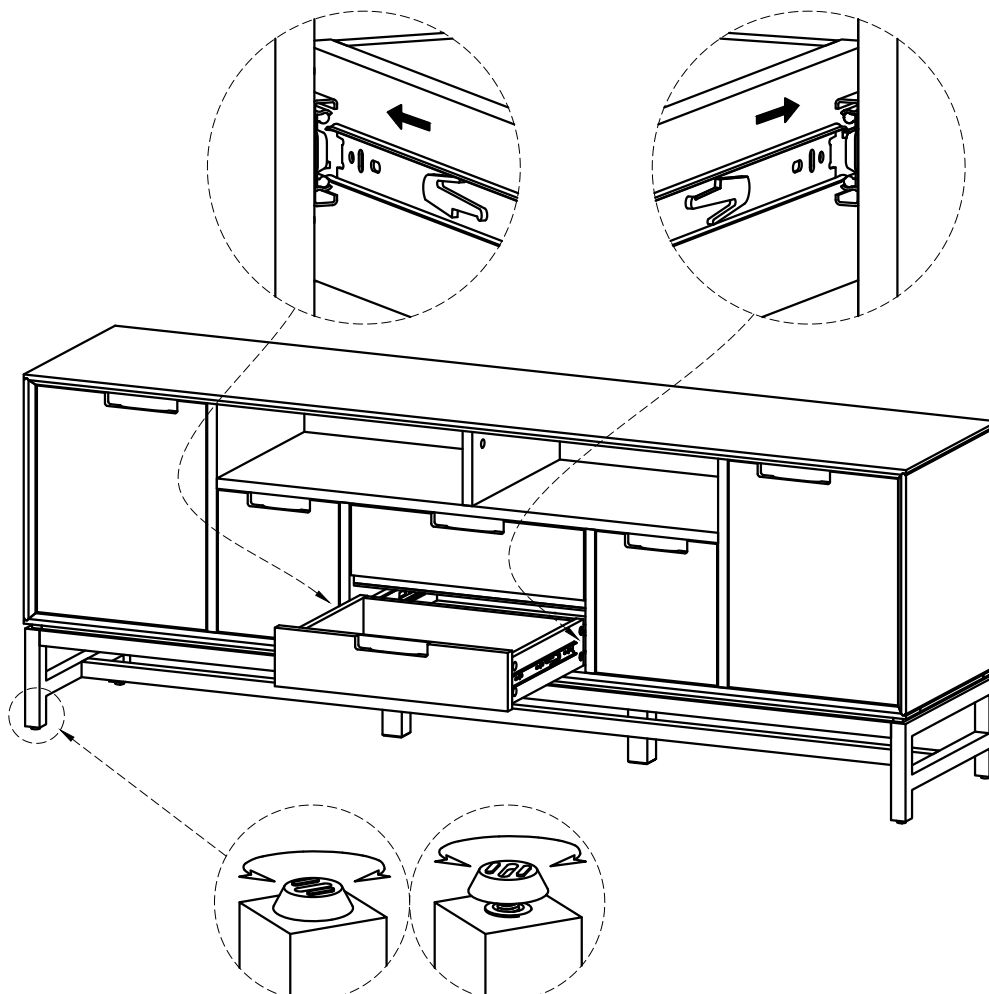


Note: Levelers on bottom of legs can be adjusted if floor is uneven.

Furniture Tip Over Restraint Assembly


WARNING

Serious or fatal crushing injuries can occur from furniture tip-over.
If the furniture tip over restraint kit is not in the box, please contact our customer service department in order to obtain another kit before using the furniture.

 Step 29




NOTE: The screwdriver is not included in the hardware pack.

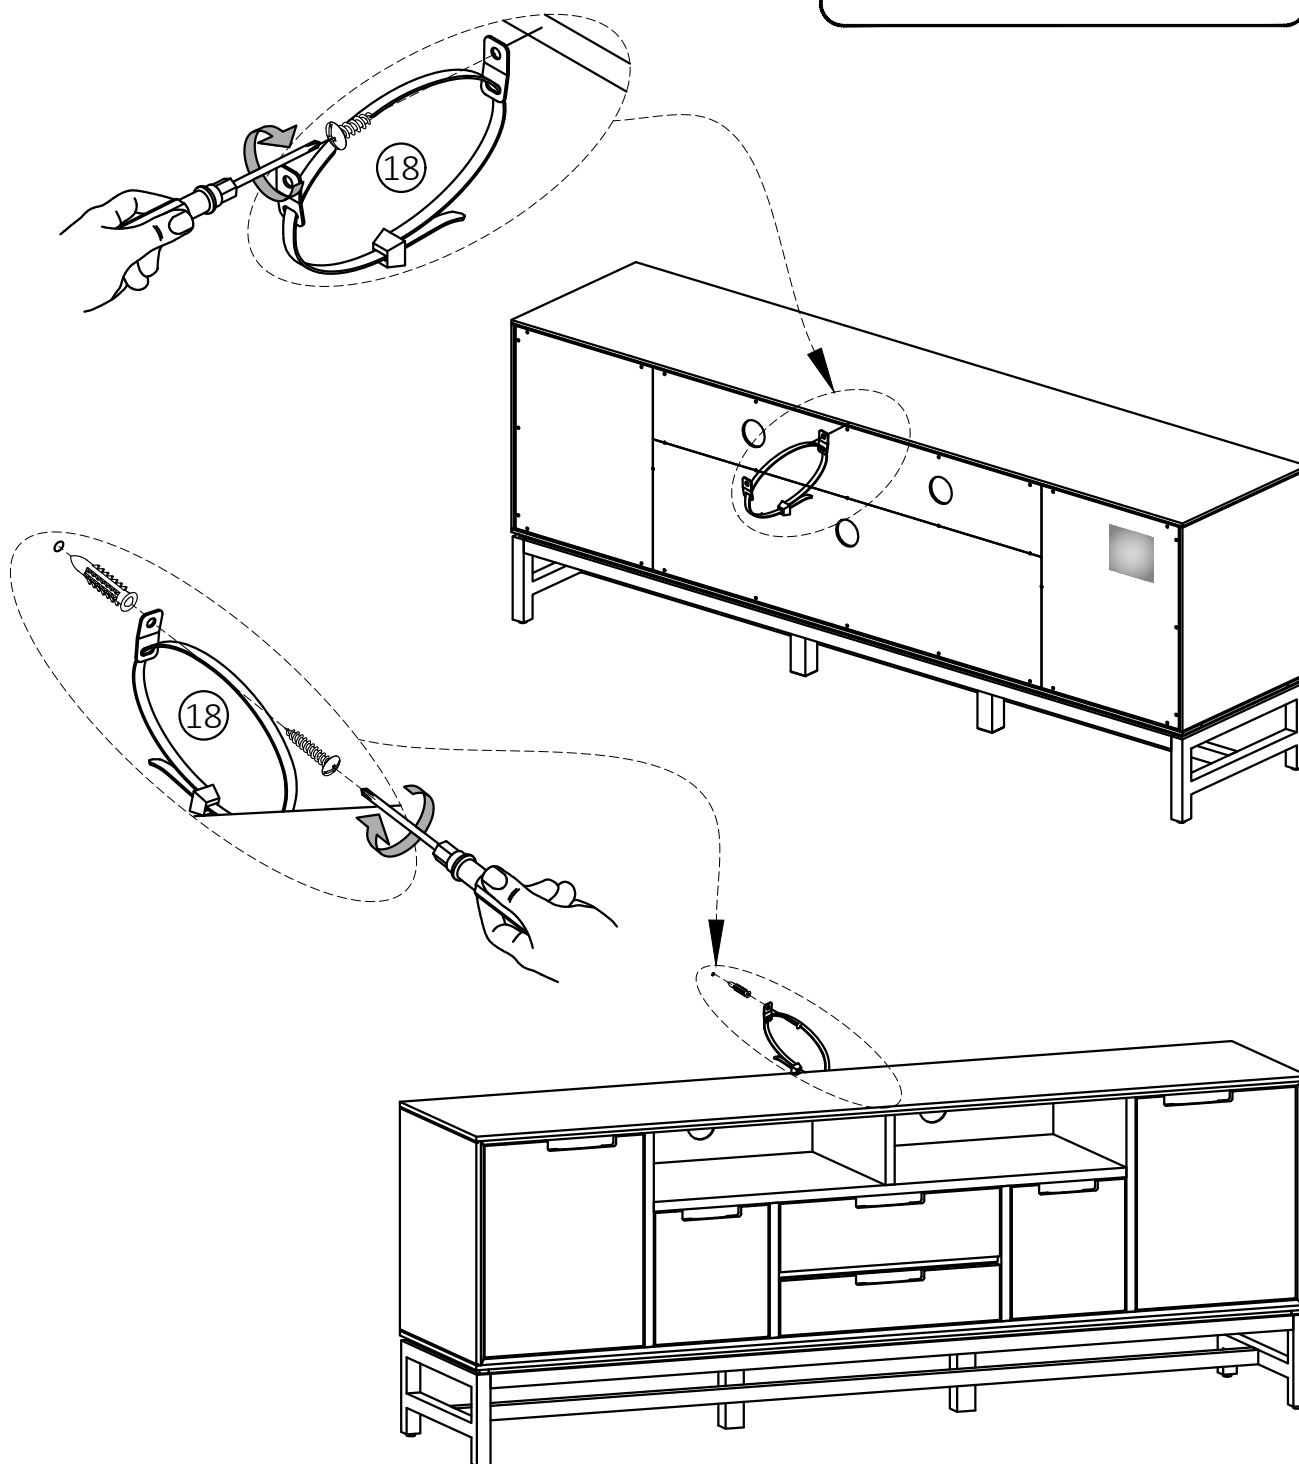


Furniture Anti-Tipping Restraint Instructions


1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the shorter screw.

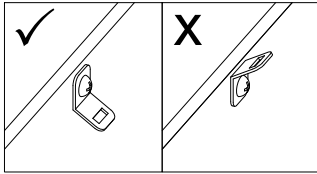

2. Determine where furniture is to be placed and mark location on the wall for mounting bracket screw hole approximately 2 inches below the bracket mounted to the furniture.

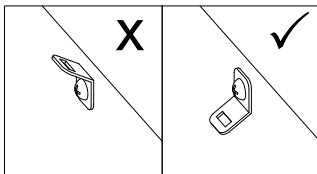

3. Drill a 3/16 inch hole in the wall. Press the plastic anchor into the hole and gently tap until the flange on the anchor is against the wall surface.
4. Position the bracket over the anchor and use the longer screw to securely attach the bracket to the wall.
5. Place the furniture so the back edge is in line with the bracket on the wall.
6. Lace an end of the nylon zip-tie strap down through each bracket. Bring both ends together and slide the smooth side upright through the square-shaped end and pull through to create the "locked" position.
7. Check to make sure the strap is securely laced and locked to the brackets.

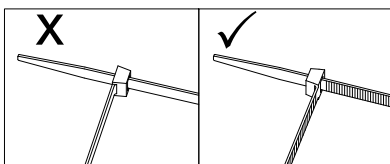

- **DO NOT** place heavy objects in top drawers or on top shelves
- **DO NOT** let children climb or hang on drawers, doors or shelves