

 
# SIMPLIHOME®

## Clarkson / Wright / Mooney

---

TV Stand

Model # AXCLAR-16-RNAB

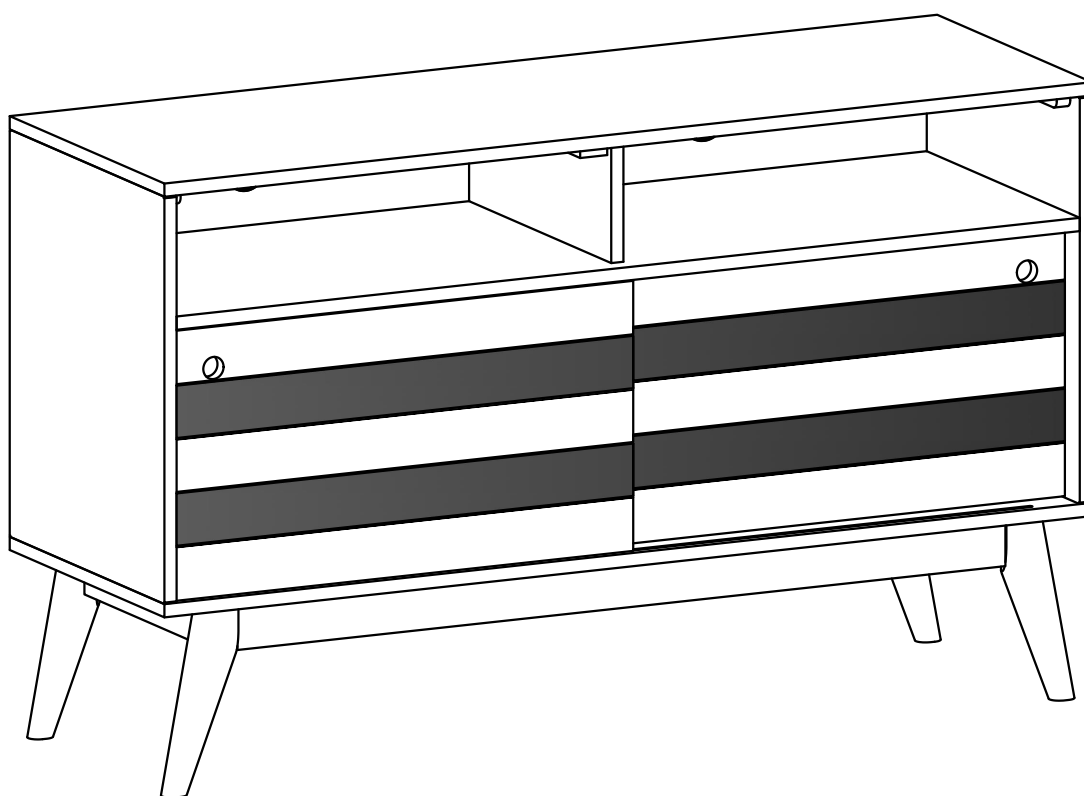

brooklyn + max™

WyndenHall™  
HOME DECOR

# SIMPLIHOME


## Great quality is a right.

Thank you for shopping with Simpli Home,  
America's top brand for high-value furniture.



## It's time to register your product warranty.

It's quick and easy. And you'll be happy you did.

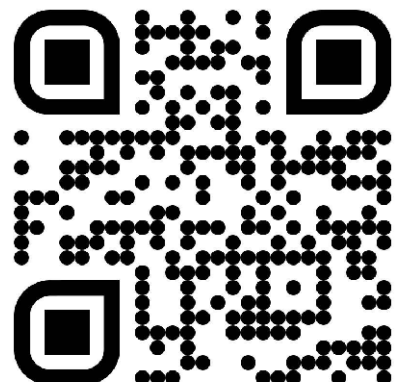


- ✓ Activate your **1-year** warranty
- ✓ Automatic entry to win a **\$500** gift certificate
- ✓ Earn instant rewards and **save**

[simpli-home.com/product-registration](https://simpli-home.com/product-registration)

# SIMPLIHOME
 
## Review your product and collect rewards!

Thank you for your purchase! We hope you enjoy it. We'd love your feedback. Please share a review and get instant rewards!

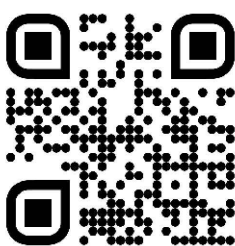

*[simpli-home.com/product-review](https://simpli-home.com/product-review)*



## Share photos and get your cash back!



Send us images or share them on social and qualify for instant rewards. You may even receive store credit on your entire purchase!



*[simpli-home.com/share-images](https://simpli-home.com/share-images)*

# SIMPLIHOME®

## For Fastest Customer Service:



1. Open your phone's camera.
2. Point your phone's camera at the QR code to scan.
3. Click on the pop up.
4. You'll be taken to our customer service page.
5. Fill the form with your order information and issue.
6. Submit form.
7. A customer service associate will contact you.

### Other ways to contact us...



#### Email Us

[customerservice@simpli-home.com](mailto:customerservice@simpli-home.com)



#### Visit Us

Visit our site directly at  
[www.simpli-home.com](http://www.simpli-home.com)



#### Call Us

1-866-518-0120  
Monday to Friday  
9am to 5pm EST

**\*If you've purchased from a retailer and you wish to return the product, please contact the retailer directly.**

**IMPORTANT** : Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

## **Safety Information**

**CAUTION:** Injuries and damage can occur from furniture tip over if product is not properly anchored to the wall. Use the Furniture Anti-Tipping Restraint provided with the product. Consult our assembly instructions for help.

If the Furniture Anti-Tipping Restraint kit is not in the box, please contact our customer service department in order to obtain another kit before using the furniture.

Identify all the parts and hardware. Do not discard of the packaging until you have checked that you have all of the parts and hardware required. Hardware package may have spare parts.

**WARNING:** This item contains small parts which can be swallowed by children and pets. Keep children and pets away during assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets. We recommend that you assemble this unit on a carpeted floor to avoid scratches. If using power tools, set the tool to low torque to avoid damage.

**May require 2 people for ease of assembly.**

## Care & Maintenance

**This furniture is designed for indoor use.**

Perhaps the greatest environmental damage to wood furniture comes from wide swings in relative humidity (RH) in our homes. Wood absorbs and desorbs water as relative humidity rises and falls, and in doing so it swells and shrinks. Making matters worse, it expands and contracts unequally along different grain directions. As humidity changes, the components of wooden objects are continually pushing and pulling against each other. This pressure often results in parts of furniture no longer fitting together closely or becoming distorted or breaking from their own internal stresses.

The response to relative humidity changes begins with determining the annual average RH for your particular space. Then try to keep the RH in the space where your furniture is as close to that average as possible, generally within about 10% up or down. De-humidify in the summer and humidify in the winter.

Be aware that raising the temperature lowers the humidity and vice versa. Thus, modern heating systems, which can drive down interior RH in the winter, almost invariably cause problems for furniture. To counteract their effect, you can either modify the RH by keeping furniture containing spaces cooler in the winter or most importantly, have a good working humidifier for your home. A humidistat automatically works to balance the humidity in your home so it is constant. Dry indoor air can suck enough moisture from its surroundings to do permanent damage to wood, causing it to crack or split.

Remember, that not all woods are created equal. Two factors that help determine how rapidly a wood will lose moisture are pore size and surface hardness. A piece made from a dense and hard wood will dry less rapidly than pieces made from softer woods.

Furniture that is sealed and lacquered will lose moisture more slowly than an unfinished piece while pieces with veneer finishes are not only stronger but lose moisture more slowly than other finishes.

 
### **To help protect your wood furniture, take these steps:**




- Use a humidifier, preferably one with an automatic control system that can sense the humidity level and adjust itself accordingly
- Don't over-humidify; that can damage wood by causing it to expand and contract
- Keep furniture out of direct sunlight, which can cause it to dry out, crack and warp
- If you can avoid it, don't put furniture near heating vents; if you can't, keep the item 3 to 4 inches away from the wall, giving the heat and air space to circulate
- Dust with soft dry cloth
- Do not use liquid or aerosol products
- To avoid marking, do not place rubber on surface (foot pads, etc.)
- For soil build-up, wipe with damp cloth & dry
- Do not use abrasive cleaners

## WARNING

The maximum diagonal CRT television screen size is 25 inch to 27 inch (63.50 cm to 68.58 cm). For use with televisions weighing 200 lbs or less. Using larger or heavier televisions may cause instability or tip over which can lead to serious injury or even death.

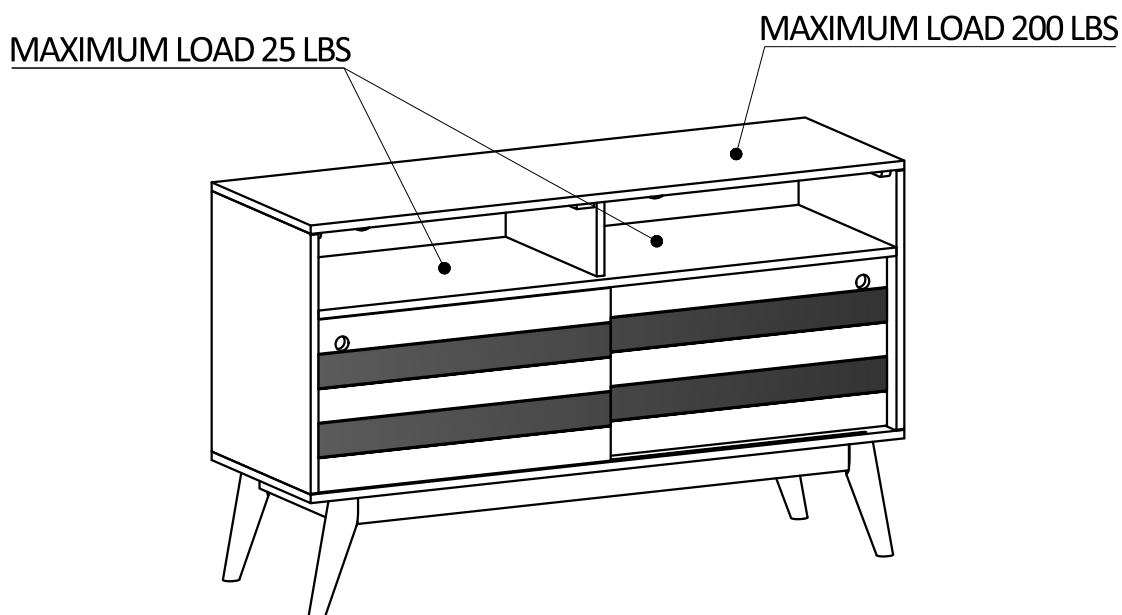The recommended maximum width of the television intended for use is 60 inch (152.4 cm).




-  **WARNING** Do not place toys, food, etc. on the top shelves or upper drawers. Serious injury or death may occur when children climb on furniture. A remote control or items placed on the furniture may encourage a child to climb on the furniture and as a result make it top-heavy and cause it to tip over on the child.
-  **WARNING** Do not place a TV that exceeds the weight limits or size guidelines shown in the instructions specified for the furniture. Do not overload shelves or place heavy items on top shelves or drawers. Improper use of furniture to support TVs may result in serious injury or death.
-  **WARNING** Do not relocate audio and/or video equipment to furniture not specifically designed to support audio and/or video equipment. Do not move furniture without shelves or drawers unloaded. Furniture can collapse or tip over onto a child and cause physical injury or death.

This TV Stand does not come with legible instructions pertaining to the risk of fire and electric shock that is associated with the use of electrical components such as operation, user-maintenance, loading, storage and as applicable electrical issues including grounding or double-insulation.

Any use of this item other than that recommended by the manufacturer in this manual may cause fire, burns, electric shock and/or serious injuries or death.


## Part Description

 A

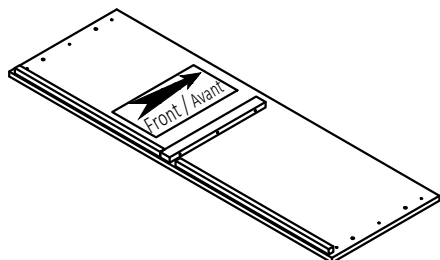


TOP  
QTY 1

 BL

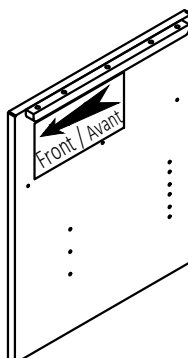


LEFT SIDE  
QTY 1

 BR

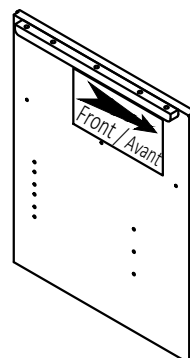


RIGHT SIDE  
QTY 1

 C

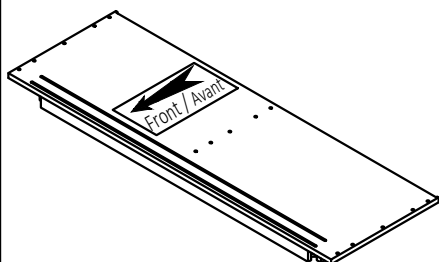


BOTTOM SHELF  
QTY 1

 D

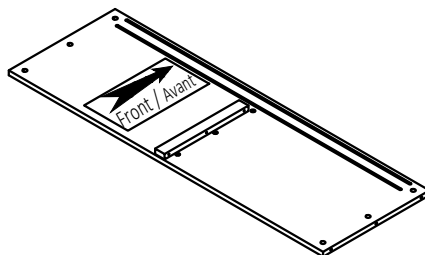


MIDDLE SHELF  
QTY 1

 E

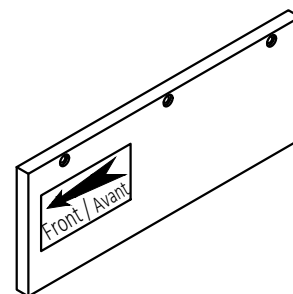


UPPER DIVIDER  
QTY 1

 F

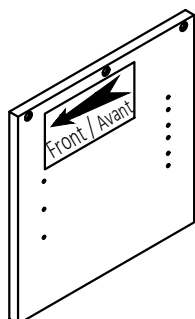


LOWER DIVIDER  
QTY 1

 G

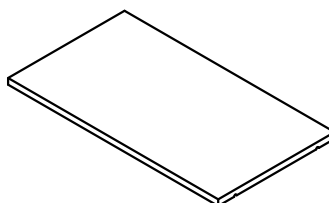

SHELF  
QTY 2

 H

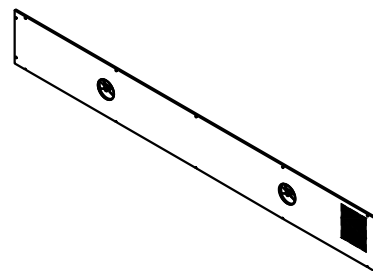


UPPER BACK  
QTY 1




**Part Description**

 I

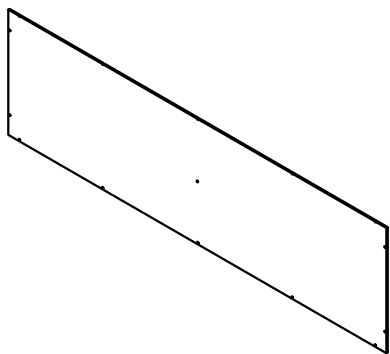


LOWER BACK  
QTY 1

 JL

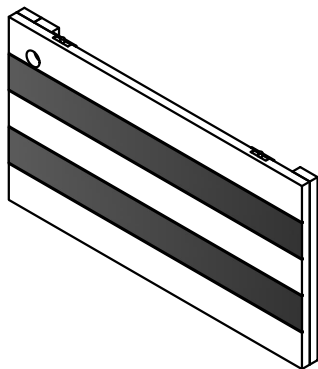


LEFT DOOR  
QTY 1

 JR

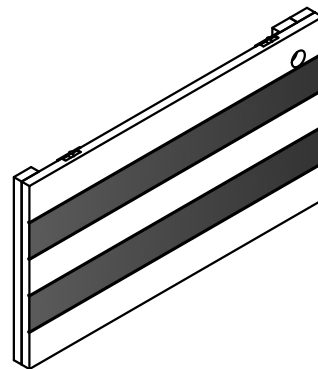


RIGHT DOOR  
QTY 1

 K1

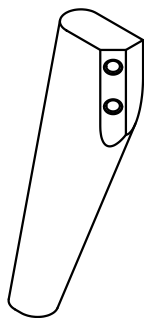

LEG  
QTY 2

 
K2

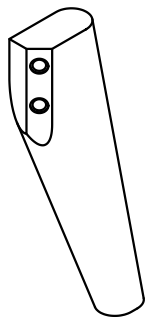

LEG  
QTY 2

## Hardware Description

 1




ALLEN KEY SCREW  
M6 X 30mm  
QTY 24

2




WOOD DOWEL  
Ø8 X 30mm  
QTY 10

 3




CAM LOCK PIN  
CAM LOCK  
QTY 6 SETS

 4



PHILLIPS SCREW  
ROUND HEAD  
M4 X 15mm  
QTY 24

 5



SHELF SUPPORT  
QTY 12

6



 
ALLEN KEY BOLT  
M6 x 60 mm  
QTY 8

7




LOCK WASHER  
Ø10 / Ø6 x 1.5 mm  
QTY 8

8




LOCK WASHER  
Ø16 / Ø6 x 1 mm  
QTY 8

 9

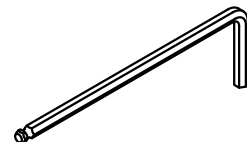



ALLEN KEY  
QTY 1

 10

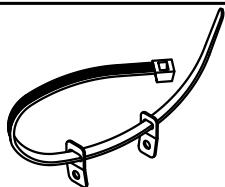


- a. M4 X 25mm - QTY 2  
(1 is extra)
- b. M4 X 15mm - QTY 1
- c. M4 X 25mm - QTY 1

  
FURNITURE TIP OVER RESTRAINT  
QTY 1 SET

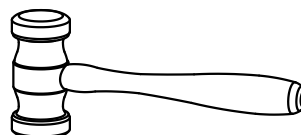

 Required -  
Flathead screwdriver  
Phillips screwdriver  
Rubber mallet  
**Not Included**

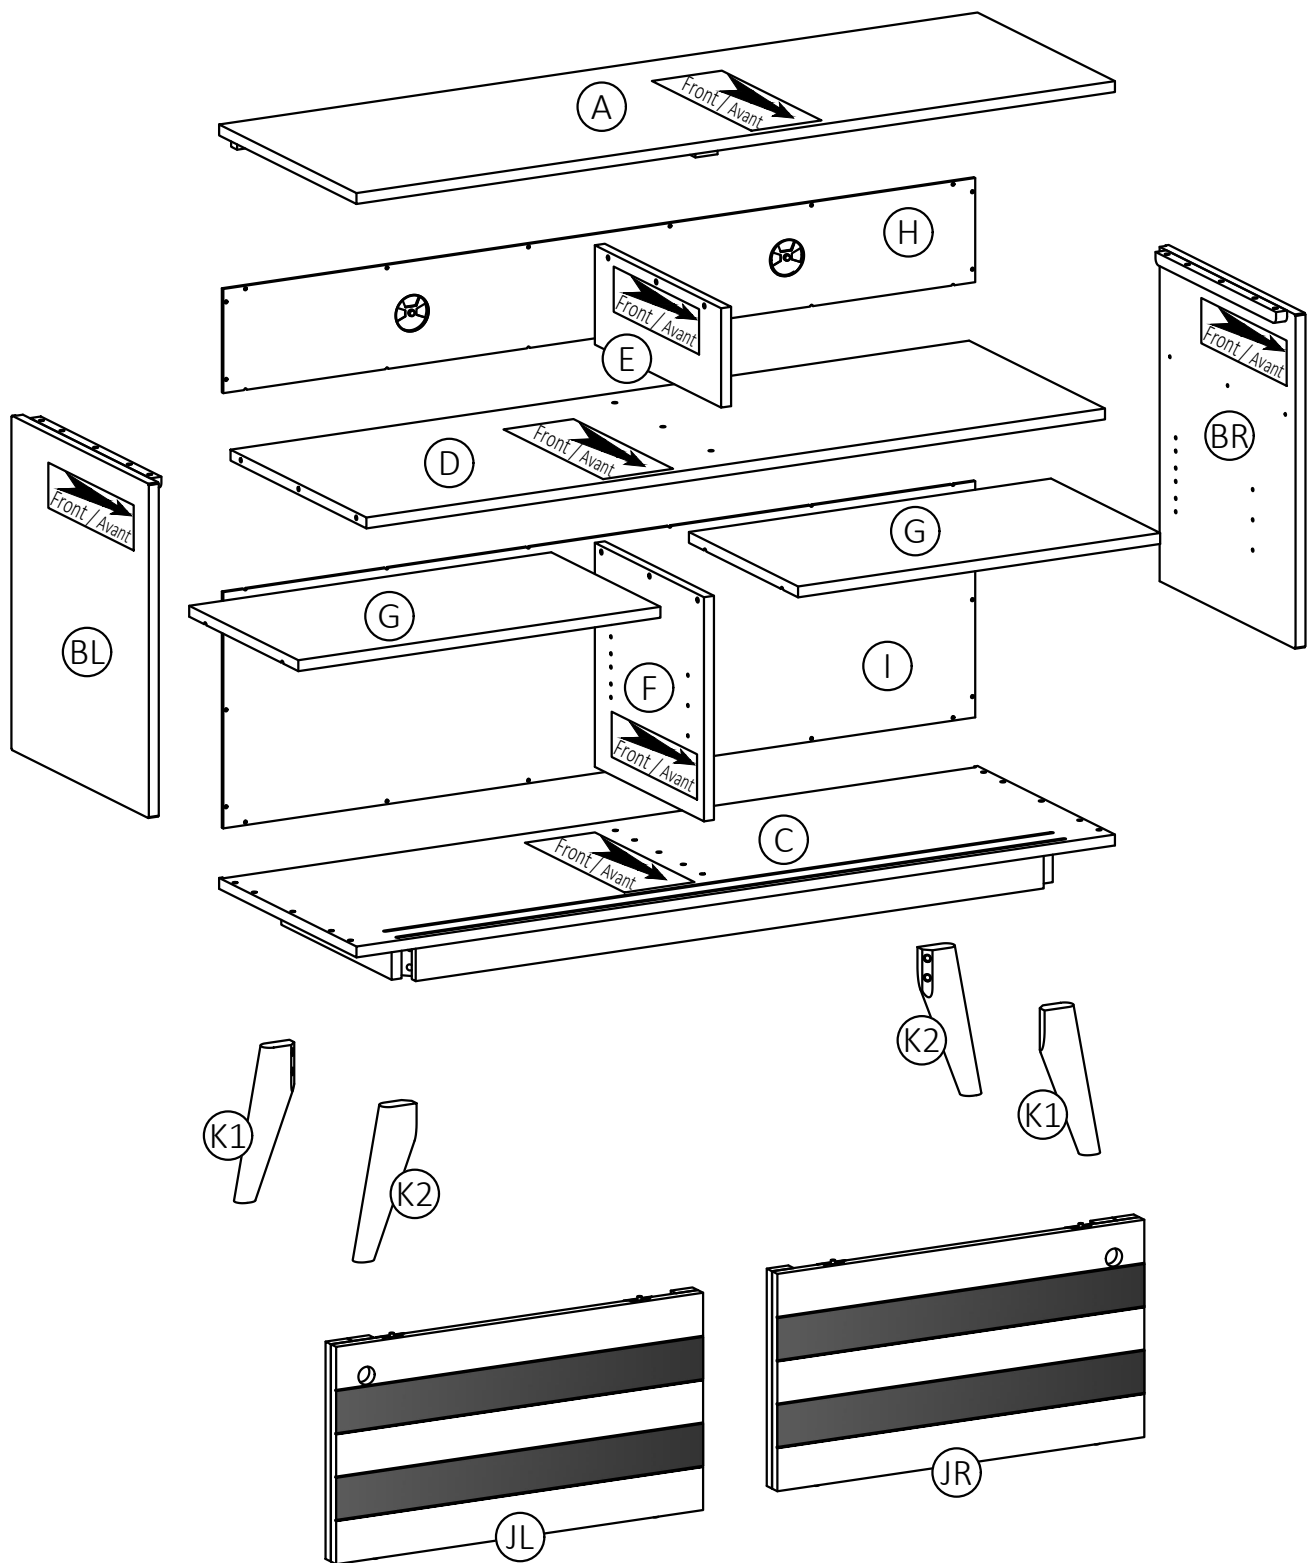


## Step 1

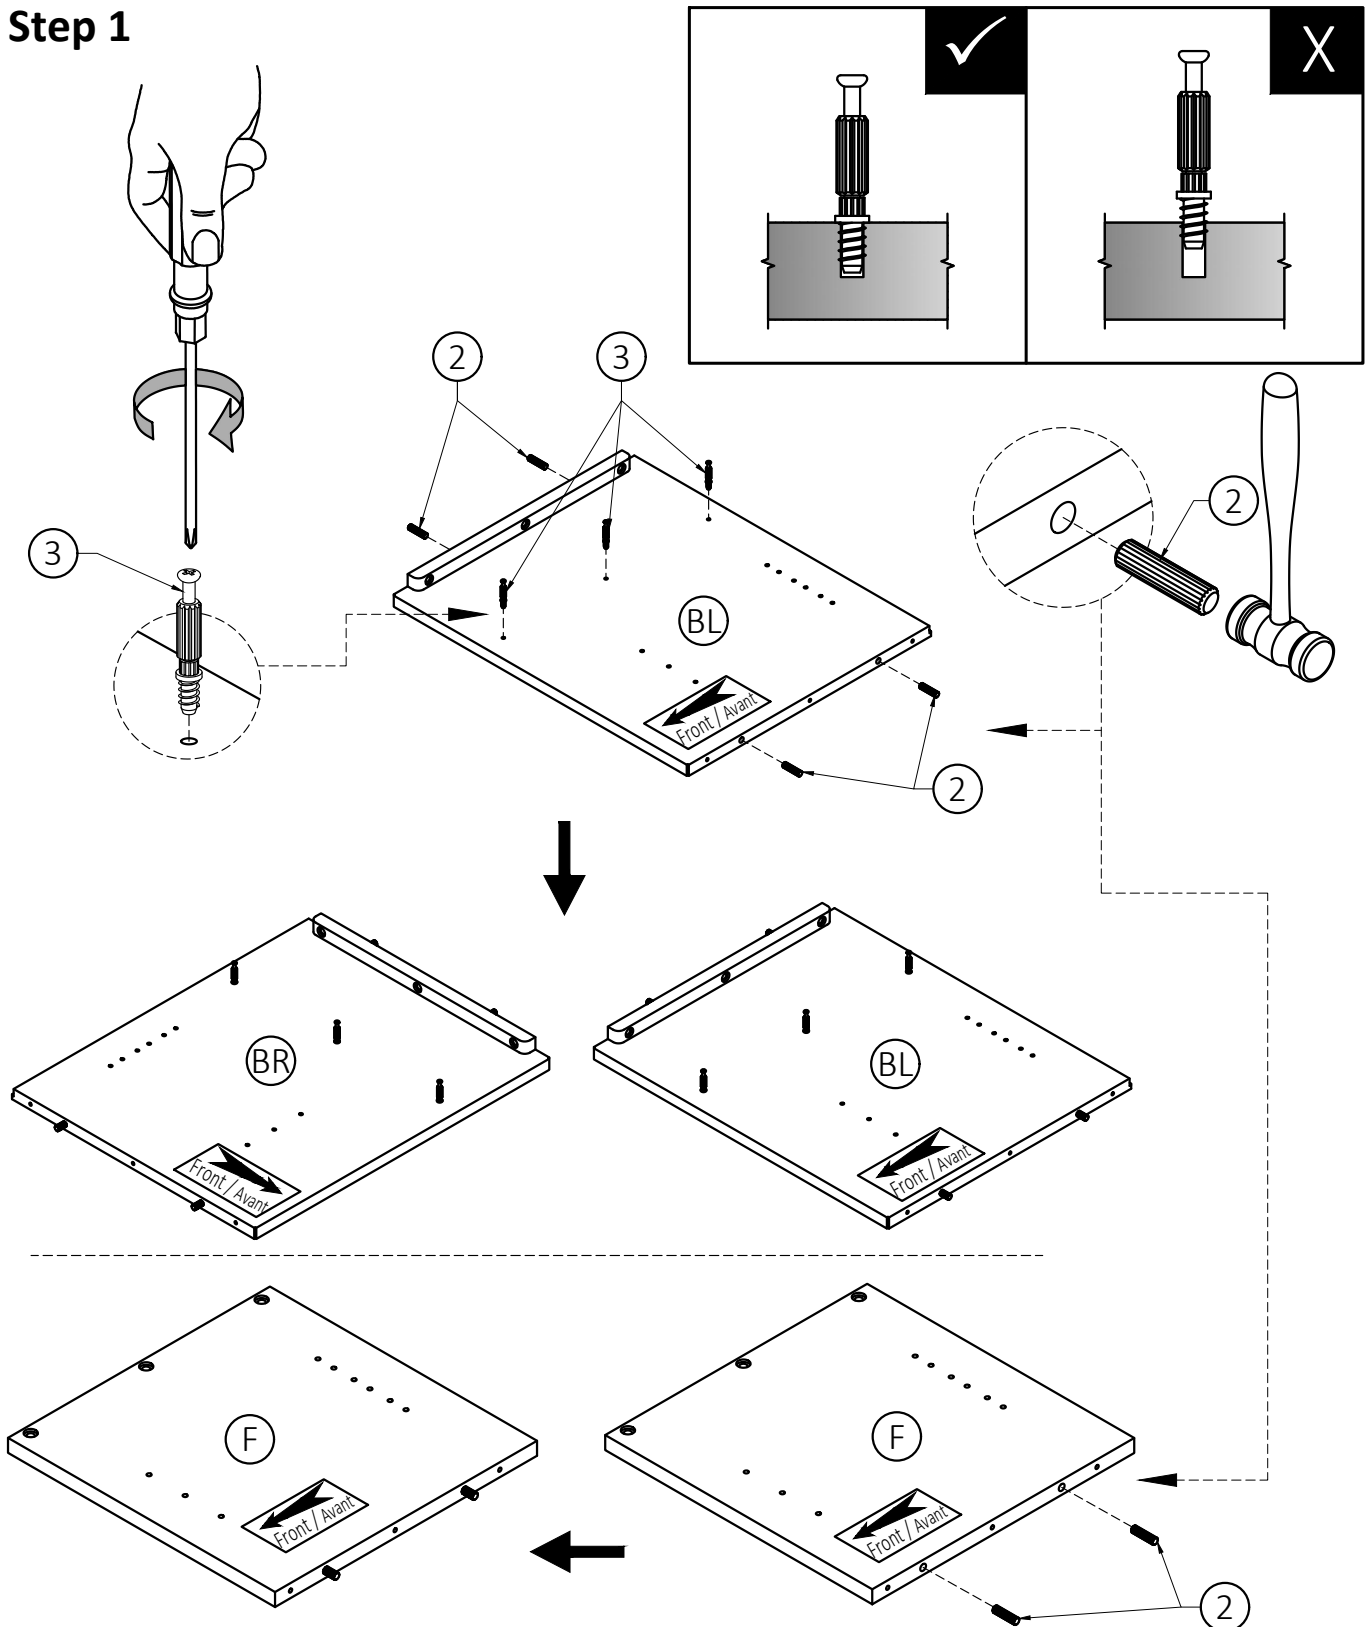 


1. Attach three Cam Lock Pins (3) into pre-drilled holes on each Side (BL, BR).
2. Use Phillips screwdriver to secure Cam Lock Pins. Do not over-tighten.
3. Insert Dowels (2) into guide holes on each parts (BL, BR, F).
4. Use rubber mallet to tap Dowels (2) into bottom of holes securely. 1/2 length of Dowels should be exposed.

## Step 2

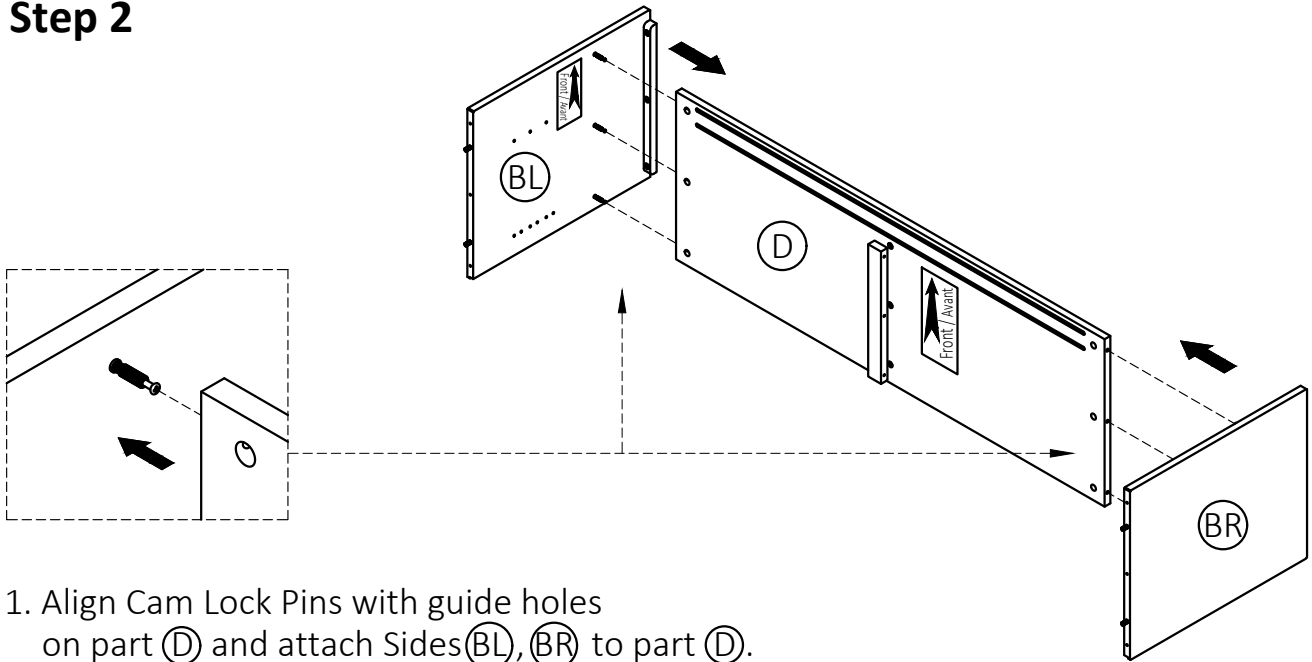 


 1. Align Cam Lock Pins with guide holes on part ① and attach Sides ②, ③ to part ①.

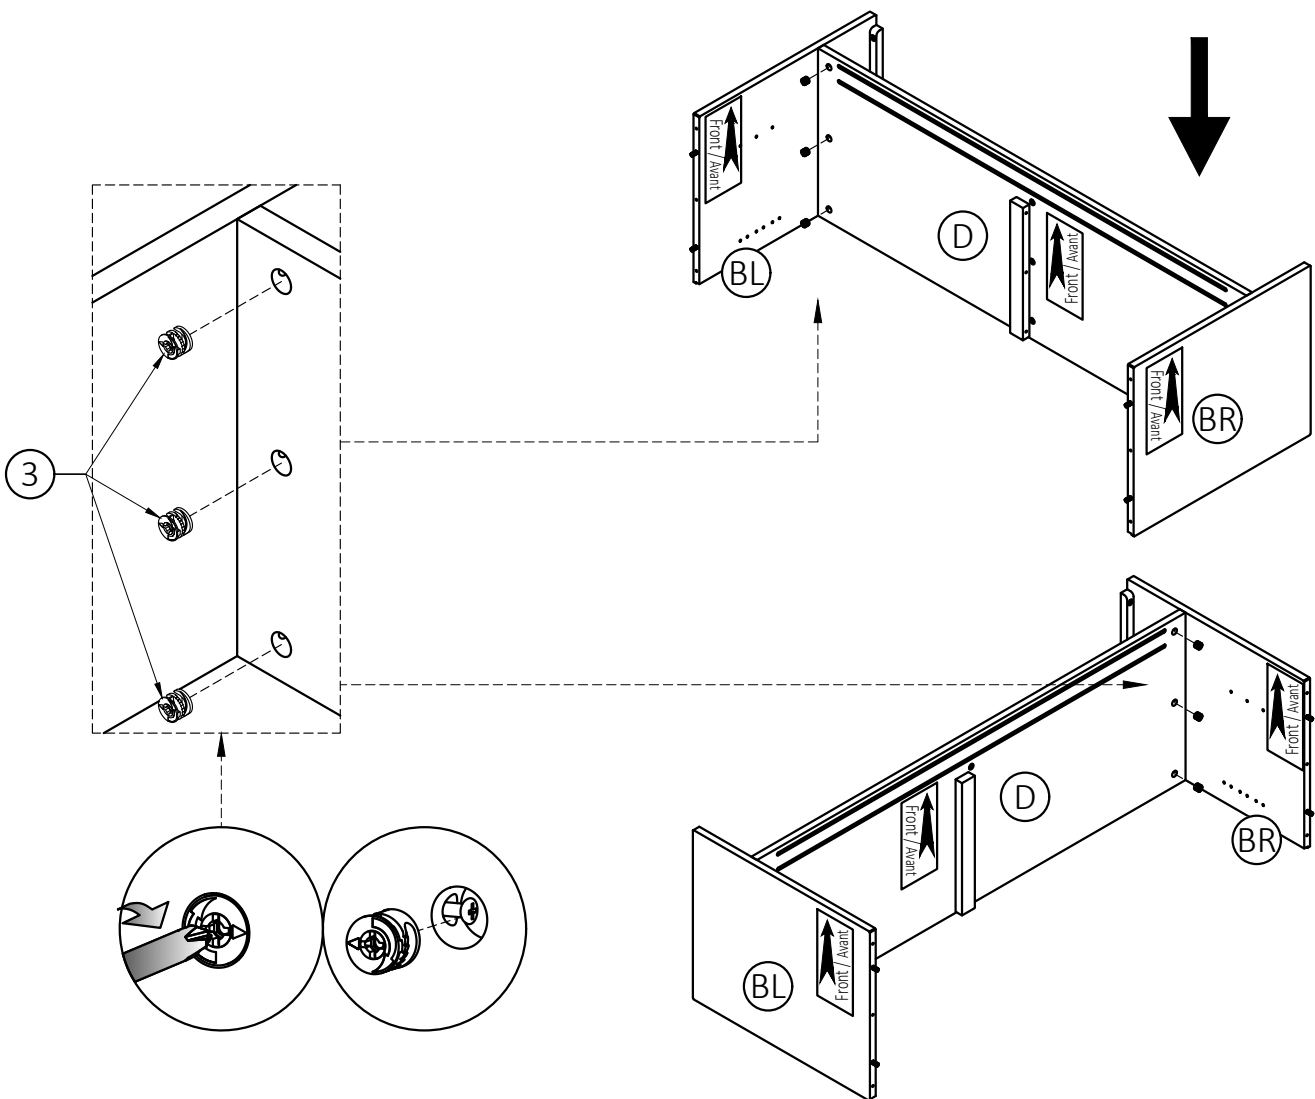


2. Insert six Cam Locks ③ into guide holes on part ①.
3. Use Phillips screwdriver to secure Cam Locks. Do not over-tighten.


## Step 3

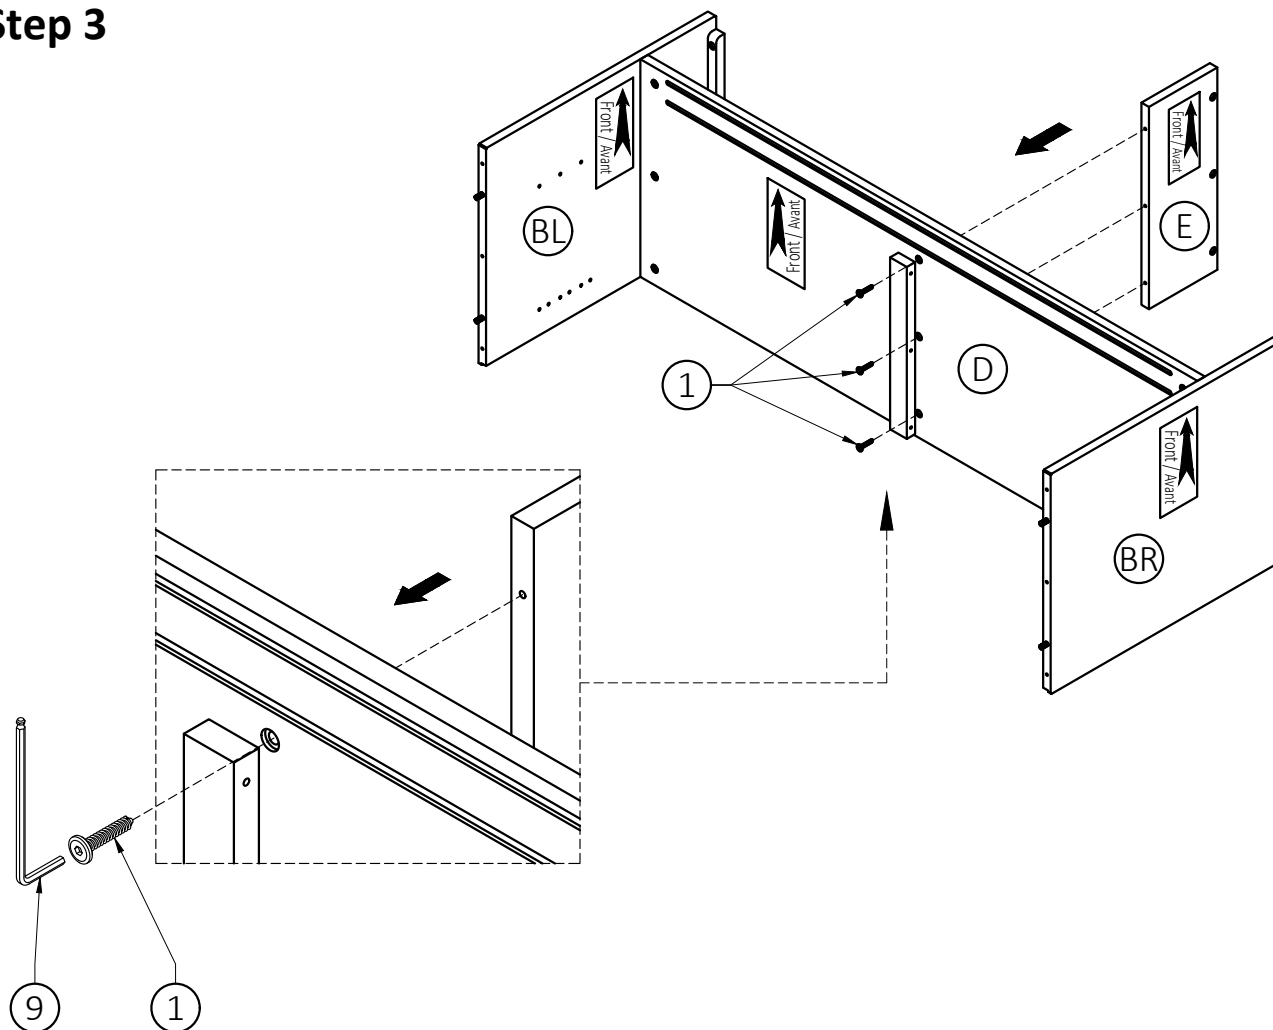 

 
1. Use three Allen Key Screws (1) to attach Divider (E) through guide holes.
2. Use Allen Key (9) to tighten Screws. Do not over-tighten.

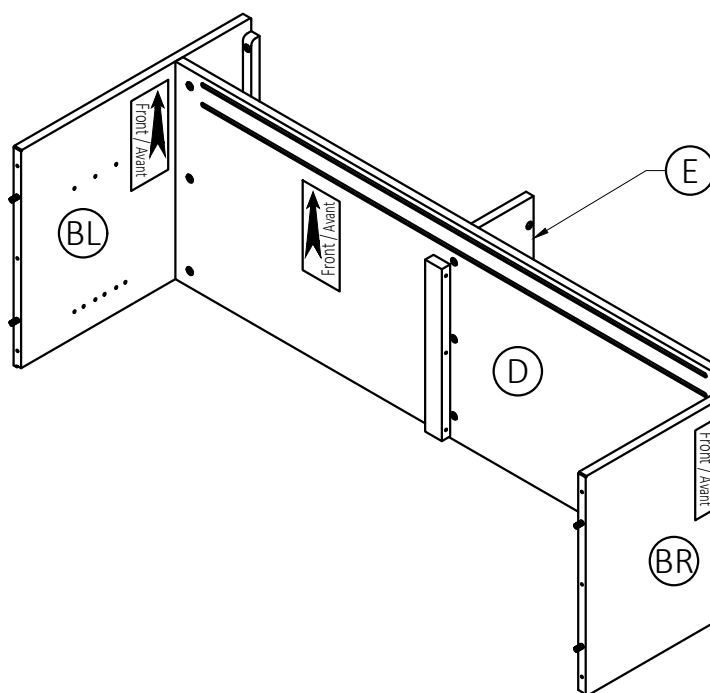

## Step 4

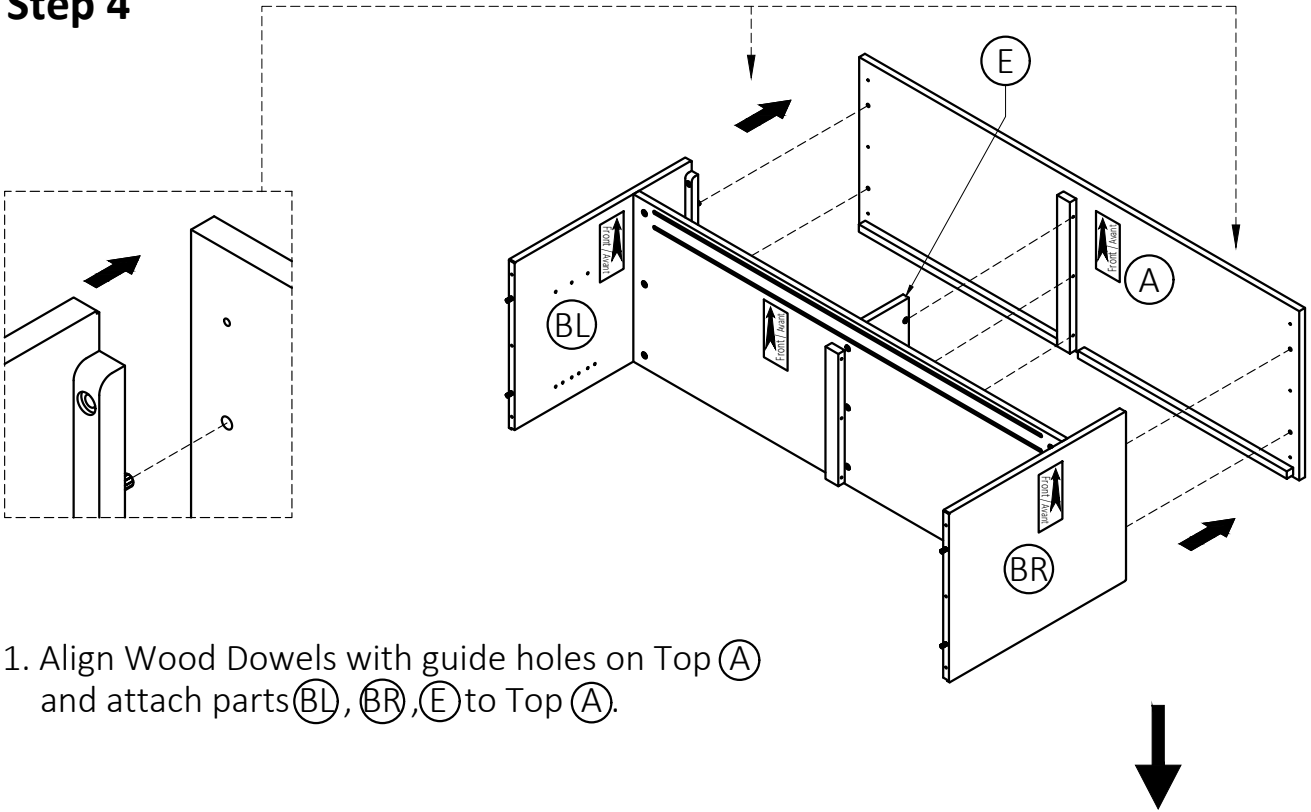 


 1. Align Wood Dowels with guide holes on Top (A) and attach parts (BL), (BR), (E) to Top (A).

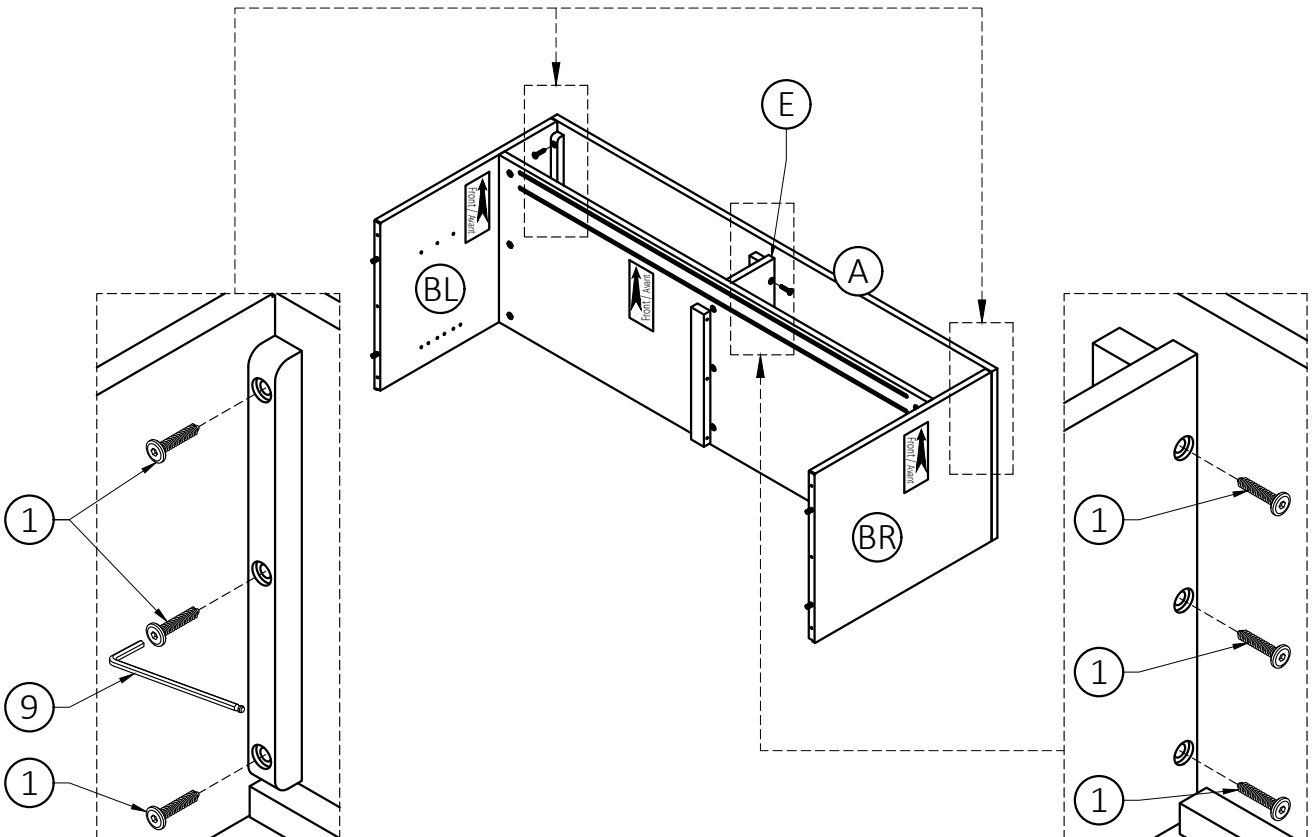


2. Use three Allen Key Screws (1) to attach each part (BL), (BR), (E) through guide holes.
3. Use Allen Key (9) to tighten Screws. Do not over-tighten.

## Step 5

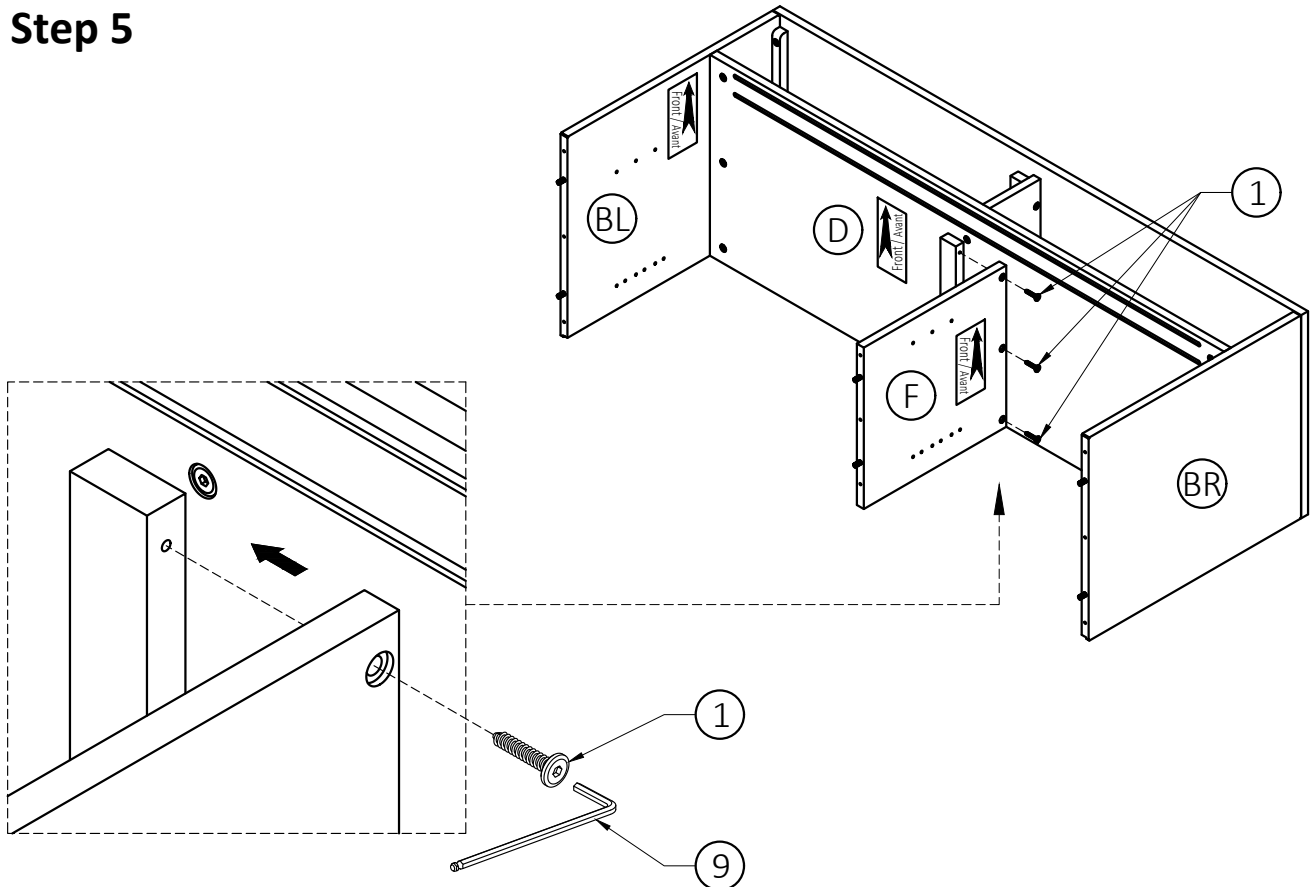 


 1. Use three Allen Key Screws ① to attach Divider ⑥ through guide holes.
2. Use Allen Key ⑨ to tighten Screws. Do not over-tighten.

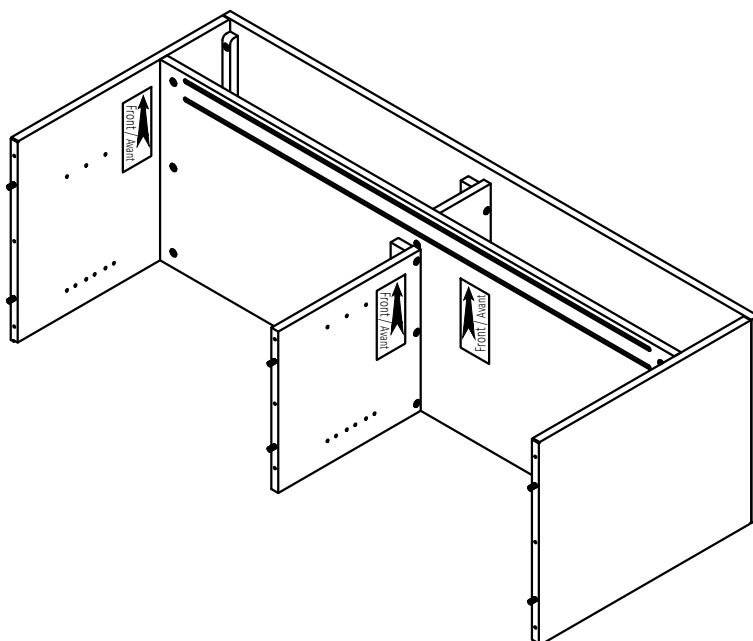




## Step 6

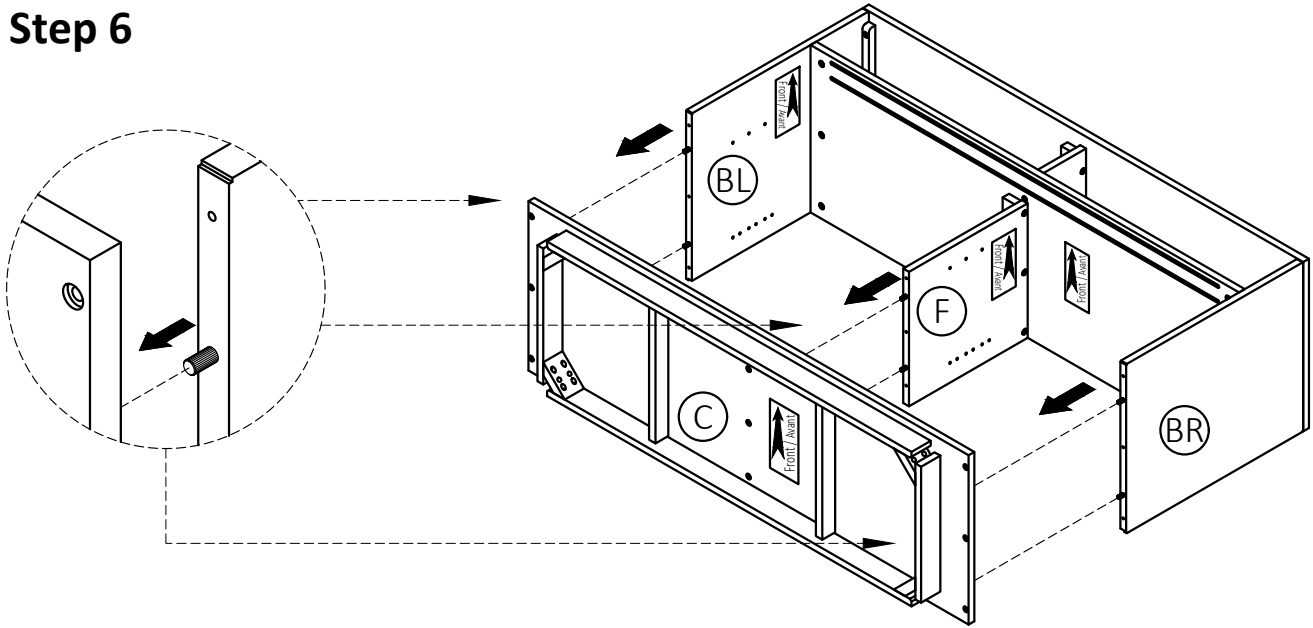 


 1. Align Wood Dowels with guide holes on Bottom Shelf (C) and attach parts (BL), (BR), (E) to Bottom Shelf (C).

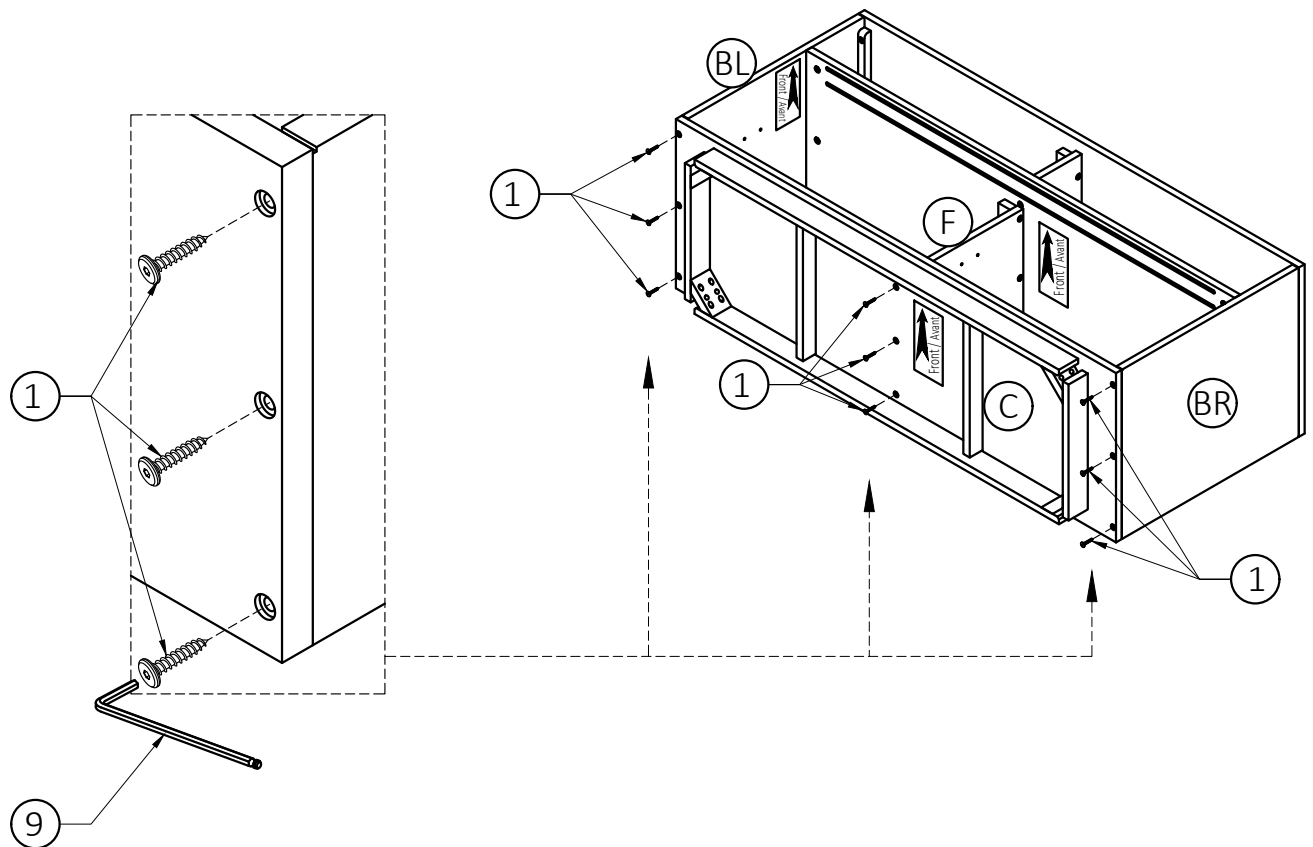


2. Use nine Allen Key Screws (1) to attach Bottom Shelf (C) through guide holes.
3. Use Allen Key (9) to tighten Screws and Bolts. Do not over-tighten.


## Step 7

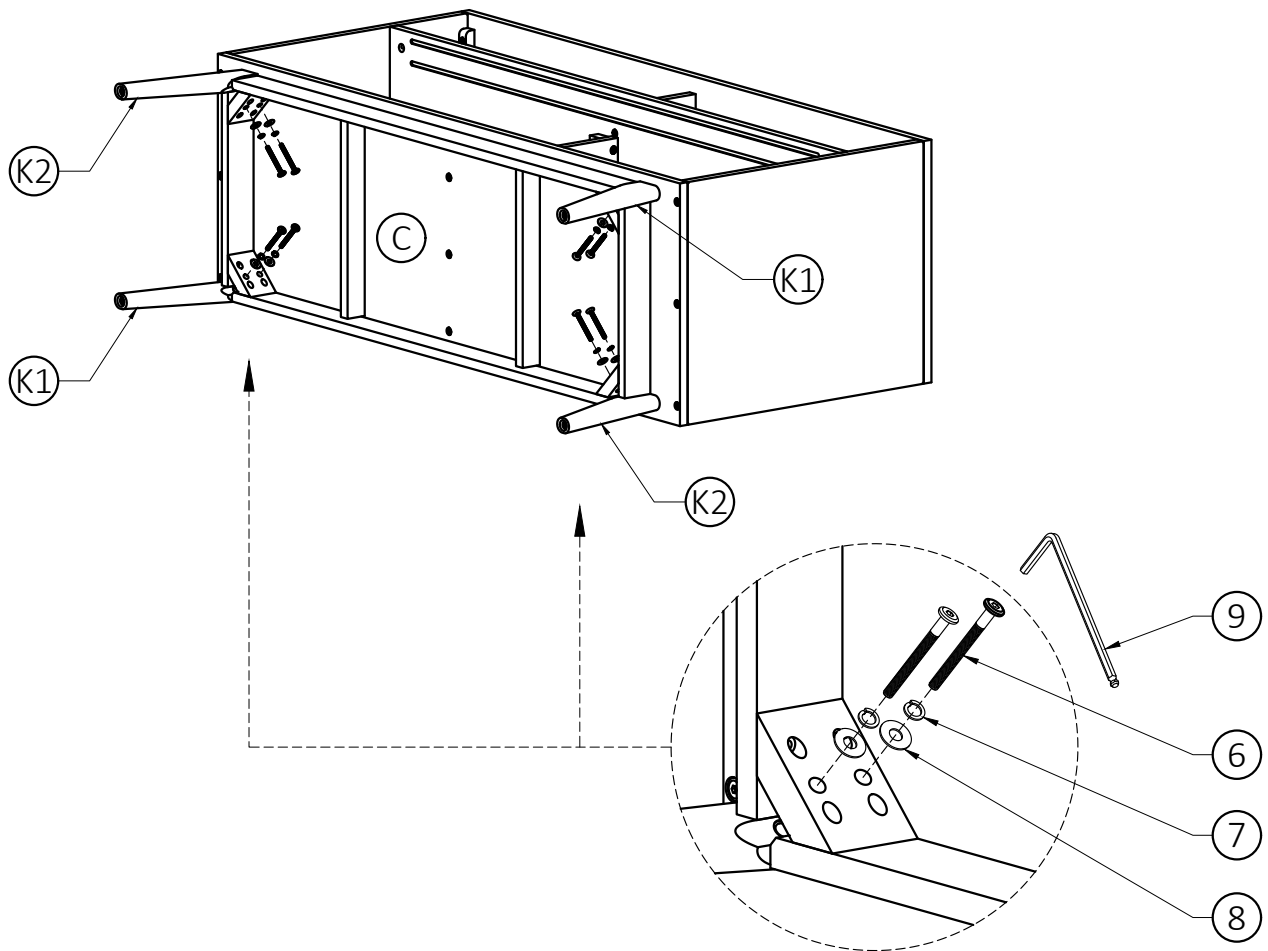 




1. Attach Legs (K1), (K2) to Bottom Shelf (C) using eight Allen Key Bolts (6), eight Lock Washers (7) and eight Washers (8) through guide holes.
2. Use Allen Key (9) to tighten Bolts. Do not over-tighten.

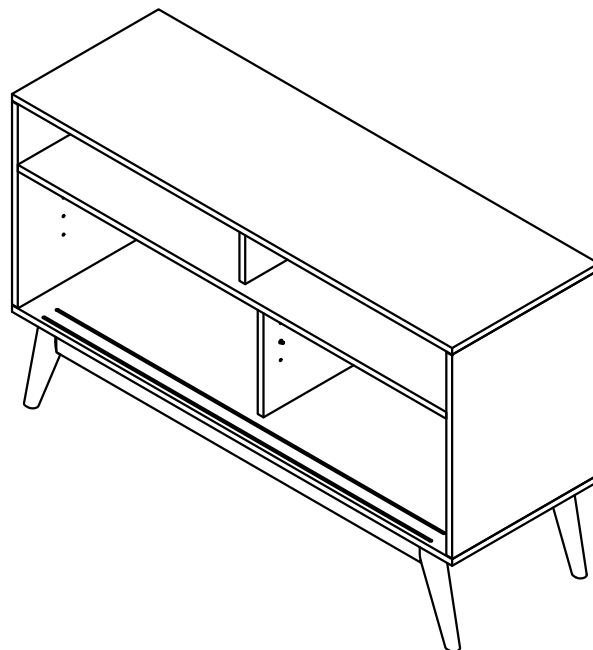 

## Step 8

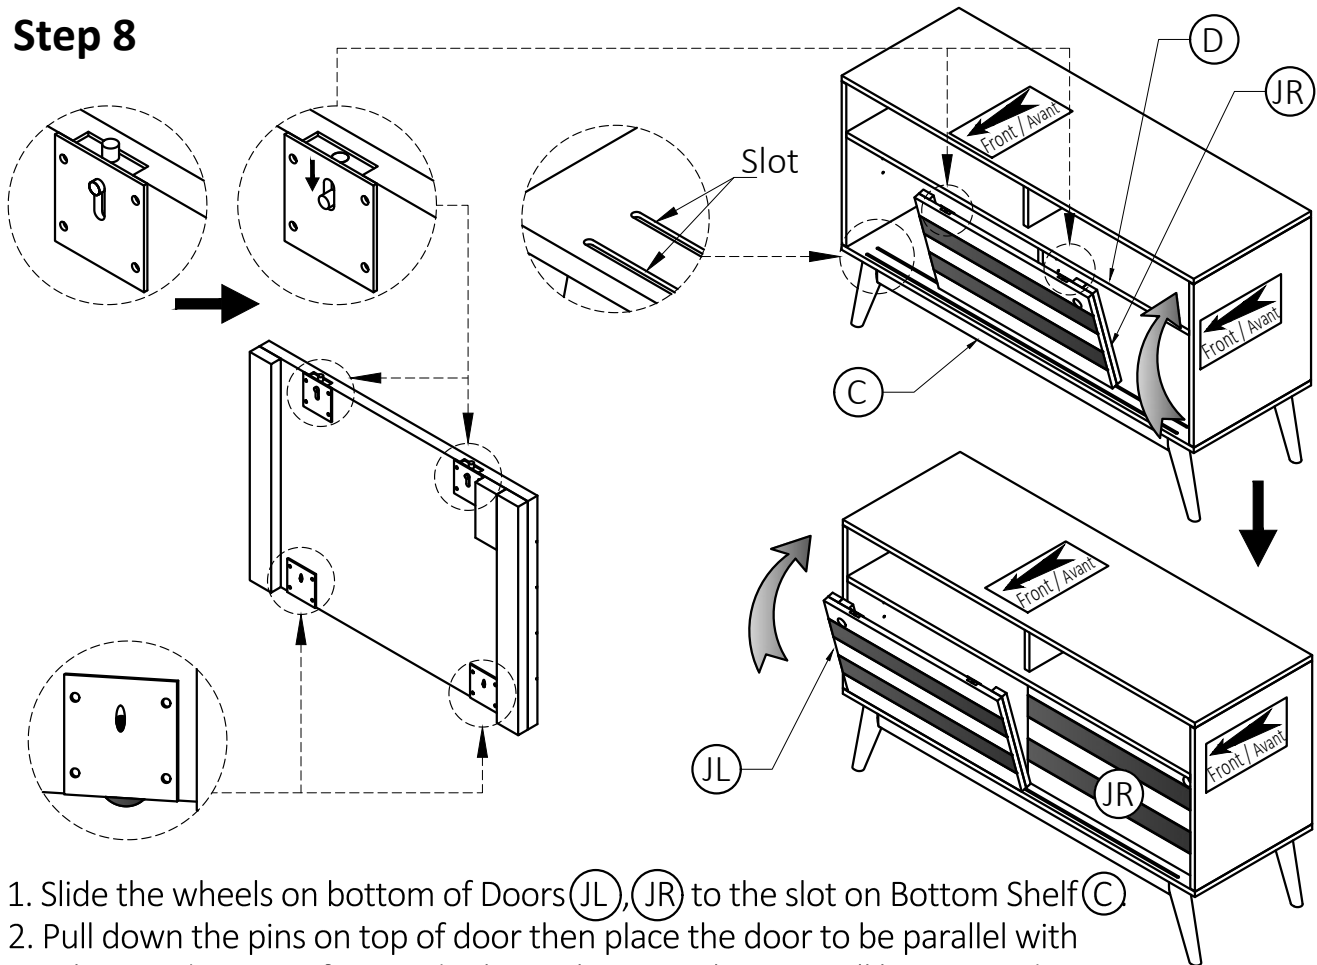 

   1. Slide the wheels on bottom of Doors (JL), (JR) to the slot on Bottom Shelf (C)
2. Pull down the pins on top of door then place the door to be parallel with cabinet side post. Afterward release the pins. The pins will be inserted into the slot underneath of part (D).

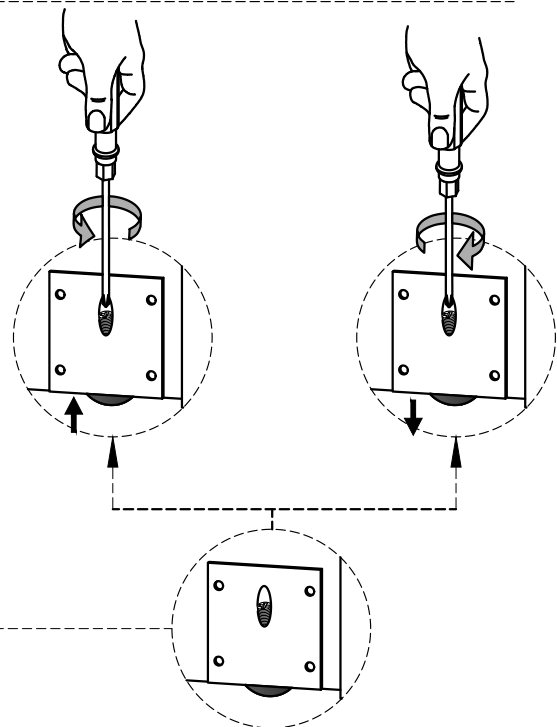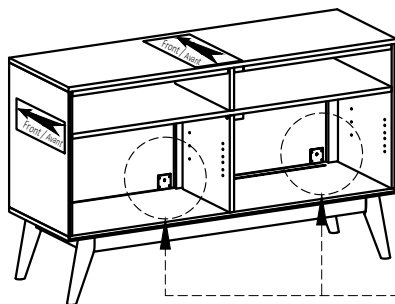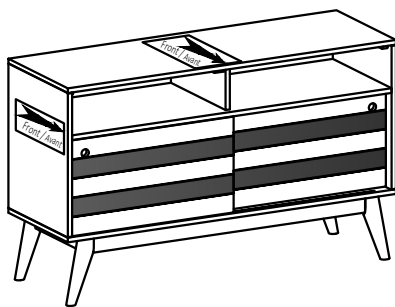


3. To adjust the height of wheels up or down.  
Use the Phillips screwdriver to rotate the screw on the wheels (Rotating clockwise will adjust the wheels higher, rotating counter clockwise will adjust the wheels lower).



## Step 9
 
### Note:

The back of the tv frame does not have pre-drilled holes to attach the back panel.

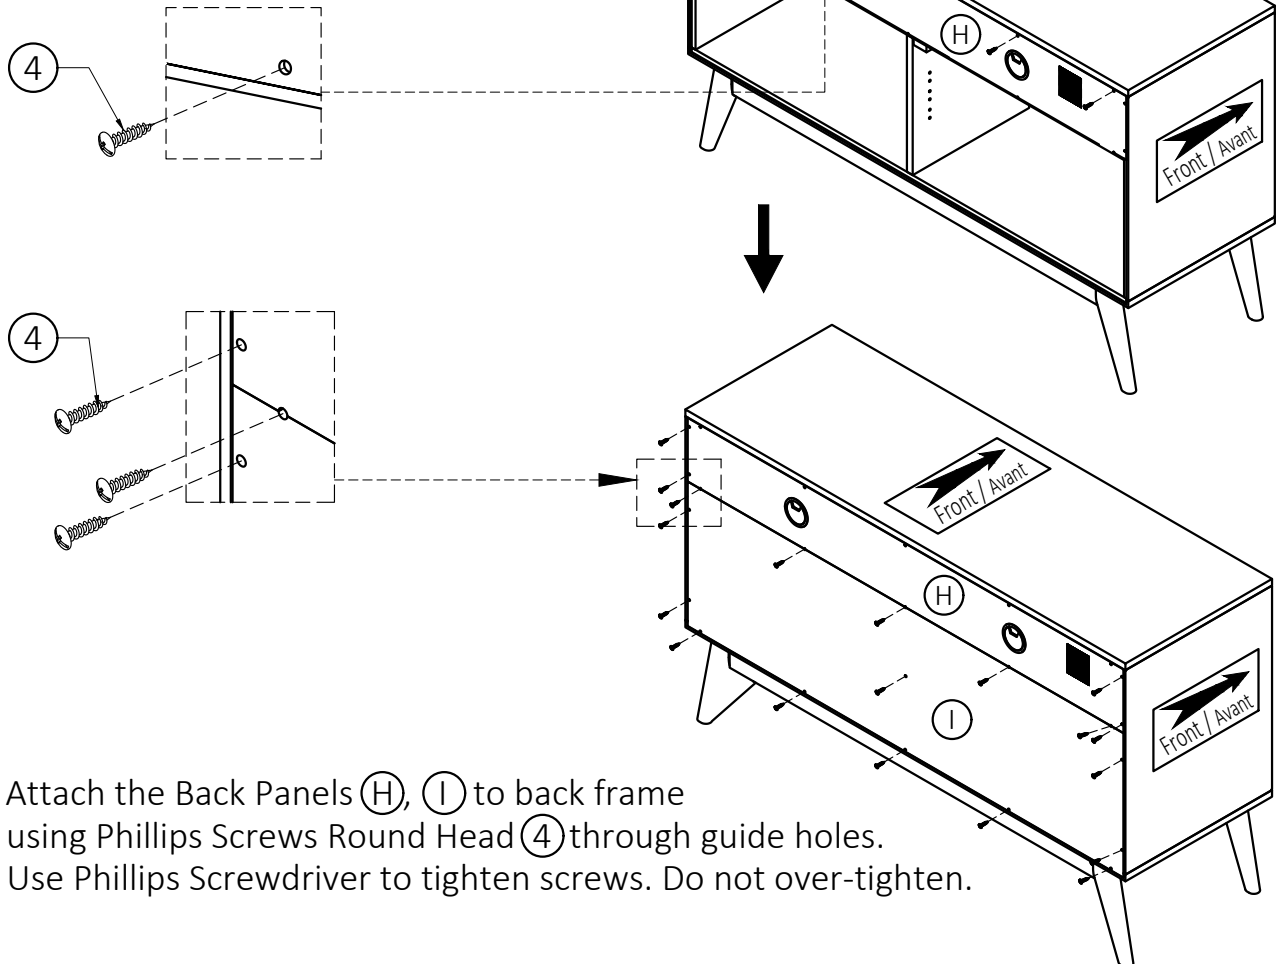


1. Attach the Back Panels (H), (I) to back frame using Phillips Screws Round Head (4) through guide holes.
2. Use Phillips Screwdriver to tighten screws. Do not over-tighten.

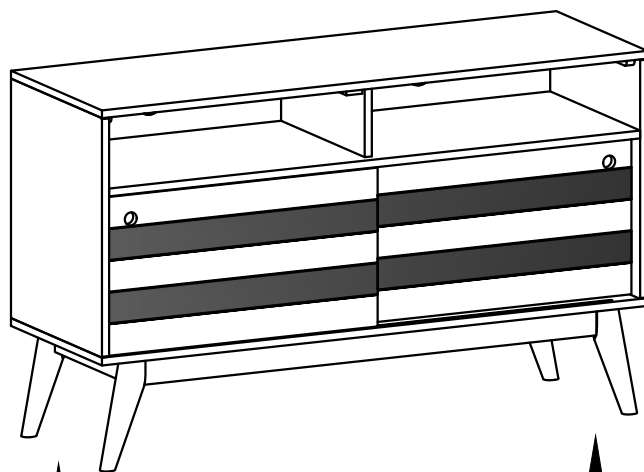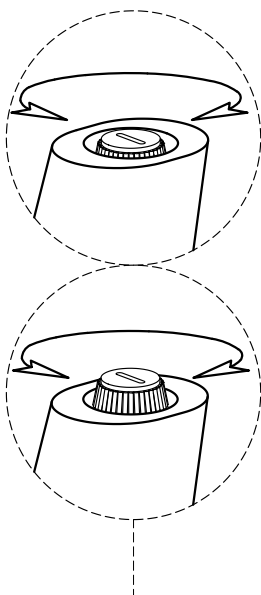  

Note: Levelers on bottom of legs can be adjusted if floor is uneven.

## Step 10

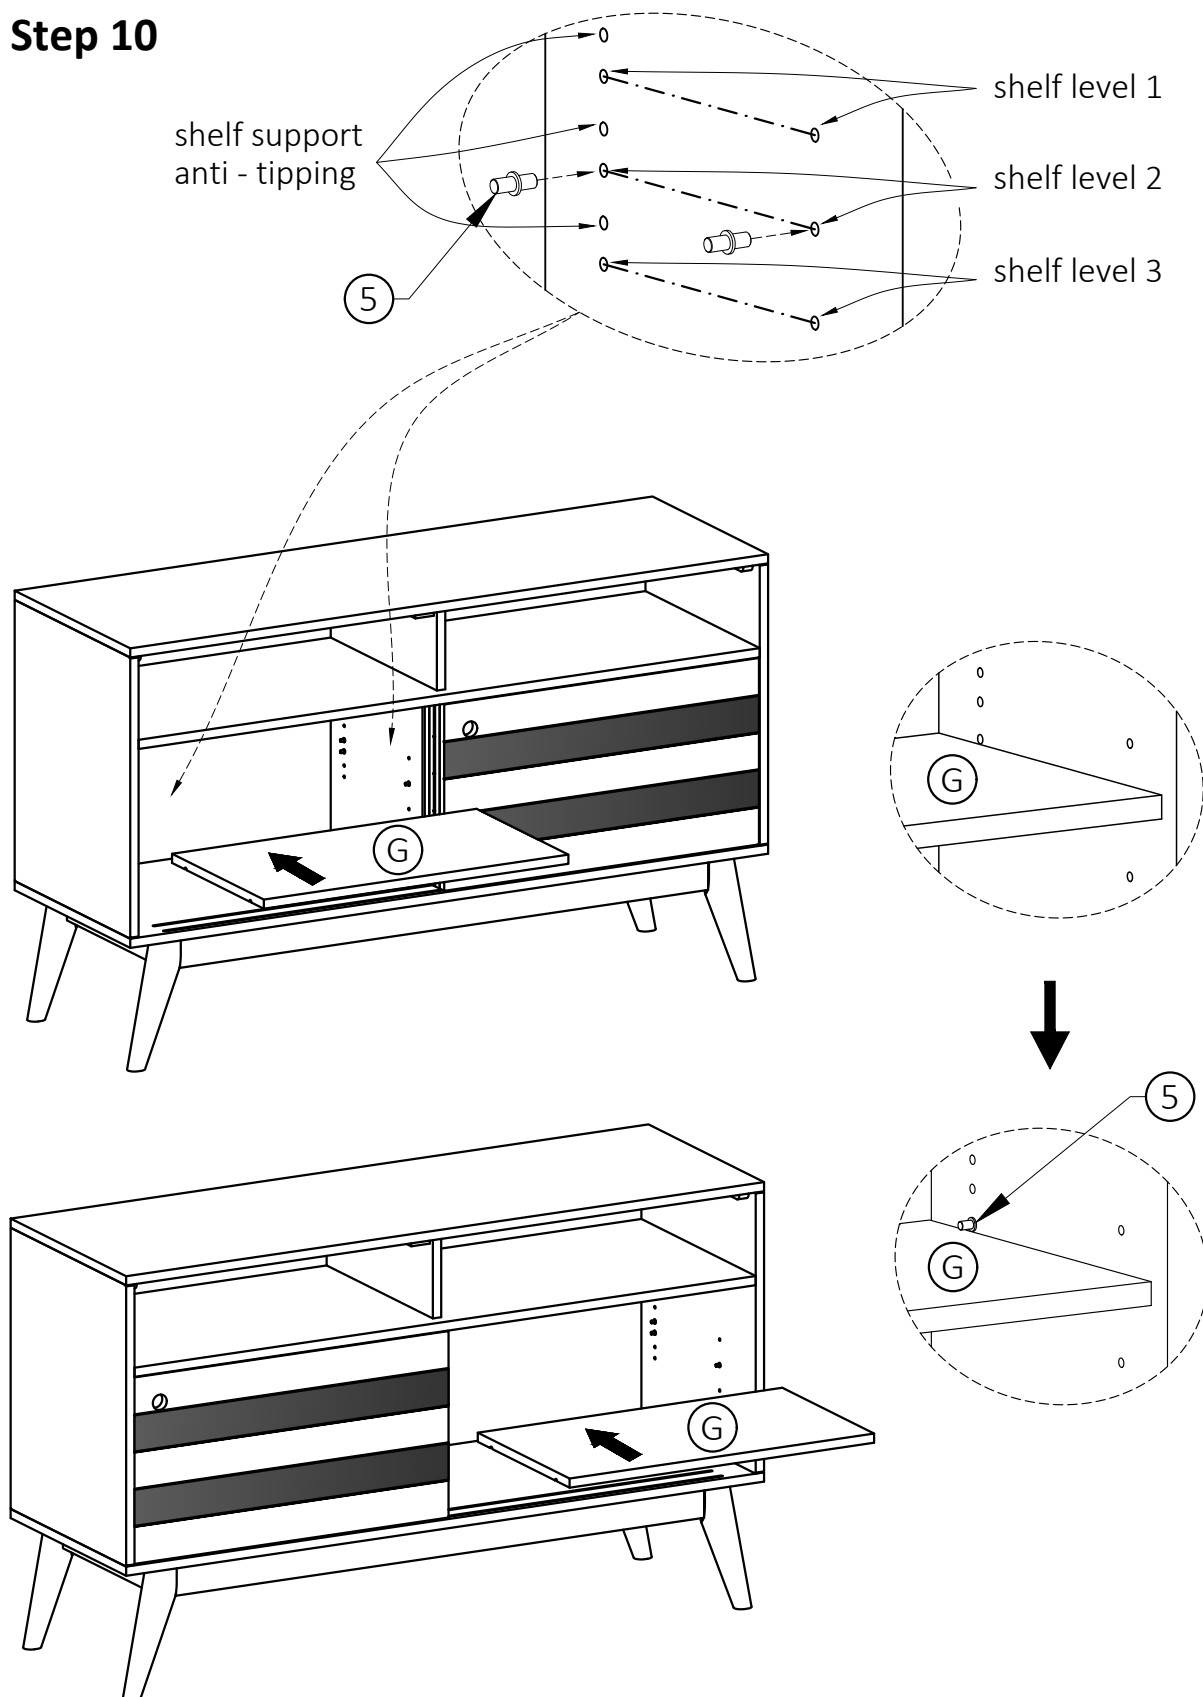 


1. Use four Shelf Supports (5) for each Cabinet Shelf (G) in desired location .
2. Two Shelf Supports (5) may be used on back top of Cabinet Shelf (G) as a tipping restraint.

## Furniture Tip Over Restraint Assembly

 
### **WARNING**

Serious or fatal crushing injuries can occur from furniture tip-over.  
If the furniture tip over restraint kit is not in the box, please contact our customer service department in order to obtain another kit before using the furniture.

### Step 11




 **NOTE:** The screwdriver is not included in the hardware pack.

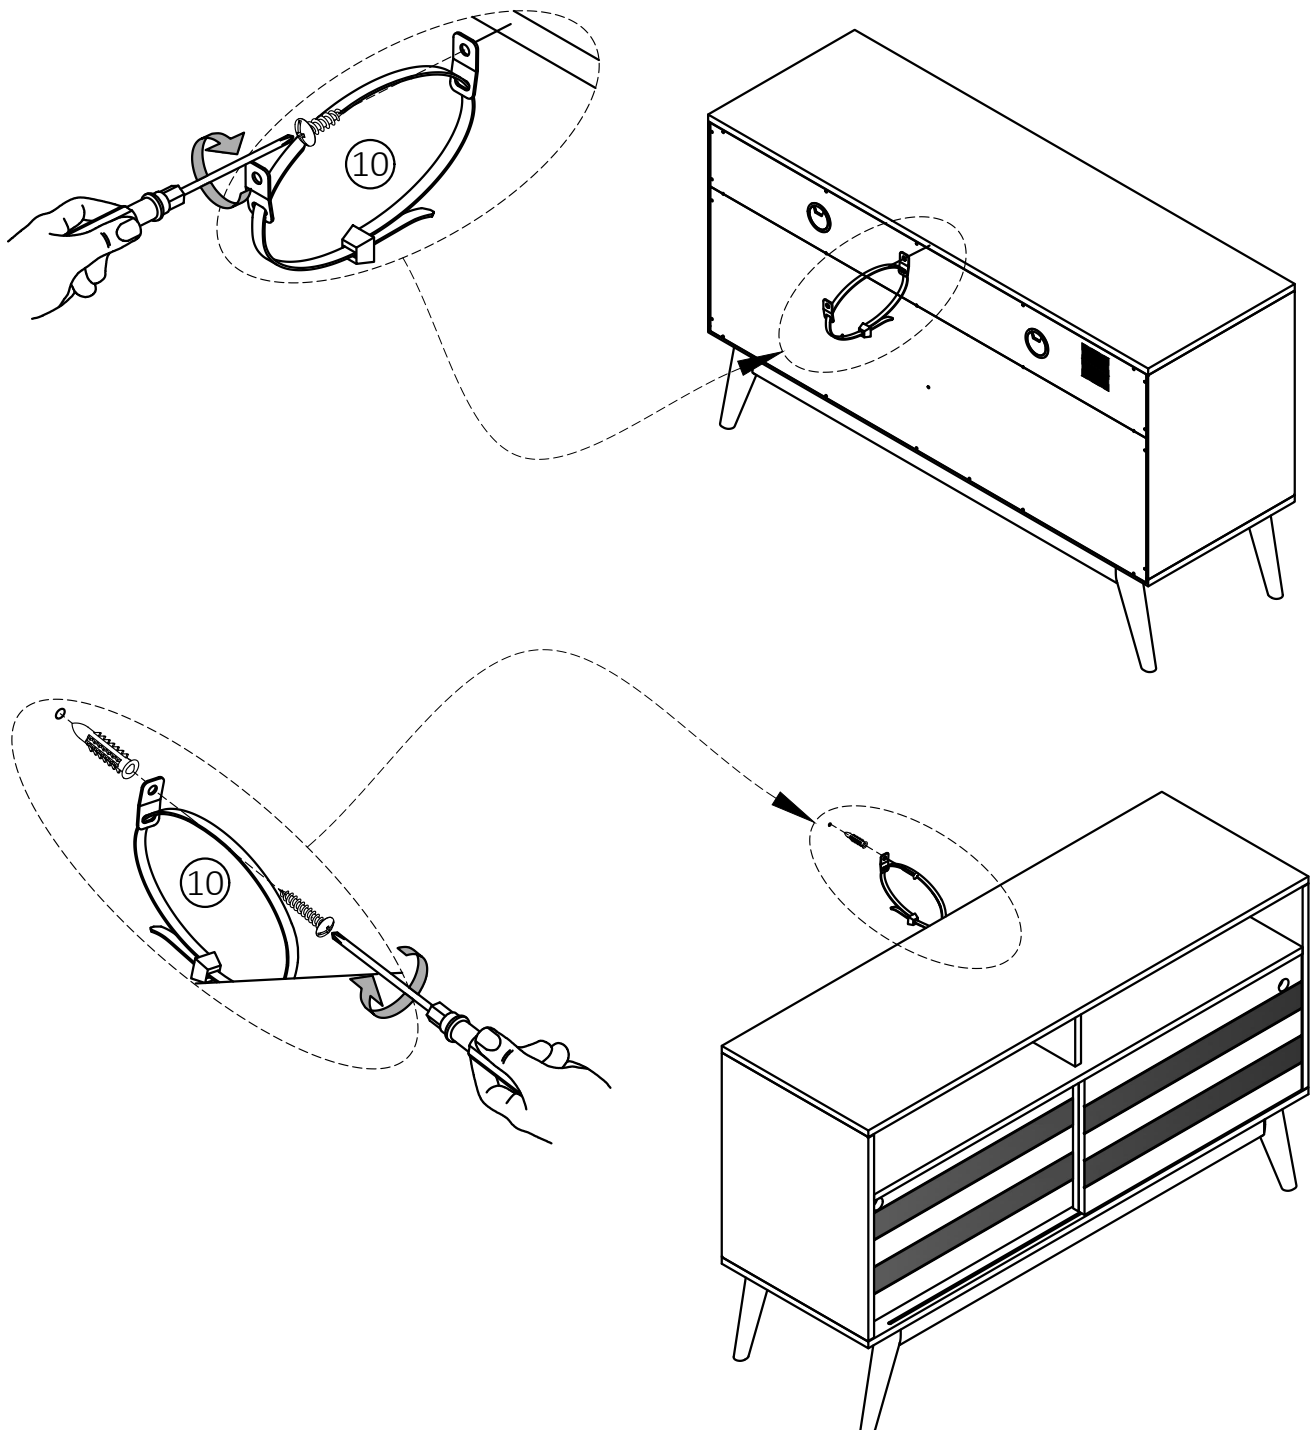


## Furniture Anti-Tipping Restraint Instructions

 
1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the shorter screw.

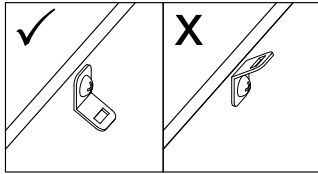

 2. Determine where furniture is to be placed and mark location on the wall for mounting bracket screw hole approximately 2 inches below the bracket mounted to the furniture.

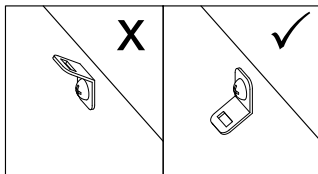

3. Drill a 3/16 inch hole in the wall. Press the plastic anchor into the hole and gently tap until the flange on the anchor is against the wall surface.
4. Position the bracket over the anchor and use the longer screw to securely attach the bracket to the wall.
5. Place the furniture so the back edge is in line with the bracket on the wall.
6. Lace an end of the nylon zip-tie strap down through each bracket. Bring both ends together and slide the smooth side upright through the square-shaped end and pull through to create the "locked" position.
7. Check to make sure the strap is securely laced and locked to the brackets.

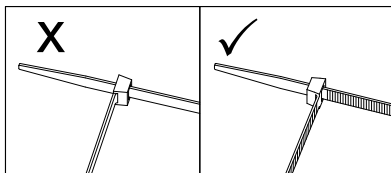 

- **DO NOT** place heavy objects in top drawers or on top shelves
- **DO NOT** let children climb or hang on drawers, doors or shelves