

## HOOKER® ASSEMBLY INSTRUCTION


ITEM: 7228-50736-85 Knobby 3-Drawer Accent Chest

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.

## HARDWARE PACK

No.	Drawing	Description	Q'ty
A	And the state of t	Tipping restraint	

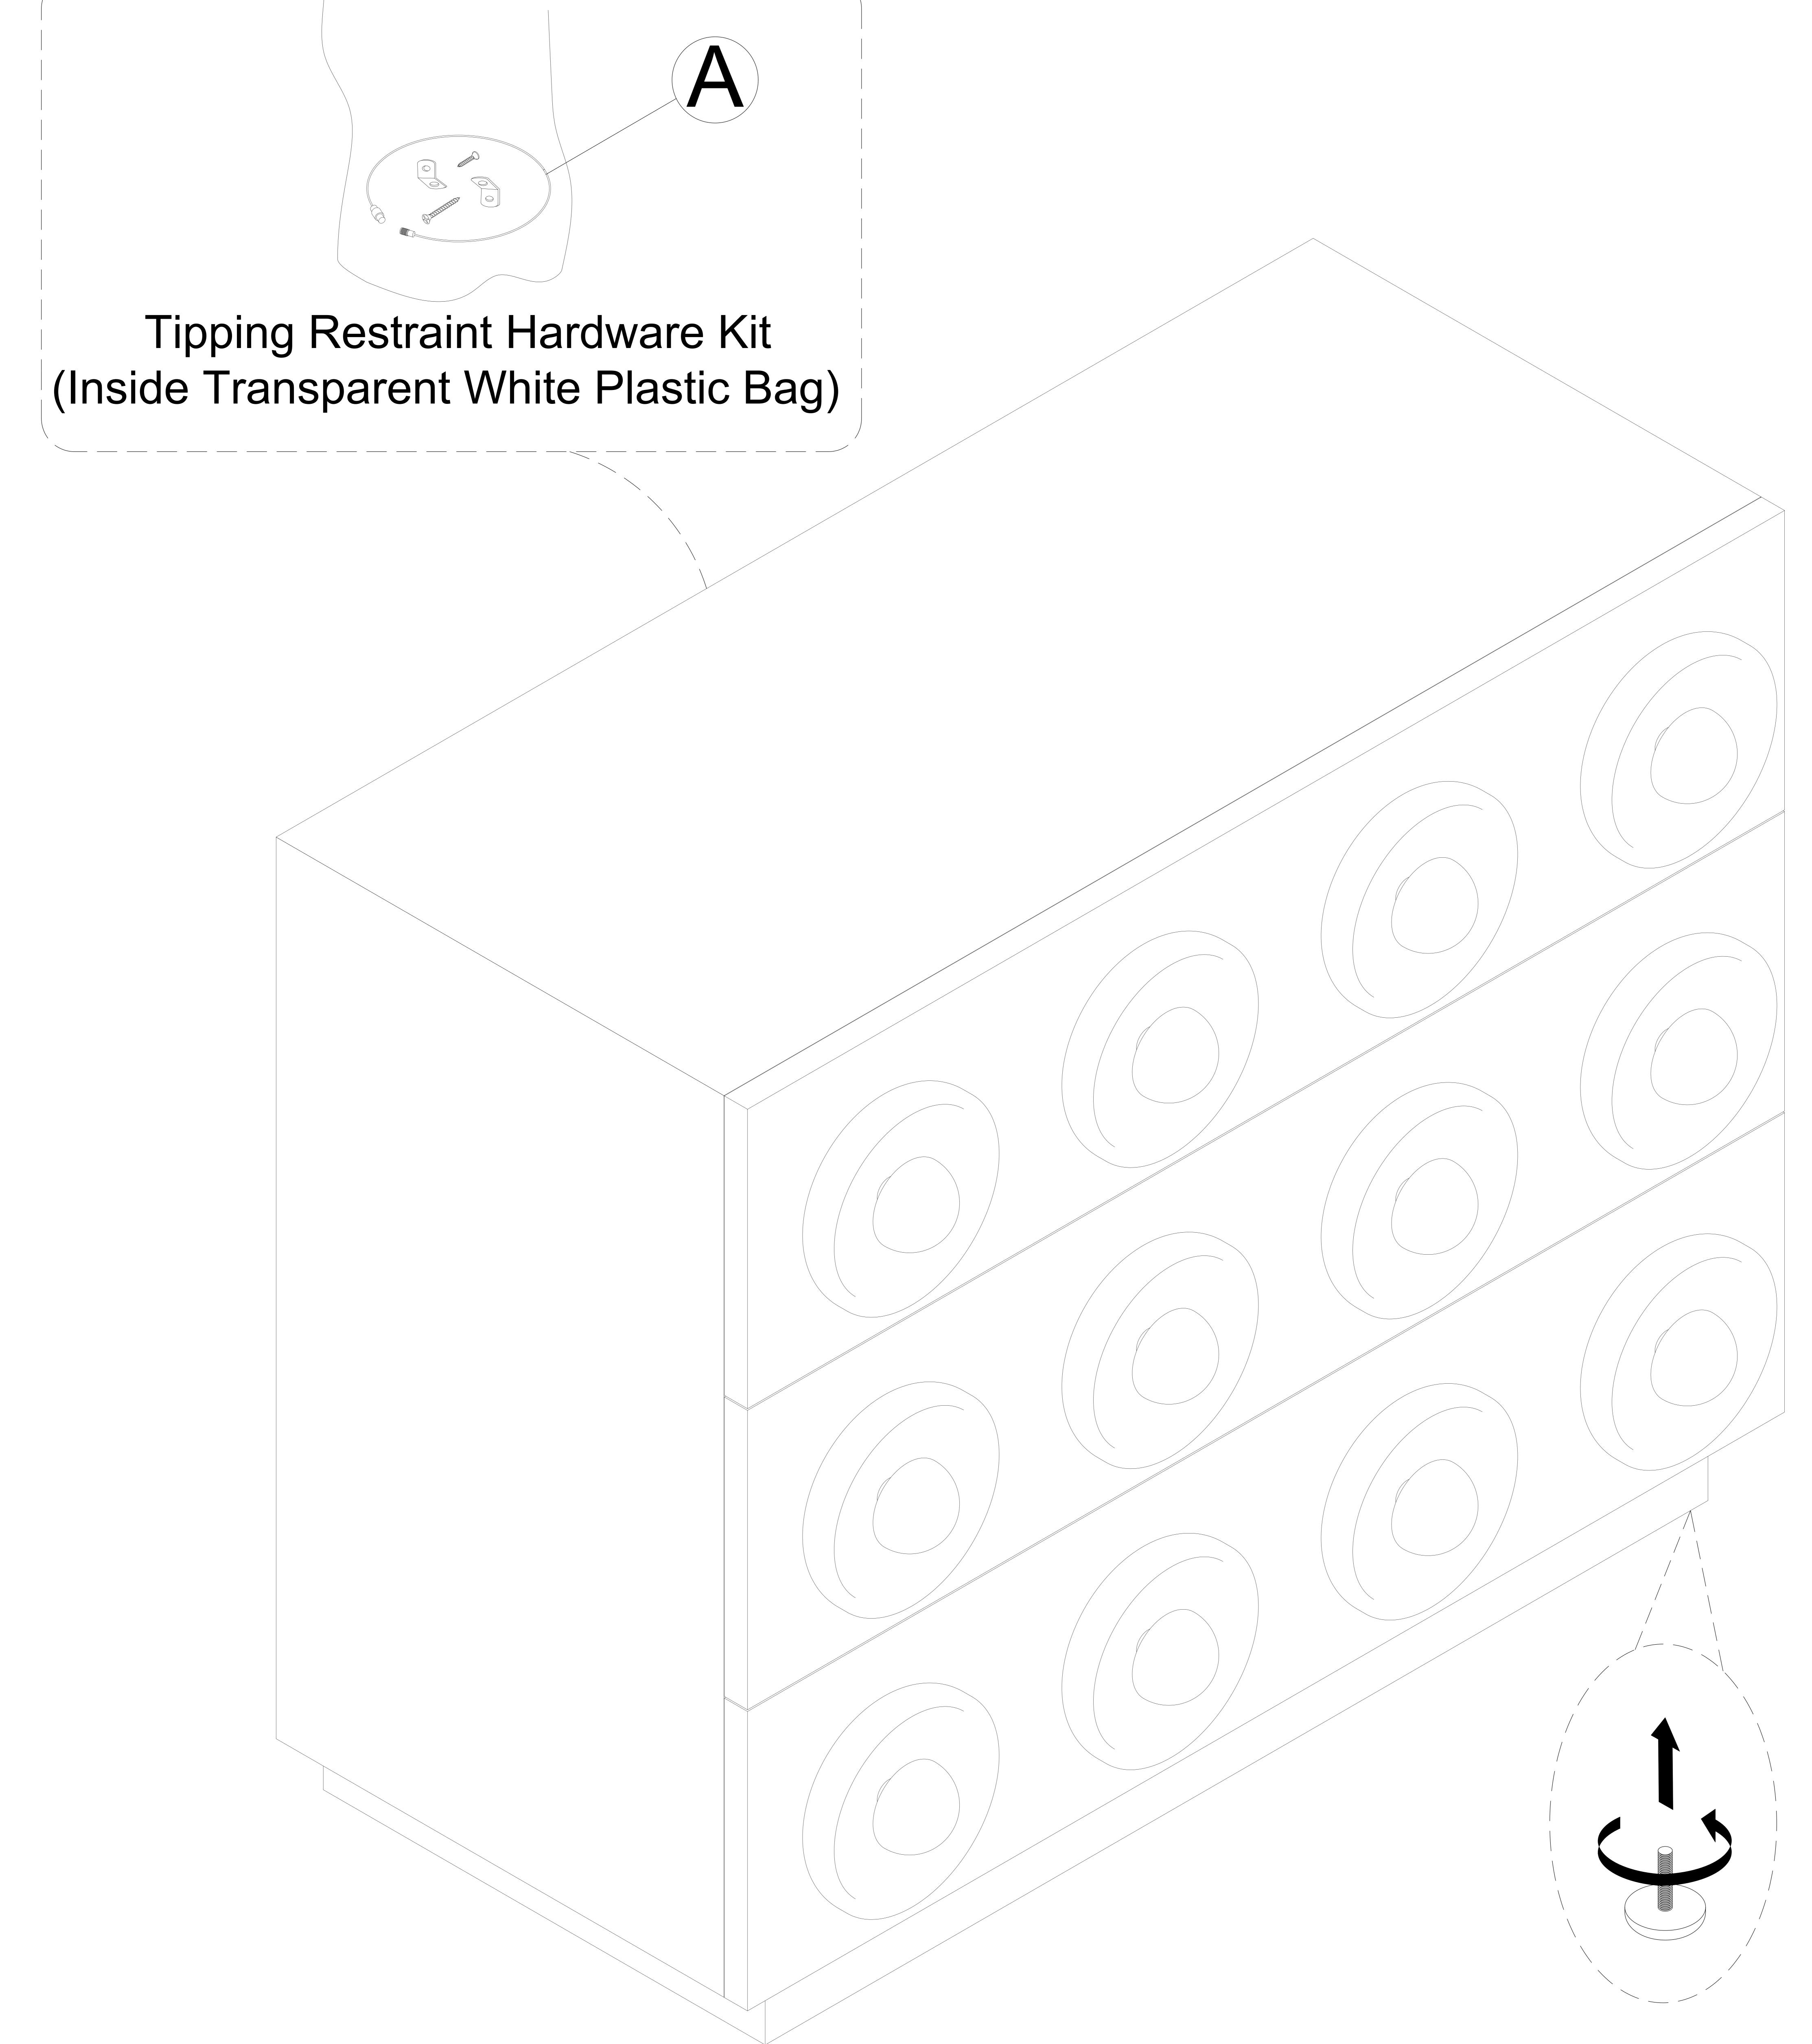

Adjust leveler If needed to level dresser on uneven floor

Note: Anti-tip kit restrain is provided. Please follow the instructions enclosed with the pack.