

 


Wired Remote Controller

For Ductless minis (Optional)



Contents

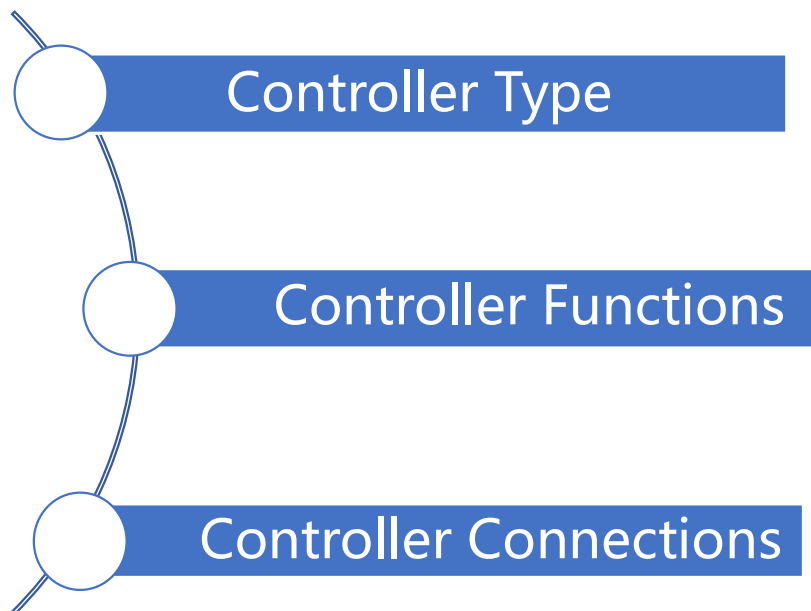



Controller Type

Wired controller

- Infrared Wired controller



12B(5V)



Controller Functions

12B



Functions:

- *Mode: choose Auto-Cooling-Dehumidify-Heating-Fan*
- *Fan speed: Auto/low/Med/High speed*
- *Swing*
- *Eco(sleep function)*
- *Time ON/OFF*
- *Temp. setting*
- *Auto restart*
- *Follow Me*
- *Auxiliary heater*
- *Reset*
- *Lock*
- *LCD display*



Controller Functions

12B

 


Set airflow rate

Using the wire controller to set airflow rate
(some models)

When the air conditioning unit is off, perform the following steps:

- ① Press "MODE" and "FAN" for three seconds.
- ② Press "△" or "▽" to select the SP.
- ③ Press "MODE" to set the airflow rate in the range of 0~4.

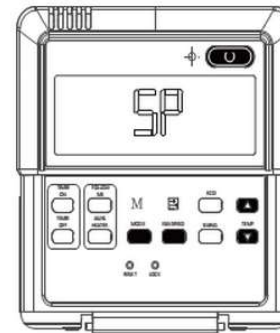

"0": No airflow change
"1"~"4": Airflow increase progressively

- ④ Press "ON/OFF" to finish the airflow setting.



Controller Functions

Function Overview:

Function	12B
Mode	√
Fan speed control	√
Horizontal Swing function	√
Vertical Swing function	×
Timer ON/OFF	√
Clock (Time display)	×
FOLLOW ME	√
Eco (Sleep) operation	√
Lock	√
Error code display	×
LCD display	√
Auxiliary heater	√



Controller Functions

Function Overview

Series	12B
Infrared Receiver	×
Backlight	×
Follow Me	√
Constant Airflow Test	×
Buzzer	×
Weekly Timer	×
Individual louver control	×
Touch Button	×
Turbo	√
Auto-Restart	√
12h Timer	×
Temp. Calibration	×
Operation Mode Locking	×



Controller Connection

12B



17401204008985

6m
(5-core shield
cable+ground cable)

 


Controller Connection

12B—Connect to Display board (+5V)



*5-cores cable(6m)
12B*

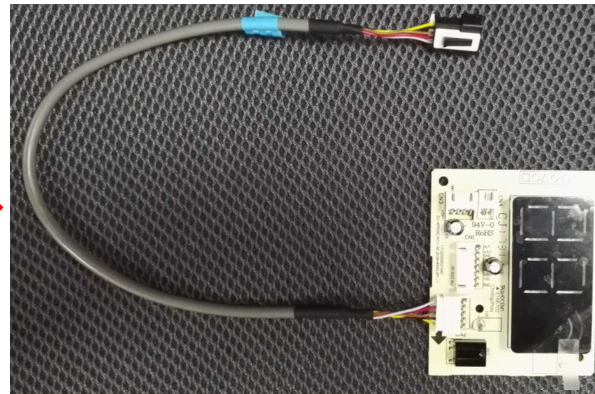

Need to customize from factory to reserve wired controller connector wire port.





THANK YOU