

TIMING GEAR PULLER

W89705

INSTRUCTIONS:

TO REMOVE TIMING GEAR

1. Position puller center screw on the shaft of the gear to be pulled.
2. Thread side screws clockwise into the two tapped holes of the timing gear. Make sure that the screws are threaded into the gear evenly so the puller will pull equally on both sides of the gear.
3. Rotate center bolt clockwise, to hand tighten the puller while maintaining center bolt alignment with the center of the gear shaft.
4. Using a 3/4 in. wrench or socket, continue tightening the center screw to remove the gear.


NOTE: For best results, keep the center screw of the puller lightly lubricated.

Replacement parts:

Center Screw.....	W89705-1
T-bar	W89705-2
Side Screws	W89705-3

CAUTION: Always wear eye protection while using this tool.

For replacement parts call: 1-800-426-1262

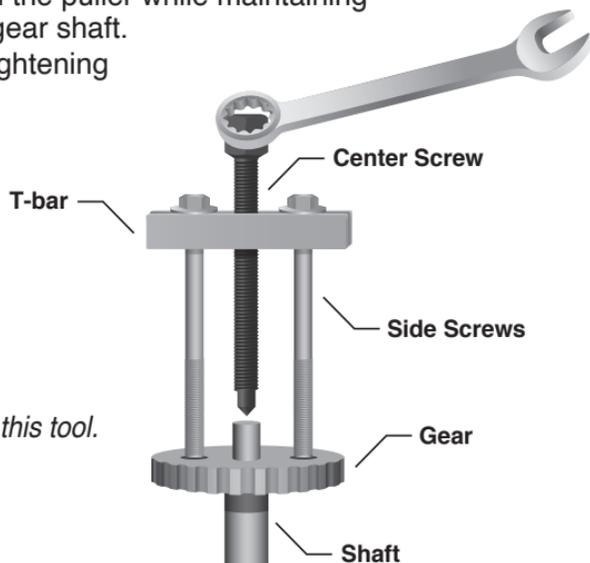

PT[®]
Performance Tool