


# 88 5514 26 Upholstered Bench

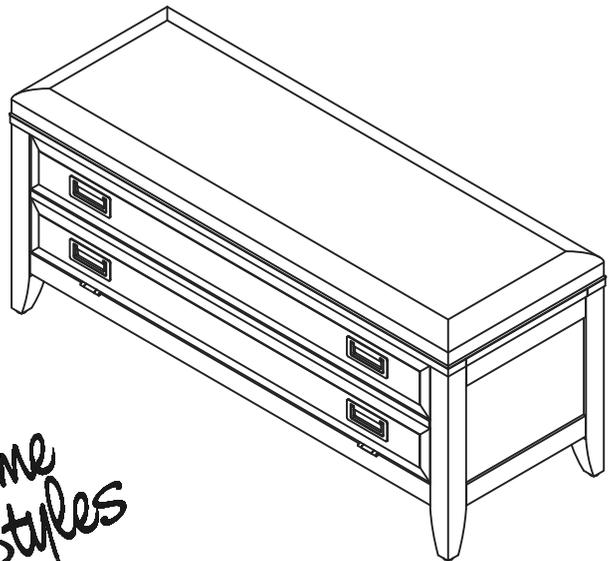


*Home  
Styles*

## IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damage occurring to the parts.


We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

## Part List

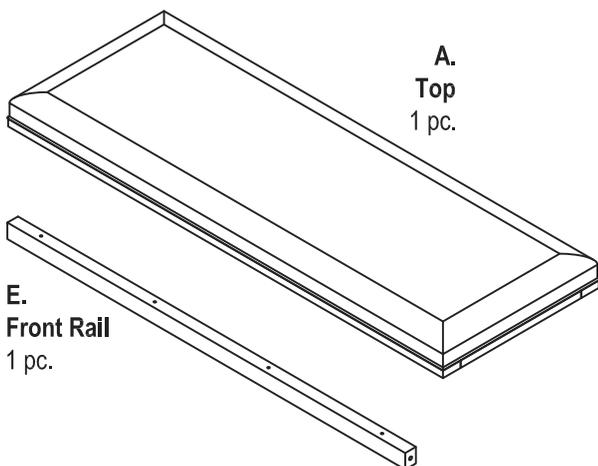


A.  
Top  
1 pc.

E.  
Front Rail  
1 pc.

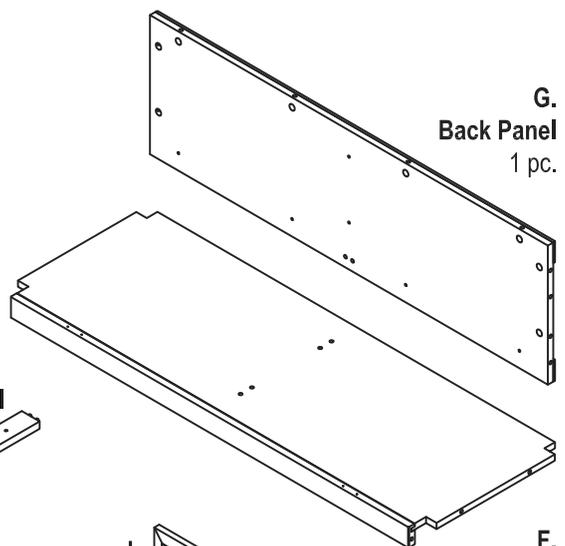


G.  
Back Panel  
1 pc.


H.  
Bottom Rail  
1 pc.

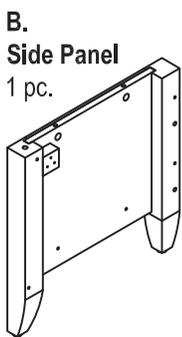


B.  
Side Panel  
1 pc.

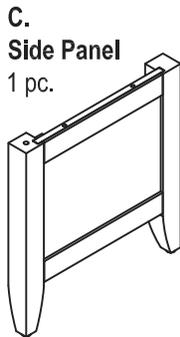

C.  
Side Panel  
1 pc.

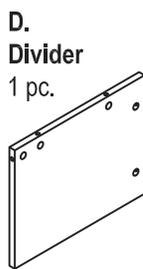

D.  
Divider  
1 pc.

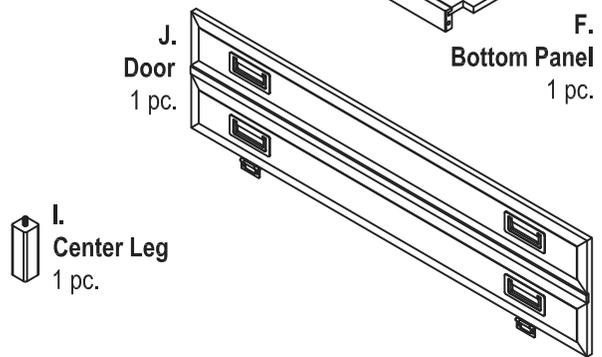

J.  
Door  
1 pc.

F.  
Bottom Panel  
1 pc.

I.  
Center Leg  
1 pc.

## Hardware List



Cam Lock Screw  
29 pcs. (+4 extra)



Cam Lock  
29 pcs. (+4 extra)



(M4x45)  
1 3/4" Round Head Screw  
6 pcs. (+1 extra)



(M3x13)  
1/2" Round Head Screw  
14 pcs. (+1 extra)



 
(M2x19)  
3/4" Flat Head Screw  
4 pcs. (+1 extra)



Magnet  
2 pcs.



Wooden Dowel  
6 pcs. (+1 extra)



Pneumatic Rod  
2 pcs.



Unit Brace  
2 pcs.



Door Brace  
2 pcs.

Tools Required For Assembly : Phillips screwdriver

Tools Recommended For Assembly : Level

**Home Styles Consumer Assistance:** [www.homestyles-furniture.com](http://www.homestyles-furniture.com),  
[servicedesk@homestyles-furniture.com](mailto:servicedesk@homestyles-furniture.com), 888-680-7460, 877-831-0319


# Assembly Instructions 2/7

## IMPORTANT

- \* Do not tighten up all the screws until each part is properly assembled.
- \* Use a soft cloth between these parts and the floor.
- \* After assembly, item must be level to work properly. Use the included adjustable levellers to level.

## STEP 1

Insert Cam Lock Screws into the pre-drilled holes of Top (A), Side Panels (B) and (C), Front Rail (E) and Back Panel (G).

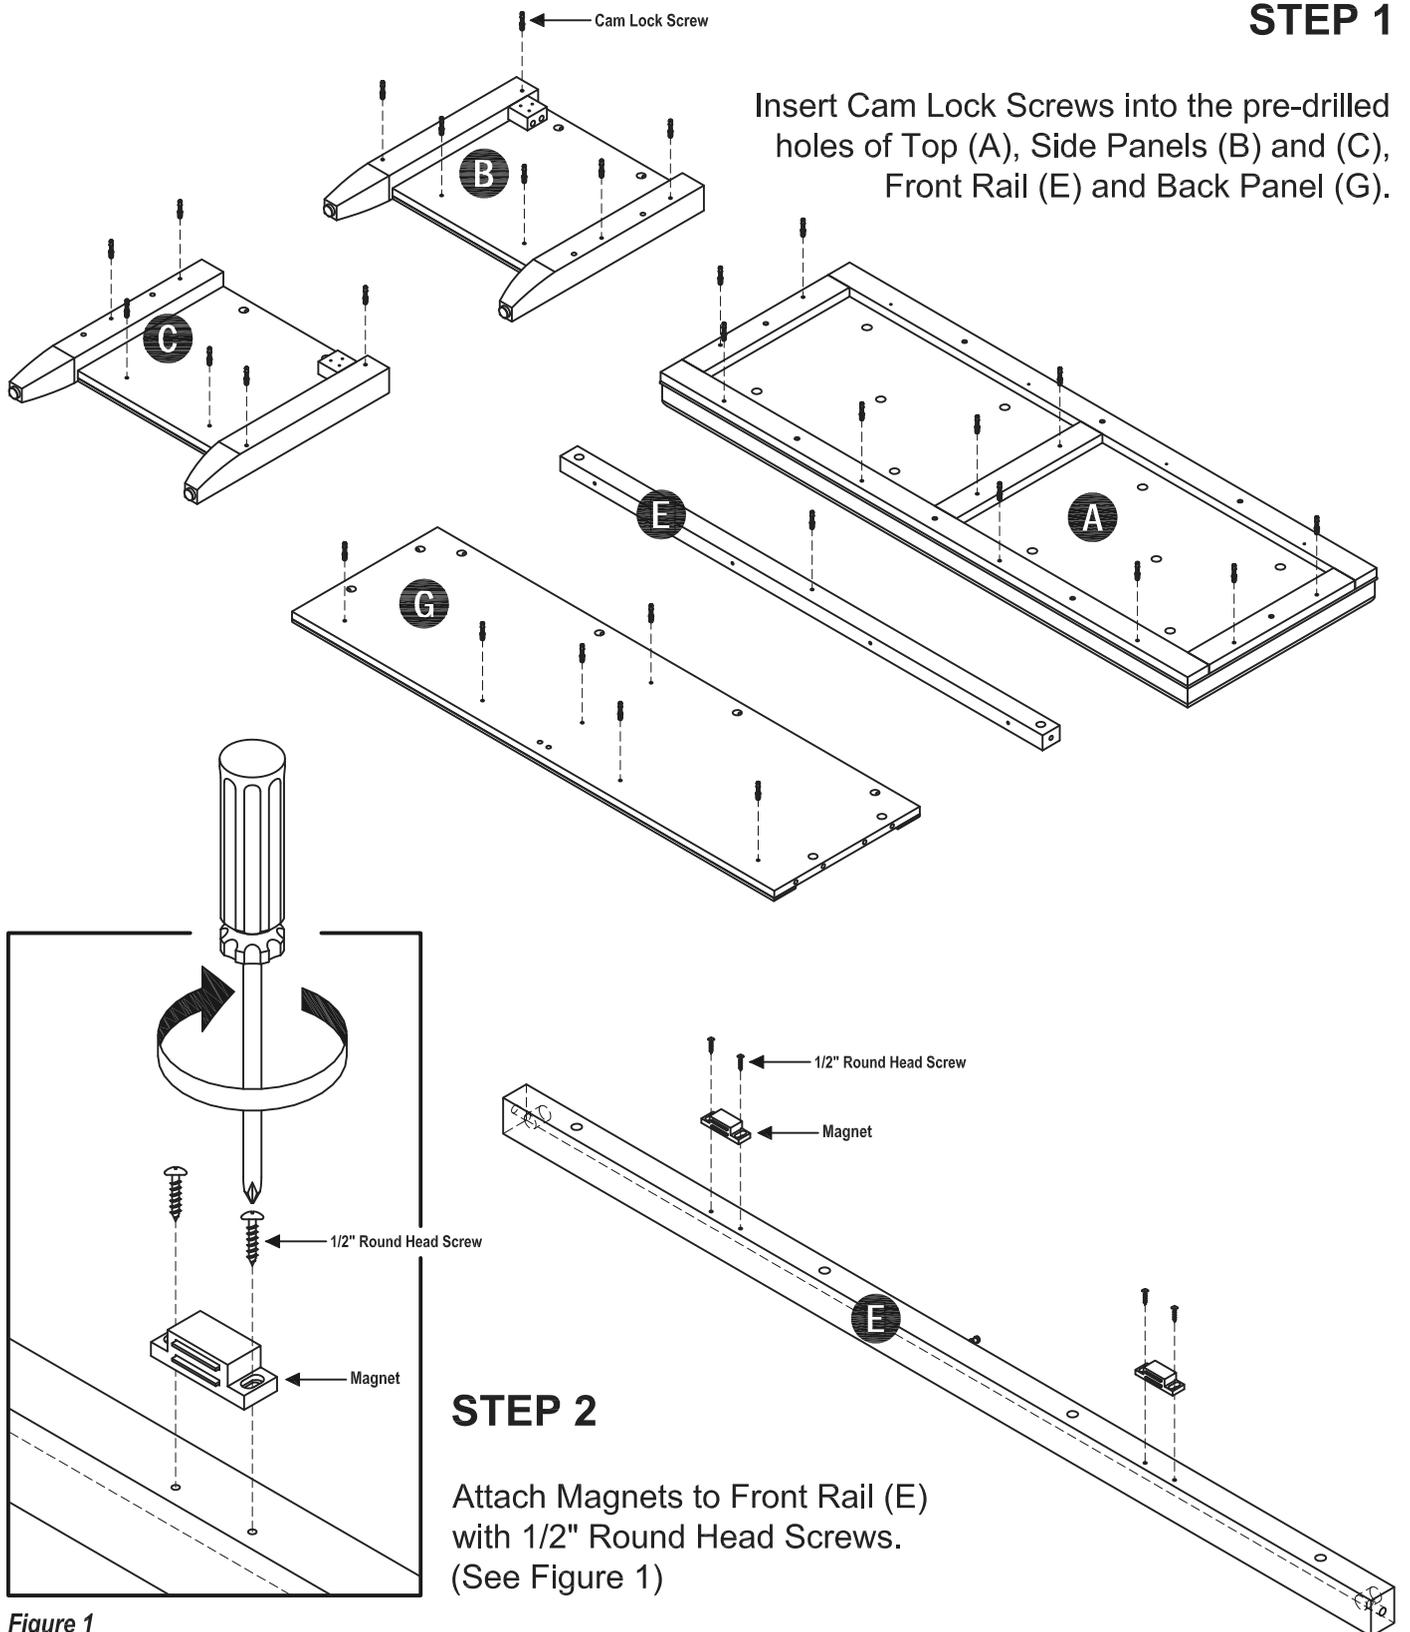

## STEP 2

Attach Magnets to Front Rail (E) with 1/2" Round Head Screws. (See Figure 1)

Figure 1

**STEP 3**

Attach Bottom Rail (H) and Divider (D) to Bottom Panel (F) with Wooden Dowels and 1 3/4" Round Head Screws. (See Figure 2)



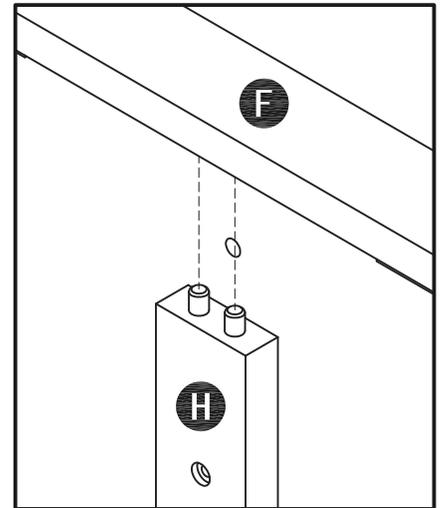


Figure 2

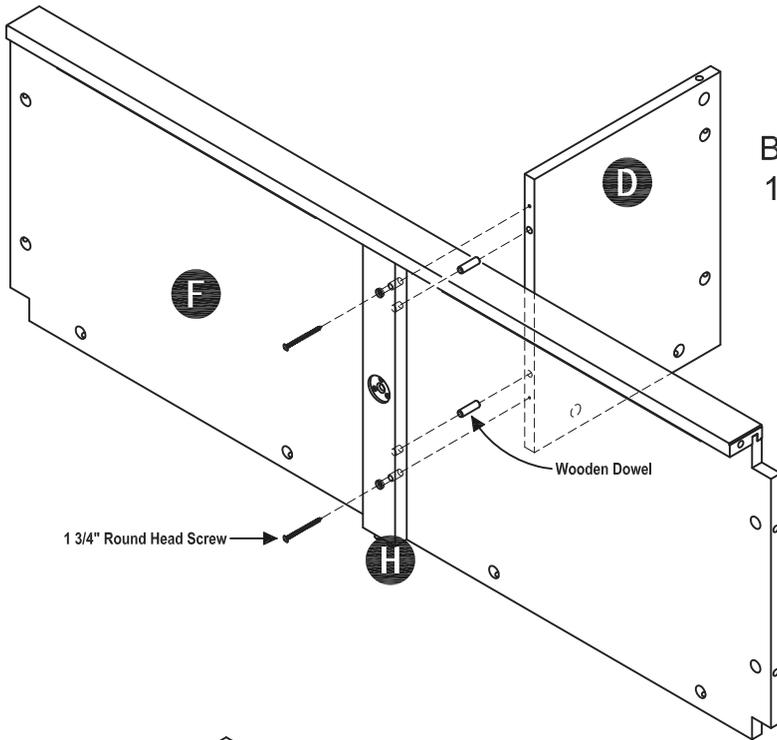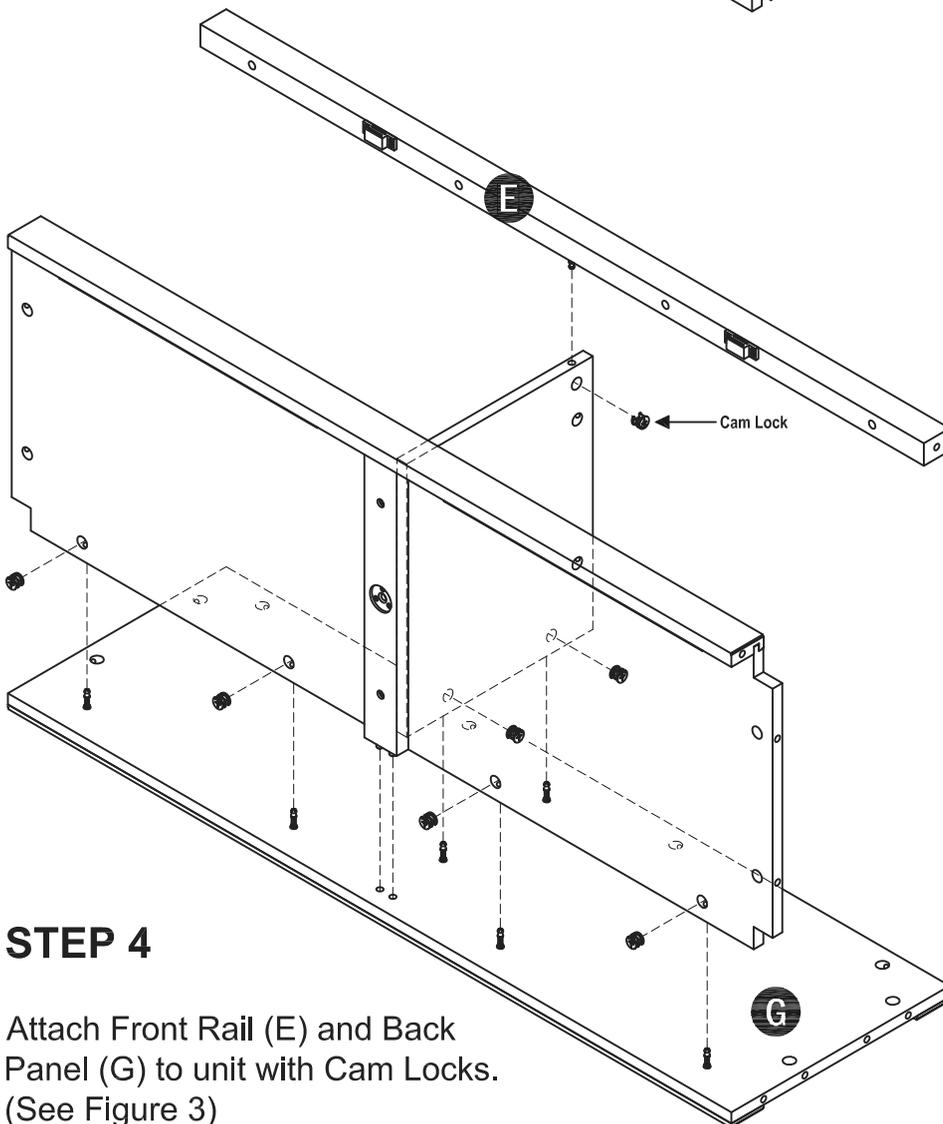

**STEP 4**

Attach Front Rail (E) and Back Panel (G) to unit with Cam Locks. (See Figure 3)


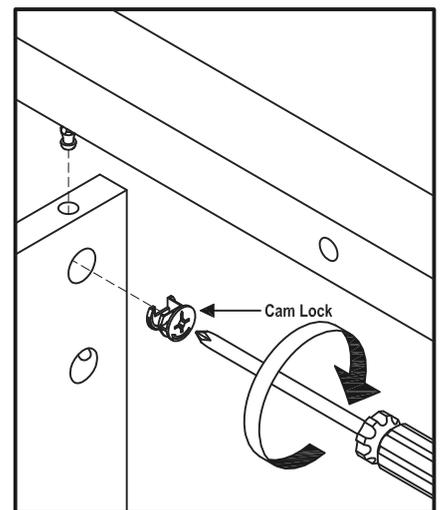


Figure 3

**STEP 5**

Attach Side Panels (B) and (C) to unit with Wooden Dowels and Cam Locks.

Attach Center Leg (I) to unit.

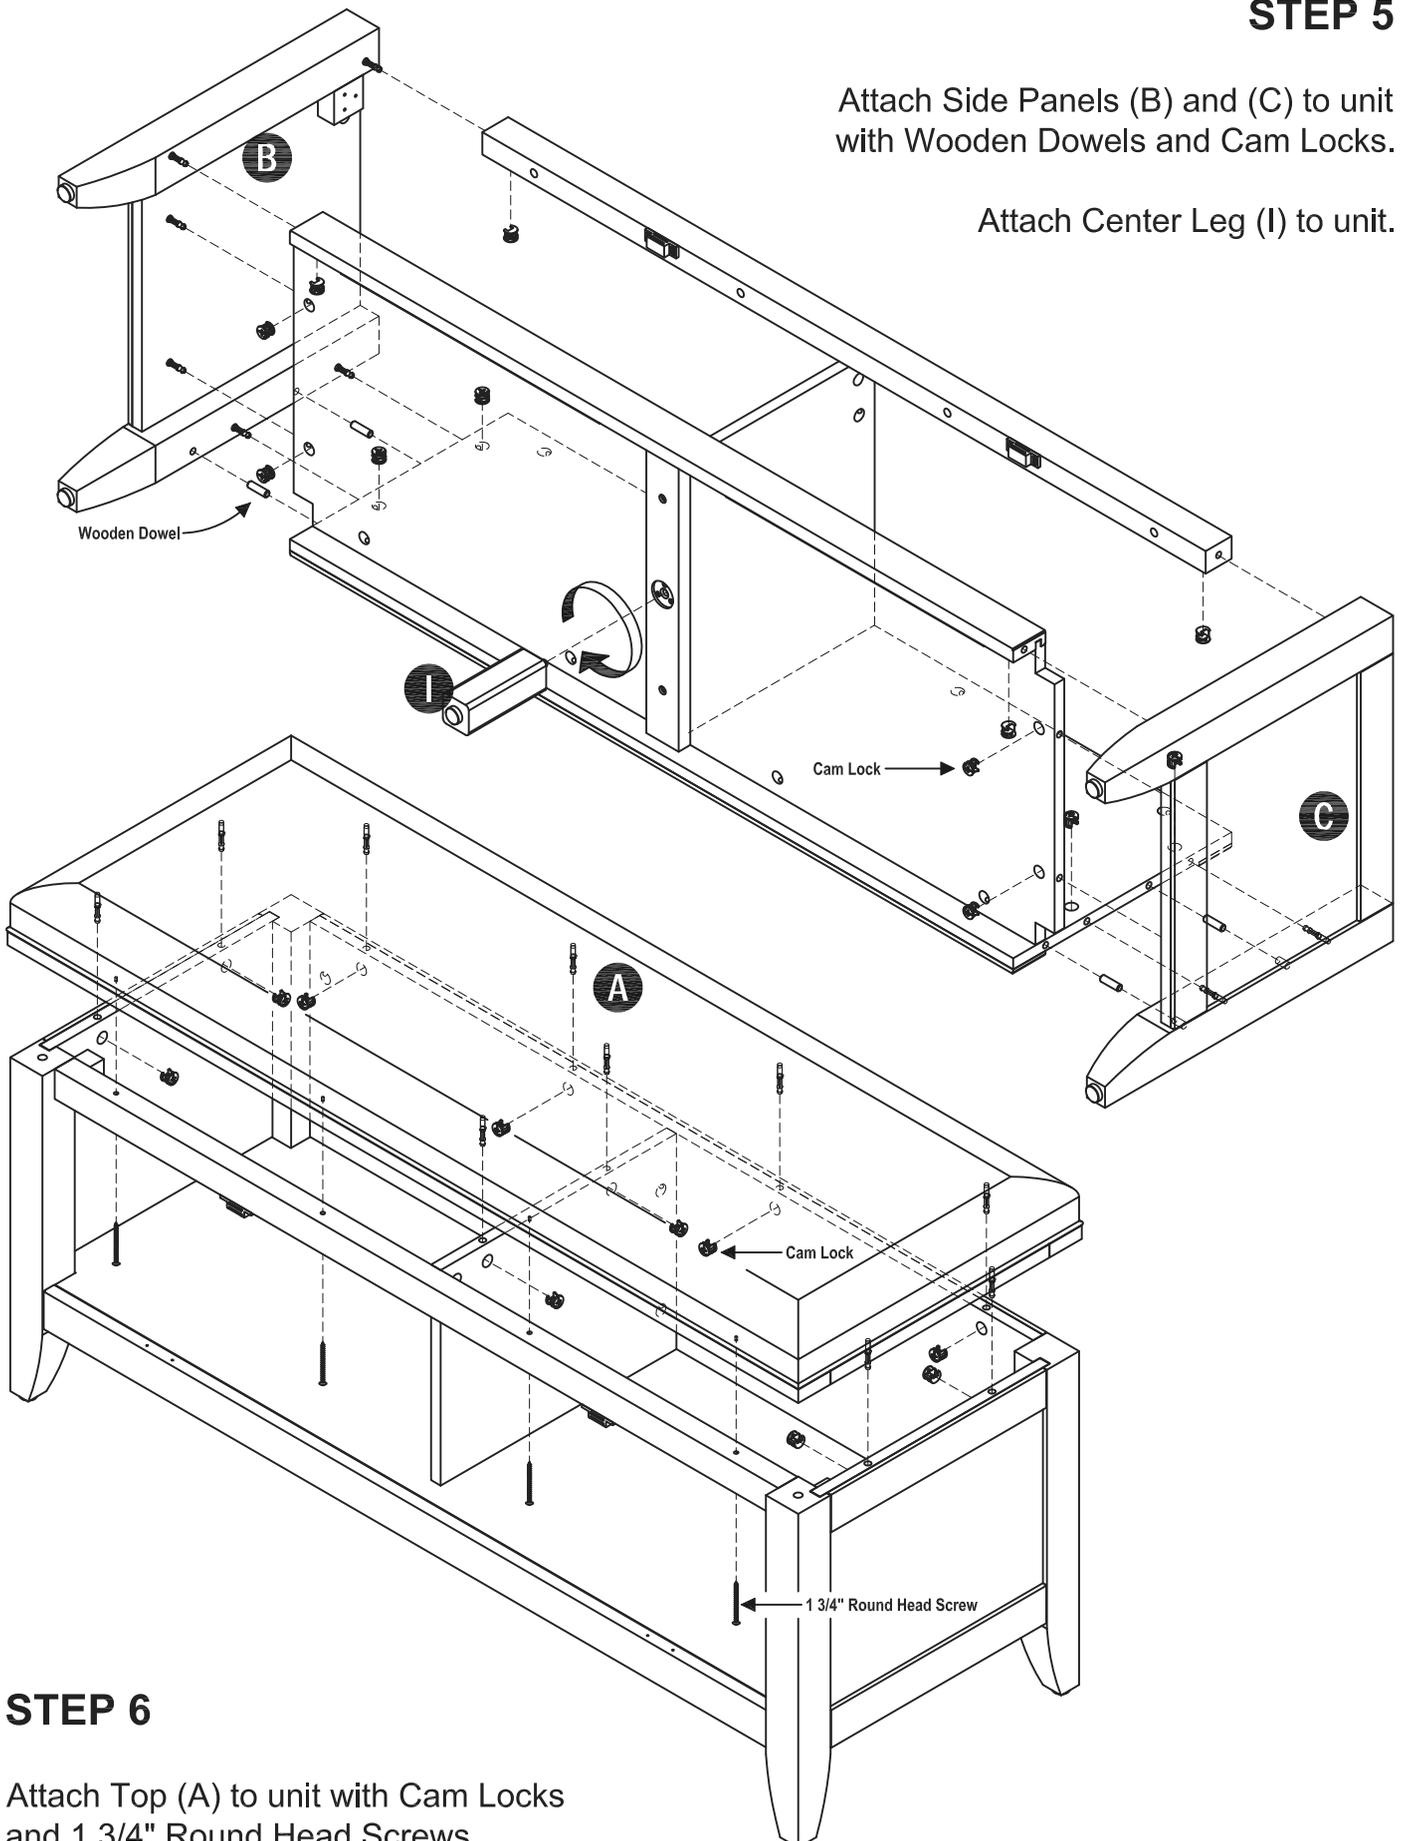

**STEP 6**

Attach Top (A) to unit with Cam Locks and 1 3/4" Round Head Screws.

### STEP 7

Attach Door Brace to Door (J) with 1/2" Round Head Screws. (See Figure 4)


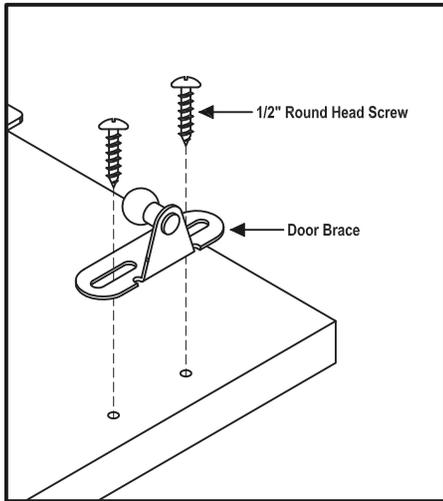


Figure 4

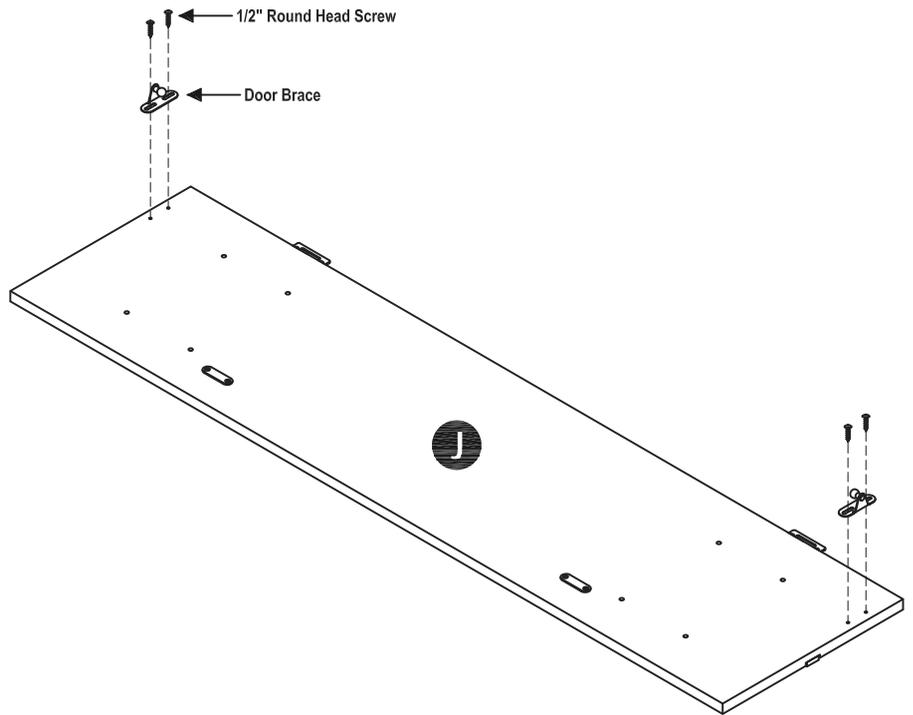

### STEP 8

Attach Unit Braces to unit with 1/2" Round Head Screws. (See Figure 5)


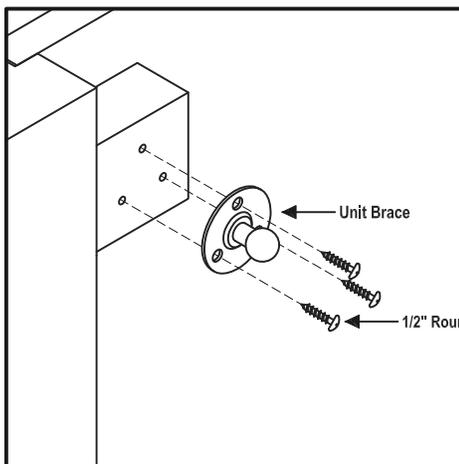


Figure 5

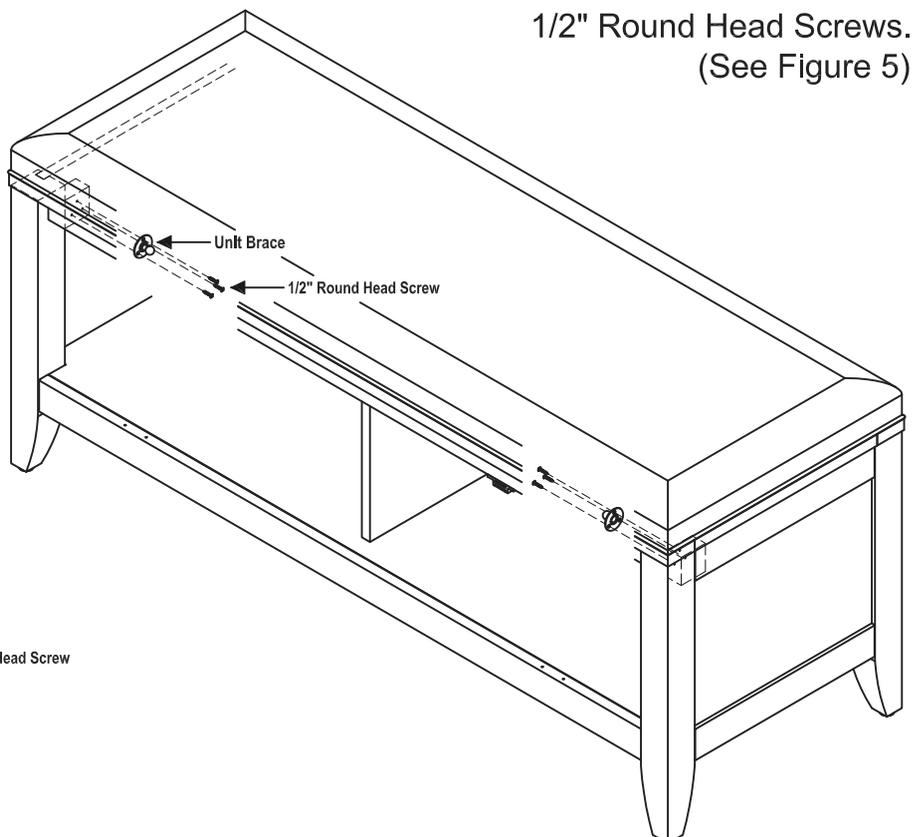

## STEP 9

Attach Door (J) to unit with 3/4" Flat Head Screws.  
(See Figure 6)


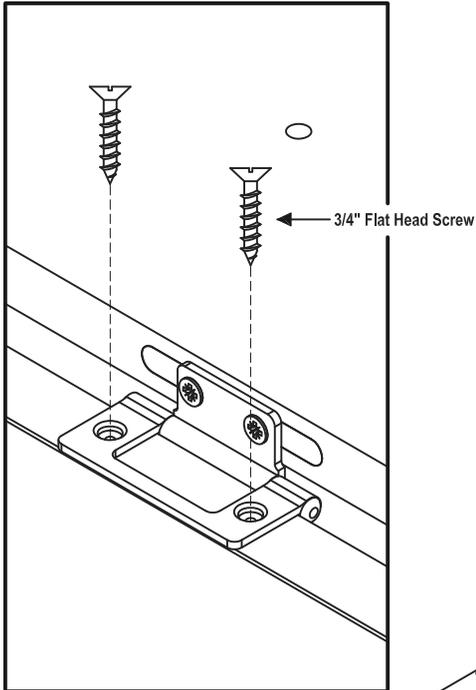


Figure 6

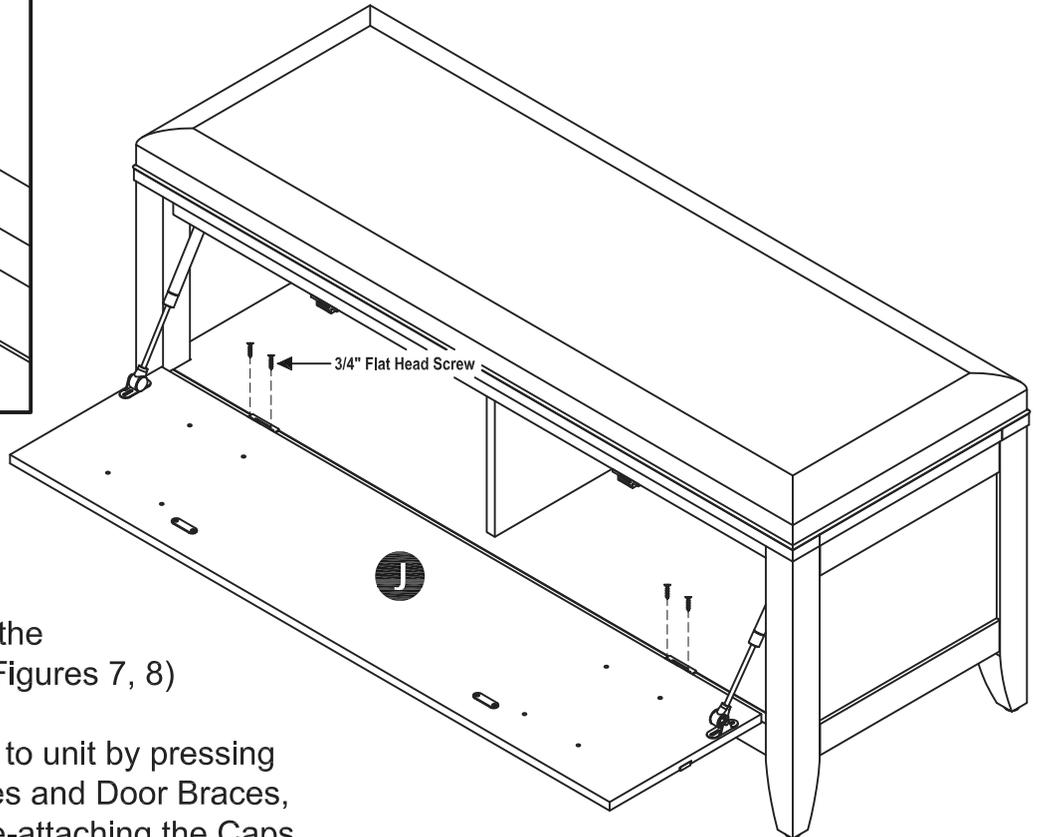

## STEP 10

Remove the Caps from the  
Pneumatic Rods. (See Figures 7, 8)

Attach Pneumatic Rods to unit by pressing  
them into the Unit Braces and Door Braces,  
and lock into place by re-attaching the Caps.  
(See Figures 9, 10)

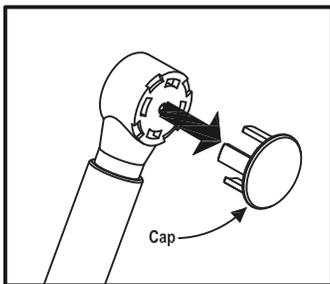


Figure 7

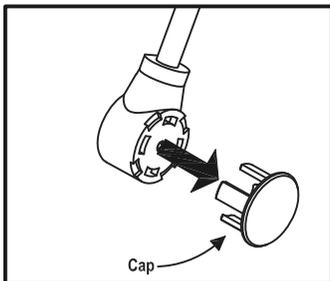


Figure 8

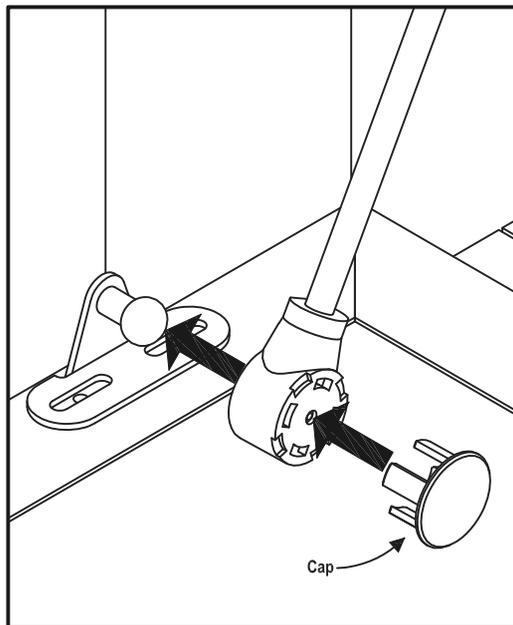


Figure 9

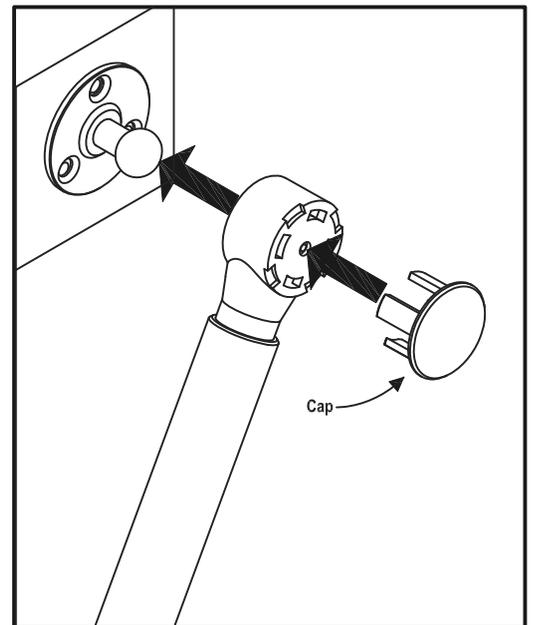


Figure 10

## STEP 11

When the Door is down it should be oriented 90°.

If it is not 90° and adjustment is desired, loosen the Door Brace Screws, move the Door Braces and then re-tighten the Door Brace Screws.  
(See Figure 11)


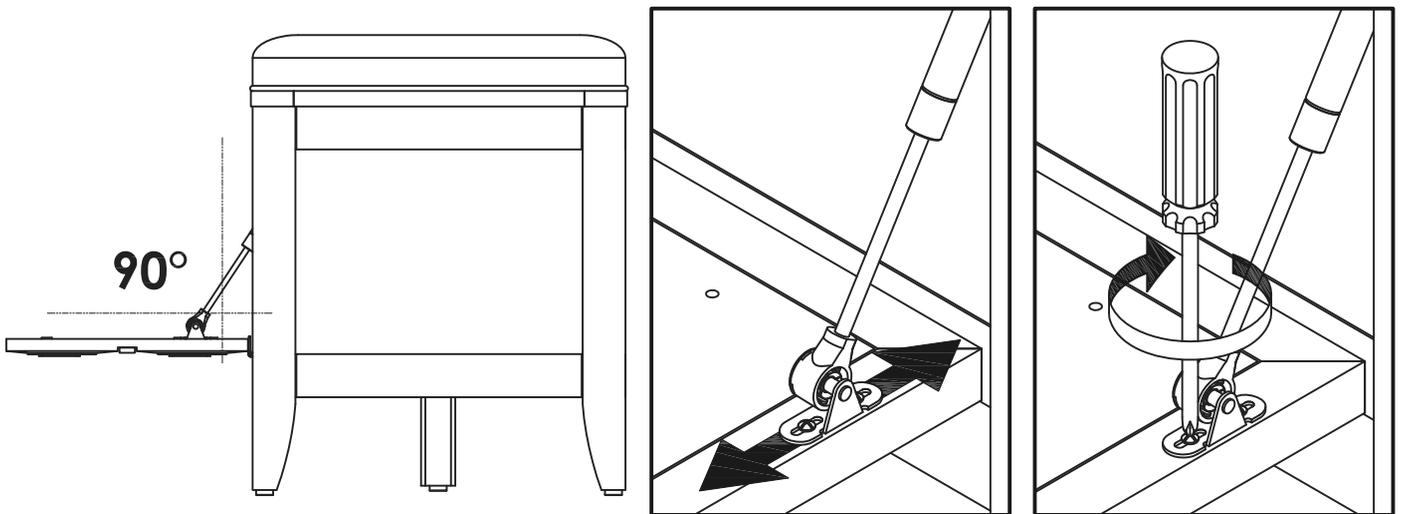


Figure 11

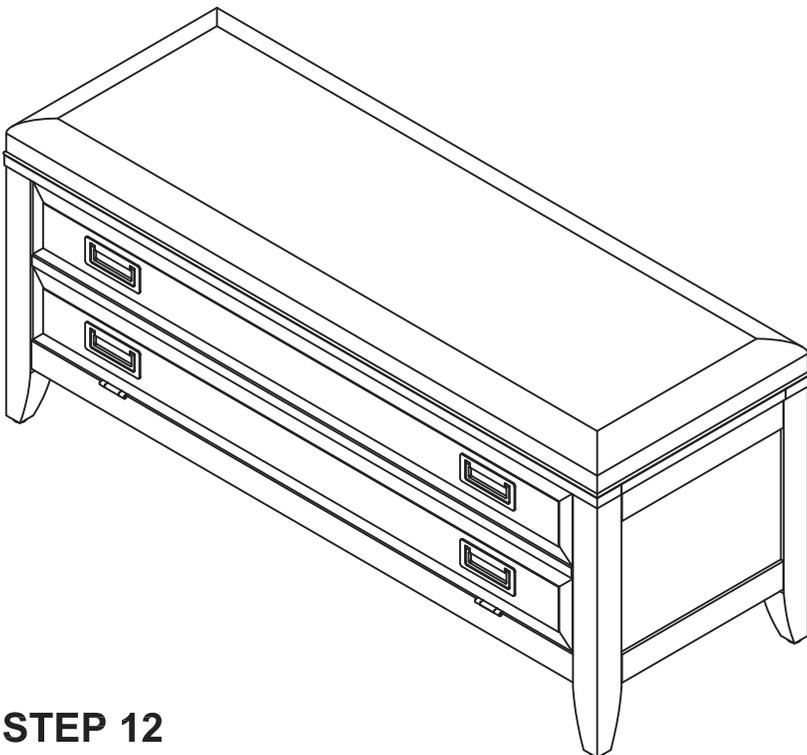

## STEP 12

To level the unit, adjust the adjustable levelers on the bottom.

**Note: Unit must be level to work properly.**  
(See Figure 12)

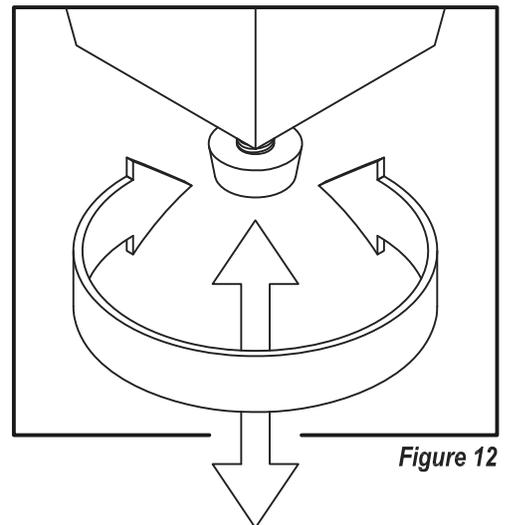


Figure 12

# VERY IMPORTANT !!

## CARE INSTRUCTIONS

### NEVER

USE GLASS CLEANERS ON FINISHED FURNITURE. AMMONIA WILL CHEMICALLY ATTACK THE FINISH.

### NEVER

ALLOW LIQUIDS OF ANY KIND TO REMAIN ON THE FURNITURE. ABSORPTION CAUSES PART TO WARP AND SPLIT AND FINISHES TO DELAMINATE.

DO NOT WRITE DIRECTLY ON SURFACE.



**PREVENT MARKING**

DO NOT PLACE IN DIRECT SUNLIGHT.



**PREVENT FADING**

DO NOT USE COMMERCIAL WAXES AND POLISHES.



**PREVENT YELLOWING**

DO NOT PLACE HOT OBJECTS ON SURFACE.



**PREVENT FINISH DAMAGE**

DO NOT USE RUBBER BASED PLACE MATS.



**PREVENT DISCOLORING**

## TO CLEAN

USE A SOFT CLOTH MOISTENED IN LUKEWARM SOAP AND WATER, THEN BUFF WITH A DRY CLEAN CLOTH.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If this product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

[www.homestyles-furniture.com/customer\\_service](http://www.homestyles-furniture.com/customer_service)

**Home Styles Consumer Assistance:** [www.homestyles-furniture.com](http://www.homestyles-furniture.com),  
[servicedesk@homestyles-furniture.com](mailto:servicedesk@homestyles-furniture.com), 888-680-7460, 877-831-0319