


SHIMANO

CHRONARCH

SA-RB

CH G-150HG

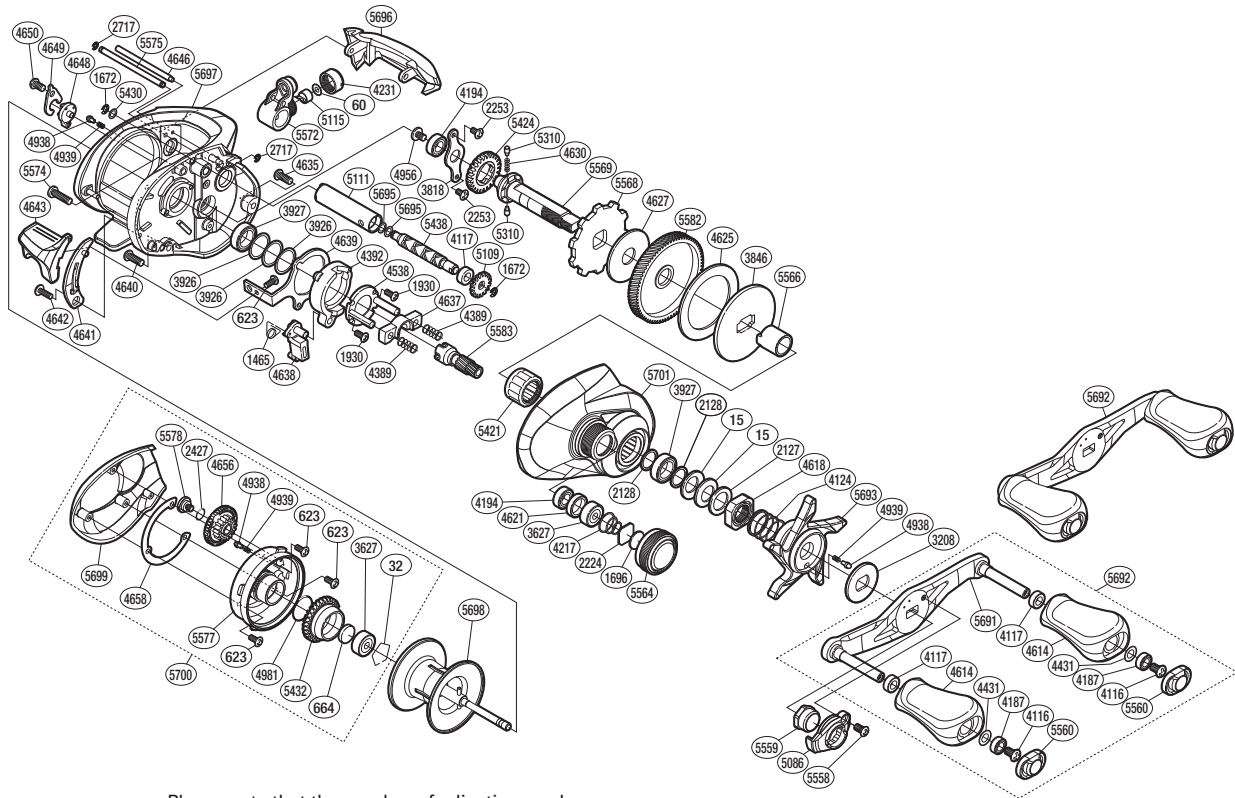

Please note that the number of adjusting washers may not be the same as shown in the exploded views.
(Adjustment will vary with each individual product.)

(51RH29F150X)

Part No.	Description	Part No.	Description	Part No.	Description
BNT0015	Drag Spring Washer	BNT4538	Clutch Cam Retainer	BNT5424	Idle Gear
BNT0032	Bearing Retainer	BNT4614	Handle Knob	BNT5430	Washer
BNT0060	Spacer	BNT4618	Star Drag Nut	BNT5432	Brake Pipe Gear Assembly
BNT0623	Screw	BNT4621	Bearing Spacer	BNT5438	Worm Shaft
BNT0664	Spacer B	BNT4625	Drag Washer	BNT5558	Screw
BNT1465	Clutch Pawl Spring	BNT4627	Drag Washer	BNT5559	Handle Nut
BNT1672	E Lock	BNT4630	Idle Gear Spring	BNT5560	Handle Knob Seal
BNT1696	Cast Control Spacer	BNT4635	Screw	BNT5564	Cast Control Cap
BNT1930	Screw	BNT4637	Yoke	BNT5566	Roller Clutch Inner Tube
BNT2127	Star Drag Spacer	BNT4638	Clutch Pawl	BNT5568	Anti-Reverse Ratchet
BNT2128	Bearing Washer	BNT4639	Clutch Plate	BNT5569	Drive Shaft
BNT2224	Spool Tension Spacer	BNT4640	Screw	BNT5572	Line Guide Assembly
BNT2253	Screw	BNT4641	Clutch Bar Guide	BNT5574	Screw
BNT2427	O Ring	BNT4642	Screw	BNT5575	Line Guard
BNT2717	E Lock	BNT4643	Quick-Fire II Clutch Bar Assembly	BNT5577	Brake Case Assembly
BNT3208	Star Drag Click Plate	BNT4646	Stabilizer Bar	BNT5578	Screw
BNT3627	Ball Bearing	BNT4648	Side Plate Cam Lever	BNT5582	Drive Gear
BNT3818	Drive Shaft Retainer	BNT4649	Cam Lever Retainer	BNT5583	Pinion Gear
BNT3846	Key Washer	BNT4650	Screw	BNT5691	Handle Shank Assembly
BNT3926	Washer	BNT4656	Br Dial	BNT5692	Handle Assembly
BNT3927	Ball Bearing	BNT4658	Washer	BNT5693	Star Drag
BNT4116	Screw	BNT4938	Click Pin	BNT5695	Washer
BNT4117	Bushing	BNT4939	Click Spring	BNT5696	Level Wind Protector
BNT4124	Star Drag Spring	BNT4956	Screw	BNT5697	Frame Assembly
BNT4187	Ball Bearing	BNT4981	O Ring	BNT5698	Spool Assembly
BNT4194	Ball Bearing	BNT5086	Handle Retainer	BNT5699	Left Side Plate
BNT4217	Spool Tension Spring	BNT5109	Idle Gear	BNT5700	Left Side Plate Assembly
BNT4231	Pawl Cap	BNT5111	Level Wind Guard	BNT5701	Right Side Plate Assembly
BNT4389	Yoke Spring	BNT5115	Line Guide Pawl		
BNT4392	Clutch Cam	BNT5310	Idle Gear Pin		
BNT4431	Washer	BNT5421	Roller Clutch Bearing	BNT4692	B-100 Oil (accessory)