


# Entertainment Console

## IMPORTANT


Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.


Do not use power tools above 8 volts to assemble.

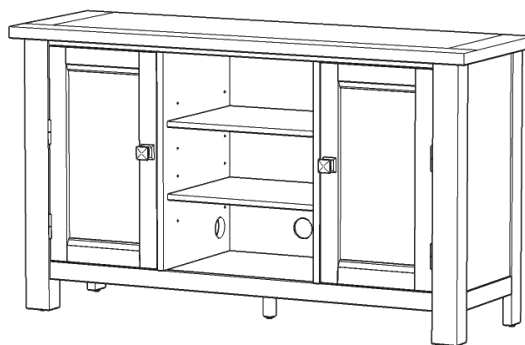

## Part List

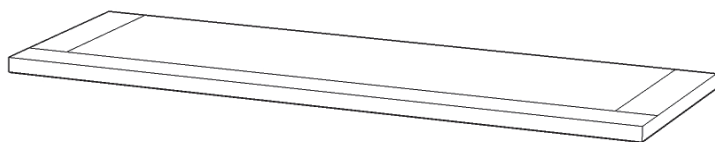

A.  
Top  
1 pc.

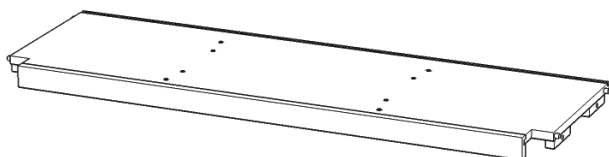

F.  
Base  
1 pc.



G.  
Front Stretcher  
1 pc.




H.  
Back Stretcher  
1 pc.




K.  
Shelf  
2 pcs.



L.  
Shelf  
2 pcs.

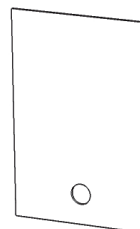

I.  
Back Panel  
2 pcs.

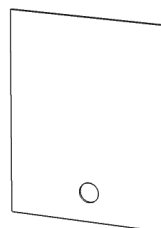

J.  
Back Panel  
1 pc.

For assembly see instructions in carton 88 5412 102.