

# SOLAR FINIAL WIND CHIME

Assembly Instructions



**Note:** Solar glass ball and chimes will vary depending on the item purchased.

**A**




Glass Ball

**B**



Chimes

Attach glass ball (A) to chimes (B) by turning it to the right until it is firmly tightened.

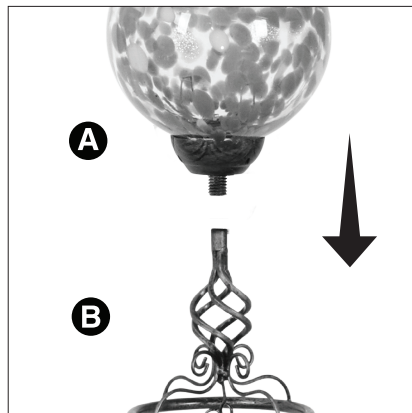

## OPERATION

**ON/OFF:** The unit is shipped in the OFF position. Locate the ON/OFF switch on the bottom of the base and slide it into the ON position (Photo #1). In the ON position, the solar cell will light up automatically at dusk and will shut OFF automatically when the solar panel is exposed to daylight.

**Location:** Select a sunny location. Place the unit in direct sunlight for at least two full days with the power switch in the ON position to fully charge the battery. The more direct sunlight your new solar light is exposed to during the day, the longer the light will operate in the evening. Make sure no artificial light (street lights, house lights, etc) will shine on the solar light as this will not allow the solar light to turn on at night.

## TIPS

Make sure switch is in the ON position by taking the wind chime indoors in a dark area and covering the top. Check and see if the light is turning on by moving the switch to the ON and OFF position.

If the light does not turn on, please unscrew the bottom of the base (see maintenance section) and verify that the battery is properly placed in the battery compartment.

1. If the battery is not in the correct position, please fix and then set outdoors again in direct sunlight for at least 2 full days with the power switch in the ON position.
2. If the battery was in the correct position, contact 1-800-775-5503 or [support@exhart.com](mailto:support@exhart.com) so we may rectify the issue.

## MAINTENANCE

**Cleaning:** The solar panel has an epoxy cover that will need to be kept free of dirt and debris, and snow, all the time. Wipe the panel periodically with a damp cloth. Failure to do so will prevent the battery from charging properly, reducing operating time and the life of the battery. Check the battery periodically, especially after winter months, and replace when necessary.

The battery may need to be replaced after a year of continuous use. To replace, open the battery compartment by unscrewing the two screws below the base (Photo #2) and pulling the battery cover off the unit (Photo #3). Replace the battery with a 1/3 AAA Ni-MH 100mAh 1.2V rechargeable battery (Photo #4). The capacity of the replacement battery shall not be less than the recommended capacity. Replace the battery cover and screw two screws in firmly to seal the unit.

### Warning:

- Only use rechargeable 1/3 AAA Ni-MH 100mAh 1.2V battery.
- Failure to insert the battery in the correct polarity, as indicated in the battery compartment, may shorten the life of the battery or cause the battery to leak.
- Do not dispose of batteries in fire, or heat, as battery may explode.
- Do not open, short circuit, or mutilate battery, as injury may occur.
- Batteries should be recycled, or disposed of, in accordance with Federal, state and local regulations.
- Electrical rating is 0.05W.



Battery must be recycled or disposed of properly. Do not short circuit or dispose of in fire.



Ni-MH

