




# USER MANUAL

## 4 Channels Dual Bay Style Enclosure Based Power Over Ethernet Network Video Recorder

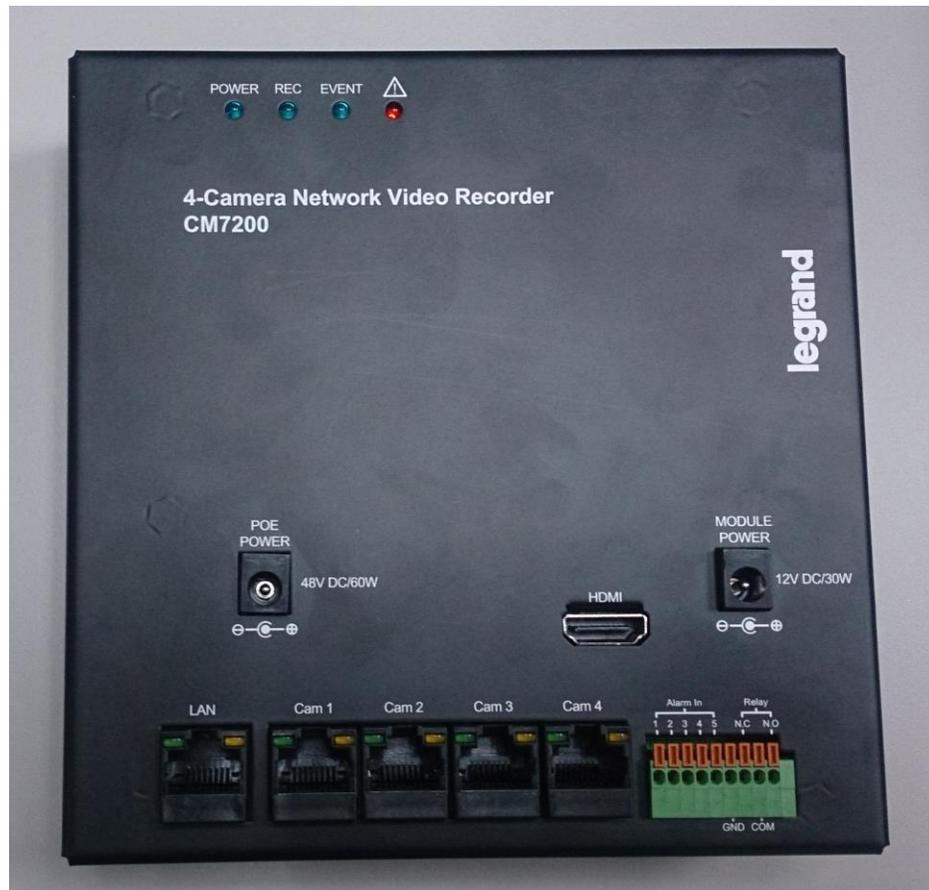

## **INSTRUCTION MANUAL**

To obtain the best performance and ensure device function correctly, please read this instruction manual carefully and completely.

### **FCC Compliance**

#### **USER-INSTALLER CAUTION:**

YOUR AUTHORITY TO OPERATE THIS FCC VERIFIED EQUIPMENT COULD BE VOIDED IF YOU MAKE CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE TO PART 15 OF THE FCC RULES.

#### **NOTE:**

THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS B DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE WHEN THE EQUIPMENT IS OPERATED IN A COMMERCIAL ENVIRONMENT. THIS EQUIPMENT GENERATES, USES, AND CAN RADIATE RADIO FREQUENCY ENERGY AND IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTION MANUAL, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS.

OPERATION OF THIS EQUIPMENT IN A RESIDENTIAL AREA IS LIKELY TO CAUSE HARMFUL INTERFERENCE IN WHICH CASE THE USER WILL BE REQUIRED TO CORRECT THE INTERFERENCE AT HIS OWN EXPENSE.

**THIS CLASS B DIGITAL APPARATUS MEETS ALL REQUIREMENTS OF THE CANADIAN INTERFERENCE-CAUSING EQUIPMENT REGULATIONS.**

## **WARNINGS, CAUTIONS & COPYRIGHT**

### **WARNING**

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MISTURE. DO NOT INSERT ANY METALLIC OBJECT THROUGH VENTILATION GRILLS.



301 Fulling Mill Road, Suite G  
Middletown, PA 17057  
(800) 223-4162

©Copyright 2016 by Legrand,  
Inc All Rights Reserved.  
[www.legrand.us](http://www.legrand.us)

**CAUTION**

	<b>CAUTION</b> RISK OF ELECTRIC SHOCK DO NOT OPEN	
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK. DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		

**Explanation of Graphical Symbols**

	The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of insinuated "dangerous voltage" within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.
	The exclamation point within an equilateral rhombus is intended to alert the user to the presence of important operating and maintenance (servicing) instruction in the literature accompanying the product.

USERS OF THE SYSTEM ARE RESPONSIBLE FOR CHECKING AND COMPLYING WITH ALL FEDERAL, STATE, AND LOCAL LAWS AND STATUTES COIPCERNING THE MONITORING AND RECORDING OF VIDEO AND AUDIO SIGNALS. ULTRAK SHALL NOT BE HELD RESPONSIBLE FOR THE USE OF THIS SYSTEM IN VIOLATION OF CURRENT LAWS AND STATUTES.

**COPYRIGHT**

THE TRADEMARKS MENTIONED IN THE MANUAL ARE LEGALLY REGISTERED TO THEIR RESPECTIVE COMPANIES.

## TABLE OF CONTENTS

1.	Live View .....	5
2.	Camera .....	14
3.	Record .....	21
4.	Alarm.....	24
5.	Network.....	26
6.	Authority .....	32
7.	Storage.....	35
8.	System .....	36
9.	Player .....	40
10.	Plugin .....	46
11.	Log List .....	47

## ACCOUNT & PASSWORD LOGIN

After connecting to the network or LAN; type directly the IP address of the NVR on the IE Browser directly. The following User name & Password Login window will pop up.




Enter **Default user name & password: admin**

### 1. Live View

The image shows the Legrand NVR Configuration interface. At the top left is the "legrand" logo. At the top right are "Live" and "Config" icons. The main area displays a 2x2 grid of camera feeds. On the left is a "PTZ Control" panel with buttons for "Zoom Out", "Zoom In", "Focus Far", "Auto Focus", "Focus Near", "Speed" (set to 3), "Auto Pan", "Display Mode" (set to Quad), and "Online Visitor : 2/8 MAX". At the bottom is a control bar with icons for "Backup", "Audio in", "Audio out", "Snapshot", "Rec", "Search", "Full", and "Screen Pattern" (represented by a 1 and 4 icon). A red box highlights the "Screen Pattern" icon. Red arrows point from text labels to specific interface elements: "NVR Configuration" points to the "Config" icon, "PTZ Control" points to the PTZ panel, "System Time" points to the "Live 09/01/2016 16:51:41" timestamp, and "Screen Pattern" points to the "Screen Pattern" icon.

- A.  **Configuration** : Get into the NVR setup menu.
- B.  **Live** : Click on the icon to return to Live mode interface from other modes.
- C.  **Screen Pattern** : Click on each icon to enter a 1 screen pattern or 1/4 screen pattern mode. Click on a channel screen twice to view its full image.
- D.  **Full Screen** : Click to enter full screen mode. You can still adjust the screen pattern by clicking on the icons below.

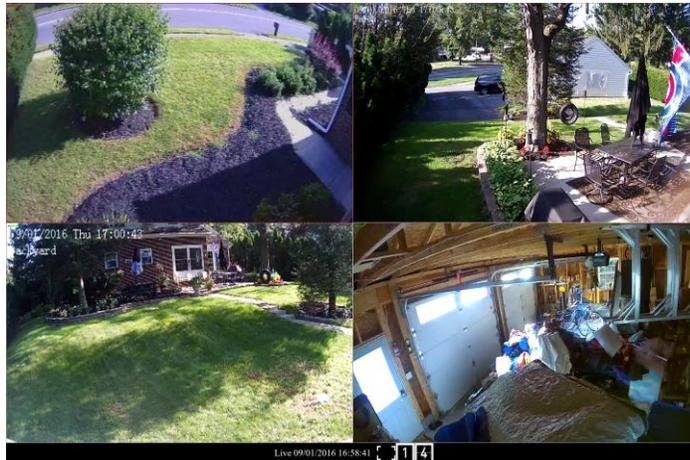

When clicking 4:

When clicking 1:




Press esc button on the PC keyboard to quit this mode.

E.  **Search** : Click to enable **Search menu**. 3 icons    will pop up.

 **E1. Time Search**

Click on the icon to enter **Time Search** page where you can see the time frame of your recorded video.

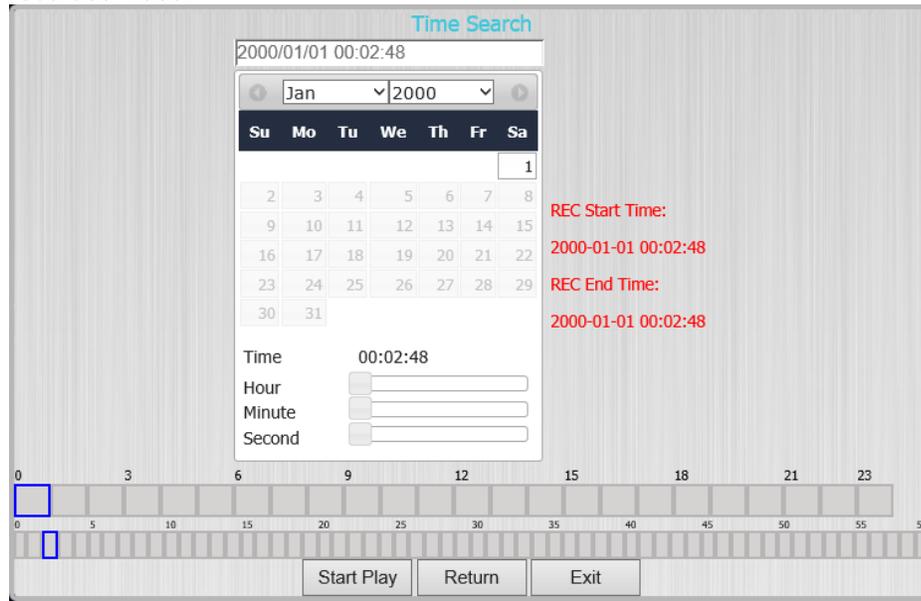

**Time Search**

2000/01/01 00:02:48

Jan 2000

Su Mo Tu We Th Fr Sa

1

2 3 4 5 6 7 8

9 10 11 12 13 14 15

16 17 18 19 20 21 22

23 24 25 26 27 28 29

30 31

Time 00:02:48

Hour

Minute

Second

REC Start Time: 2000-01-01 00:02:48

REC End Time: 2000-01-01 00:02:48

0 3 6 9 12 15 18 21 23

0 5 10 15 20 25 30 35 40 45 50 55 59

Start Play Return Exit

Place your mouse cursor on the time frame where you would like to view the playback video from. Click on **Start Play** button to continue.

 **f2. Event Search**

After entry to the event search page, the user can click on the event log item which is displayed in a list on top right to start watching its playback video.



**Event Search**

Time Filter

1 Day

2000/01/01 00:02:48

to

2000/01/01 00:02:48

Event Type Filter

All

Power On

Power Off

Video loss

Motion

Record

Stop Record

Camera Digital Input

PIR Detection

Ext. Alarm

Channel Filter

All

CH01 CH01

CH02 CH02

CH03 CH03

CH04 CH04

No.	Time	CH	Type	Length
1	2000/01/01 00:07:00	---	PWR OFF	1 s
2	2000/01/01 00:05:00	---	PWR OFF	1 s
3	2000/01/01 00:02:48	---	PWR ON	1 s

Event Filter Return Exit

The user could click the **Event Type Filter** button to enter a list of events and select

specific types to be included for being recorded on the video. Set the time range in **Time Filter** and tick any channels for the system to examine in **Channel Filter**.



f3. **EXIT** **Exit**: Click to return to live mode.


F.  **Recording** : Click to start recording the live video to PC or storage device. A window will pop up on the screen for user to set up the recorded file saving path.

G.  **Snapshot** : Save a single picture from the image. A window will pop up on the screen for user to set up the snapshot file saving path.

H.  **Audio Out** : Click this icon to enable/disable the audio.

I.  **Audio In** : Click the icon to enable or disable the one way audio.

J.  **Backup** : Offers to set up and manage video back-up files.

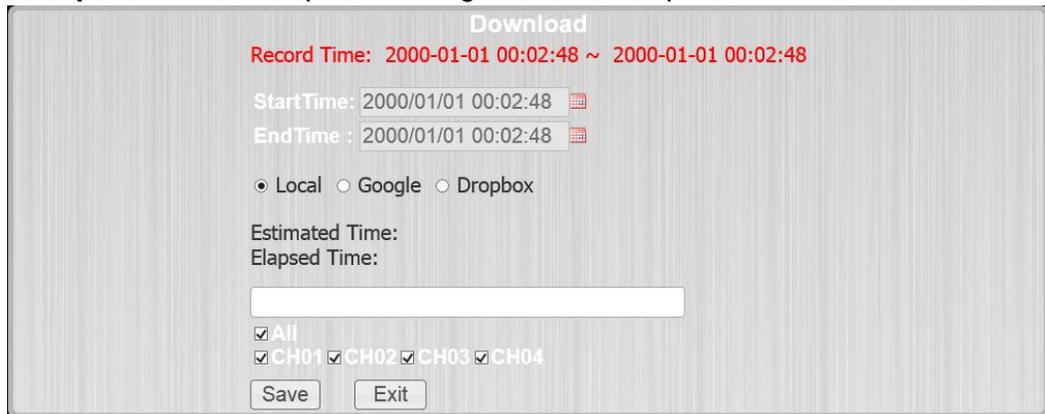

The screenshot shows a window titled "Download" with the following content:

- Record Time: 2000-01-01 00:02:48 ~ 2000-01-01 00:02:48
- StartTime: 2000/01/01 00:02:48
- EndTime: 2000/01/01 00:02:48
- Radio buttons: Local (selected), Google, Dropbox
- Estimated Time: [empty field]
- Elapsed Time: [empty field]
- Checkboxes: All (checked), CH01 (checked), CH02 (checked), CH03 (checked), CH04 (checked)
- Buttons: Save, Exit

Set up the **StartTime**, **EndTime**, and assign which channel (**CH01~CH04**) to record the backup files from. For **Backup type**, once the storage device or destination is set ready, click **Start** to proceed or **Stop** to cancel.


You can choose to have the files stored on a cloud drive like “Google Drive” or “Dropbox” and share them with others for convenience.

## Google Drive


If choosing Google Drive make sure that your Google Account is set to “Allow less secure Apps”

1. create a path “Legrand/backup” on Google drive


And select the time and choose Google drive and then press login

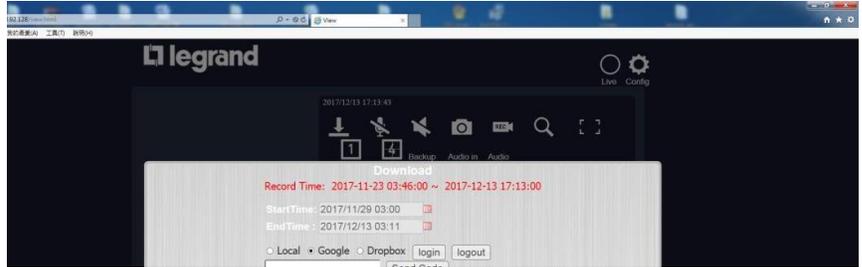


2. press allow

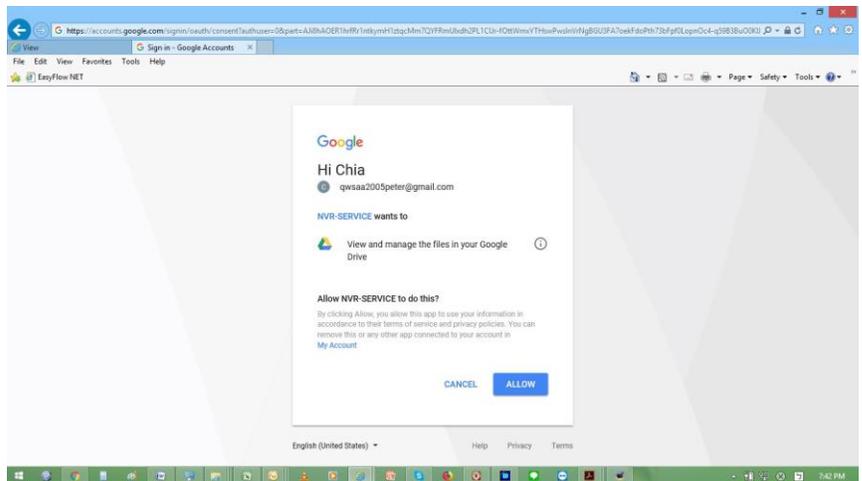


3. copy authentication code

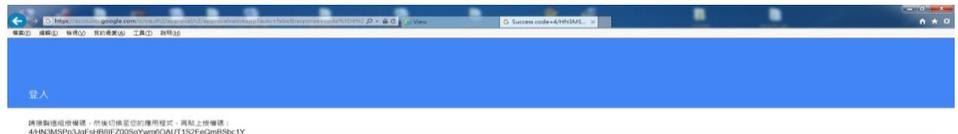

4. paste authentication code, press “Send code, if it is successful, you will see “finish setting”

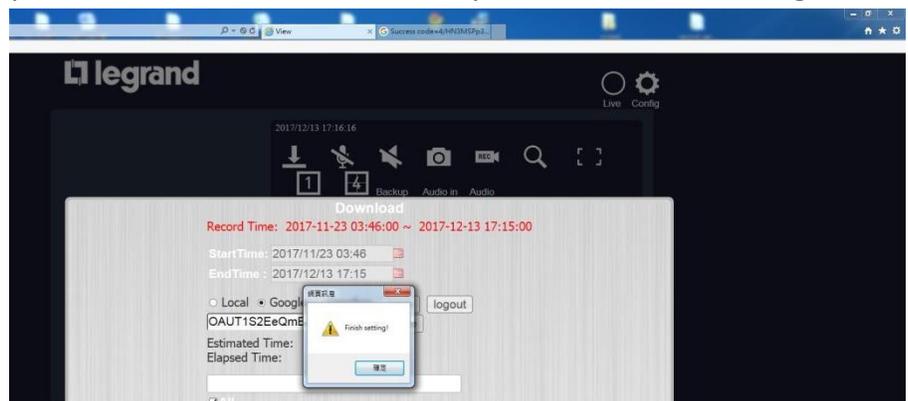


5.press save and begin uploading to cloud

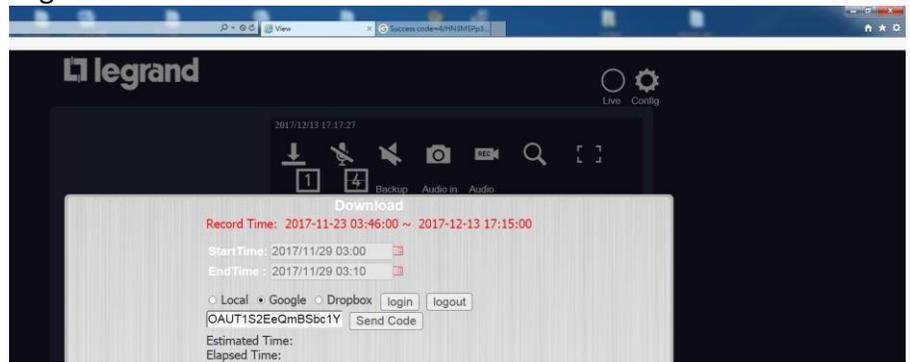

6.After finishing, will show "Upload process finish"




7.The files will be located on Legrand/backup

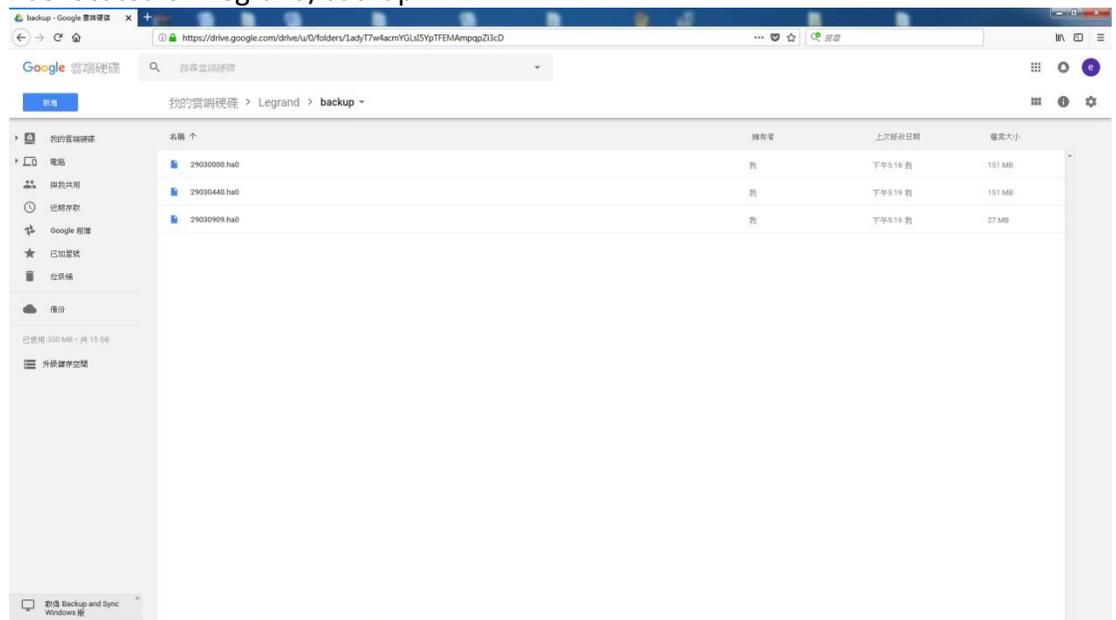

## Dropbox Cloud backup

1. create the path of Legrand/backup and select the period which want to backup and choose Dropbox and press Login

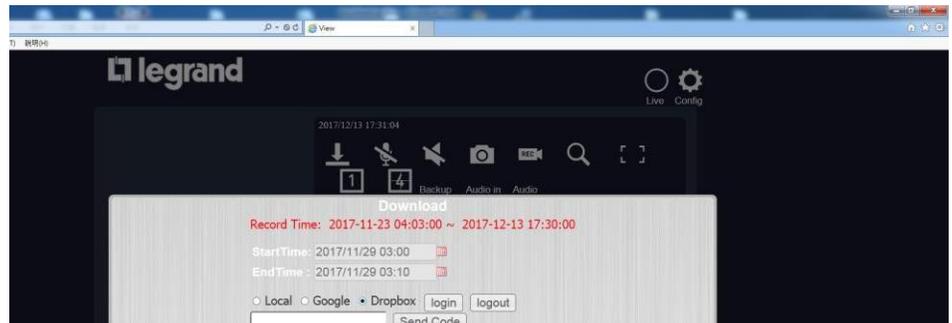


2.click allow




3.Copy authentication code




4.paste the authentication code and press Send Code

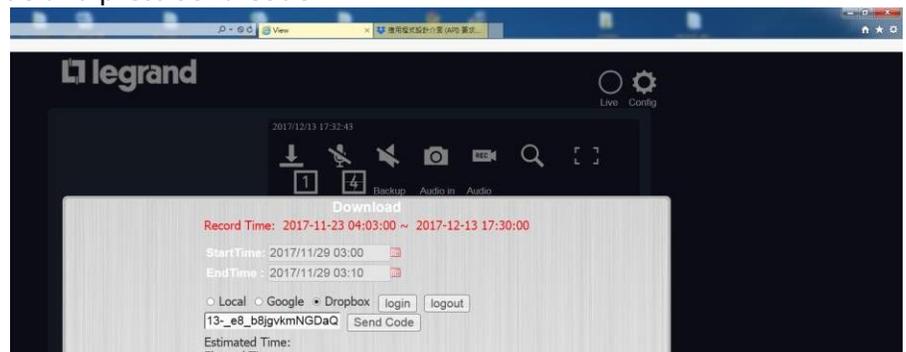

5. If the code is right, you will see “finish setting”, press “save” to begin uploading

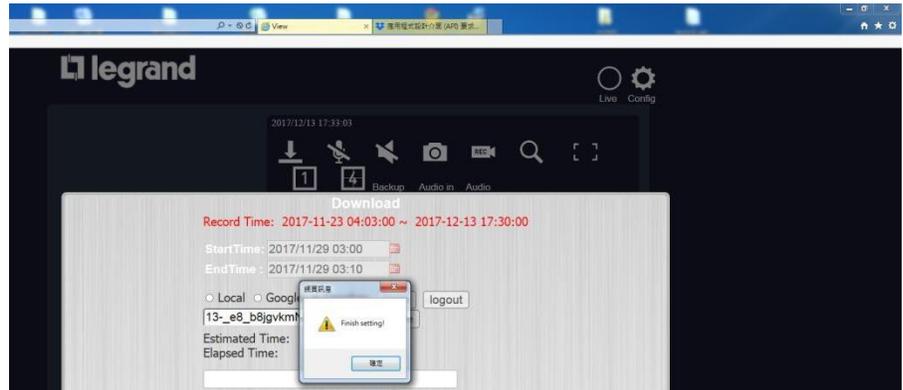

6. After finishing, you will see “Upload process finish”

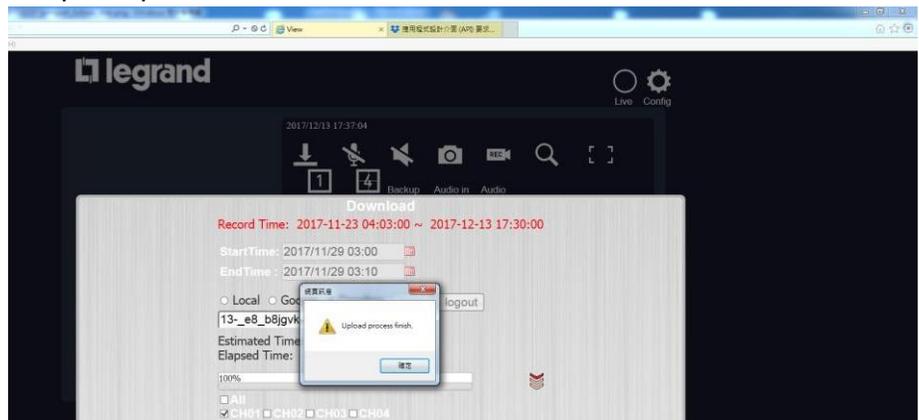


7. The files are located at Legrand/backup



**K. PTZ Control Panel**

For PTZ camera settings & controls.

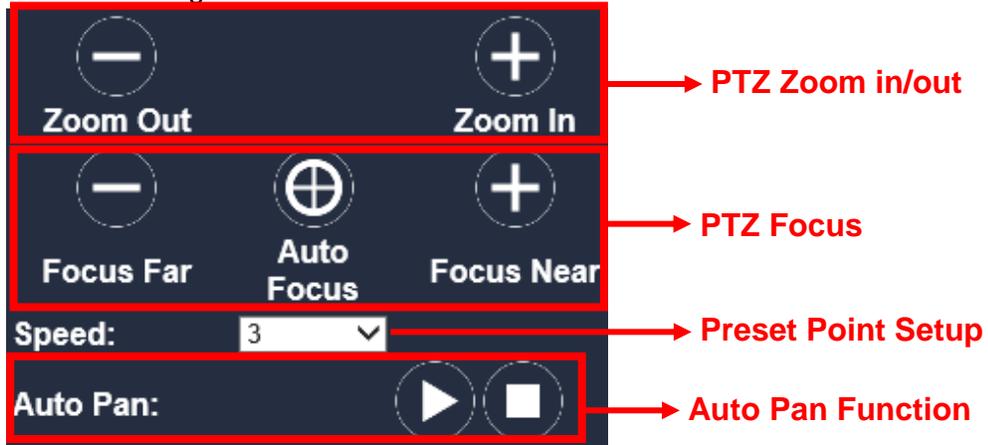


L. **Display Mode:**   **Display Mode** : Select a mode from **Single**, **Quad**, or **Sequence**. **Single** enables 1 single channel screen pattern, and **Quad** enables 1/4 screen pattern. Select **Sequence** to start switch dwell. The interval time drop down menu will pop up right after **Sequence** is selected.

M. **Online Visitor** : Users log on to this interface at the same time are limited to 8 people.

## 2. Camera


### A. Camera Setup

Helps connect and operate the IP camera from your NVR. Be sure your IP cameras and NVR are connected in the same LAN.

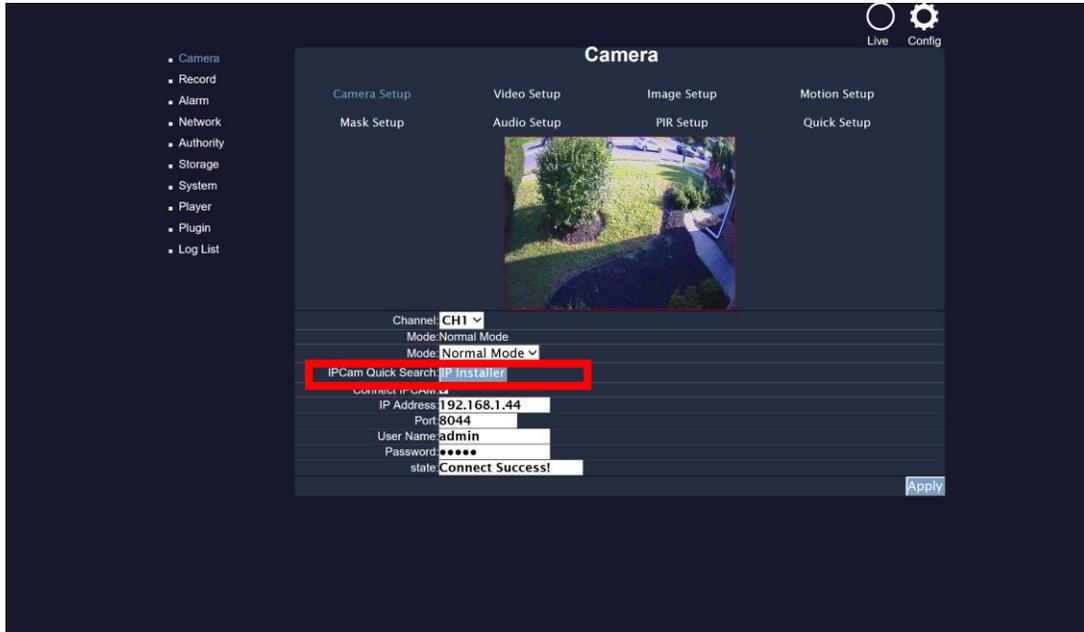

Clicking on **IP Installer** to start searching for IP cameras online.

#### A-1. IP Installer

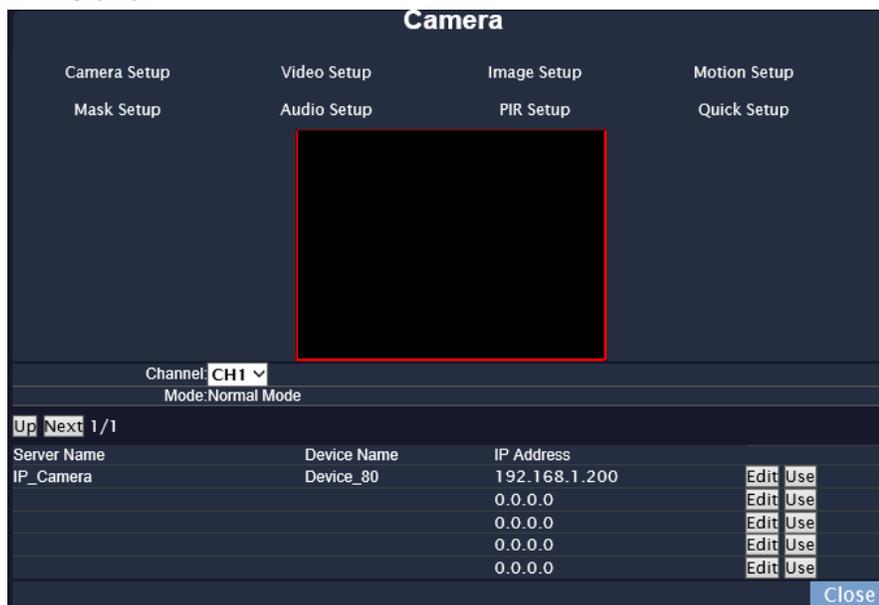


Click **IP Installer** to begin the search. The NVR will search for any network device in connection with the NVR. You can edit the IP address of the IP camera by clicking **Edit** icon.

The IP camera has to be under the same LAN with NVR in order to be successfully connected. For example, if the NVR IP address is 192.168.1.33, the IP Cam IP address should be

192.168.1.X.

Click on **Use** icon to connect the IP\_Camera from the list. If it is connected successfully, the whole page will return to the **Camera Setup** page as below.

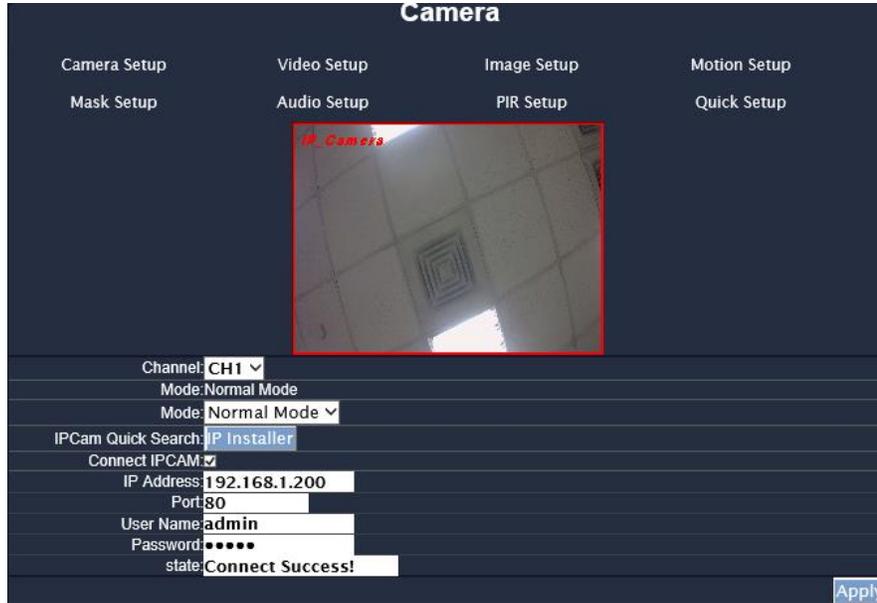

## B. Video Setup



### B-1. Channel

Click the drop down list to change the channel of the live video preview.

### B-2. Video Input Size

Click the drop down list to change the input size of connecting device.

### B-3. Video Input Size

Click the drop down list to change the resolution of connecting device.


### B-4. Quality

Click the drop down list to change the image quality.

### B-5. Frame Rate

Click drop down list to change the frame rate of connecting device. Click **Apply** after the quality rate of the camera is set.

## C. Image Setup

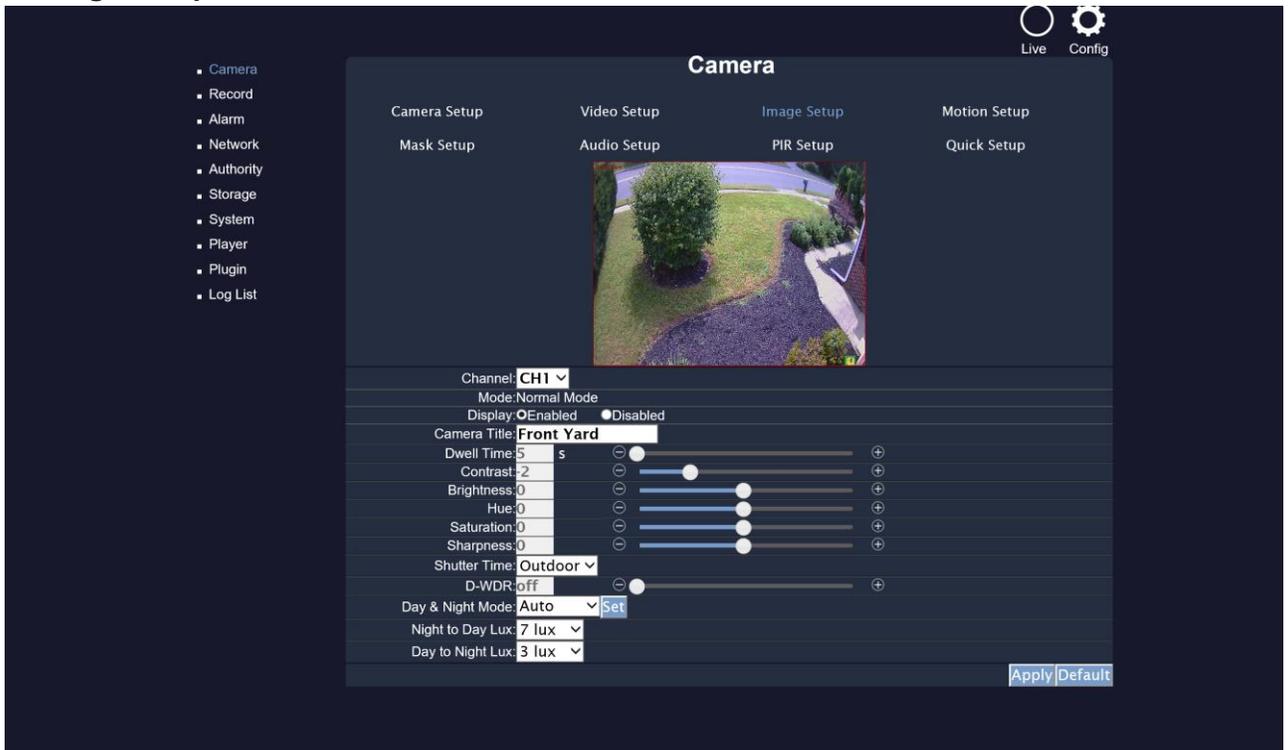

### C-1. Display

Use the mouse to click enable or disable for the camera display on the screen or not.

### C-2. Camera Title

Input the title of the connecting IP device.

### C-3. Dwell Time

Press + or - to change auto switch seconds.

### C-4. Contrast

Press + or - to change contrast level.

### C-5. Brightness

Press + or - to change brightness level.

### C-6. Hue

Press + or - to change hue level.

### C-7. Saturation

Press + or - to change saturation level.

### C-8. Sharpness

Press + or - to change sharpness level.

### C-9. Shutter Time

Choose the location of your camera or a fixed shutter time. The shorter the shutter time is the less light the camera receives and the image becomes darker. **Note: When you select a number in Shutter Time, it will vary in a range corresponding to the camera automatically.**

### C-10. D-WDR

This function enables the camera to reduce the contrast in the view to avoid dark zones as a result of over and under exposure.

### C-11. Day & Night Mode

There are 3 types of sub-modes under this mode to suit different needs of user's recording preference: **Color**, **Auto**, and **Gray**. For **Set Time** mode, the camera can be operated by the time this mode has assigned with.


### C-12. Night to Day Lux

Click to choose the lux level ranged from 5~50 at night.

### C-13. Day to Night Lux

Click to choose the lux level ranged from 1~40 at day time.

## D. Motion Setup

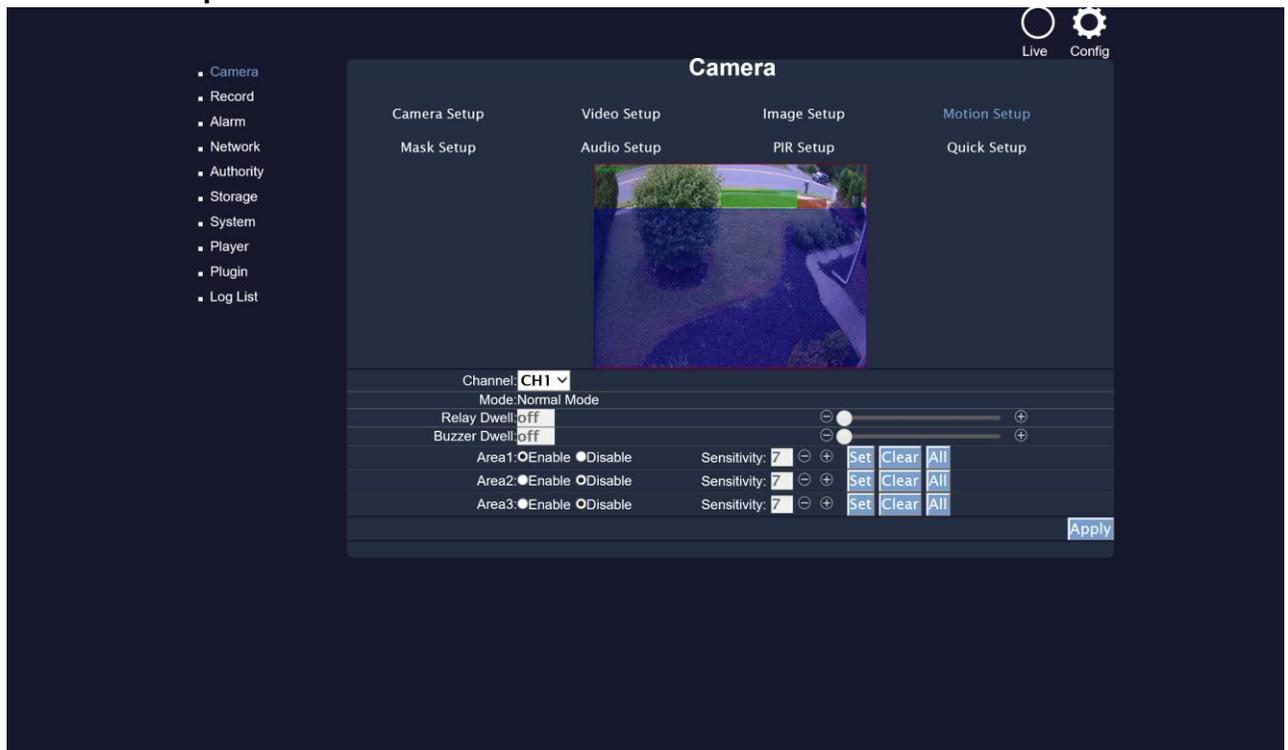

### D-1. Relay Dwell

Press + or - to change the relay time or disable the relay function.

#### D-2. Buzzer Dwell

Press + or - to change the buzzer time or disable the buzzer function.

#### D-3. Area1 / 2 / 3 Sensitivity

Press + or - to change the sensitivity value of motion in 3 Areas from 1, 2, & 3. Click **Set** and left-click your mouse button to drag a **blue**, **green**, or **red** area for motion areas.

#### D-4. Motion Area Setup

The picture above shows how all 3 different areas are set within 3 different frames. Each framed area is assigned to each color.

**All:** Set motion detection for the whole area of the screen.

**Clear:** Clear the area of the current color in the view.

**Apply:** Save the settings and keep the change.

### E. Mask Setup

#### E-1. Mask1 / 2 / 3

The pictures above show how all 3 different areas are set within 3 different colored frames. Tick the "Mask1/2/3" box and click "**Set**". Start dragging your masked areas in **blue**, **green** or **red** by clicking your mouse anywhere on the screen.

#### E-2. Masked Area Setup

The picture above shows how all 3 different areas are set within 3 different frames. Each framed area is assigned to each color.

**All:** Set motion detection for the whole area of the screen.


**Clear:** Clear the area of the current color in the view.

**Apply:** Save the settings and keep the change.



The live view will display the masked areas in black blocks.


### F. Audio Setup

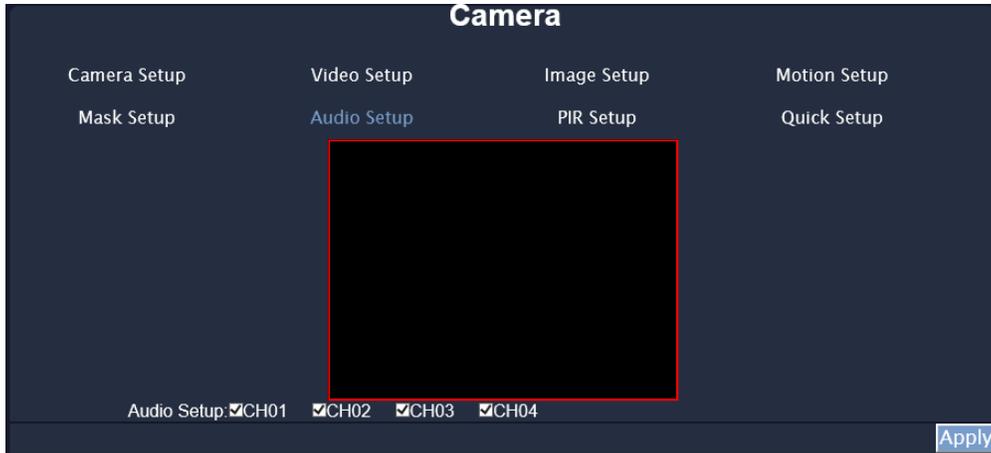

The channel ticked means the sound from the network camera will be recorded into the playback video. On the contrary, no sound will be recorded in playback video for the channel not ticked.


### G. PIR Setup

Adjust the Buzzer Dwell time and its Interval after the Enable box is ticked. Please be sure your camera also supports the PIR device.

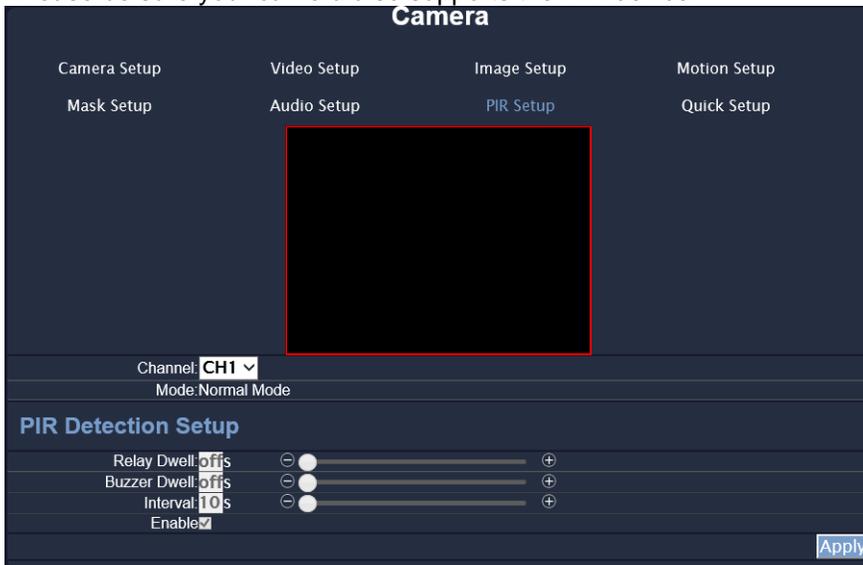

### H. Quick Setup

Other than "Camera Setup", you can choose another way to complete the IP camera connection job: using Quick Setup.

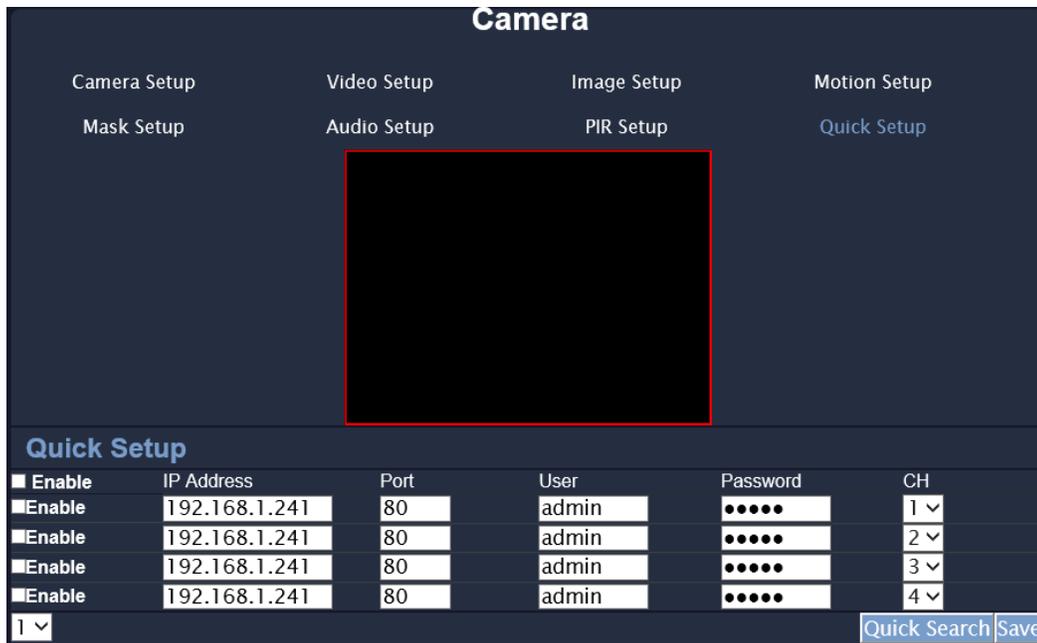

### H-1. Key-in information manually

All the channels are enlisted and displayed. You can key-in the IP address, port, and user name & password of the IP camera, and then assign the channel number. Tick “Enable” to connect to the IP camera.

### H-2. IP CAM Quick Search

With Quick Search, you do not need to type the IP address. Click “IP CAM Quick Search” to enter the search menu.

The NVR searches for all the IP devices listed in the LAN. Find the IP camera you want to connect to, assign a channel number for it, and tick “Enable” so for enabling this IP camera and adding it to all-channel list.



Back to the all-channel list, you can key-in the user name and password, and tick “Enable” to connect to the camera. If you want to revise the IP setting of a camera, click “Edit”:

The IP Cam has to be under the same LAN with NVR in order to connect successfully. Ex. If the NVR IP address is 192.168.10.33, the IP Cam IP address should be 192.168.10.X. You can edit the IP Cam IP address here or on the IP Cam.

If all settings are confirmed, be sure to **Save** the settings before clicking on **Close**.

### 3. Record

## Record

Record Setup

### Record Setting

Pre-Alarm Recording Time:	10 sec	⊖	<input type="range"/>	⊕
Post-Alarm Recording Time:	10 sec	⊖	<input type="range"/>	⊕
Mobile Record:	Disable	▼		
Mobile Push Video:	Enable	▼		
Record Mode:	Manual	▼		

#### A. Pre-Alarm Record Time / Post-Alarm Record Time

Pre-alarm record means the recording before the alarm is triggered; post-alarm record means the recording after the alarm is triggered. If you set 5 seconds for pre-alarm and 5 seconds for post-alarm, the alarm recording length will be 10 seconds in total.


#### B. Mobile Record / Mobile Push Video

Choose “Enable” to begin both the Mobile Record streaming and Mobile Push Video for mobile viewing.

#### C. Record Mode

The record mode will be applied to all channels simultaneously. During the recording, the NVR will record both main streaming and sub streaming from the IP Cam. Use the drop down list to switch recording modes.

**C-1. Manual:** In Live mode, click  to start recording.

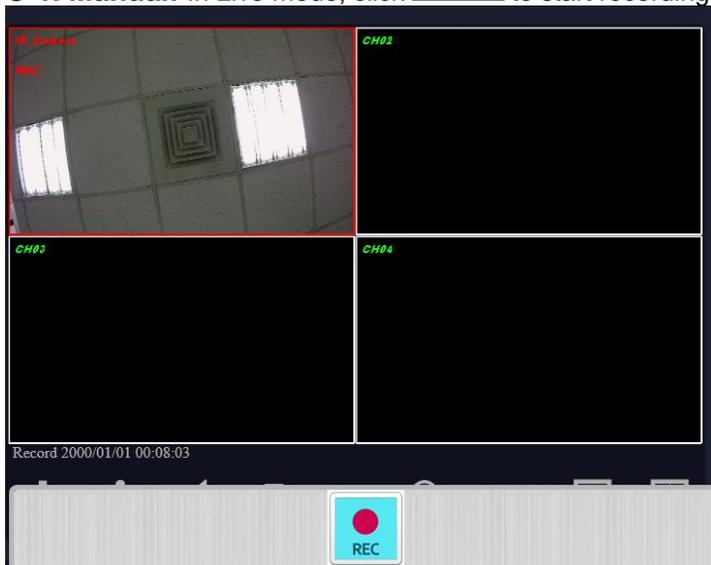

A bar will pop up down below, with the  button flickering. Click  to stop recording.


**C-2. Schedule:**



Click on the drop down list from the **Record Mode** on the right, and select **Schedule**. There will be three Setup options available: **Schedule Setup**, **Mail Schedule Setup**, and **FTP Schedule Setup**.


Users can assign the schedule to any channel by clicking on **ALL / CH** on top right of each setup menu. Press **+** or **-** to change the channel to apply to.

**a. Schedule Setup:**

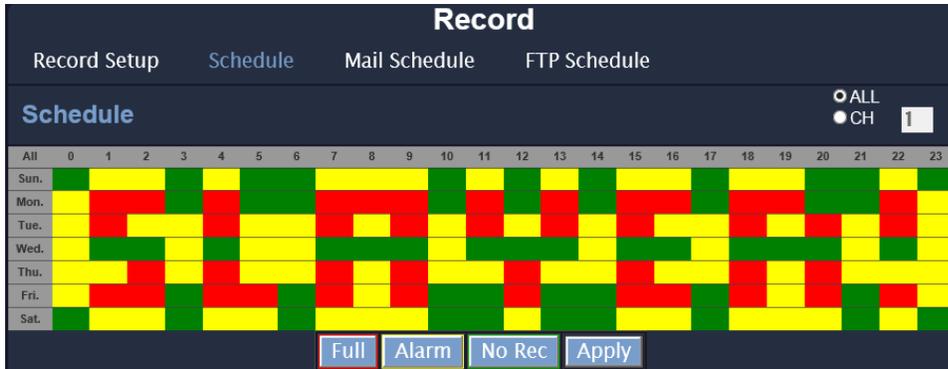


Click the tag **“FULL REC”**(Red) / **“ALARM REC”**(Yellow) / **“NO REC”**(Green), and then draw on the calendar. The recording type will follow the schedule. The tag **“ALARM REC”** includes all the alarm types.

**b. Mail Schedule Setup:**

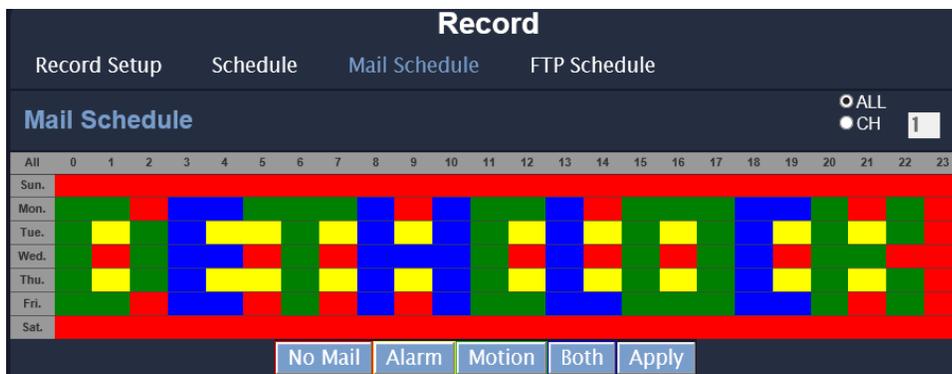

Select the time that the recording video is sent to the mail address. No mail will be sent during “**NO MAIL**” period even the motion detection is triggered. The tag “**ALARM MAIL**” refers to both external alarm and DI from camera.

**c. FTP Schedule Setup:**

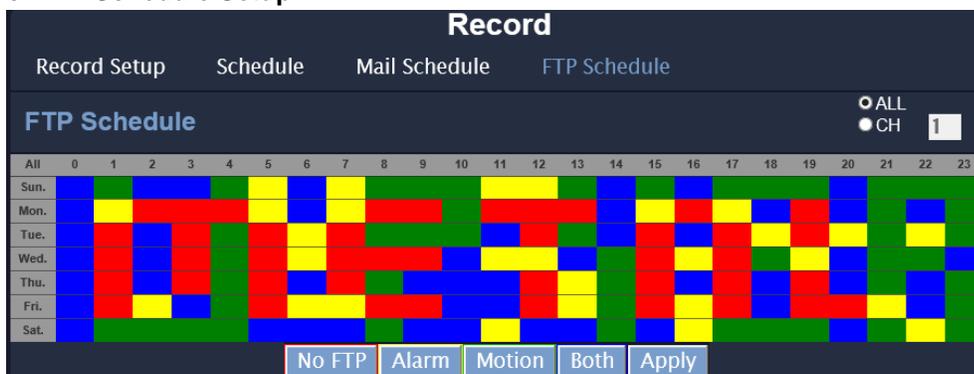

Select the time that the recording video is uploaded to FTP. No file will be uploaded during “**NO MAIL**” period even the motion detection is triggered. The tag “**ALARM FTP**” refers to both external alarm and DI from camera.

**C-3. Alarm Trigger**

Start recording when any type of alarm event occurs. The recording video length is according to the setting of “Pre-Alarm Record Time/Post-Alarm Record Time”.

## 4. Alarm

### A. Alarm Trigger Setup

Alarm		
Alarm Trigger	Alarm Output	Alarm Event
<b>Alarm Trigger Setup</b>		
Alarm Auto Switch:	Close	▼
Auto Switch Timer:	5 s (5-30)	
Video Loss Detection:	Open	▼
Digital Input (IPCam):	Open	▼
Ext.Alarm Detection:	Open	▼
Ext.Alarm Mode:	N.O	▼
HDD Temp. Warning:	Close	▼
HDD Temp. Limit Value:	55 °C (55-70)	
<a href="#">Apply</a>		

#### A-1. Alarm Auto Switch / Auto Switch Timer

Use the drop down list to switch the alarm auto switch. When the alarm is triggered, the screen will switch to full screen, 4CH split screen or disable. Set the lasting seconds in **Auto Switch Timer** for full / split screen modes.

#### A-2. Video Loss Detection

Use the drop down list to switch the video loss detection. When the video loss is detected, the alarm will be triggered.

#### A-3. Digital Input (IP Cam)

Use the drop down list to switch on /off the Digital Input from IP camera. When the DI signal is received from the camera, the alarm will be triggered.

#### A-4. Ext. Alarm Detection

Use the drop down list to switch the external alarm detection. When the external alarm is detected, the alarm will be triggered.

#### A-5. Ext. Alarm Mode

Use the drop down list to switch the external alarm mode. If the external alarm is setup for normal open, the option has to switch to N.O.; for the contrary, the option has to switch to N.C.

#### A-6. HDD Temp Warning

Select **Enable** from the drop-down list to trigger the buzzer whenever the storage device gets overheated.

#### A-7. HDD Temp. Limit Value

Set the temperature limit between 55~70 .

### B. Alarm Output Setup

## Alarm

Alarm Trigger
Alarm Output
Alarm Event

### Alarm Output Setup

Alarm Buzzer Time:	5	s	-	<input type="radio"/>		+
Video Loss Buzzer Time:	5	s	-	<input type="radio"/>		+
Alarm Relay Time:	5	s	-	<input type="radio"/>		+
Video Loss Relay Time:	5	s	-	<input type="radio"/>		+

This control item is divided into two parts, “Buzzer Time” and “Relay Time”. The user can press + or - to switch the external buzzer time and video loss buzzer time in “Buzzer Time” option. The adjustment value is from 5 to 99 seconds. Moreover, among “Relay Time” option, users can press + or - to switch the external buzzer time and video loss buzzer time. The adjustment value is also from 5 to 99 seconds.

The Value of Ext. Alarm Buzzer / Relay Time determine the buzzer / relay time of both external alarm in and digital input (IP Cam).

### C. Alarm Event Setup

## Alarm

Alarm Trigger
Alarm Output
Alarm Event

### Alarm Event Setup

Power On	<input checked="" type="radio"/> Enabled	<input type="radio"/> Disabled
Power Off	<input checked="" type="radio"/> Enabled	<input type="radio"/> Disabled
Video Loss	<input checked="" type="radio"/> Enabled	<input type="radio"/> Disabled
Motion	<input checked="" type="radio"/> Enabled	<input type="radio"/> Disabled
Record	<input checked="" type="radio"/> Enabled	<input type="radio"/> Disabled
Stop Record	<input checked="" type="radio"/> Enabled	<input type="radio"/> Disabled
Digital Input	<input checked="" type="radio"/> Enabled	<input type="radio"/> Disabled
Ext.Alarm Event	<input checked="" type="radio"/> Enabled	<input type="radio"/> Disabled
PIR Detection	<input checked="" type="radio"/> Enabled	<input type="radio"/> Disabled

There are nine types of events that can be selected. When the selected items occur and triggered, the log will be recorded in the event playback list.

## 5. Network

### A. IP Setup

Network							
IP Address	PPPoE	DDNS	Mail	FTP	DHCP	Status	Connection Status
<b>IP Setup</b>							
<b>LAN</b>							
IP Mode: <input checked="" type="radio"/> DHCP <input type="radio"/> Static							
IP Address:		192.168.1.100					
Subnet Mask:		255.255.255.0					
Gateway:		192.168.1.252					
DNS 1:		192.168.1.252					
DNS 2:		168.95.1.2					
Web Page Port:		80					
<b>UPnP Port Forwarding</b>							
<input type="checkbox"/> Enabled							
External HTTP Port:		80					
							<input type="button" value="Test"/>
							<input type="button" value="Apply"/>

#### A-1. IP Mode

Select the IP mode from **Static IP** to **DHCP**.

#### A-2. IP Address

Input the NVR IP Address.

#### A-3. Subnet Mask

Give the subnet mask which we usually set to 255.255.255.0.

#### A-4. Gateway

Give NVR gateway.

#### A-5. DNS1 & DNS2

Key-in DNS1 and DNS2 that provided by ISP.

#### A-6. Web Page Port

Give the NVR http port for web browser. Default is 80.

### B. UPNP Port Forwarding

#### B-1. Enable

Use the checkbox to enable or disable UPNP port setup.

#### B-2. External HTTP Port

Use the virtual keypad to insert the external http port.

## C. PPPoE Setup

Network	
IP Address	PPPoE
<b>PPPoE Setup</b>	
PPPoE Setting: <input type="radio"/> Enabled <input type="radio"/> Disabled	
Username:	<input type="text"/>
Password:	<input type="password"/>
Password Confirm:	<input type="password"/>
State:	IDLE
IP Address:	<input type="text"/>
Send mail after dialed:	<input checked="" type="checkbox"/> Enabled
Subject:	NVR is dialed
<input type="button" value="Apply"/>	

### C-1. PPPoE Setting

Choose to **Enable** or **Disable** PPPoE.

### C-2. Username

Insert the user name (ADSL account) which provided from local ISP.

### C-3. Password

Insert the password which provided from local ISP.

### C-4. Password Confirm

Insert the password again to confirm the password.

### C-5. State

Present the current status of PPPoE function.

### C-6. IP Address

Input the IP Address.

### C-7. Send Mail After Dialed

Click the drop down list to enable or disable the function.

### C-8. Subject

Insert the mail subject when dialed successfully.

## D. DDNS Setup

Legrand offers a free DDNS service for users of our IP based products. To register for a friendly name, e.g. "smith.legrandhome.net", for your client to be able to view any of their devices that are port forwarded please email Legrand's tech support at [technical.support-HS@legrand.us](mailto:technical.support-HS@legrand.us). In the email ask for the leggrandhome.net DDNS service and provide the username (keep it short but memorable) and a password. You will receive an email

confirming the service is active and provide the information you need to complete setup.

Network							
IP Address	PPPoE	DDNS	Mail	FTP	DHCP	Status	Connection Status
<b>DDNS Setup</b>							
DDNS Setting <input checked="" type="radio"/> Enabled <input type="radio"/> Disabled							
Provider: <b>dyndns.org</b> ▼							
Hostname: <input type="text"/>							
Username: <input type="text"/>							
Password: <input type="text"/>							
Schedule Update: <b>1440</b> Minutes							
<input type="button" value="Apply"/>							
State:							
IDLE							
Note:							
1. Schedule Update: Feature of DDNS schedule update is designed for IP products which installed behind the ICS or NAT devices. Update range from every 5 (minutes) to 5000 (minutes) and 0 remain to off.							
2. Please note that the hostname will be blocked by DynDNS.org if schedule update is more than once every 5 minutes to 60 minutes. In general, schedule update in every 1440 minutes is recommended.							

#### D-1. DDNS Setting

Click to enable or disable the DDNS function.

#### D-2. DDNS Provider

Click the drop down list to select the DDNS server. (If using the free Legrand DDNS service choose no-ip.com.)

#### D-3. Host Name

Insert the registered host name in the selected provider. (If using the free Legrand DNS service enter the "Host Name" (**username**.legrandhome.net) listed on the email sent informing of the service activation.)

#### D-4. Username

Insert the registered user name in the selected provider. (If using the free Legrand DNS service enter the "Username" (**username**#Legrand) listed on the email sent informing of the service activation.)

#### D-5. Password

Insert the registered password in the selected provider. (If using the free Legrand DNS service enter the "Password" listed on the email sent informing of the service activation.)

#### D-6. Schedule Update

A period of time to update IP address.

#### D-7. State

The state after applied to DDNS.

**Updating:** Information update.

**Idle:** Stop service.

DDNS registered successfully, now log by

http://<username>.legrandhome.net: Registered successfully.

**Updating Failed:** the name is already registered.

**Updating Failed:** please check your internet connection.

## E. Mail Server

**Network**

IP Address   PPPoE   DDNS   **Mail**   FTP   DHCP   Status   Connection Status

### Mail Server

Trigger Mode Event Mail

Mail Server:

SMTP Port:

Username:

Password:

Sender's Mail:

Receiver's Mail:

Bcc Mail:

Event Subject:

Secure Connection:  TLS  SSL

Test  
Apply

### E-1. Enable

Tick “**Trigger Mode**” to send video to the mail address when external alarm or DI from IP Cam is triggered.

### E-2. Event Mail

**Event Mail Setting**

**Video Mail**

Alarm                       Motion

PIR Detection

**Message Mail**

Power On                       Video loss

Start Record                       Stop Record

Record Error                       Load Default

HDD Warning

Apply

#### Video Mail

##### **Alarm / Motion / PIR Detection**

Sends a video notification via email for Alarm-in and/or Motion detection

#### Message Mail

**Power On** : A notification will be sent via email when the NVR starts or reboots.

**Start Record** : A notification will be sent via email when the NVR starts recording.

**Record Error** : A notification will be sent via email when the recording fails.

**HDD Warning** : A notification will be sent via email while recording in the HDD fails.

**Video Loss** : A notification will be sent via email when image or Internet connection is lost.

**Stop Record** : A notification will be sent via email when the NVR stops recording.

**Load Default** : A notification will be sent via email when the NVR load the default settings.

**E-3. Mail Server**

The IP address of Mail Server

**E-4. SMTP Port**

The port of SMTP (Simple Mail Transfer Protocol). (Default value is 25)

**E-5. Username**

The user name while log in to the mail server.

**E-6. Password**

The password while log in to the mail server.

**E-7. Sender's Mail**

Enter the sender's account when the mail is sent via this mail server.

If you are using Gmail as a sender account, make sure that your Google Account is set to "Allow less secure Apps"

**E-8. Receiver's Mail**

Enter the receiver's mail account.

**E-9. BCC Mail**

Enter the receiver's BCC mail account.

**E-10. Event Subject**

Enter the subject of the mail.

**E-11. Secure Connection**

When ticked, the user can choose connection type between SSL or TLS.

**F. FTP Server**

**F-1. FTP Setting**

Tick **ALARM** to upload video to FTP when external alarm or DI is triggered.

Tick **Motion** to upload video to FTP when motion detection is triggered.

Tick **PIR DETECTION** to upload video to FTP when PIR detection is triggered.

**F-2. FTP Server**

The IP address of FTP Server.

**F-3. Username**

The username while log in to the FTP server.

**F-4. Password**

The password while log in to the FTP server.

**F-5. FTP Port**

The port number of file transmission. (Default value is 21)

**F-6. Path**

The ftp path where the user wants to save the information.  
Finally, click **Test** to see if the settings can fully function.

**G. DHCP Server Setup**

Network							
IP Address	PPPoE	DDNS	Mail	FTP	DHCP	Status	Connection Status
<b>DHCP Server Setup</b>							
<input checked="" type="checkbox"/> Enabled							
Start IP Address:	192.168.80.1						
End IP Address:	192.168.80.254						
Lease Time:	10	Days					
							<a href="#">Apply</a>

**G-1. Enabled**

Tick the Enabled box to enable or disable the DHCP Server function. Once the function is activated, the NVR can act as the DHCP server. It will assign or distribute one of the IP addresses according to the setup IP address range (start and end IP Address.) to the connecting IP CAM (setup DHCP function).

**G-2. Start IP Address**

Use the virtual keypad to insert the start IP Address of DHCP server.

**G-3. End IP Address**

Use the virtual keypad to insert the end IP Address of DHCP server.

**G-4. Lease Time**

Input the lease time of DHCP server.

**H. Status**

Network							
IP Address	PPPoE	DDNS	Mail	FTP	DHCP	Status	Connection Status
<b>POE Switch Status</b>							
Port1		Port2		Port3		Port4	
Used Power :0W		Used Power :0W		Used Power :0W		Used Power :4.54W	
Restart :		Restart :		Restart :		Restart :	
Total Used Power : 4.54W							
The Total Limit: 72W							

### H-1. POE SWITCH Status:

Click in the POE SWITCH Status button to check on the POE connection status.

## I. Connection Status

Network							
IP Address	PPPoE	DDNS	Mail	FTP	DHCP	Status	Connection Status
<b>Network Connectivity Status</b>							
				Receive(Rx)		Transmit(Tx)	
bit/sec(LAN1)				4 kbit/s		4 kbit/s	
max				244 kbit/s		4.69 Mbit/s	
average				0 kbit/s		0 kbit/s	
min				0 kbit/s		0 kbit/s	
packets/sec(LAN1)				05		02	
max				351		544	
average				01		00	
min				00		00	
Remaining Record Time				000 Days 00:00:00			

### I-1. Network Connectivity Status

Browse through details of the connection status. You may consider how you want to set up your streaming mode by acquiring information provided here.

## 6. Authority

Authority	
Authority Setup	User Setup
<b>Authority Setting</b>	
HDD Format(Require Password Confirmation):	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Anonymous Rmote User Login:	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Local User Login(Password Protection):	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Keyboard Lock:	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Auto logout when menu closed:	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
<a href="#">Apply</a>	

### A. HDD Format (Require Password Confirmation)

Tick the box to enable or disable the operation which allows the user to insert the password before performing the HDD formatting.

### B. Anonymous Remote User Login

Tick the box to enable or disable the authority of the anonymous user login. Once enabled, the user can view the live image via IE browser without having to insert the username/ password.

### C. Local User Login (Password Protection)

Tick the box to enable or disable the authority of password protection.

### D. Keyboard Lock


Tick the box to enable or disable the control bar of live view.

### E. Auto logout when menu closed

Tick the box to enable or disable the operation. Enabling this operation will allow the system to log out automatically after the menu is closed.

### F. User Management

The administrator can set up the user management permission & user authority management.

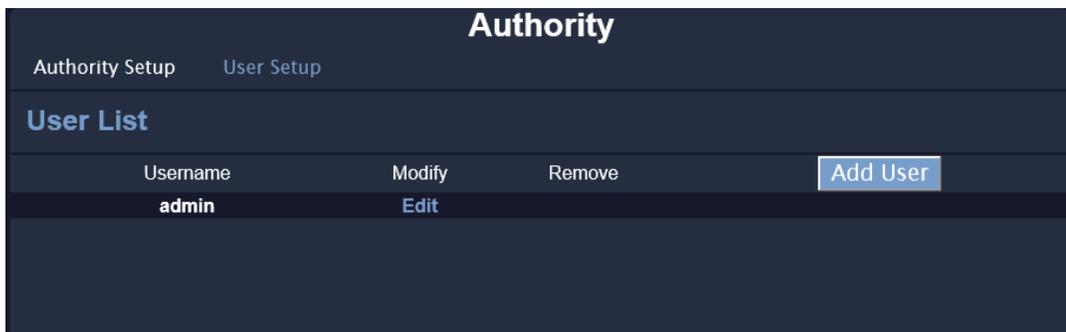


The screenshot shows a web interface titled "Authority" with two tabs: "Authority Setup" and "User Setup". Below the tabs is a "User List" section. It contains a table with columns for "Username", "Modify", and "Remove". There is an "Add User" button on the right. The "admin" user is listed with an "Edit" link below its name.

Username	Modify	Remove	Add User
admin	Edit		


#### F-1. Permission

Click on **Edit** and tick the checkboxes from the pop-up window to modify the user authority.

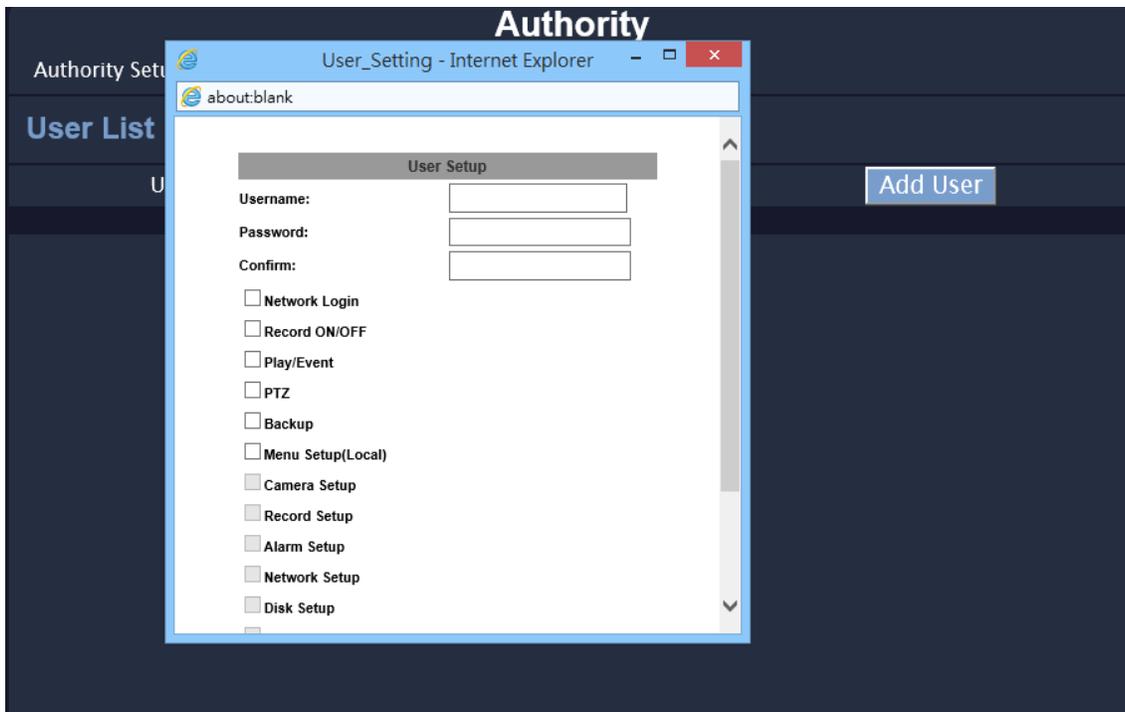

### F-2. Add User

After clicking the Add User button, the setup page will be called-out as the following. The administrator can distribute the authority and the permission for the new user.

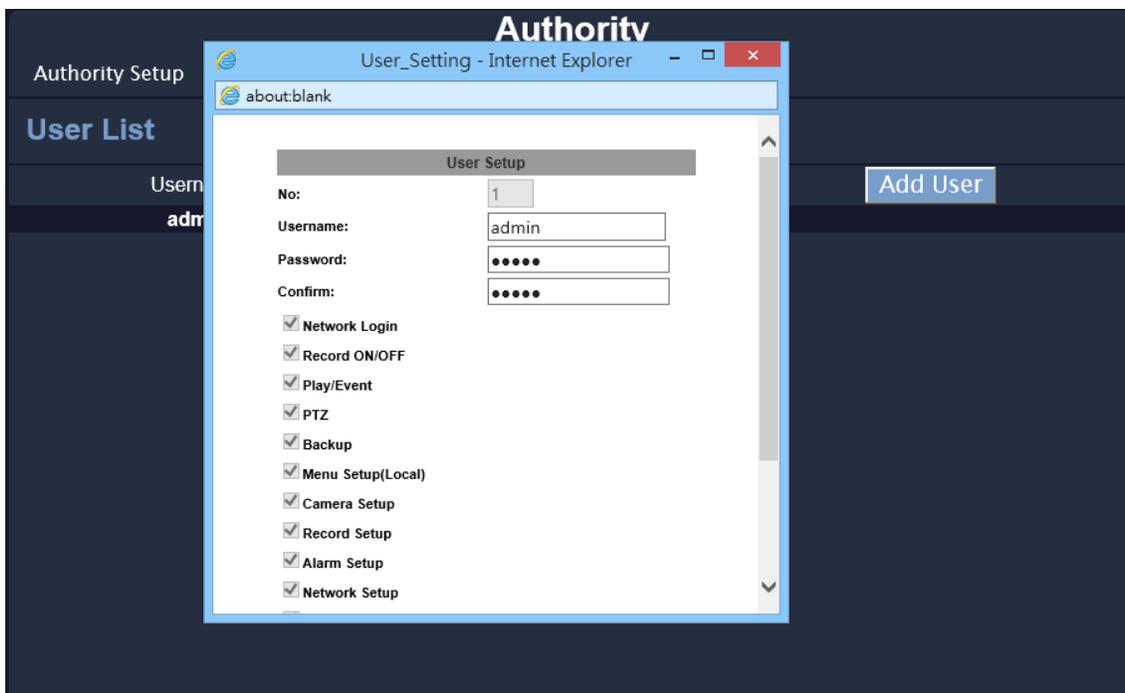

## 7. Storage

The screenshot shows the 'Storage' configuration page with the 'Disk Setting' tab selected. The settings are as follows:

Setting	Value
Overwrite Mode	OFF
Hard Disk Full Warning	20%
Reserve Mode	ON
Reserve Day	13
Disk Warning Time	10

An 'Apply' button is located at the bottom right of the configuration area.

### A. Overwrite Mode

Select "ON" for the oldest recording data to be overwritten by new recording data. Select "OFF" for the NVR to stop writing data into the HDD when it is full.

### B. HDD Full Warning

Enable this option by setting Overwrite Mode to OFF, and click + or - to change values from 25% to 5%. When HDD space is less than setting ratio, the buzzer will react.

### C. Reserve Mode

Click + or - to setup the active time between 1~30 days.

### D. Disk Warning Time

Set up the interval for displaying a warning message regarding the health condition of the storage device to the user from 1~60 minutes.

### E. Storage Information

The screenshot shows the 'Storage Information' page with the 'Disk Information' tab selected. The table displays the following information:

Device	Capacity	Left	TEMP	Status	Health
HDD1	500GB	100%	39'C	Writing	GOOD

A 'Format HDD' button is located at the bottom right of the table.

The information of storage device will be displayed on this page. Your **Hard Disk Device** needs to be replaced if its health condition is not displayed as GOOD.

Clicking on **GOOD** icon to check its status.

SMART\_Status - Internet Explorer

about:blank

Disk: 1

Status	ID	Attribute Name	Current	Worst	Threshold	Raw Value
GOOD	01	Read Error Rate	100	100	50	0
GOOD	02	Throughput Performance	100	100	50	0
GOOD	03	Spin-Up Time	100	100	1	56A
GOOD	05	Reallocated Sectors Count	100	100	50	0
GOOD	07	Seek Error Rate	100	100	50	0
GOOD	08	Seek Time Performance	100	100	50	0
GOOD	0A	Spin Retry Count	100	100	30	0
GOOD	BF	G-Sense Error Rate	100	100	0	0
GOOD	C2	Temperature	100	100	0	2A001B0027
GOOD	C4	Reallocation Event Count	100	100	0	0
GOOD	C5	Current Pending Sector Count	100	100	0	0
GOOD	C6	Uncorrectable Sector Count	100	100	0	0
GOOD	C7	UltraDMA CRC Error Count	200	200	0	0
GOOD	DC	HDD Shift	100	100	0	0
GOOD	DE	Loaded Hours	100	100	0	1
GOOD	E0	Load Friction	100	100	0	0
GOOD	E2	Load 'In'-time	100	100	0	114

Exit

## F. Format HDD

**Storage**

Disk Setup    Disk Information

**User Login**

User:

Password:

Login    Cancel

Insert the user name and password while performing the HDD format function. Click Login to continue.

## 8. System

### A. Information

**System**

Information    Software Update    Daylight Saving Time

Status Display    System Setup    Time Setup

**System Information**

Device Name:

MAC Address:

**Monitor Adjust**

Monitor Resolution:  ▼

Reboot    Apply

#### A-1. Device Name



Use the virtual keypad to insert the name of the NVR.

#### A-2. MAC Address


It is permanent for the NVR and cannot be revised.

#### A-3. Monitor Resolution


Press + or - to adjust the monitor resolution. Please check the frame rate what your LCD monitor supports before any adjustment. If you select a resolution not compatible with the LCD monitor, the system will automatically undo the recent changes.

#### A-4. Reboot

Click to reboot the NVR.

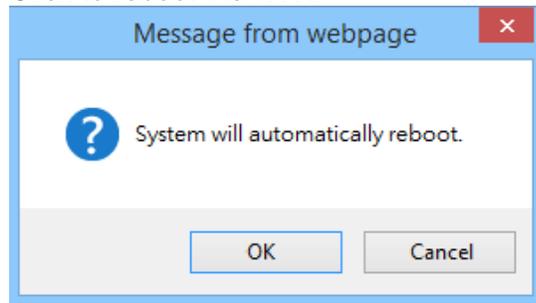

## B. Software Update

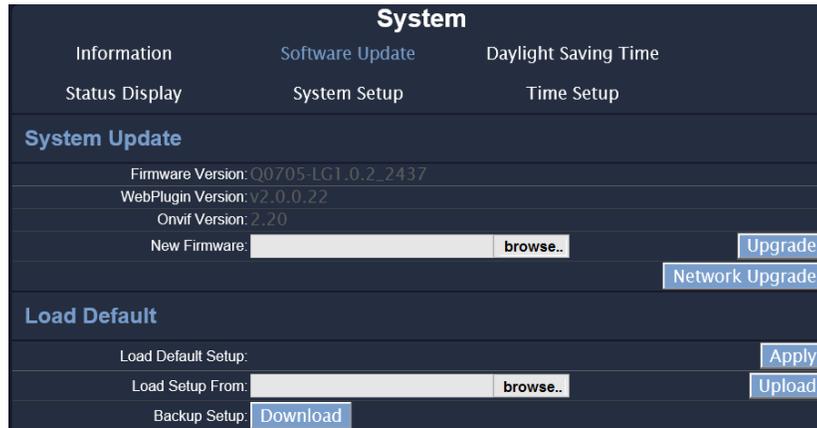

#### B-1. Versions

A list of **Firmware Version**, **WebPlugin Version**, and **Onvif Version** for this NVR is displayed.

#### B-2. New Firmware

Click on the “**browse**” button to select the firmware file and then press “**Upgrade**” button to upgrade the firmware. Click **Network Upgrade** button to check whether the firmware version is the latest.

#### B-3. Load Default

##### Load Setup from Default

Click “**Apply**” to reset the machine and revert all setting back to default value.

##### Load Setup from

Click “**browse**” to choose a file. You can load setup from your computer if you ever clicked “**Download**” and saved the settings before.

**Backup Setup**

Click “**Download**” to save a current setting file to PC. You can apply this file to other NVR so that the setting will be copied to other NVR.

**C. Daylight Saving Time**

System			
Information	Software Update	Daylight Saving Time	
Status Display	System Setup	Time Setup	
<b>Daylight Saving Time Setup</b>			
<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled			
Start Month:	JANUARY ▾	Week: NO.1 ▾	Day: SUNDAY ▾    Start Time: 00:00 ▾
End Month:	FEBRUARY ▾	Week: NO.1 ▾	Day: SUNDAY ▾    End Time: 00:00 ▾
Offset:	+0:30 ▾		
			<a href="#">Apply</a>

Edit the start and end daylight saving time. During daylight saving, time will be 1 hour faster.

**D. Status Display**

System		
Information	Software Update	Daylight Saving Time
Status Display	System Setup	Time Setup
<b>Status Display Setup</b>		
Date and Time Display:	<input type="radio"/> Enabled	<input checked="" type="radio"/> Disabled
Record Information Display:	<input type="radio"/> Enabled	<input checked="" type="radio"/> Disabled
Camera Title Display:	<input type="radio"/> Enabled	<input checked="" type="radio"/> Disabled
Camera IP Display:	<input type="radio"/> Enabled	<input checked="" type="radio"/> Disabled
		<a href="#">Apply</a>

Select the items that will be displayed on local NVR.

**E. System Setup**

System		
Information	Software Update	Daylight Saving Time
Status Display	System Setup	Time Setup
<b>System Setup</b>		
Language:	English	▼
Device ID:	0	⊖ ⊕
Date Format:	YYYY-MM-DD	▼
		<b>Apply</b>

### E-1. Language

Use the drop down list to change the NVR language.

### E-2. Device ID

The ID is used for distinguishing NVRs with a remote controller or RS485. Enter a different ID when you are operating several NVRs at the same time.

### E-3. Date Format

Select a format of date display.

## F. Time Setup

Select between **NTP**, **Synchronize with PC's time**, **Manual**, **The date and time remain the same** for setting the server time.

Status Display	System Setup	Time Setup
<b>NTP Setting</b>		
NTP:	<input type="checkbox"/>	
NTP Server:	198.123.30.132	
Update:	6	Hours
<b>Time Setting</b>		
Server Time:	2000/01/01 00:03:41 Time Zone: GMT-12:00	
Time zone:	GMT+08:00	
Synchronize with PC's time:	<input type="checkbox"/>	
Date:	2016/08/23	
Time:	17:36:01	
Manual:	<input type="checkbox"/>	
Date:	2016/08/23	
Time:	17:35:20	
The date and time remain the same:	<input checked="" type="checkbox"/>	
		<b>Apply</b>

### F-1. NTP Setting

Tick the **NTP** checkbox to enable editing The NTP Server IP address which can only be modified on local NVR.

## F-2. Time Setting

The **Time zone** can only be modified on local NVR. Tick either **Synchronize with PC's time** or **Manual** checkbox to activate its time settings.


## 9. Player

Click the button to download **D6Viewer**, the NVR recording file player.

### A. MAIN SCREEN SETTING (D6 Viewer)

D6Viewer.exe is used for playing the NVR backup video. It can be obtained via the Internet; or you can simply obtain it by performing USB backup and DVD-RW backup operation, because the software will be created within the USB device right away.


Open the D6Viewer. Using Overlay mode can improve the system resource performance.

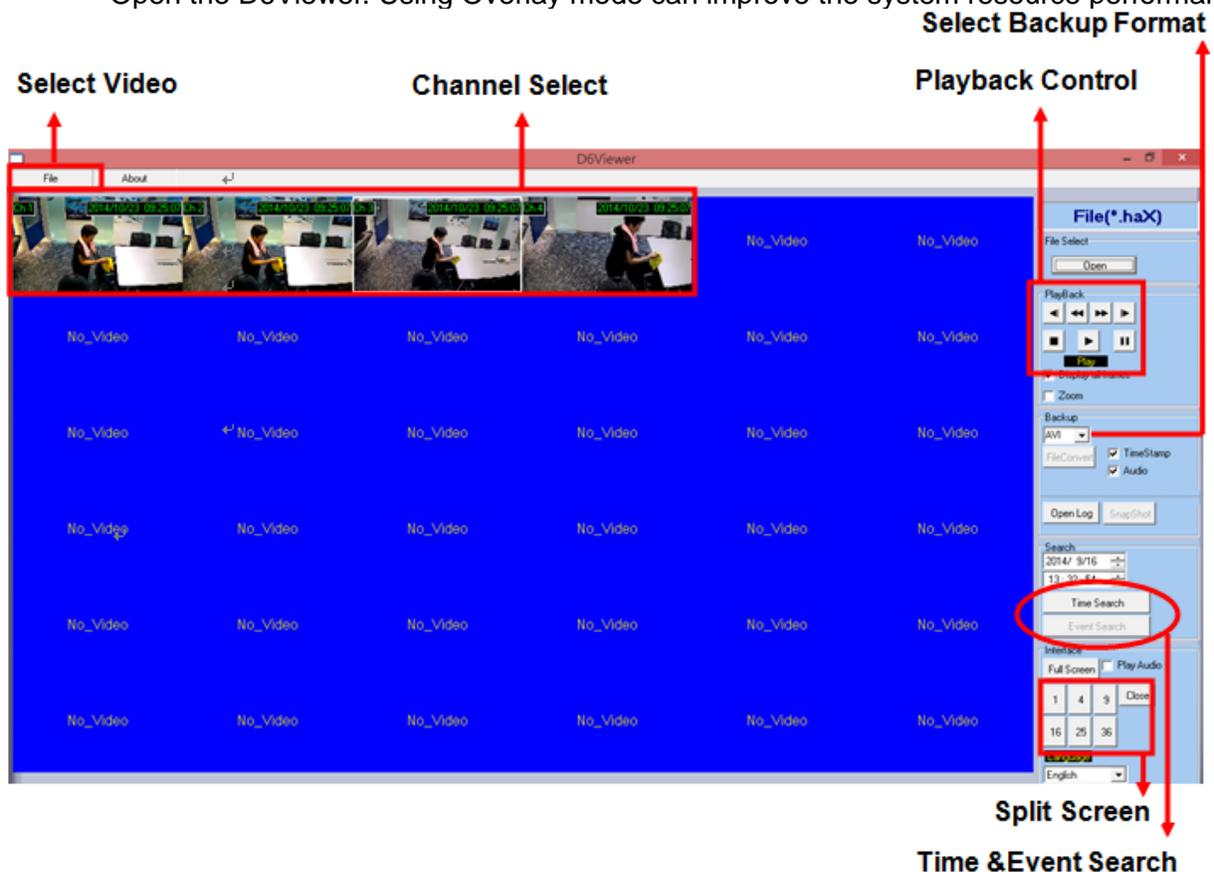


### B. HDD PLAY

Reading the NVR HDD from PC may not be possible since the NVR HDD is in Linux format, so you need "Ext2Fsd" to assign a drive letter to the HD. You can find it in the attached CD or download it from Internet.


Start the Ext2Fsd, and it will detect all the disks connected with your PC. Right-click on the NVR HDD and choose "Change Drive Letter".

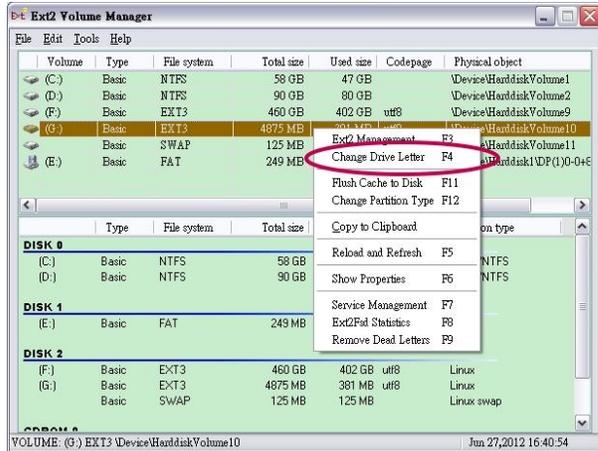


Click "Add"

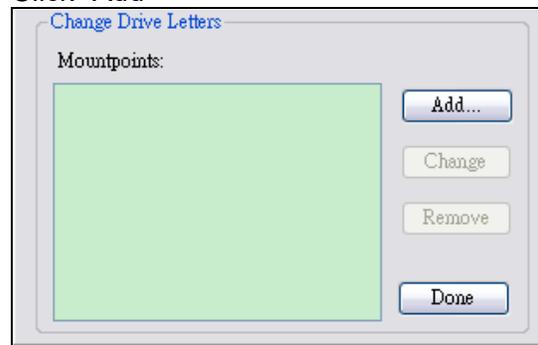

Assign a letter to the HDD, then click "OK" so that the HDD get a drive letter and can be recognized by Windows.

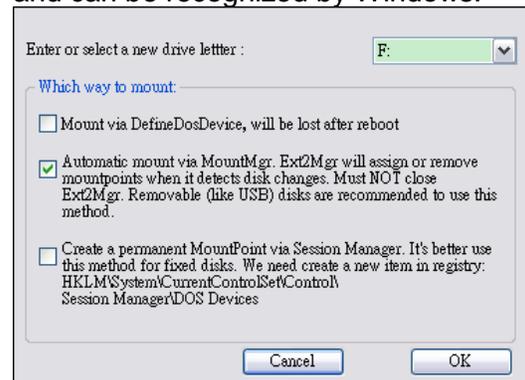


Under **HDD Play** mode, select the NVR HDD to load the video files inside.

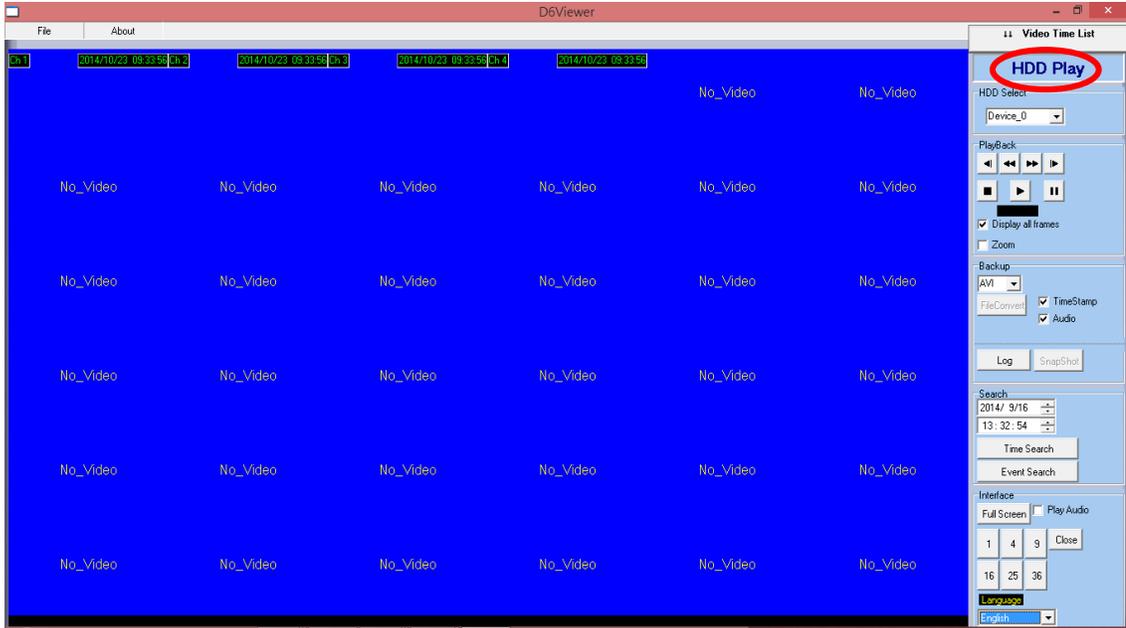


### C. File Play

You can open a single video backup file, select "File->File Play". Then "Open".

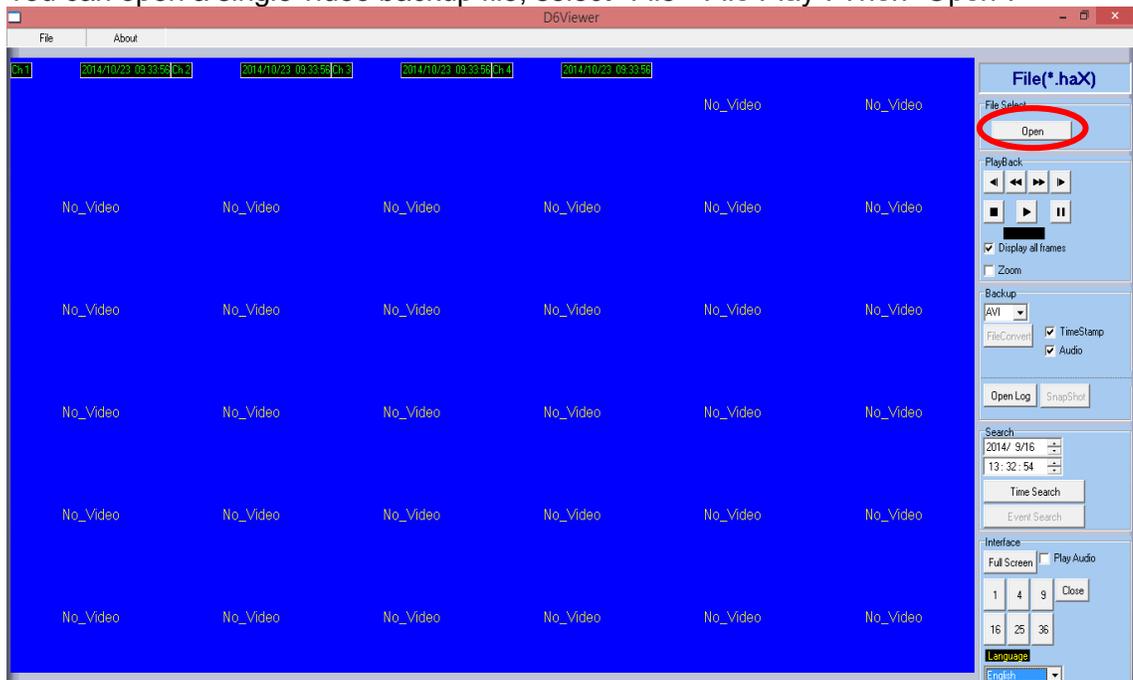

Choose the path the .haX file reserved and pick the file to playback.

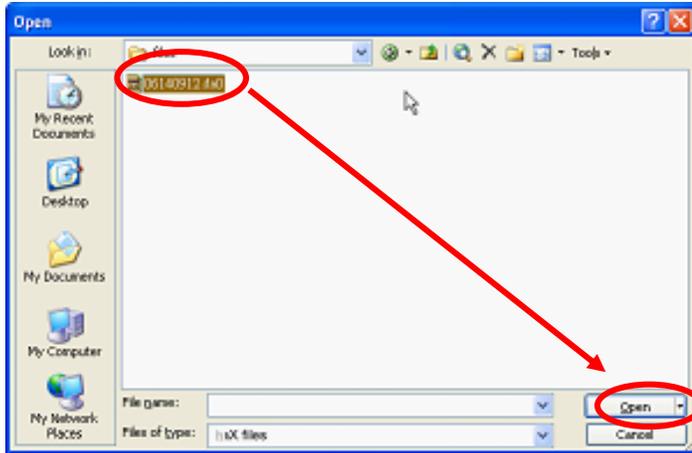


Press the play icon to play the video or pause picture.



## D. PLAYBACK OPERATION


### D-1. TIME SEARCH

Select the Date and Time and then click Time Search to play the video.

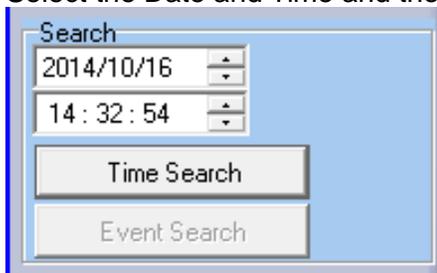

## D-2. EVENT SEARCH

After pressing the **Event Search** button, it will display all the events which are saved within the NVR HDD (Shown in the following image).

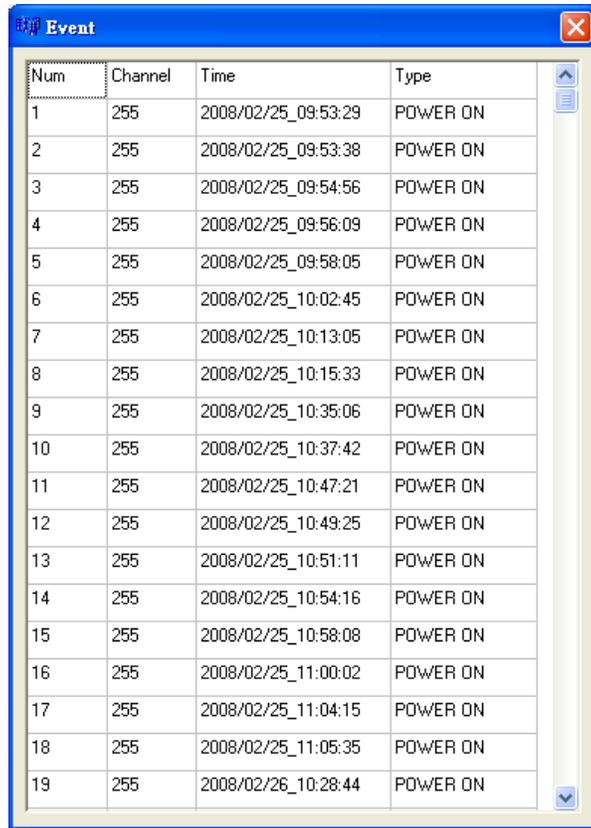


The screenshot shows a window titled "Event" with a table of event records. The table has four columns: Num, Channel, Time, and Type. All events are of type "POWER ON" and occur on channel 255. The times range from 2008/02/25 09:53:29 to 2008/02/26 10:28:44.

Num	Channel	Time	Type
1	255	2008/02/25_09:53:29	POWER ON
2	255	2008/02/25_09:53:38	POWER ON
3	255	2008/02/25_09:54:56	POWER ON
4	255	2008/02/25_09:56:09	POWER ON
5	255	2008/02/25_09:58:05	POWER ON
6	255	2008/02/25_10:02:45	POWER ON
7	255	2008/02/25_10:13:05	POWER ON
8	255	2008/02/25_10:15:33	POWER ON
9	255	2008/02/25_10:35:06	POWER ON
10	255	2008/02/25_10:37:42	POWER ON
11	255	2008/02/25_10:47:21	POWER ON
12	255	2008/02/25_10:49:25	POWER ON
13	255	2008/02/25_10:51:11	POWER ON
14	255	2008/02/25_10:54:16	POWER ON
15	255	2008/02/25_10:58:08	POWER ON
16	255	2008/02/25_11:00:02	POWER ON
17	255	2008/02/25_11:04:15	POWER ON
18	255	2008/02/25_11:05:35	POWER ON
19	255	2008/02/26_10:28:44	POWER ON

## E. LOG

Click **Open Log** to check the log records.

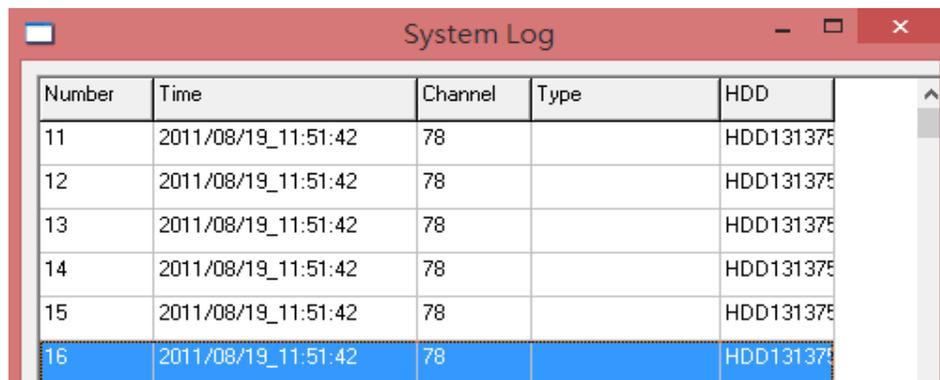


The screenshot shows a window titled "System Log" with a table of log records. The table has five columns: Number, Time, Channel, Type, and HDD. All records have the same time (2011/08/19\_11:51:42) and channel (78). The HDD column contains the value "HDD131375". The last row (Number 16) is highlighted in blue.

Number	Time	Channel	Type	HDD
11	2011/08/19_11:51:42	78		HDD131375
12	2011/08/19_11:51:42	78		HDD131375
13	2011/08/19_11:51:42	78		HDD131375
14	2011/08/19_11:51:42	78		HDD131375
15	2011/08/19_11:51:42	78		HDD131375
16	2011/08/19_11:51:42	78		HDD131375

## F. ZOOM


Tick the “Zoom” box and drag an area on the screen, then click the area to zoom in.

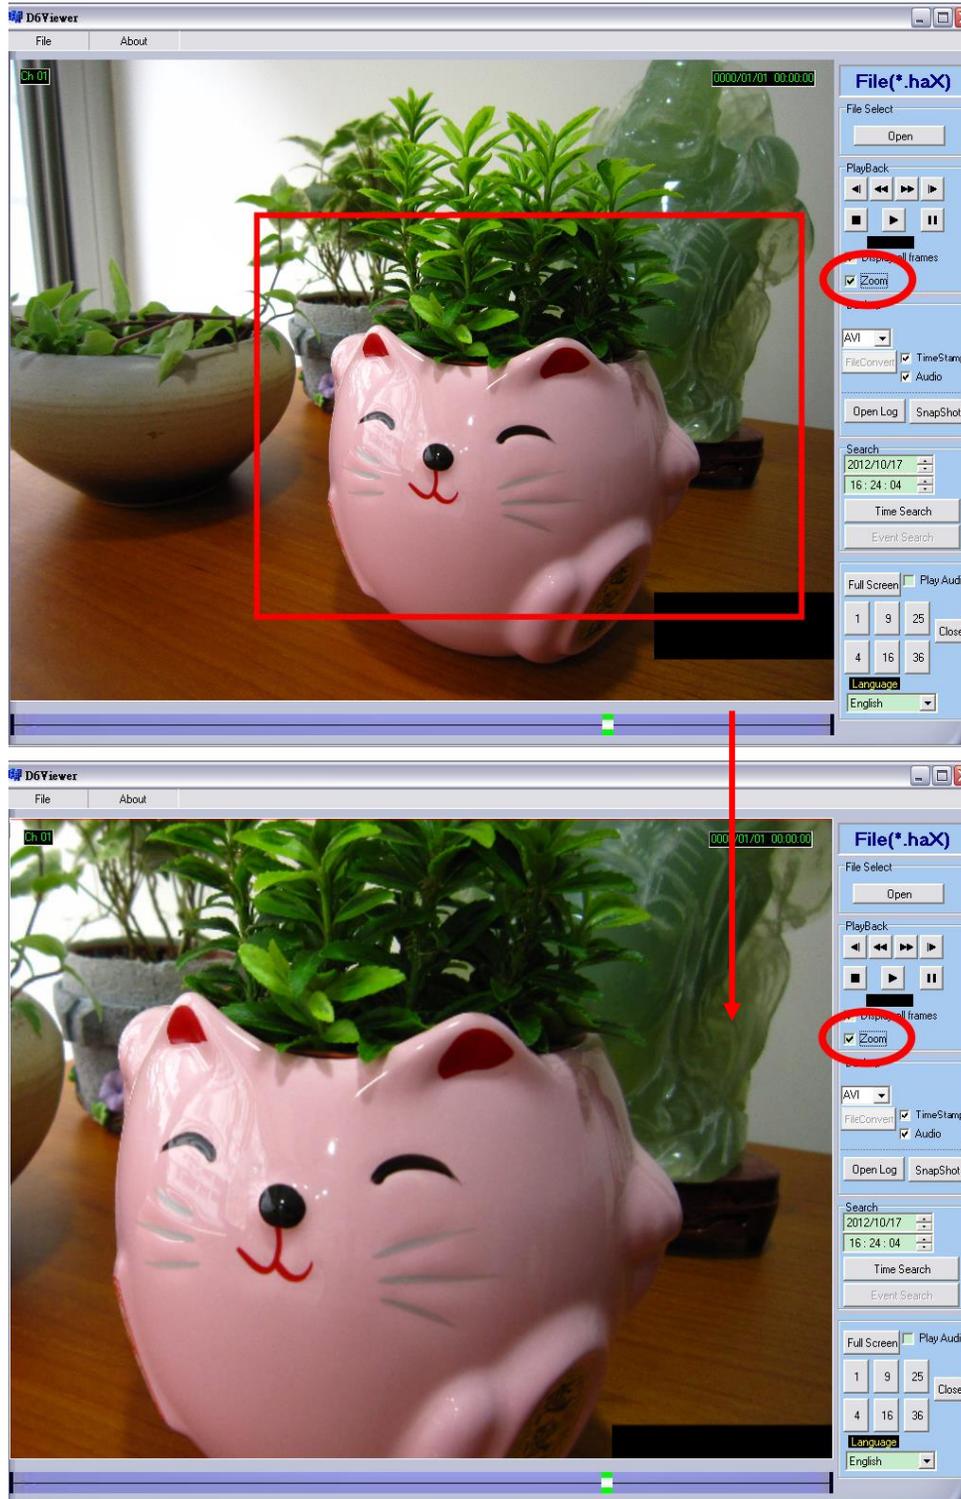


## G. BACKUP FILE TO MKV OR AVI FORMAT

There are two types of video formats: MKV and AVI. With AVI file, you can choose to either include Time Stamp and Audio or not.

## MKV

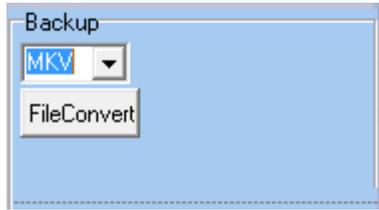


## AVI

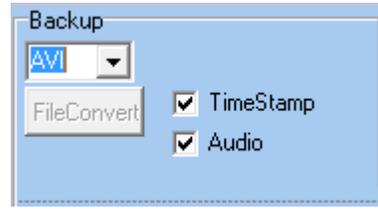

After double-clicking on one specific channel display image, the 'File Convert' button will be available. Select the type of video format you would like to convert to from the Backup drop down list.



Click on **FileConvert** button to begin the backup.

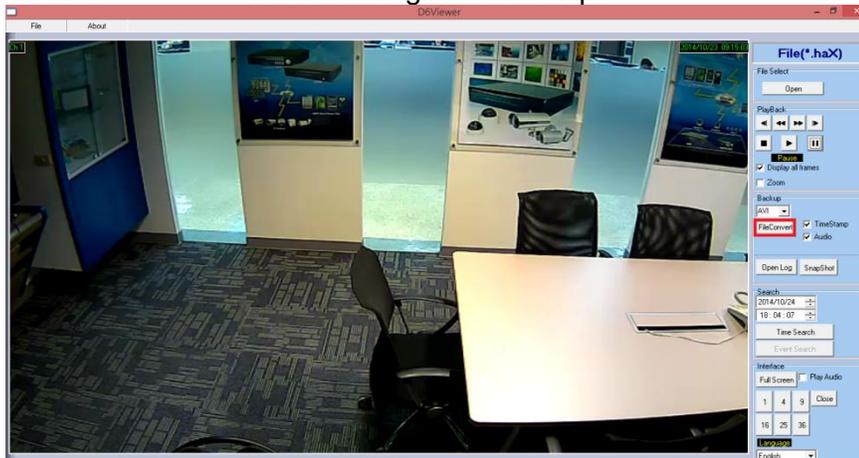


A window will pop up. Enter a file name and edit the file path directory.

While the converting is in process, you may press the **Stop Save** button to pause at any time before it is completed.


## 10. Plugin

Click the button to download **Plugin** for running the NVR system on PC.

## 11. Log List

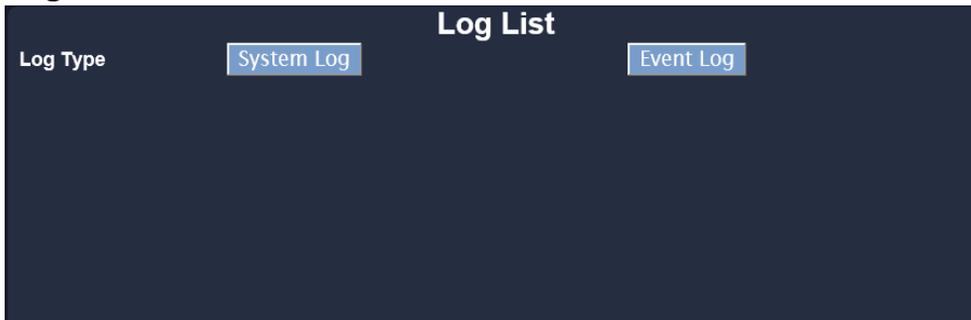

**A. System Log:** Click to view the system log and change settings.

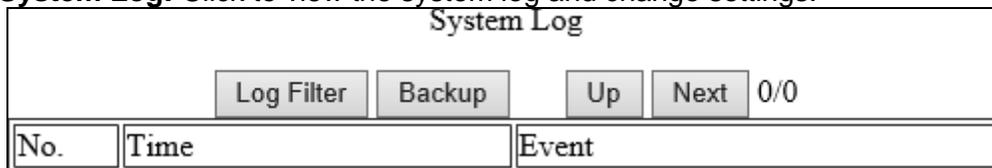

**B. Event Log:** Click to view events.

