


# Entertainment Console

## IMPORTANT


Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.

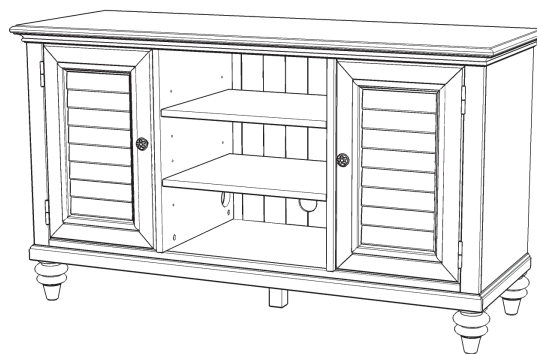

## Part List

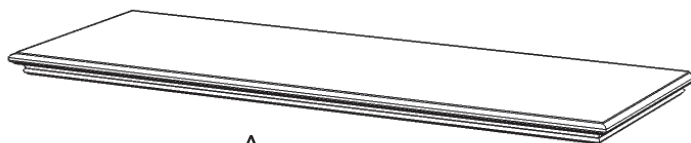


A.  
Top  
1 Pc.




F.  
Shelf  
4 Pcs.



E.  
Base  
1 Pc.

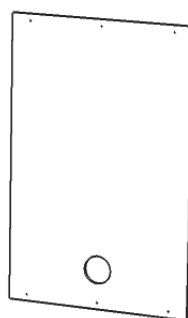

I.  
Back Panel  
2 Pcs.

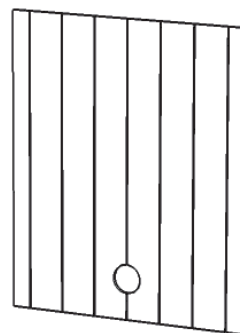

J.  
Back Panel  
1 Pc.



H.  
Plinth  
1 Pc.

## Hardware List



Cam Lock Screw  
19 pcs.(+1 extra)



 
M3x16  
Wood Screw  
for Back Panel  
12 pcs.(+1 extra)



M3x25  
Wood Screw  
for Wood Block  
14 pcs.(+1 extra)



M3x16  
Wood Screw  
for Magnet  
4 pcs.(+1 extra)




M4x28  
Machine Screw  
2 pcs.



Cam Lock  
19 pcs.(+4 extra)



 Adjustable Pin  
24 pcs.(+1 extra)



Magnet  
2 pcs.



Knob  
2 pcs.

For assembly see instructions in carton 20 05543 0102.