

 
IMPORTANT

Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.

Part List

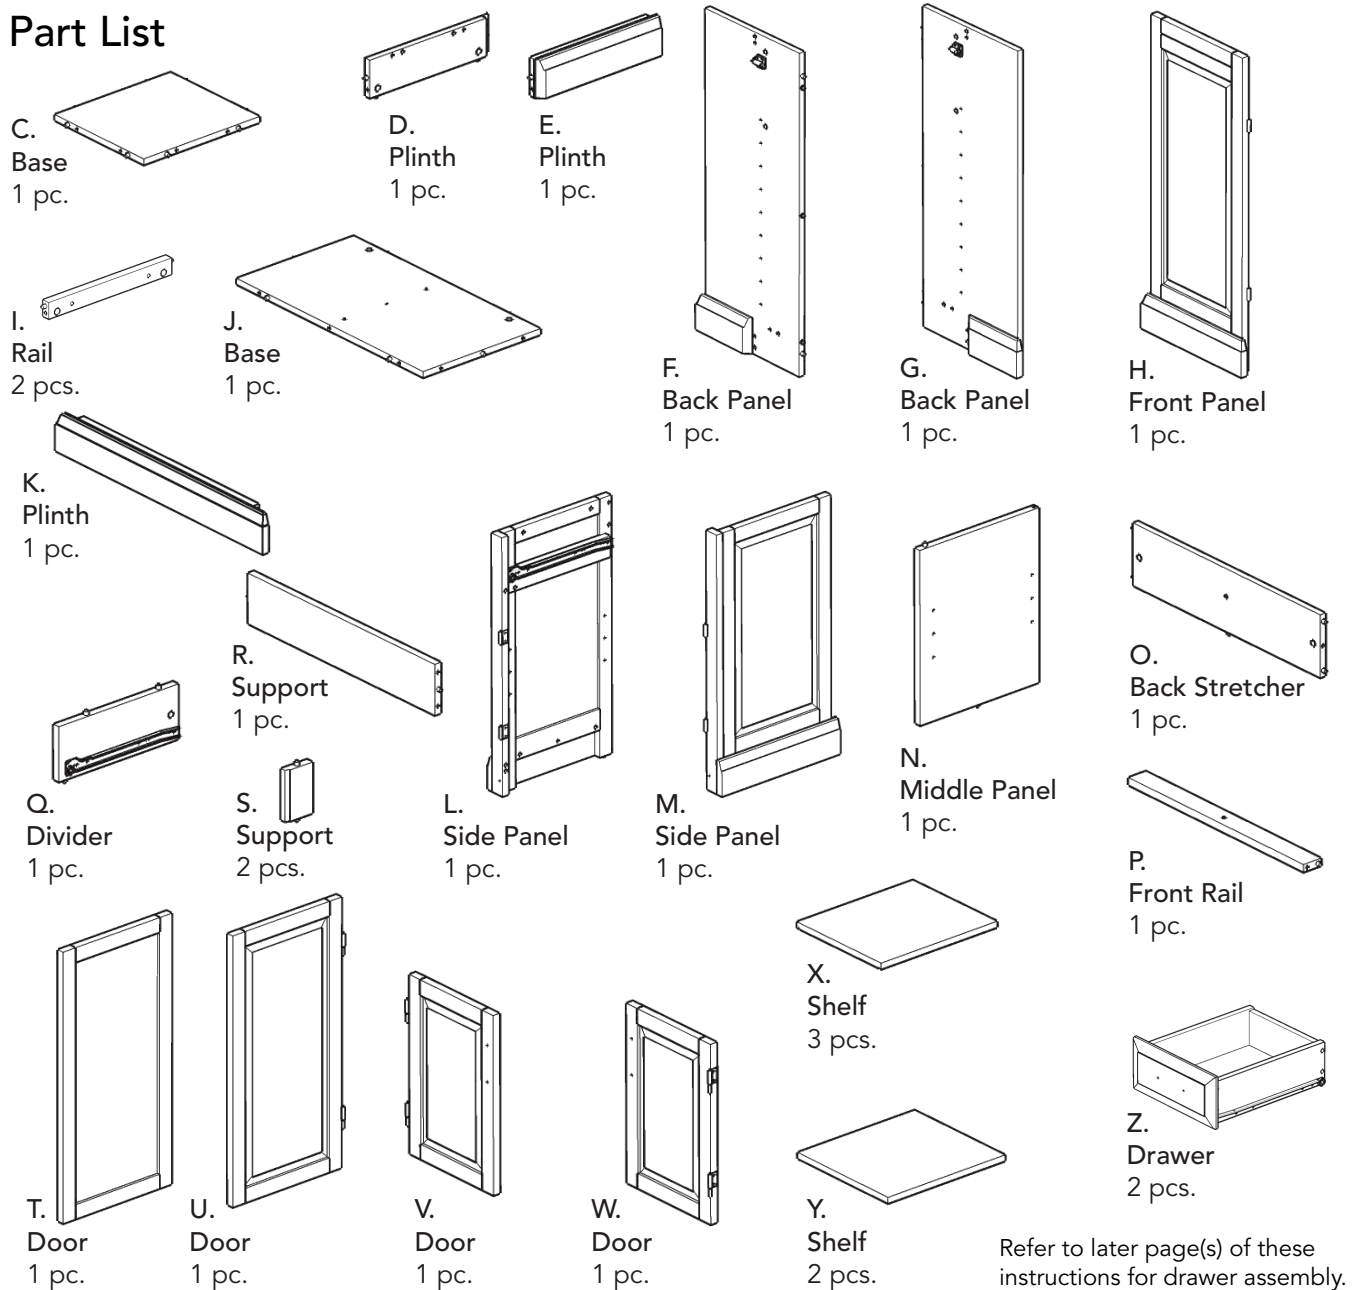

Carton 5010-941 is also needed for assembly.

Tool(s) required for assembly: Phillips screwdriver, Level

Home Styles Customer Service: www.homestylesfurniture.com,
servicedesk@homestylesfurniture.com, 888-680-7460, 877-831-0319

Assembly Instructions 2/10

 
IMPORTANT

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the bolts until each part is properly assembled.
- The unit must be level to work properly. Use the included adjustable levelers to level.
- Keep Hex Wrench as the bolts may need to be tightened in the future.

STEP 1

Insert Cam Lock Screws into pre-drilled holes in Plinths (D), (E), Black Panels (F), (G) and Front Panel (H), then tighten. (See Figure 1)

Orientate Magnets so Arrow labels on back of Magnets point in same direction as Arrow labels on Back Panels (F) and (G), then attach Magnets to Back Panels (F) and (G) with Wood Screws for Magnet into pre-drilled holes. (See Figure 2)

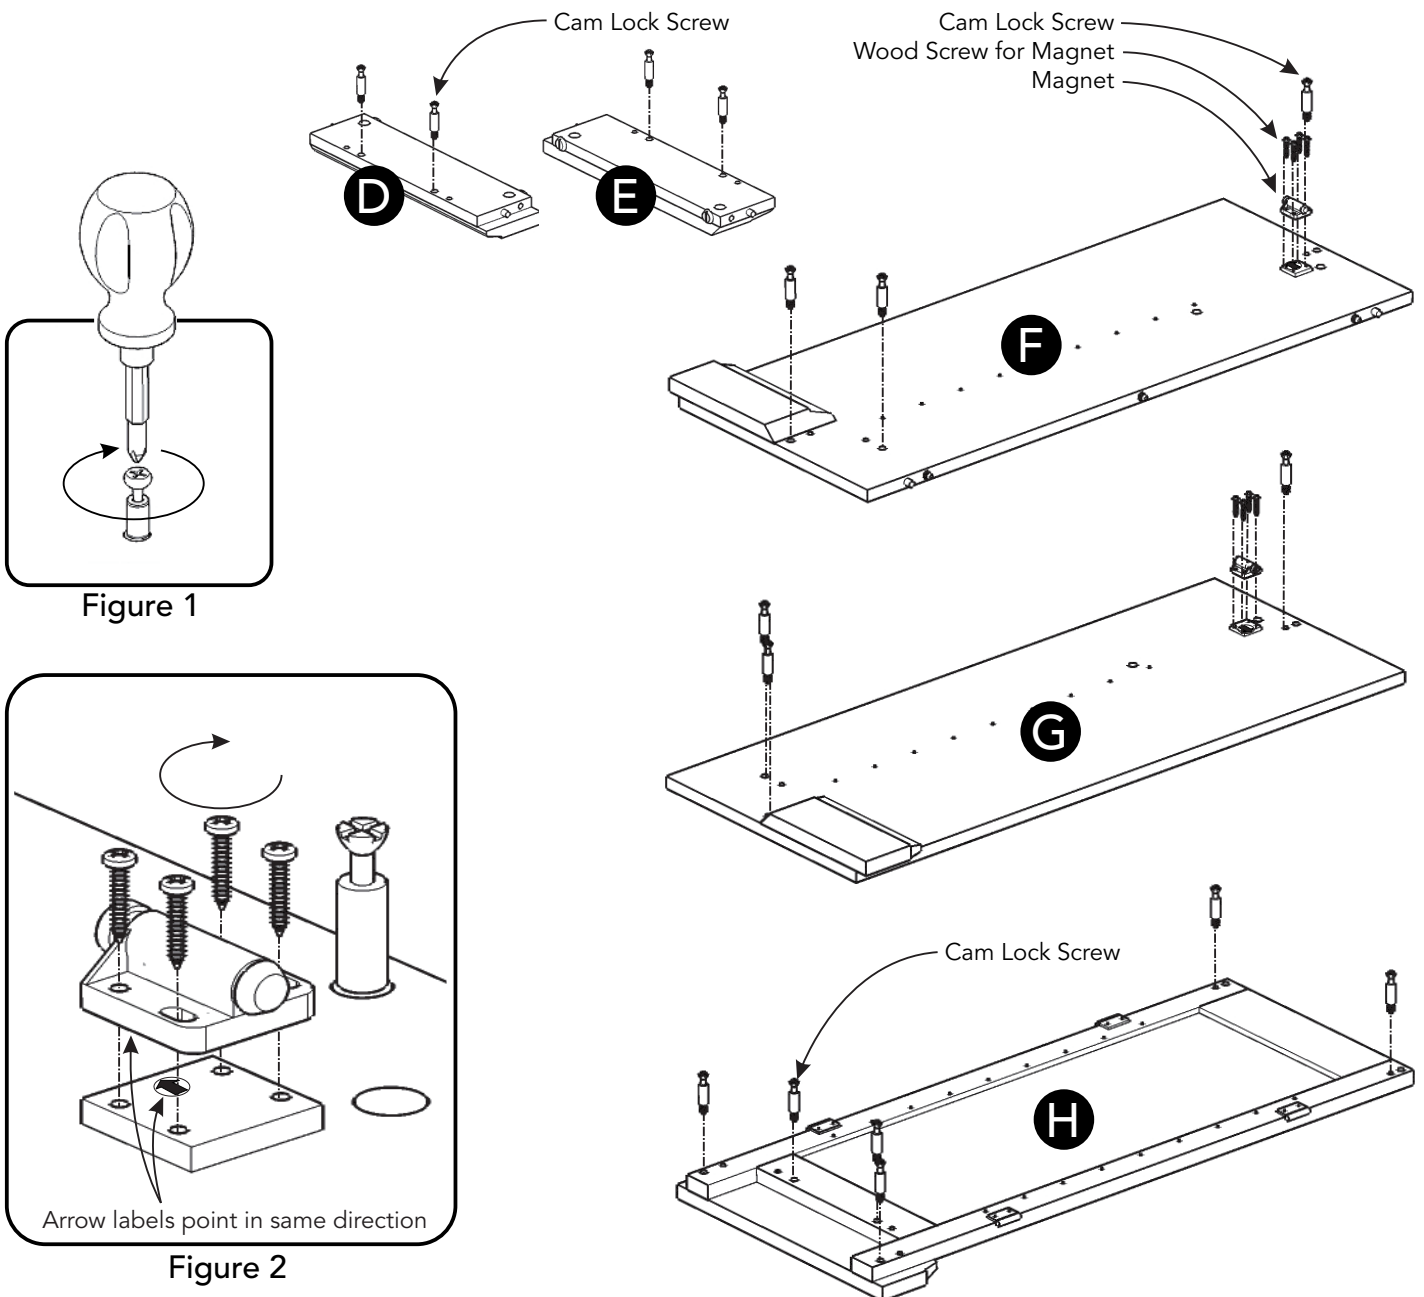

STEP 2

Orientate Base (C) so Arrow labels on Base (C) point to Plinths (D) and (E), then attach Plinths (D) and (E) to Base (C) with Cam Locks. (See Figure 3)


 
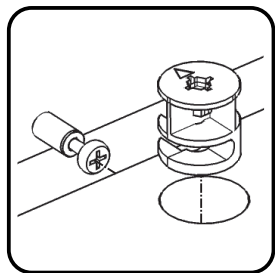 


Figure 3

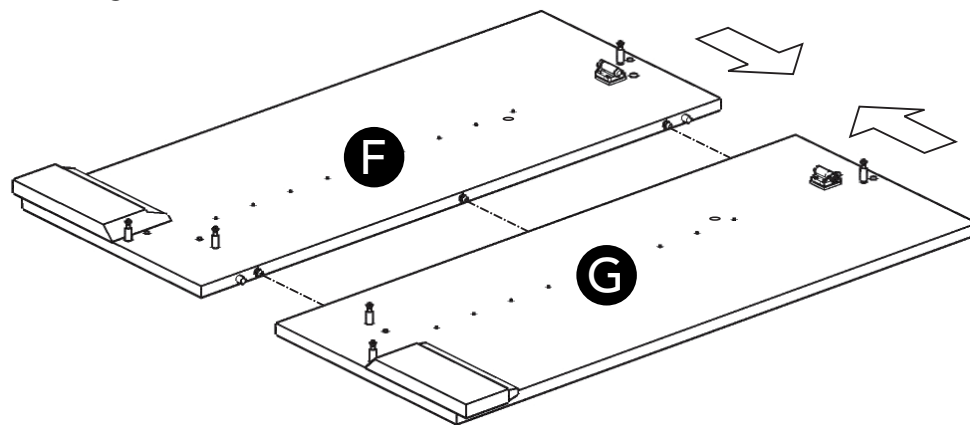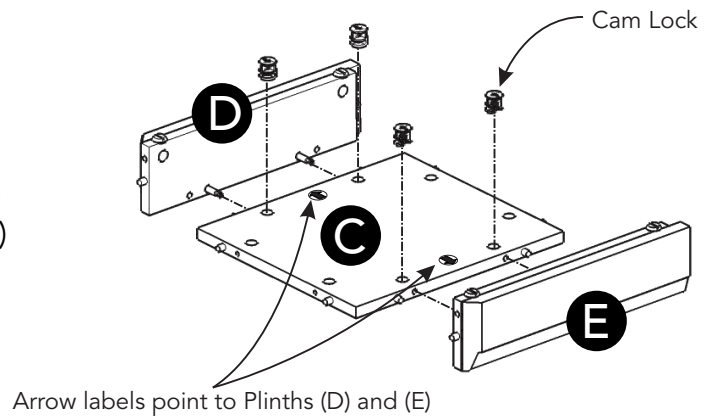 

STEP 3

 
Attach Back Panel (F) to Back Panel (G).

STEP 4


Attach unit from Step 2 to unit from Step 3 with Cam Locks.

Attach Rails (I) to unit with Cam Locks.




Attach Front Panel (H) to unit with Cam Locks.

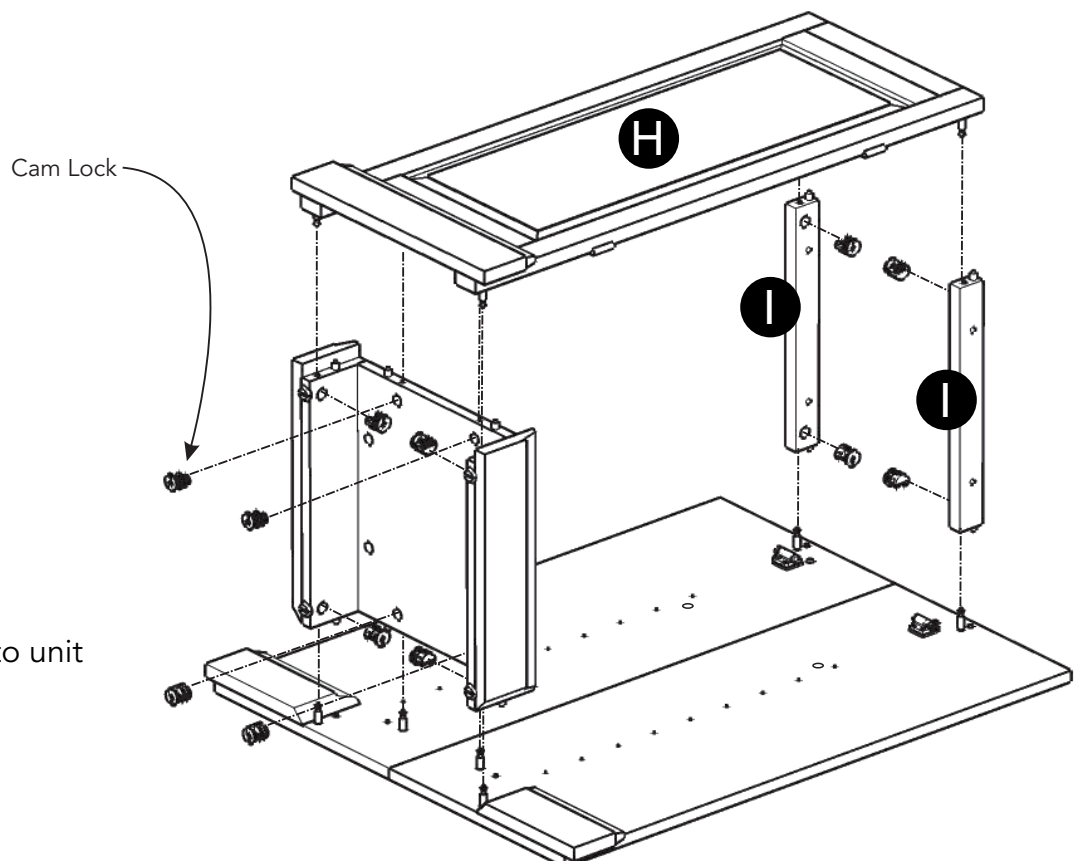

 STEP 5

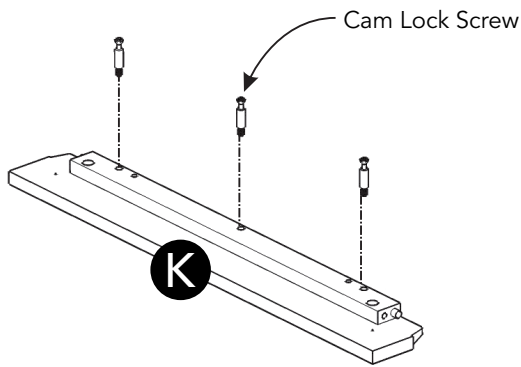

   Insert Cam Lock Screws into pre-drilled holes in Plinth (K), Side Panels (L), (M) and Back Stretcher (O), then tighten.

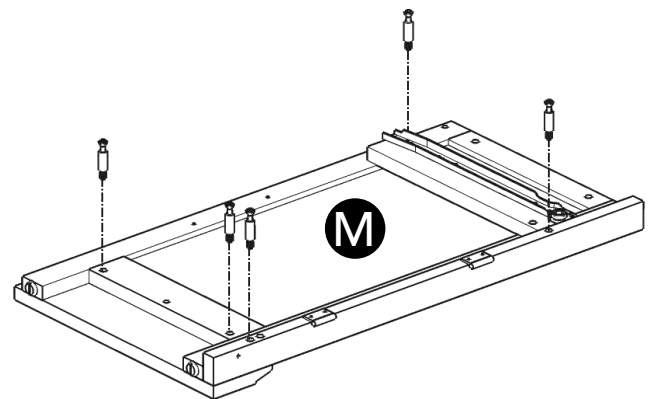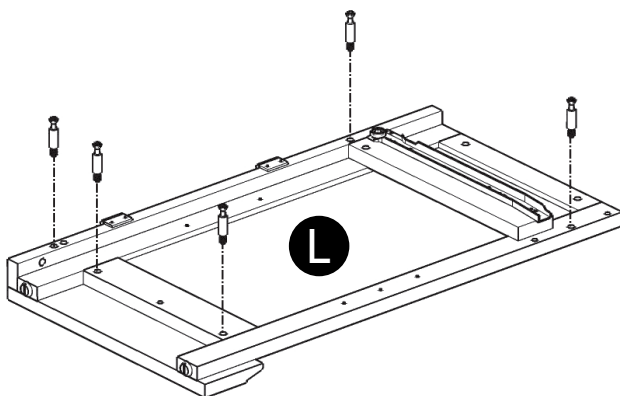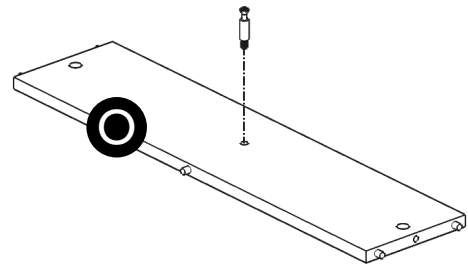

STEP 6

Attach Middle Panel (N) to Base (J) with Head Cap Bolts. (See Figure 4)

Note: Arrow label indicates front of Middle Panel (N).

Attach Plinth (K) to unit with Cam Locks.


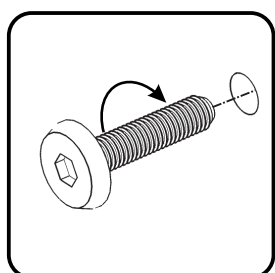 



Figure 4

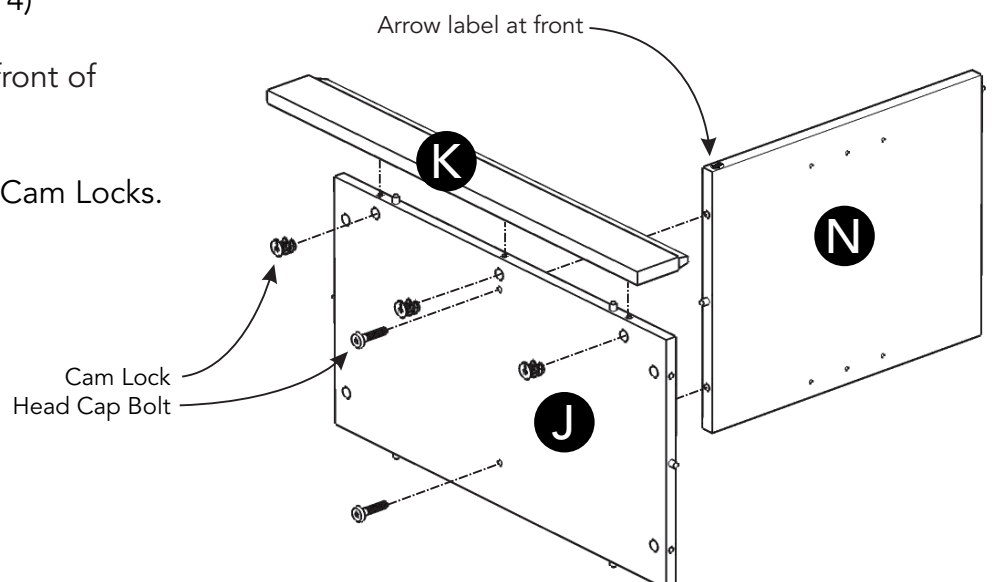 

STEP 7

Attach Side Panel (L) to unit with Cam Locks and Wood Screw for Plinth.

 
Attach Front Rail (P) to unit with Cam Lock.

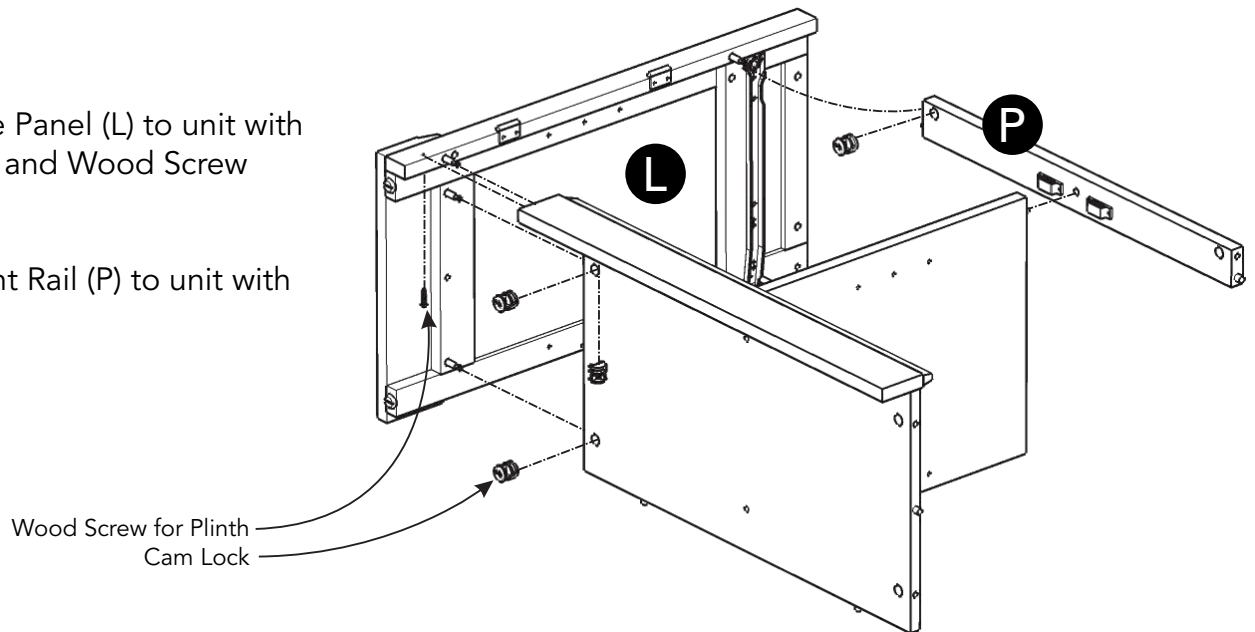

STEP 8



Attach Back Stretcher (O) to unit with Cam Lock.

 Attach Divider (Q) to unit with Cam Lock.

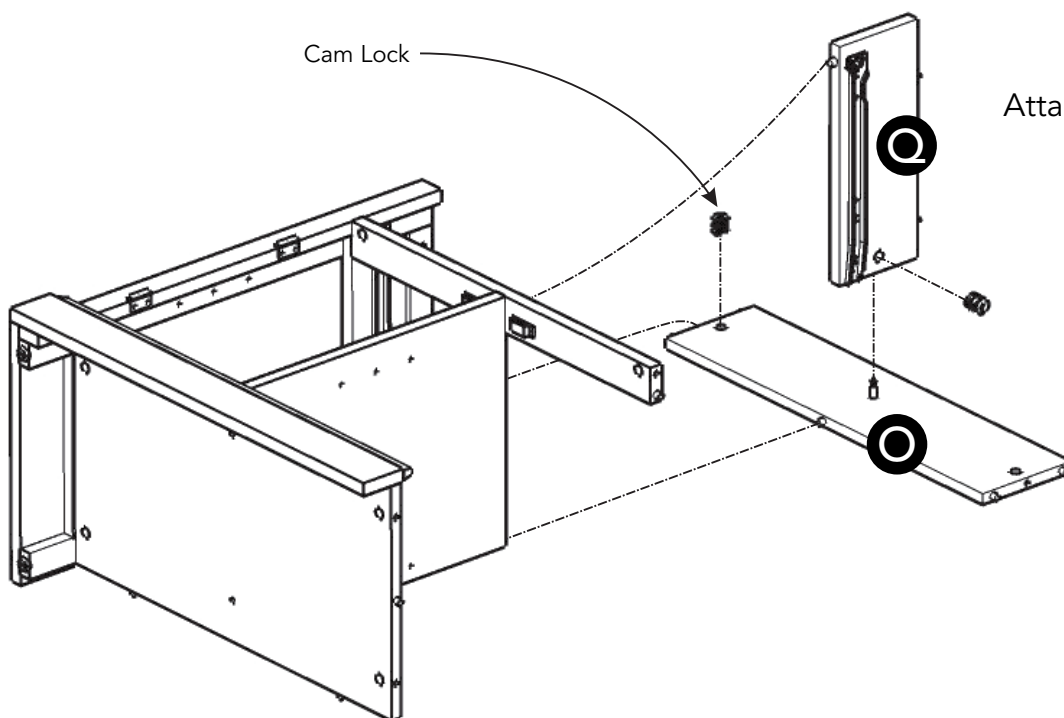

STEP 9

  Attach Side Panel (M) to unit with Cam Locks and Wood Screw for Plinth.

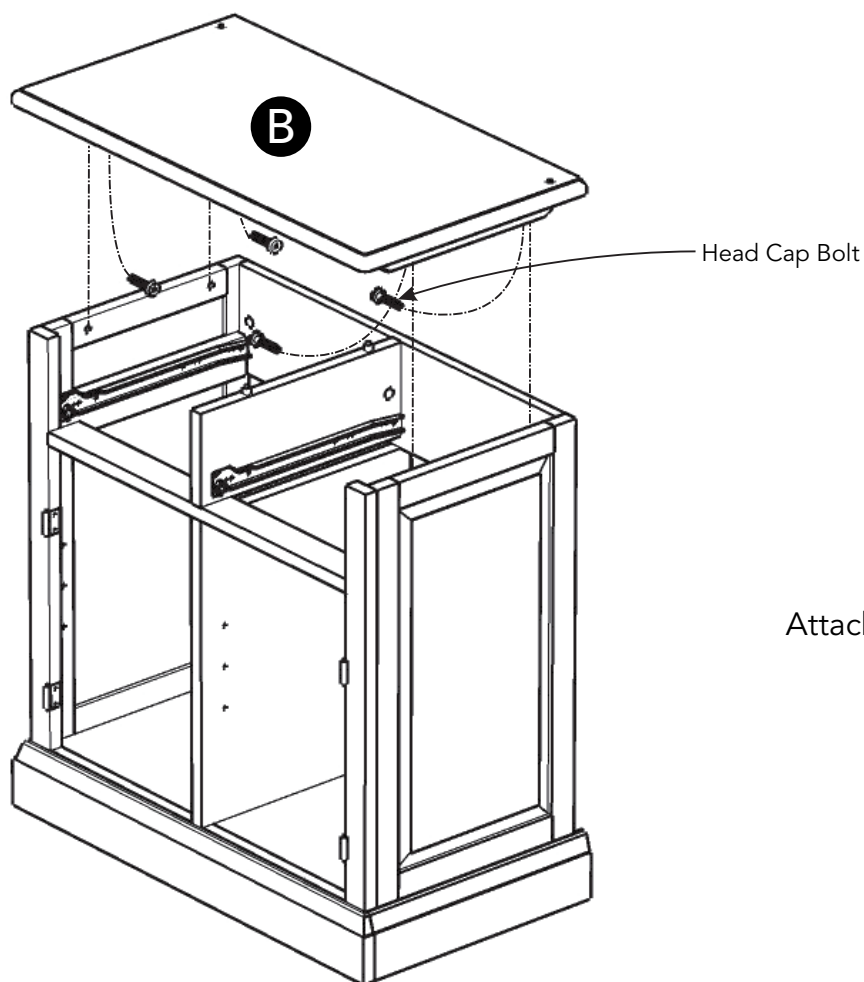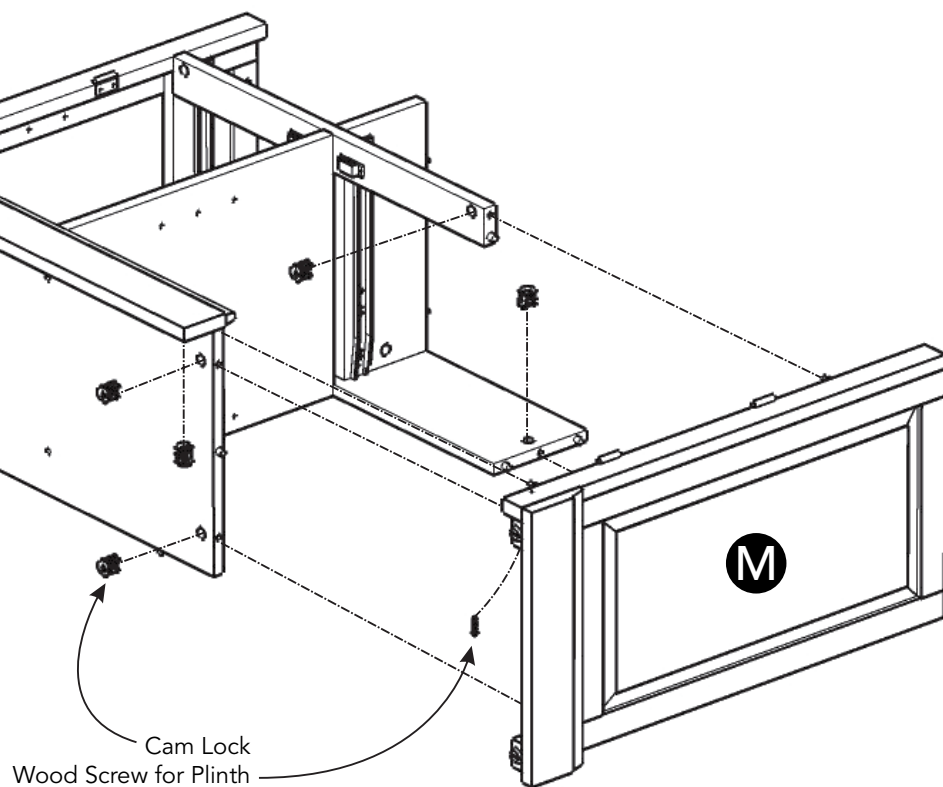

STEP 10

 
 
Turn unit to its upright position.
Attach Top (B) to unit with Head Cap Bolts.

Assembly Instructions 7/10

STEP 11


Insert Cam Lock Screws into pre-drilled holes in Supports (S), then tighten.

Cam Lock Screw

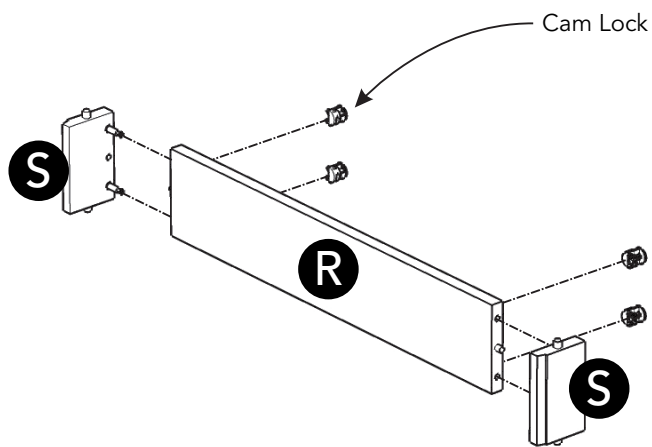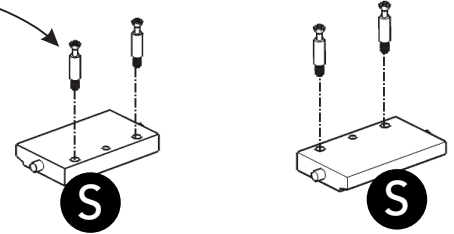


STEP 12

 Attach Supports (S) to Support (R) with Cam Locks.

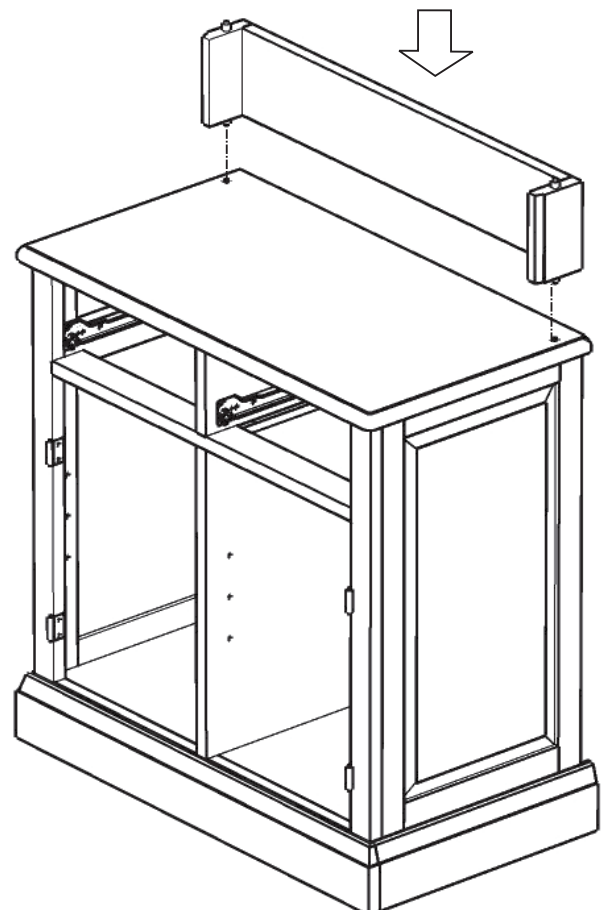

STEP 13

 Attach unit from Step 12 to unit from Step 10.

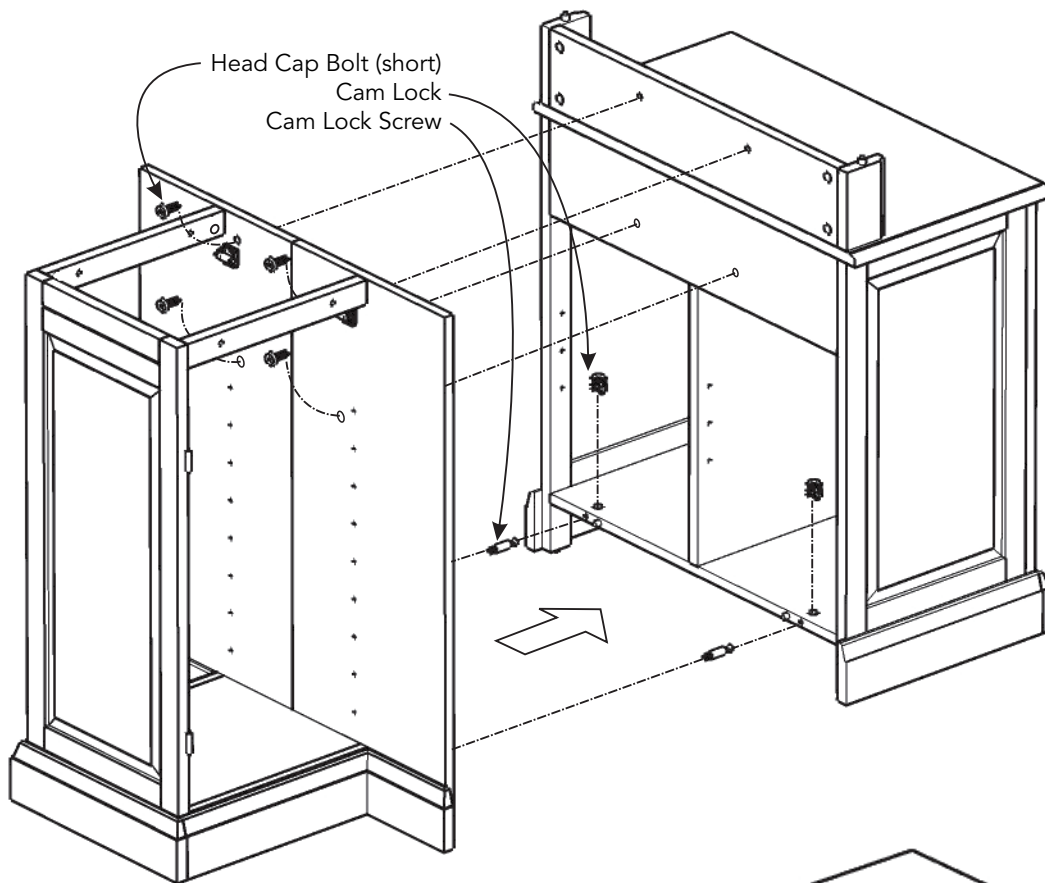

STEP 14

Turn unit from Step 4 to its upright position.

Insert Cam Lock Screws into pre-drilled holes in unit from Step 4, then tighten.

Attach unit from Step 4 to unit from Step 13 with Cam Locks and Head Cap Bolts (short).

STEP 15

Insert Adjustable Pins into front panel and back panels at desired level.

Place Shelves (X) into position.

Attach Doors (T) and (U) to unit by sliding door hinges into front panel hinges. (See Figure 5)

Attach Top (A) to unit with Head Cap Bolts.


 
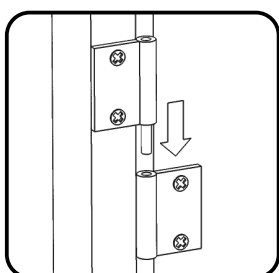 


Figure 5

 Drawer (Z)

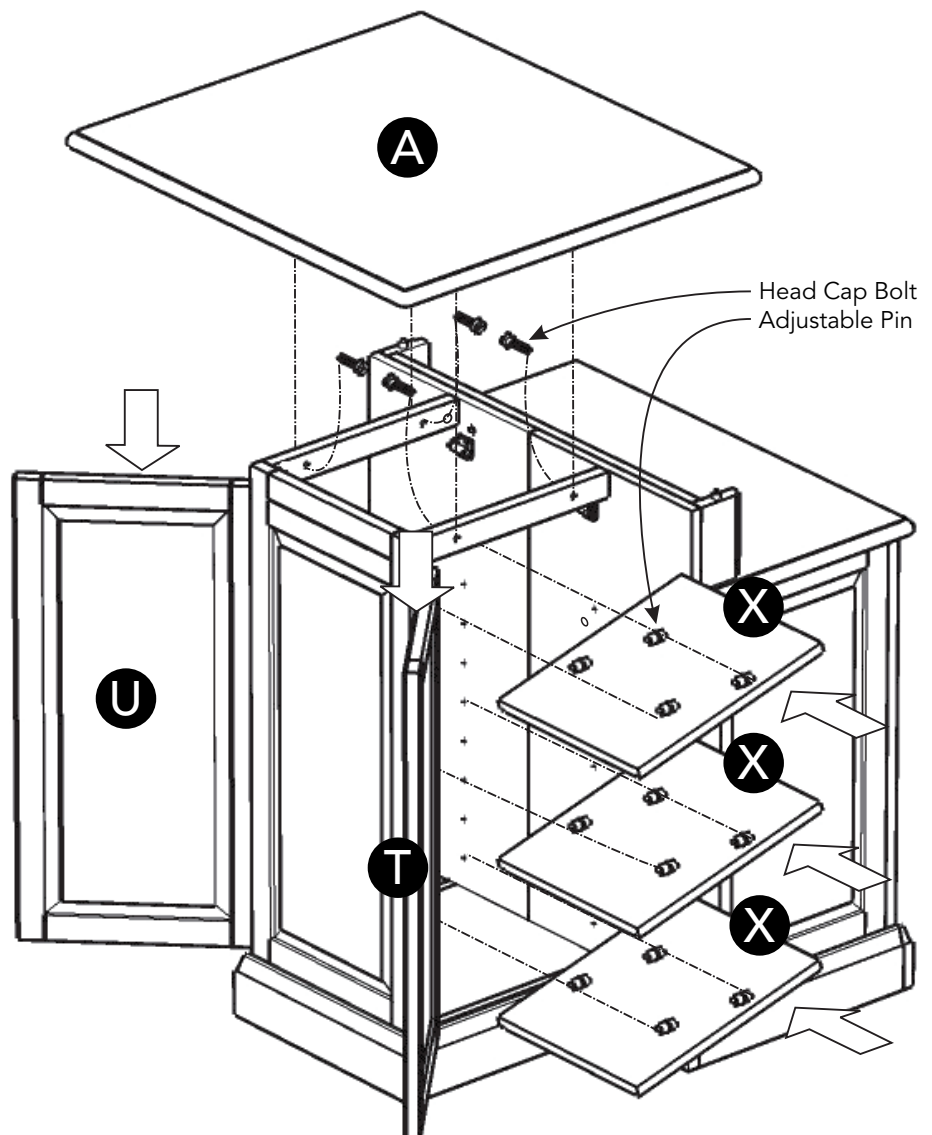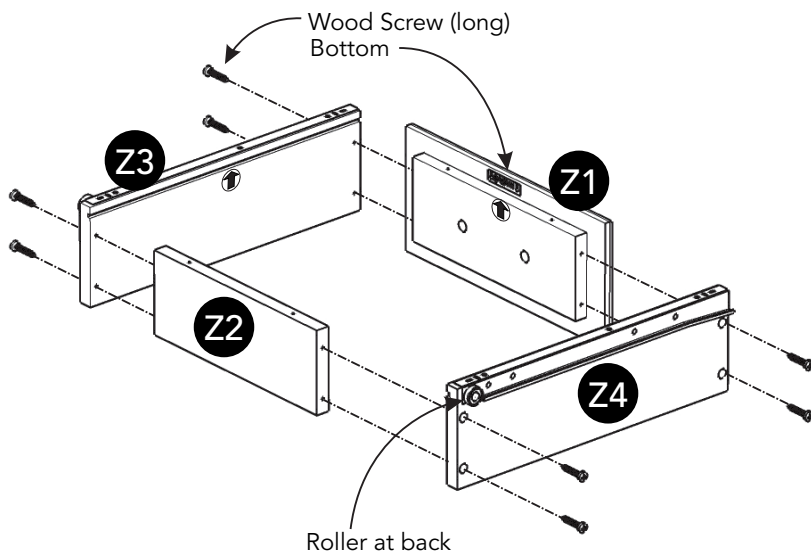

STEP 16

 
 
Attach Drawer Front (Z1) and Drawer Back (Z2) to Drawer Side (Z3) with Wood Screws (long).

Attach Drawer Side (Z4) to unit with Wood Screws (long).

STEP 17

Slide Drawer Bottom (Z5) into groove.


Attach Drawer Bottom (Z5) to unit with Wood Screws (short).

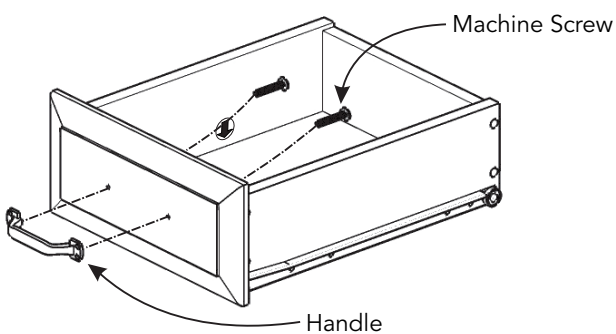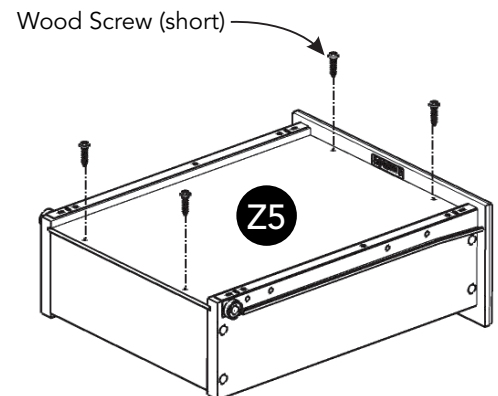


STEP 18

Attach Handle with Machine Screws.

 
Part List

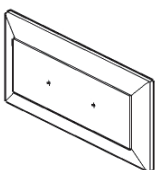


Z1.
Drawer Front
2 pcs.

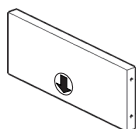 


Z2.
Drawer Back
2 pcs.

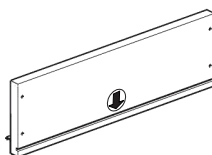 


Z3.
Drawer Side
2 pcs.

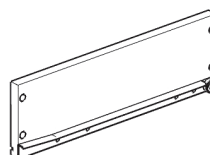 

Z4.
Drawer Side
2 pcs.

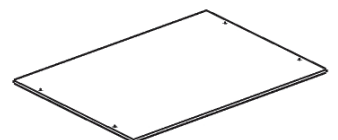 

Z5.
Drawer Bottom
2 pcs.

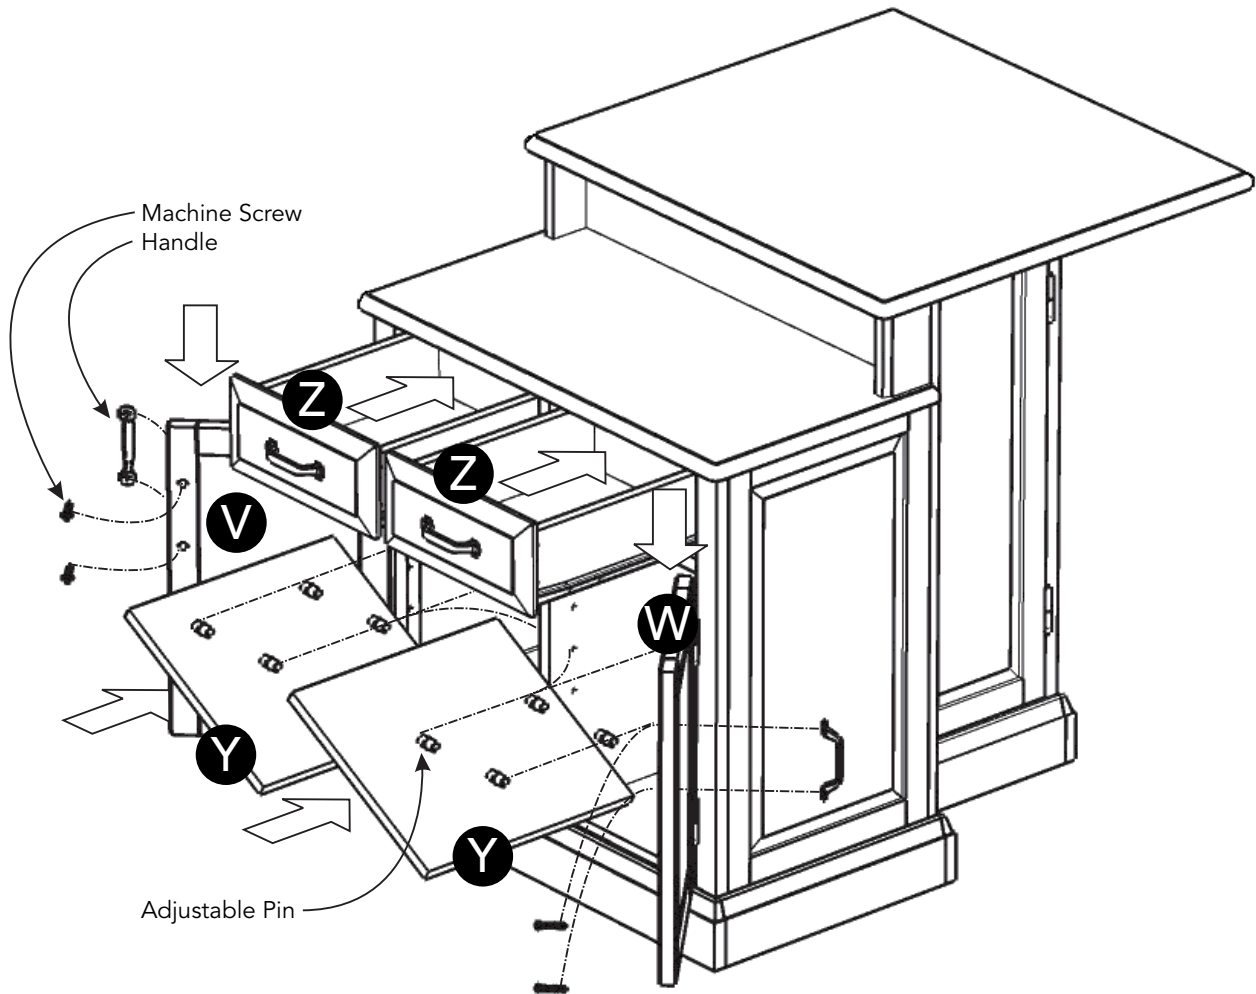 

STEP 19

Insert Adjustable Pins into side panels at desired level.

Place Shelves (Y) into position.

Attach Doors (V) and (W) to unit by sliding door hinges into side panel hinges.

Attach Handles to Doors (V) and (W) with Machine Screws. (See Figure 6)

Slide Drawers (Z) into position.

Level unit by adjusting the adjustable levelers on bottom of unit. (See Figure 7)

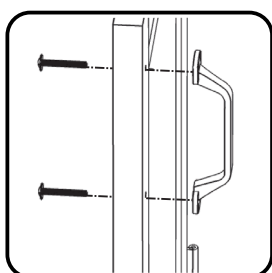 


Figure 6



Figure 7

CARE INSTRUCTIONS

NEVER


allow liquids to remain on furniture.
Absorption causes parts to warp
and split and finishes to delaminate.

NEVER

use glass cleaners on
finished furniture. Ammonia
chemically attacks the finish.



Do not use power tools
above 8 volts to assemble.
**PREVENT
CRACKING**

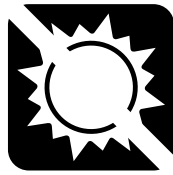


Do not place
in direct sunlight.
**PREVENT
FADING**



Do not write
directly on surface.
**PREVENT
MARKING**



Do not place hot
objects on surface.
**PREVENT
FINISH DAMAGE**

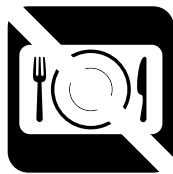

Do not use rubber
based placemats.
**PREVENT
DISCOLORING**



Do not use commercial
waxes and polishes.
**PREVENT
YELLOWING**

CLEAN

with a soft cloth moistened
in lukewarm soap and water.
Buff with a dry clean cloth.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:
www.homestylesfurniture.com/customer-service/replacement-parts

Home Styles Customer Service: www.homestylesfurniture.com,
servicedesk@homestylesfurniture.com, 888-680-7460, 877-831-0319