

Tiny Princess Tales™
Soothe 'n Groove Mobile™

1305600 , TO 061




E3056IS658 OA

OM+
0-5m as a mobile


For more developmental information and playing tips please visit:
Pour de plus amples informations sur le développement et des conseils de jeu, rendez-vous sur:
Para más información sobre el desarrollo y sugerencias de juego, visite:

www.tinylove.com

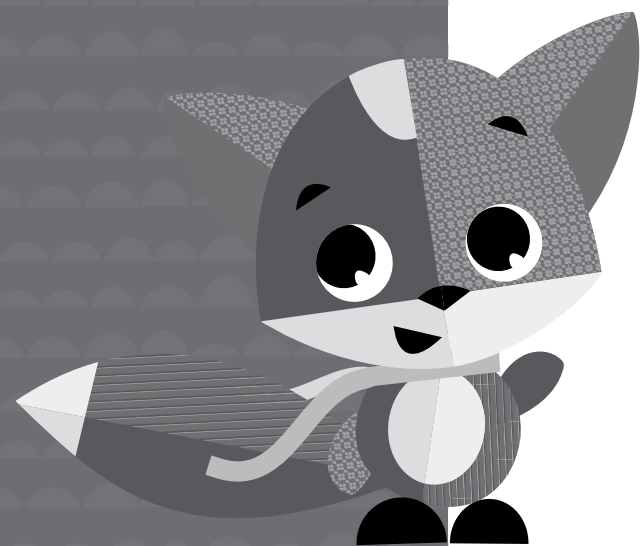

©2017, Tiny Love LTD.
www.djgusa.com | (800) 544-1108
www.tinylove.com
Made in China. Fabriqué en Chine.
Hecho en China.
Styles and colors may vary. Les styles et les couleurs peuvent varier.
Los estilos y los colores pueden variar.
Distributed by (distribué par) (distribuido por):
Dorel Juvenile Group, Inc., 2525 State St, Columbus,
IN 47201-7494
Dorel Juvenile Canada, 2855 Argentinia Road, Unit 4,
Mississauga, ON, L5N 8G6

E3056IS658 OA

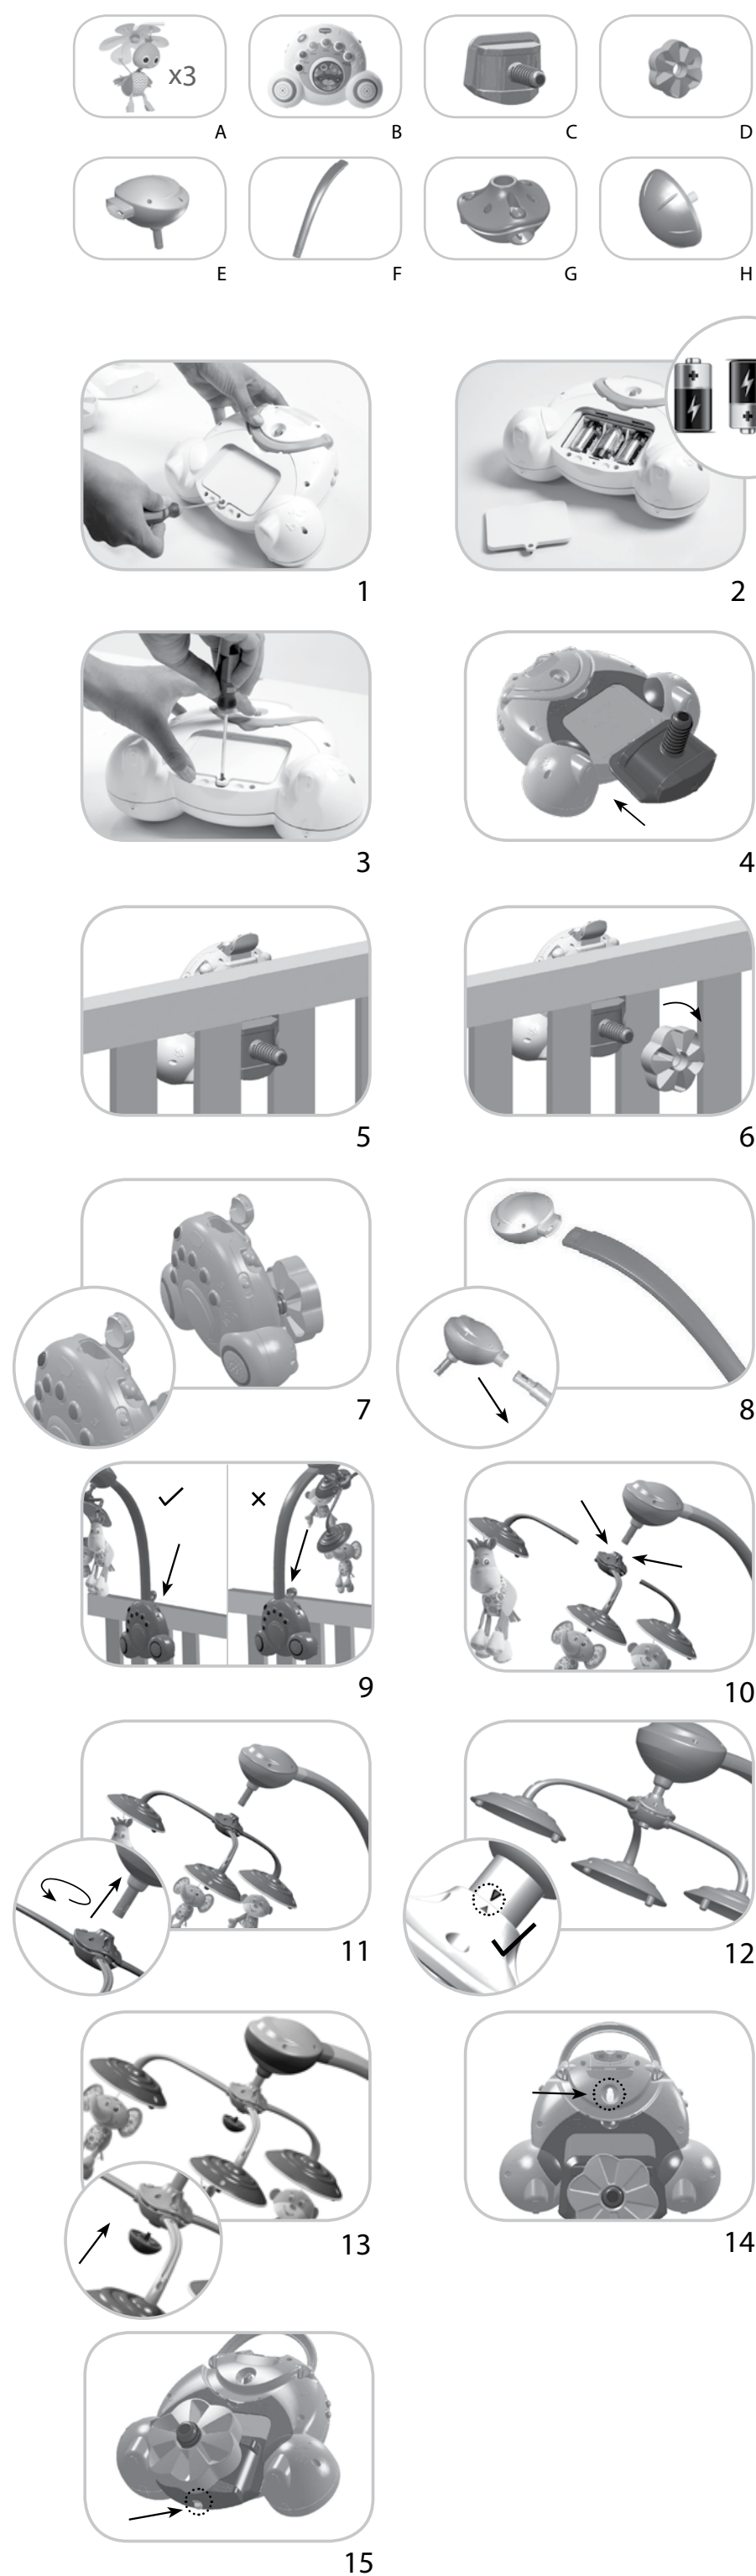

Soothe 'n Groove Mobile™

INSTRUCTION GUIDE

READ ALL INSTRUCTIONS BEFORE USE. KEEP THESE INSTRUCTIONS FOR FUTURE USE AS THEY CONTAIN IMPORTANT INFORMATION.
(These instructions apply to all mobiles in the Soothe 'n Groove series)

⚠ WARNING

- Possible entanglement injury. Keep out of baby's reach.
- Remove the mobile portion from the crib or playpen when the baby begins to push up on his hands and knees.
- The mobile is suitable for babies from birth to 5 months. 5+ months as music box.
- This mobile is intended for visual stimulation and is not intended to be grasped by a child.
- Always attach all provided fasteners tightly to the crib or playpen according to the instructions. Check frequently.
- IMPORTANT! We recommend attaching this toy to a crib side that is fixed and cannot move up or down.
- Do not add additional strings or straps to attach to the crib or playpen.
- Do not modify or alter this product in any way.
- Do not leave your children unattended for any time.
- Dispose of batteries safely.
- Adult assembly required.
- Philips screwdriver required (not included).
- Remove all packaging materials before use. Suffocation Hazard.

Product Key

- A. Connector Arm (3 parts) + 3 Soft Animals
- B. Music Box
- C. Crib Adapter
- D. Locking Nut
- E. Mobile Hub
- F. Mobile Arm
- G. Center Piece
- H. Safety Cap

Soothe 'n Groove Mobile™ Battery Installation

1. Using a Phillips screwdriver, open the battery compartment located on the back of the Music Box (B) (**Fig. 1**).
2. Remove the cover and insert 3 new size C 1.5V alkaline batteries (**Fig. 2**). Match the (+) and (-) symbols according to the diagram in the battery compartment.
3. Replace the cover and fasten tightly with a Phillips screwdriver (**Fig. 3**).

Product Installation

Crib attachment

1. Slide the Crib Adapter (C) into the back of the Music Box (B), until you hear a "click" indicating that it is secure (**Fig. 4**). Ensure that you hear the "click".
2. Fit the music box on top of the bed rail as indicated in (**Fig. 5**). The threaded peg should extend outside the crib.
3. Fit the Locking Nut (D) onto the threaded peg and turn clockwise until the base is securely fastened. Be sure to not over tighten (**Fig. 6**).

Assembly

Attach Arm to Mobile Hub:

1. Open the cover on the Mobile Arm (**Fig. 7**).
2. Fit the Mobile Hub (E) to the end of the Mobile Arm (F) as indicated in (**Fig. 8**). Make sure you hear a "click" indicating that it is secure.

Attach Arm to Music Box:

1. Fit the Mobile Arm (F) into the socket at the top of the Music Box (B) (**Fig. 9**).
2. Insert until a "click" is heard. Gently tug at the arm to make sure it is secure.

Assemble Center Piece:

1. Connect the three Soft Animals (A) to the Center Piece (G) by inserting them into the sockets at the ends of the Center Piece according to (**Fig. 10**).
2. Attach the Center Piece (G) to the Mobile Hub (E) as shown in (**Fig. 11**). Press upwards and turn right to secure in place (**Fig. 12**).
3. Screw in the Safety Cap (H) as shown in (**Fig. 13**).

Your Mobile is now fully assembled and ready for use.

Using the Soothe 'n Groove Mobile™ Music Box

The music box can be operated in three modes:

- Off
- On
- On + Light

Starting the Music Box

1. Start by sliding the operating switch to the "ON" position. The lights will flicker for half a second. Approximately 40 minutes of continuous music will start playing. There are six music categories (jazz, world, nature, classic, lullaby, and white sound) and the corresponding LED button will light up as the music for that category plays. The music starts with jazz and continues in a clockwise direction.
2. At the end of 40 minutes of play, the mobile will turn itself off. To continue playing, press any button other than the volume button.
3. To operate your mobile without music, lower the sound to the minimum.
4. Slide the switch to the "OFF" position when you have finished playing.

OTHER BATTERY INFORMATION:

- We recommend alkaline batteries for longer battery life.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Non rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the unit before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- The supply terminals are not to be short-circuited.
- Check that all contact surfaces are clean and bright before installing batteries.
- Batteries should be replaced by adults only (screwdriver not included).
- Exhausted batteries are to be removed from a product.
- Do not burn batteries. Dispose of batteries in a safe and appropriate manner.
- Install new batteries and retry function before calling Consumer Relations on electronics.
- Uses 3 C/LR14 (1.5V) batteries (not included).

Operating the Music Box

1. Press the main button in the middle to move to the next song. If the last song in a particular category is playing, the next song to play will be the first in the next category.
2. In order to play 40 consecutive minutes of music of a particular category, press the corresponding button. The music will continue playing in that category until another button is pressed. To start the music at the beginning of the same category, press the category button again. Press the main button to move to the next song in the chosen category.
3. In order to play a random selection of music (shuffle), press the shuffle button. The music will play in random order for 40 minutes (except for "White sound" music). When in shuffle mode, pressing "NEXT" will start a new shuffle order.

Volume Adjustment

1. There are 6 volume levels. Move the slide towards + to increase the volume and towards - to decrease the volume.
2. Moving the volume to the minimum mutes the Music Box.
3. After automatic shutdown, the volume will resume at the same level as when the Music Box was turned off automatically.

Turning the Soothe 'n Groove into a Mobile Music Box

1. Release the Mobile Arm by pressing the button above the Crib Adaptor (**Fig. 14**).
2. Close the mobile arm cover.
3. Release the Music Box from the crib by pressing the button underneath the Crib Adaptor (**Fig. 15**).

Care & Storage:

- Use a damp cloth to wipe clean.
- DO NOT submerge any part of the product in water.
- Remove batteries when stored for long periods of non-use.

FCC STATEMENT (UNITED STATES ONLY)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

RADIO AND TELEVISION INTERFERENCE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- Changes and Modifications not expressly approved by the manufacturer or registrant of this equipment can void your authority to operate this equipment under Federal Communications Commission's rules.

