

FLEXSTEEL®

W1020-842




UPH DINING CHAIR

IMPORTANT

Carefully remove all parts from the carton, and put them individually on a soft cloth to prevent damage to the parts.


We have taken great care in the design of this product and request that you carefully and accurately follow our assembly instructions to ensure proper set-up.

A Phillips Head Screwdriver is required for assembly (Not Provided)

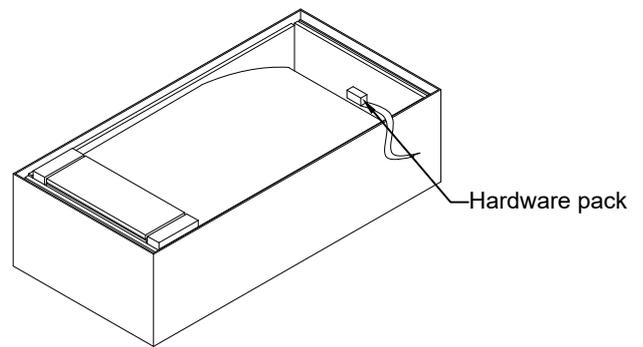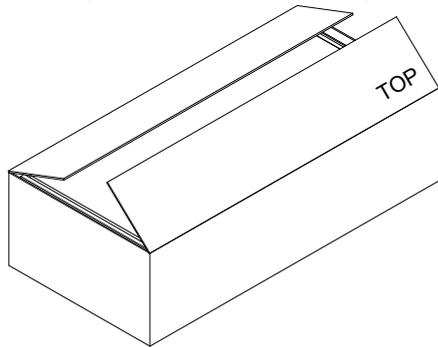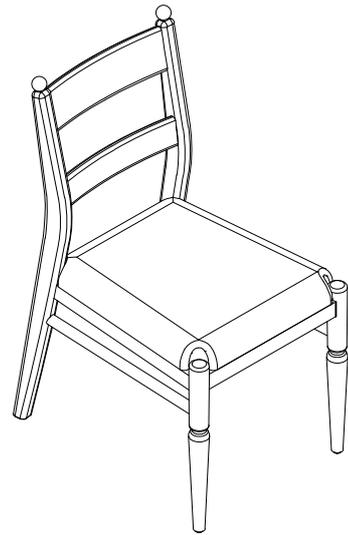


Part List

Assembly Instructions 1/3

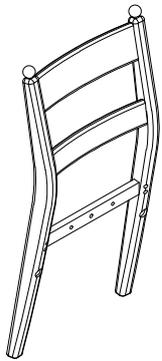

A. Backrest
1 piece

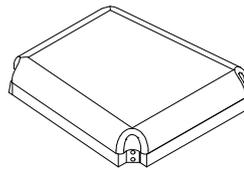


B. Seat Cushion
1 piece



C. Left Front Leg
1 piece




D. Right Front Leg
1 piece

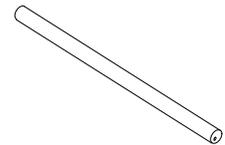

E. Stretcher
2 pieces

Hardware List

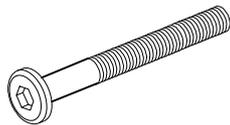

Long Bolt
Ø5/16"-18 UNC x 3-1/4"
4 pieces



 
Short Bolt
Ø5/16"-18 UNC x 2-1/4"
6 pieces



Spring Washer
Ø5/16" x 1.5mm
10 pieces



Flat Washer
Ø5/16" x Ø19mm x 1.5mm
10 pieces



Hex Key
5/32"
1 piece



Screw
#4 x 1-1/2"
4 pieces

FLEXSTEEL®


Assembly Instructions 2/3

IMPORTANT NOTES

- Do not tighten up all the bolts until each part is properly assembled.
- Keep the Hex Key in a safe place as you may need to tighten up the bolts in the future.
- Use a soft cloth between these parts and the floor.

STEP 1

Place Backrest (A) on a clean, smooth surface. Attach Seat Cushion (B) with the Long Bolts and Short Bolts, Spring Washers and Flat Washers. Use the Hex Key to tighten the Long Bolts and Short Bolts. (See Figure 1)

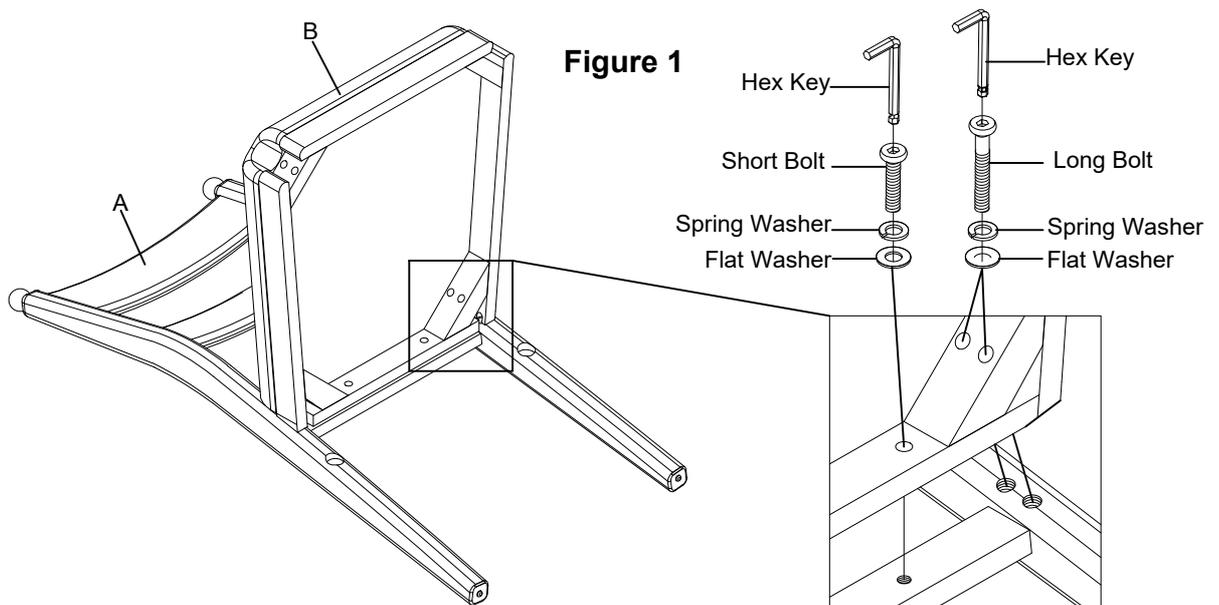


STEP 2

Loosely attach Left Front Leg (C) and Right Front Leg (D) to the Seat Cushion (B) with the Short Bolts, Spring Washers and Flat Washers. (See Figure 2)

Fix Stretchers (E) to Backrest (A), Left Front Leg (C) and Right Front Leg (D). Insert a screw to each end of both Stretchers (E). (See Figure 3)

Finally, fully tighten all bolts using the Hex Key and the screws using a Phillips Head Screwdriver (Not Provided).

Figure 2

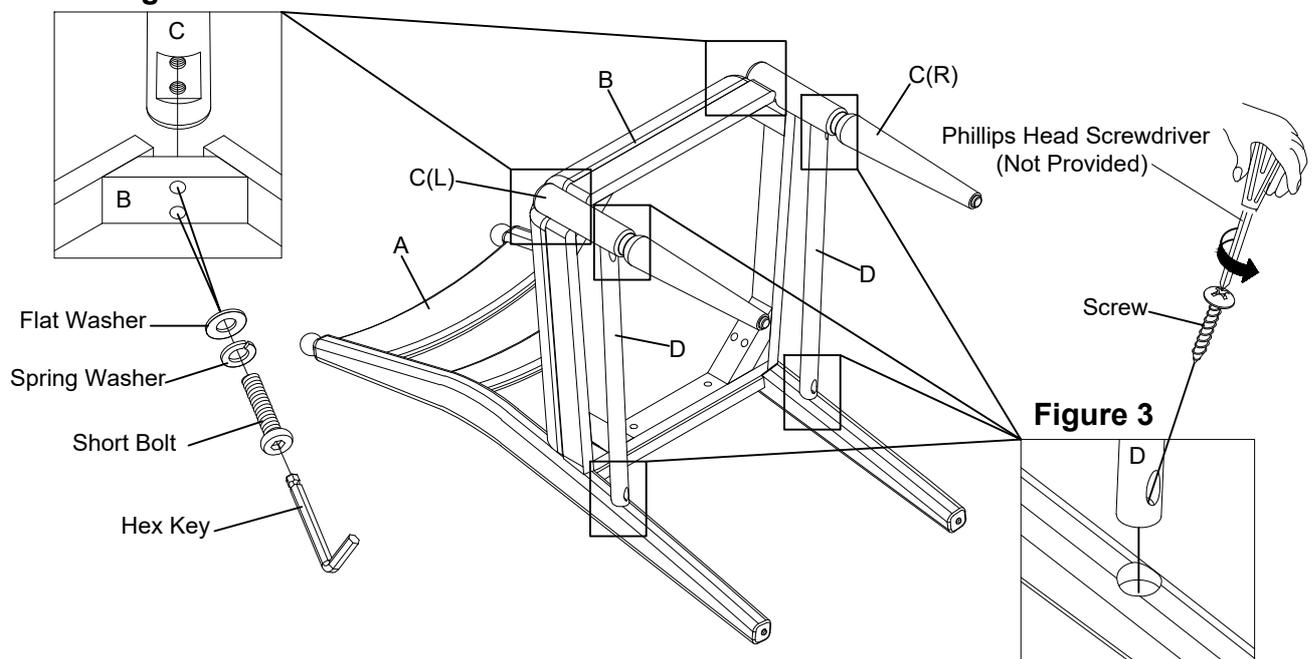


FLEXSTEEL®

Assembly Instructions 3/3

STEP 3

Adjust the levelers on the Left Front Leg (C) and Right Front Leg (D) until the furniture is leveled. (See Figure 3)

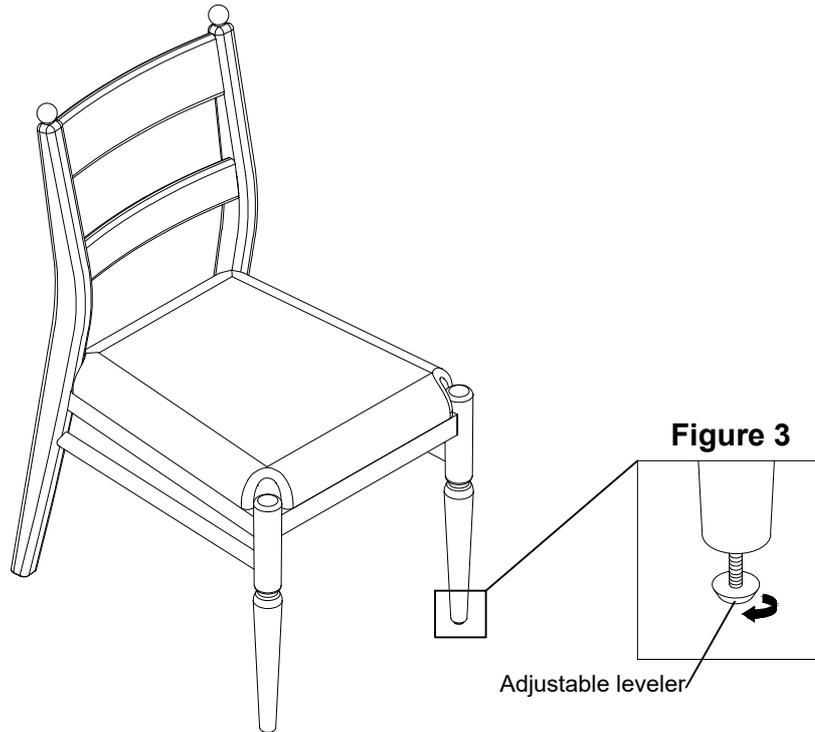

CARE INSTRUCTIONS

- Avoid the use of harsh chemicals or abrasive cleaning materials.
- Wipe the chair clean with a soft, dry cloth after each use.
- Wipe up spills quickly with a soft, dry cloth.

Flexsteel Industries, Inc.

For Parts or Customer Service call

toll-free:

1-888-415-3979

Monday-Friday

8:00 a.m. -5:00 p.m.

(Central Time)

Email:

customersolutions@flexsteel.com

www.flexsteel.com