


# INFLATABLE WINDOW DECORATION

*Read this manual carefully before use and save it for future reference.*

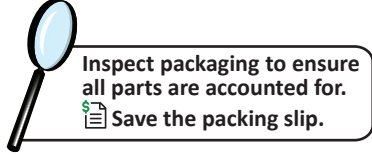

PARTS	
Inflatable Product	Blower
UL Adapter	LED Lights
Suction Cups	Tether Ropes

## ⚠ WARNING ⚠

This is an electrical decoration, it is not a toy! This item contains small parts that can be a choking hazard. Keep all plastic and wire parts away from children and pets.

## CARE AND STORAGE

**For Indoor and Outdoor Use.**

For best performance, operate this item indoors or in a sheltered outdoor area. It is also recommended that you bring this item indoors during adverse weather (extreme cold, strong winds, and/or rain).

- Only use the UL adapter supplied by the manufacturer.
- To prevent overheating and/or product damage, periodically unplug the product to allow the transformer and blower fan to cool down.
- Spot clean fabric with a damp cloth. Never use harsh chemicals or abrasive materials to clean the unit.
- Never wash or allow the motor to be exposed to water.
- Do not unplug by pulling on the power cord.

**STORAGE:** Ensure the unit is completely dry. Neatly fold/roll the inflatable and store in its original packaging or a similar sized box. Store the product in a cool, dry location that is away from sunlight, heat and moisture.

## ⚠ IMPORTANT SAFETY INFORMATION ⚠

**Carefully read and follow all instructions before using this product.**

1. This product is not intended for permanent installation or use.
2. Do not attempt to inflate during windy conditions. Always deflate and secure the inflatable during unusually strong wind conditions.
3. Do not mount or place near heaters, fireplaces, candles, or any other heat sources.
4. Never secure product wiring with staples or nails, or place on sharp hooks or nails.
5. Do not close doors or windows on the power cord as doing so may damage the wire and wire insulation.
6. Unplug the product when leaving the house, when retiring for the night, or any other unattended time.
7. To reduce the risk of electric shock, protect the motor and power cord from exposure to water.

8. This is an electrical decoration, not a toy! To avoid risk of fire, burns, personal injury or electric shock, this product should not be played with or placed where children can reach it.
9. Always supervise children while this product is in use.
10. Do not hang ornaments or other objects from the cord.
11. Inspect the product carefully before every use. Discard and DO NOT operate the product if the wiring has cuts, cracks, damages or frayed cord insulation, loose connections, or exposed copper wire.
12. Replace failed bulb(s) immediately. Replacement bulb(s) must have the same rated voltage and wattage to prevent overheating. Do not remove or change the bulb(s) inside while the power is on.

**Any modification to the product or failure to follow recommended care will void the product warranty.**

## INSTALLATION

**IMPORTANT:** Before installation, ensure the window is clean and dry.

**STEP 1:** Remove all contents from packaging and inspect the inflatable to ensure it is fully intact.

**STEP 2:** Locate the blower air intake and make sure it is clear of fabric or other obstructions.

**STEP 3:** Ensure the zipper on the back of the inflatable is zipped shut.

**STEP 4:** Attach a tether rope to the loop on the top of the inflatable.

**STEP 5:** Press the suction cups on the inflatable to a clean window.

**STEP 6:** Install the loose suction cup to the window, above the inflatable and loosely attach the tether rope to the suction cup. **NOTE:** Rope tension will be adjusted after the inflatable is filled with air.

**STEP 7:** Firmly connect the UL adapter and plug it into a properly grounded GFCI wall outlet. The blower/fan will immediately begin to fill the inflatable product with air. **TIP:** If the inflatable is not filling with air, lift the fabric to ensure the blower air intake is not blocked.

**STEP 8:** Gently pull and tighten the tether rope to adjust the inflatable to an upright and fully secured position.

## TROUBLESHOOTING

Carefully read and follow all *Care and Storage*, *Safety*, and *Installation* instructions; the most common troubleshooting tips are referenced under each set of instructions.

**If your inflatable is not inflating, please check the following:**

1. The power source may have been interrupted, or the cord may be unplugged.
2. Blower airflow may be obstructed. Unplug the blower and check that the intake vent is free from debris. Also ensure the inflatable fabric is not blocking the intake vent.
3. Check that the zipper to ensure it is closed.
4. Inspect fabric for holes and tears. Do not use if product if fabric is damaged.

*If you experience issues with assembly or the product was damaged during shipping, please contact our customer service team through one of the methods mentioned at the top of page 1.*

*Please have the item number and order information ready to expedite response time.*

## WARNING!

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.