88 5180 26


Upholstered Bench


IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.



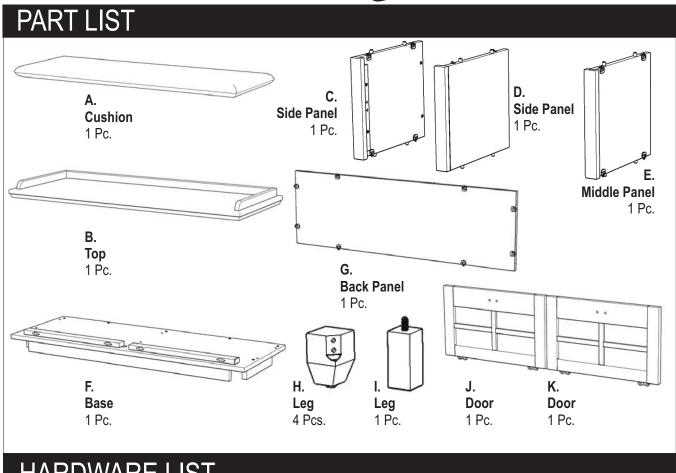

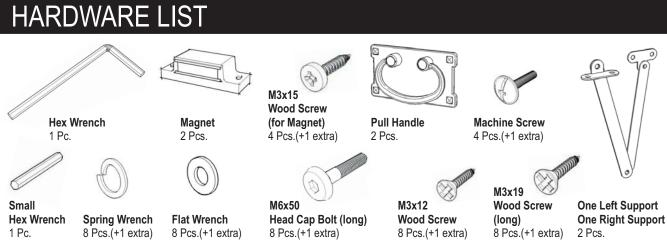

Tools required for assembly: Phillips screwdriver

Tools recommended for assembly: Level


Home Styles Consumer Assistance: www.homestyles-furniture.com, servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319

Assembly Instructions 2/4

IMPORTANT

STEP 1

- * Do not tighten up all the screws until each part is properly assembled.
- * You should keep Hex Wrench in a safe place as you may need to tighten up the Head Cap Bolts in the future.
- * Use a soft cloth between these parts and the floor.
- * After assembly, item must be level to work properly. Use the included adjustable levelers to level.

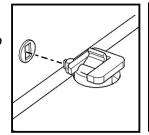

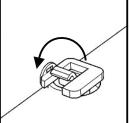



Figure 1 Figure 2

C

Lock

G


Attach Side Panels (C) and (D) to Back Panel (G), then flip the Locks. (See Figures 1 and 2)

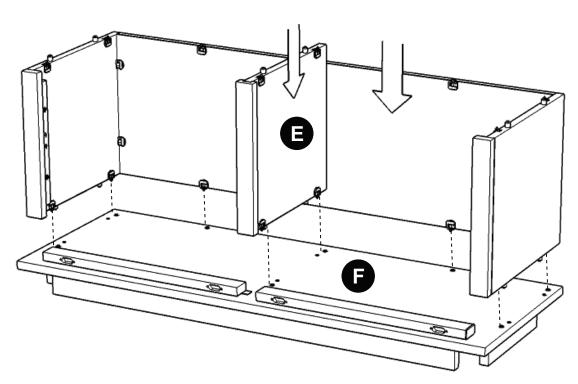

STEP 2

Attach unit and Middle Panel (E) to Base (F) and flip the Locks.

Assembly Instructions 3/4

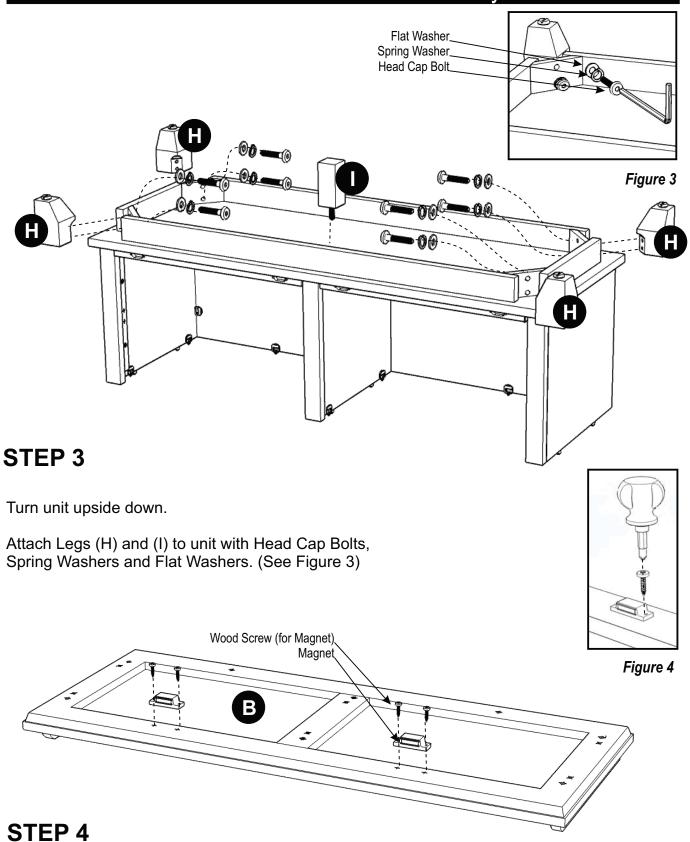


Place Top (B) upside down on a soft cloth.

Attach Magnets to Top (B) at the pre-drilled holes of Top (B) with Wood Screws (for Magnet). (See Figure 4)

Assembly Instructions 4/4

Figure 9

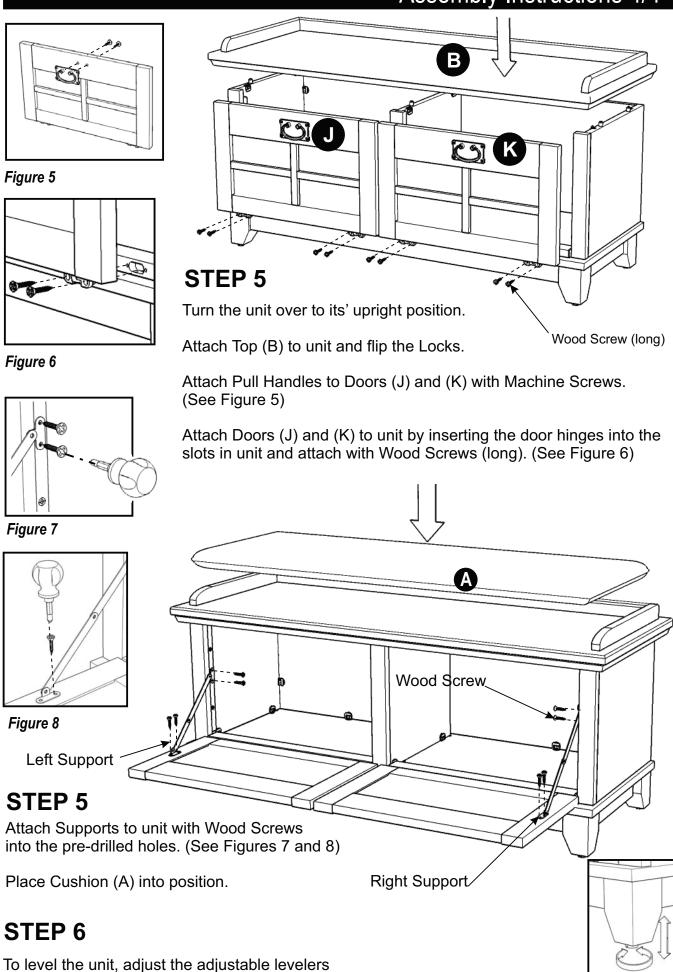

on the bottom of the legs. (See Figure 9)