


IMPORTANT

Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.


Do not use power tools above 8 volts to assemble.

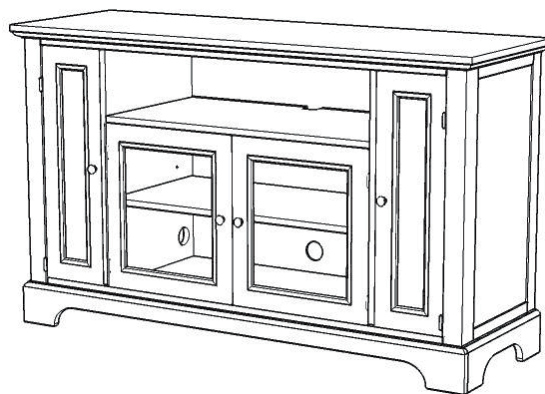

Part List




A.
Top
1 pc.

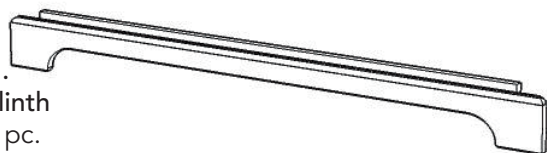


H.
Plinth
1 pc.




I.
Base
1 pc.

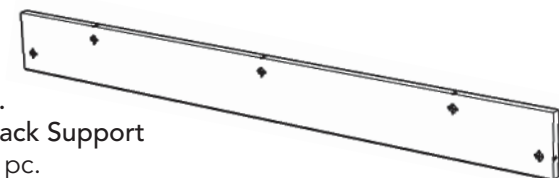

R.
Back Support
1 pc.

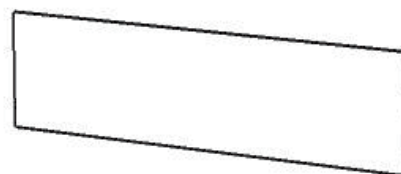

J.
Back Panel
1 pc.

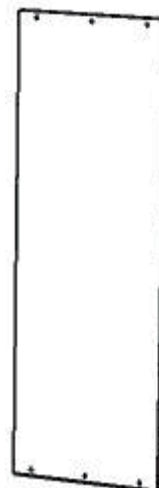

K.
Back Panel
2 pcs.

Hardware List



 
Cam Lock Screw
28 pcs.(+2 extra)



Magnet
4 pcs.



Adjustable Pin
20 pcs.(+1 extra)



Pull Handle
4 pcs.



Cam Lock
28 pcs.(+6 extra)



M3x16
Wood Screw
for Magnet
8 pcs.(+1 extra)



M3x25
Wood Screw
for Wood Block
14 pcs.(+1 extra)



M3x16
Wood Screw
for Back Panel
12 pcs.(+1 extra)



M4x16
Machine Screw
4 pcs.

For assembly see instructions in carton 88 5530 102.

CARE INSTRUCTIONS

NEVER


allow liquids to remain on furniture.
Absorption causes parts to warp
and split and finishes to delaminate.

NEVER

use glass cleaners on
finished furniture. Ammonia
chemically attacks the finish.



Do not use power tools
above 8 volts to assemble.
**PREVENT
CRACKING**

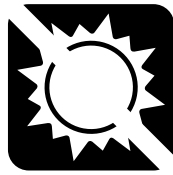


Do not place
in direct sunlight.
**PREVENT
FADING**



Do not write
directly on surface.
**PREVENT
MARKING**



Do not place hot
objects on surface.
**PREVENT
FINISH DAMAGE**

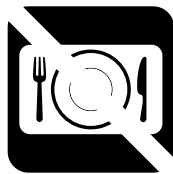

Do not use rubber
based placemats.
**PREVENT
DISCOLORING**



Do not use commercial
waxes and polishes.
**PREVENT
YELLOWING**

CLEAN

with a soft cloth moistened
in lukewarm soap and water.
Buff with a dry clean cloth.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

www.homestyles-furniture.com/customer-service/replacement-parts

Home Styles Customer Service: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319