
Cosmopolitan / City / Essex

Sideboard Buffet

Model # AXCCOS11-MSB

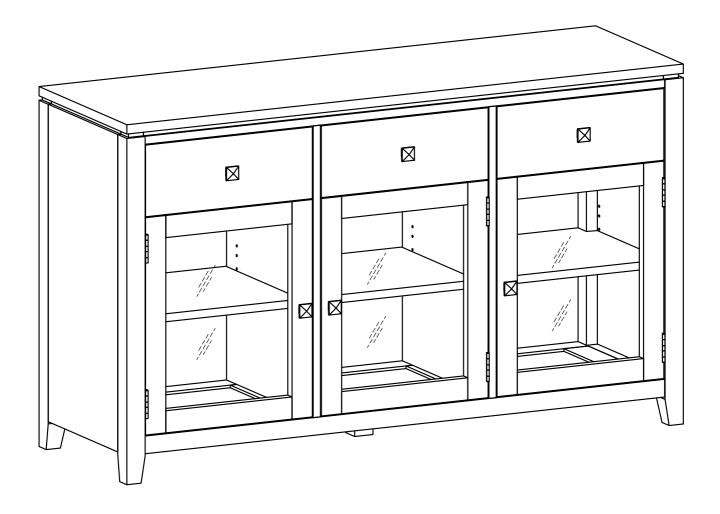

brooklyn + max





It's time to register your product warranty.

It's quick and easy. And you'll be happy you did.



- ✓ Activate your 1-year warranty
- ✓ Automatic entry to win a \$500 gift certificate
- ✓ Earn instant rewards and save



simpli-home.com/product-registration

Review your product and collect rewards!

Thank you for your purchase! We hope you enjoy it. We'd love your feedback. Please share a review and get instant rewards!







 




Share photos and get your cash back!



Send us images or share them on social and qualify for instant rewards. You may even receive store credit on your entire purchase!





simpli-home.com/share-images

For Fastest Customer Service:



- 1. Open your phone's camera.
- 2. Point your phone's camera at the QR code to scan.
- 3. Click on the pop up.
- 4. You'll be taken to our customer service page.
- 5. Fill the form with your order information and issue.
- 6. Submit form.
- 7. A customer service associate will contact you.

Other ways to contact us...



Email Us

customer service@simpli-home.com



Visit Us

Visit our site directly at www.simpli-home.com



Call Us

1-866-518-0120 Monday to Friday 9am to 5pm EST

*If you've purchased from a retailer and you wish to return the product, please contact the retailer directly.

IMPORTANT: Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

Safety Information

CAUTION: Injuries and damage can occur from furniture tip over if product is not properly anchored to the wall. Use the Furniture Anti-Tipping Restraint provided with the product. Consult our Assembly instructions for help.

If the Furniture Anti-Tipping Restraint kit is not in the box, please contact our customer service department in order to obtain another kit before using the furniture.

Identify all the parts and hardware. Do not discard of the packaging until you have checked that you have all of the parts and hardware required. Hardware package may have spare parts.

WARNING: This item contains small parts which can be swallowed by children and pets. Keep children and pets away during Assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets. We recommend that you assemble this unit on a carpeted floor to avoid scratches. If using power tools, set the tool to low torque to avoid damage.

May require 2 people for ease of Assembly.

Care & Maintenance

This furniture is designed for indoor use.

Perhaps the greatest environmental damage to wood furniture comes from wide swings in relative humidity (RH) in our homes. Wood absorbs and desorbs water as relative humidity rises and falls, and in doing so it swells and shrinks. Making matters worse, it expands and contracts unequally along different grain directions. As humidity changes, the components of wooden objects are continually pushing and pulling against each other. This pressure often results in parts of furniture no longer fitting together closely or becoming distorted or breaking from their own internal stresses.

The response to relative humidity changes begins with determining the annual average RH for your particular space. Then try to keep the RH in the space where your furniture is as close to that average as possible, generally within about 10% up or down. De-humidify in the summer and humidify in the winter.

Be aware that raising the temperature lowers the humidity and vice versa. Thus, modern heating systems, which can drive down interior RH in the winter, almost invariably cause problems for furniture. To counteract their effect, you can either modify the RH by keeping furniture containing spaces cooler in the winter or most importantly, have a good working humidifier for your home. A humidistat automatically works to balance the humidity in your home so it is constant. Dry indoor air can suck enough moisture from its surroundings to do permanent damage to wood, causing it to crack or split.

Remember, that not all woods are created equal. Two factors that help determine how rapidly a wood will lose moisture are pore size and surface hardness. A piece made from a dense and hard wood will dry less rapidly than pieces made from softer woods.

Furniture that is sealed and lacquered will lose moisture more slowly than an unfinished piece while pieces with veneer finishes are not only stronger but lose moisture more slowly than other finishes.

To help protect your wood furniture, take these steps:


- Use a humidifier, preferably one with an automatic control system that can sense the humidity level and adjust itself accordingly
- Don't over-humidify; that can damage wood by causing it to expand and contract
- Keep furniture out of direct sunlight, which can cause it to dry out, crack and warp
- If you can avoid it, don't put furniture near heating vents; if you can't, keep the item 3 to 4 inches away from the wall, giving the heat and air space to circulate
- Dust with soft dry cloth
- Do not use liquid or aerosol products
- To avoid marking, do not place rubber on surface (foot pads, etc.)
- For soil build-up, wipe with damp cloth & dry
- Do not use abrasive cleaners


Pre-Assembly Information Model # AXCCOS11-MSB **Part Description** BL BR TOP LEFT SIDE **RIGHT SIDE** QTY 1 QTY 1 QTY 1 DR **BOTTOM FRAME** LEFT DIVIDER RIGHT DIVIDER QTY 1 QTY 1 QTY 1 EL ER LEFT SHELF **RIGHT SHELF** MIDDLE SHELF QTY 1 QTY 1 QTY 1

Pre-Assembly Information Model # AXCCOS11-MSB **Part Description** HL HR G Warning Label **DOOR** LEFT BACK PANEL RIGHT BACK PANEL QTY 3 QTY 1 QTY 1 Η MIDDLE BACK PANEL **BOTTOM SUPPORT LEG** DRAWER FRONT QTY 1 QTY 1 QTY 3 KLKR LEFT DRAWER SIDE RIGHT DRAWER SIDE DRAWER BACK QTY 3 QTY 3 QTY 3 M DRAWER BOTTOM QTY 3


Model # AXCCOS11-MSB Pre-Assembly Information Hardware Description 00 **ALLEN KEY SCREW CAM LOCK PIN** M6 X 30mm CAM LOCK **ALLEN KEY QTY 30** QTY 18 SETS QTY 1 5 4 6 **HANDLE** PHILLIPS SCREW ROUND HEAD SHELF SUPPORT M4 x 25mm M4 X 15mm **QTY 18** QTY 6 QTY 26 8 PHILLIPS SCREW PHILLIPS SCREW MAGNET AND PLATE M3 X 12mm M3 X 15mm QTY 3 SETS **QTY 18 QTY 12** 10 a. M4 X 25mm - QTY 2 (1 is extra) **M**4 X 15mm - QTY 1 c. M4X25mm-QTY1 WOOD DOWEL PHILLIPS SCREW FURNITURE TIP OVER RESTRAINT Ø8 X 30mm M4 X 30mm QTY 1 SET **QTY 12** QTY 4 Required -Flathead screwdriver Phillips screwdriver Rubber mallet **Not Included**

Components - Key Diagram

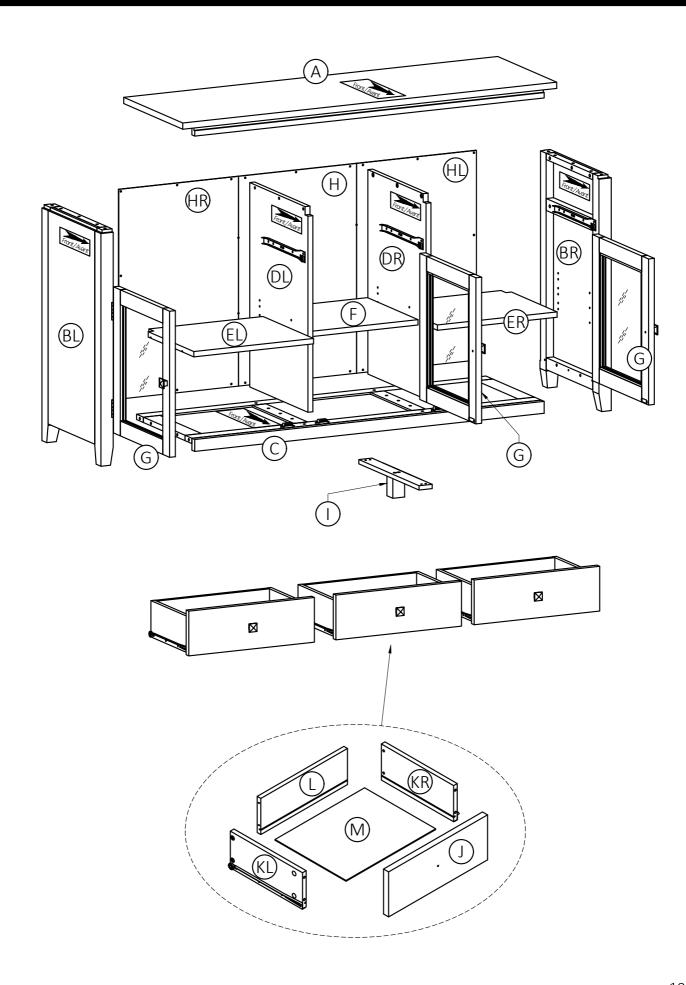


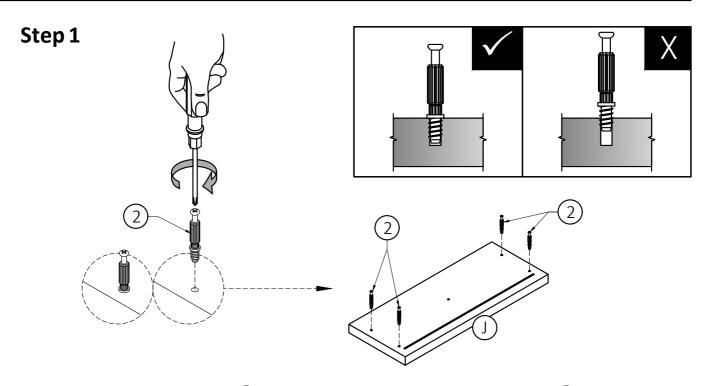


- 1. Attach four Cam Lock Pins 2 into pre-drilled holes on Drawer Front J.
- 2. Use Phillips screwdriver to secure Cam Lock Pins. Do not over-tighten.

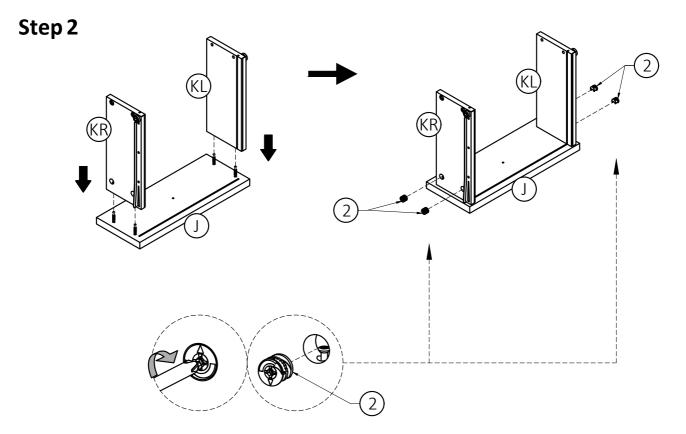


- 1. Align Cam Lock Pins with guide holes and attach Drawer Sides(KL)(KR) to Drawer Front (J).
- 2. Insert two Cam Locks ② into guide holes on each Drawer Side(KL),(KR).
- 3. Use Phillips screwdriver to secure Cam Locks. Do not over-tighten.

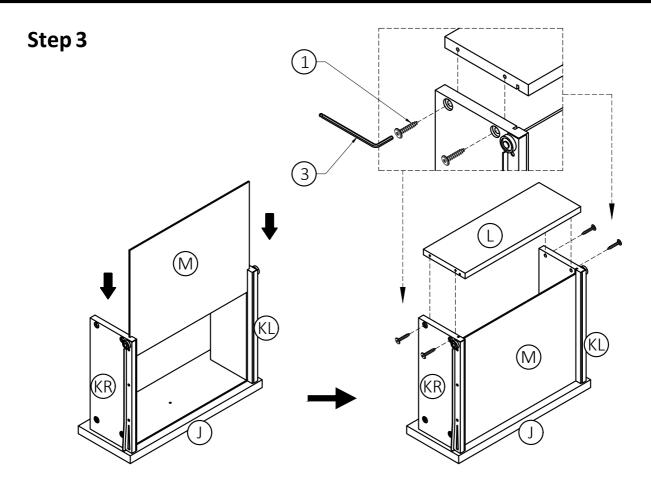

- 1. Slide Drawer Bottom (M) firmly into slots on Drawer Sides (KL), (KR) and Drawer Front (J).
- 2. Align Drawer Back (with Drawer Bottom) and press firmly into slot .
- 3. Attach Drawer Back using two Allen Key Screws ①through guide holes on each Drawer Side(KL),(KR). Use Allen Key ③ to tighten Screws.

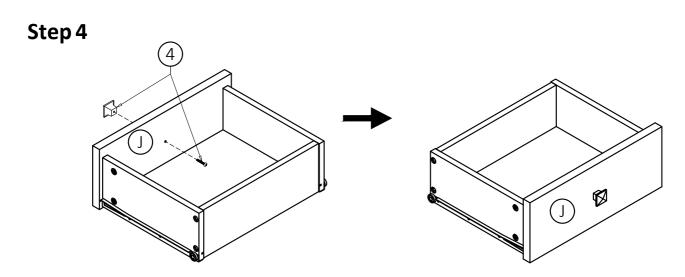


- 1. Use Phillips screwdriver to attach Handle 4 to Drawer Front (J).
- 2. Repeat Step 1-4 for the other drawers.

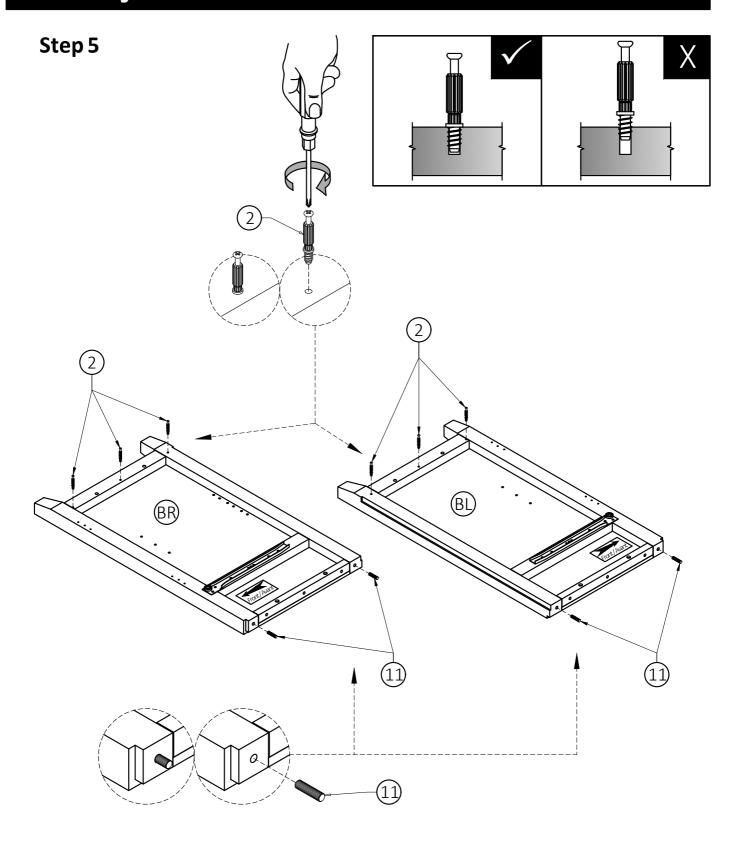


- 1. Attach three Cam Lock Pins 2 into pre-drilled holes on each Side BL, BR.
- 2. Use Phillips screwdriver to secure Cam Lock Pins. Do not over-tighten.
- 3. Insert two Wood Dowels (11) into guide holes on each each Side (BL), (BR).
- 4. Use rubber mallet to tap Dowels 1) into bottom of holes securely. 1/2 length of Dowels should be exposed.


Step 6

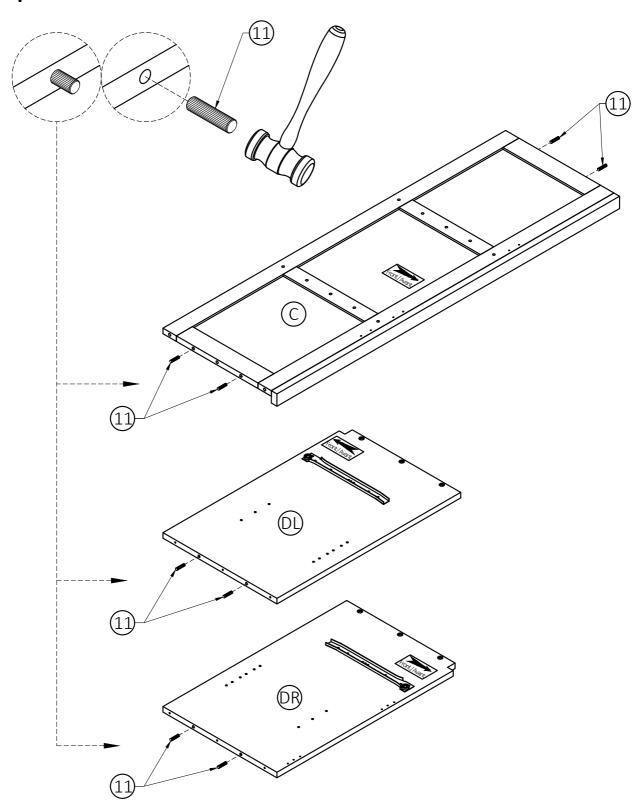


- 1. Insert four Wood Dowels 1 into guide holes on Bottom Frame 0.
- 2. Insert two Wood Dowels (1) into guide holes on each Divider (D), (DR).
- 3. Use rubber mallet to tap Dowels 6 into bottom of holes securely. 1/2 length of Dowels should be exposed.

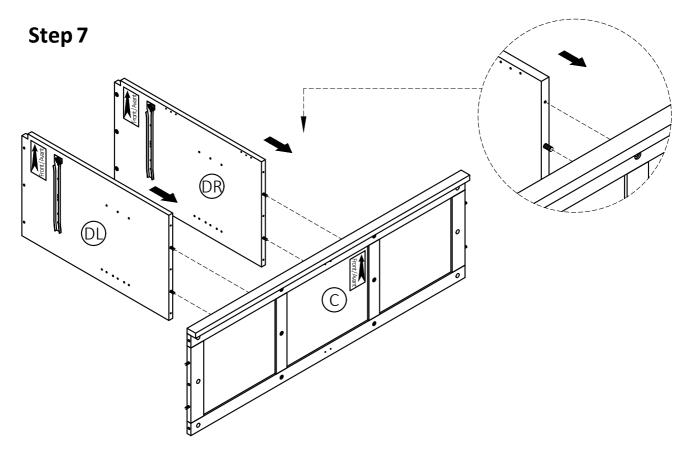

1. Align Wood Dowels with guide holes and attach Bottom Frame C to Divider DL, DR.

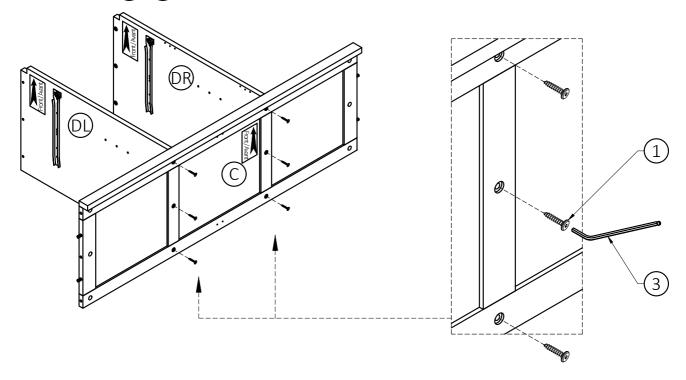


- 2. Use three Allen Key Screws 1 to attach Bottom Frame C through guide holes from Bottom Frame C to pre-drilled holes of each Divider DL, DR.
- 3. Use Allen Key 3 to tighten Screws. Do not over-tighten.

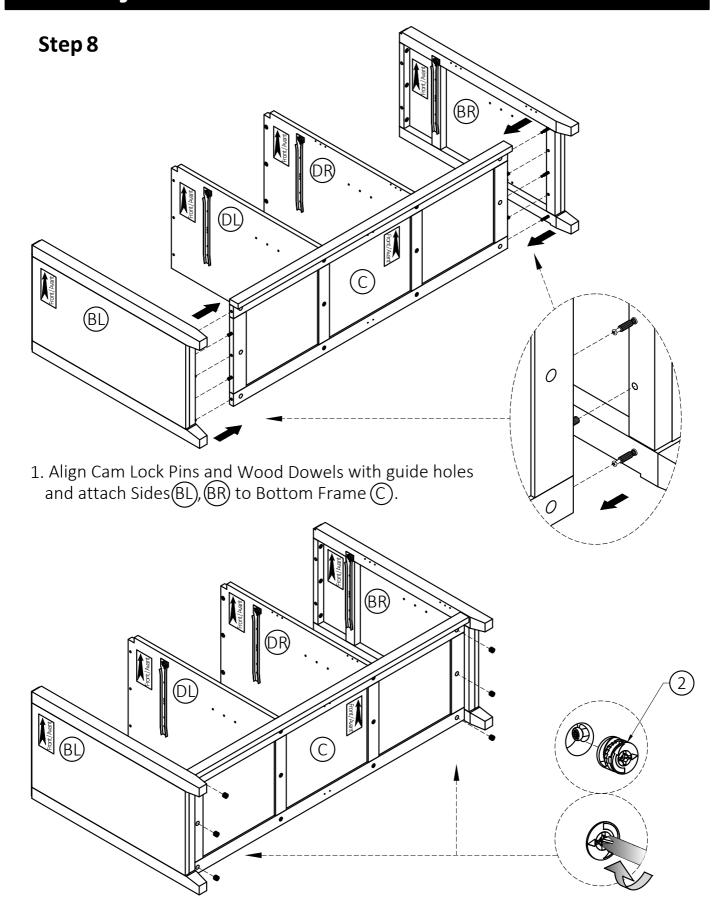


- 2. Insert six Cam Locks 2 into guide holes on Bottom Frame C.
- 3. Use Phillips screwdriver to secure Cam Locks. Do not over-tighten.

Model # AXCCOS11-MSB

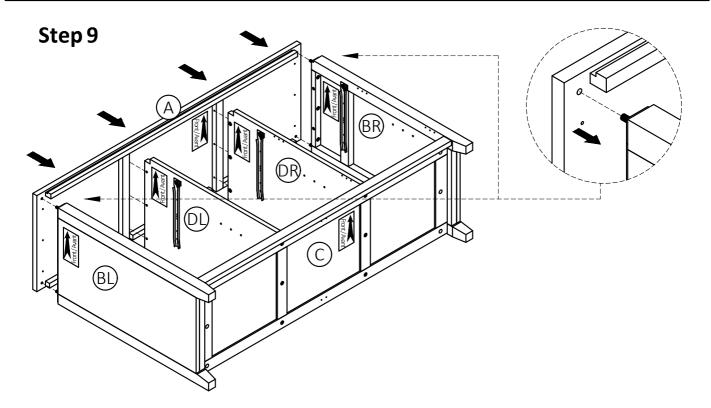


1. Align Wood Dowels with guide holes on Top (A) and attach Top (A).

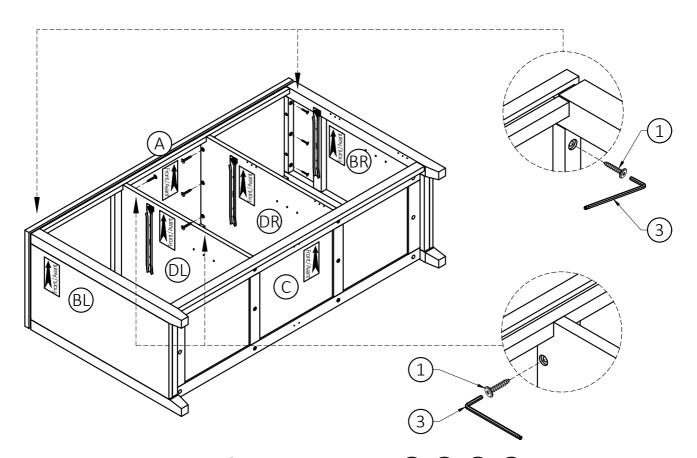


- 2. Use three Allen Screws 1 to attach each parts BL, BR, DL, DR through guide holes to Top A.
- 3. Use Allen Key (3) to tighten Screws. Do not over-tighten.

Step 10

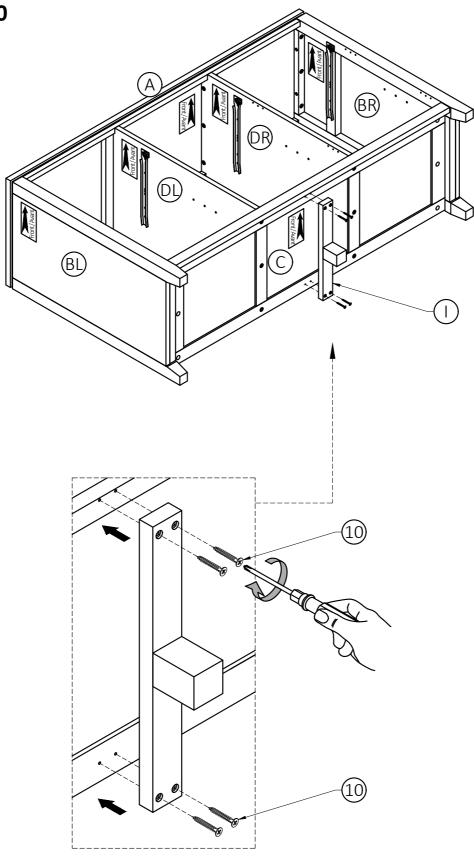


1. Attach Bottom Support Leg () align with pre-drilled holes at back of Bottom Frame (C). Use Phillips Screwdriver to tighten four Phillips Screws (10).

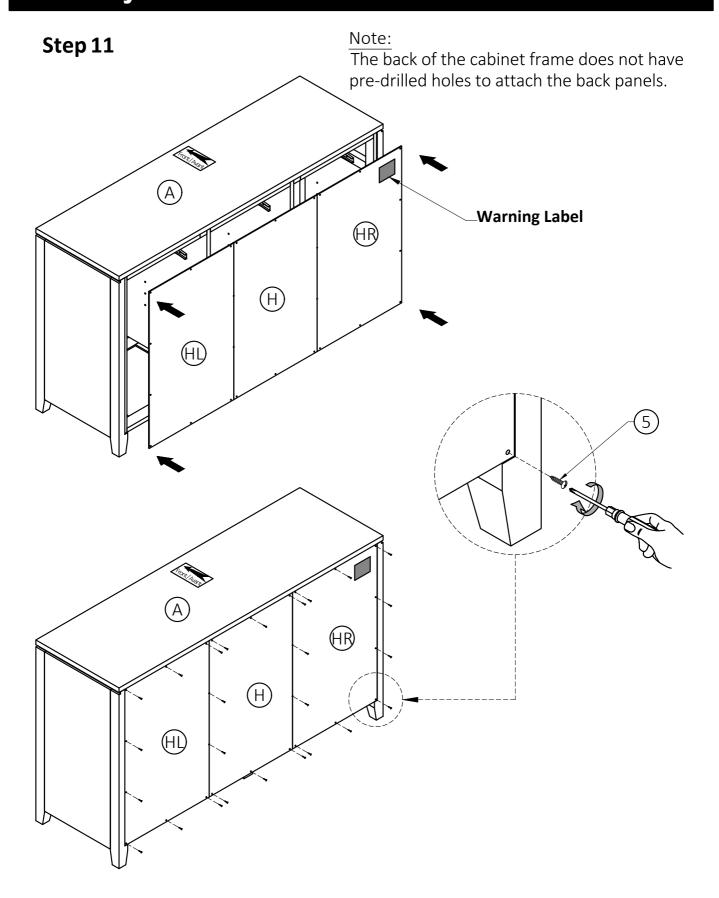


- 1. Use Phillips Screws Round Head 5 to attach Back Panels (HL), (HR), (H) through guide holes to the back of Sideboard.
- 2. Use Phillips Screwdriver to tighten screws. Do not over-tighten.


Model # AXCCOS11-MSB

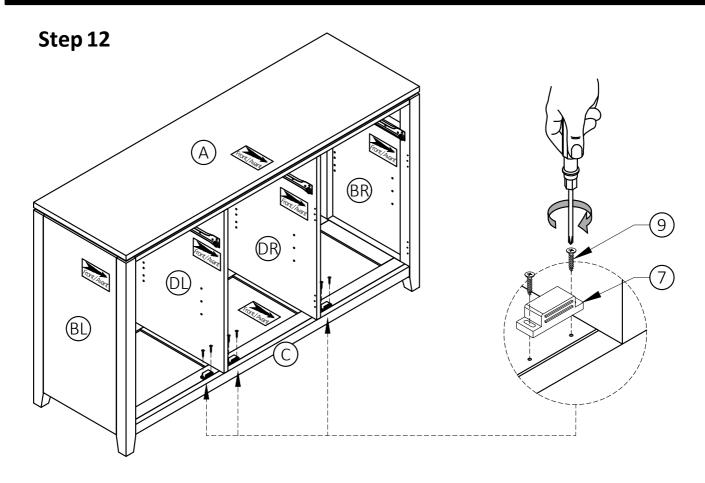


1. Attach Magnets ① using Phillips Screws ② into pre-drilled holes on Bottom Frame ②.

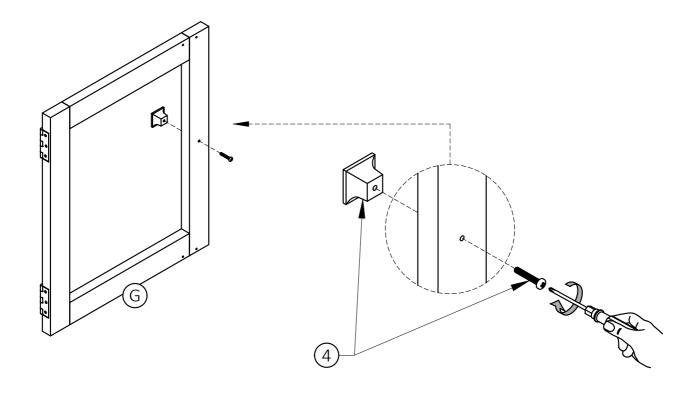

 $2. \ Use \ Phillips \ screwdriver \ to \ attach \ Handles \ \textcircled{4} \ to \ Doors \ \textcircled{6} \ through \ guide \ hole.$

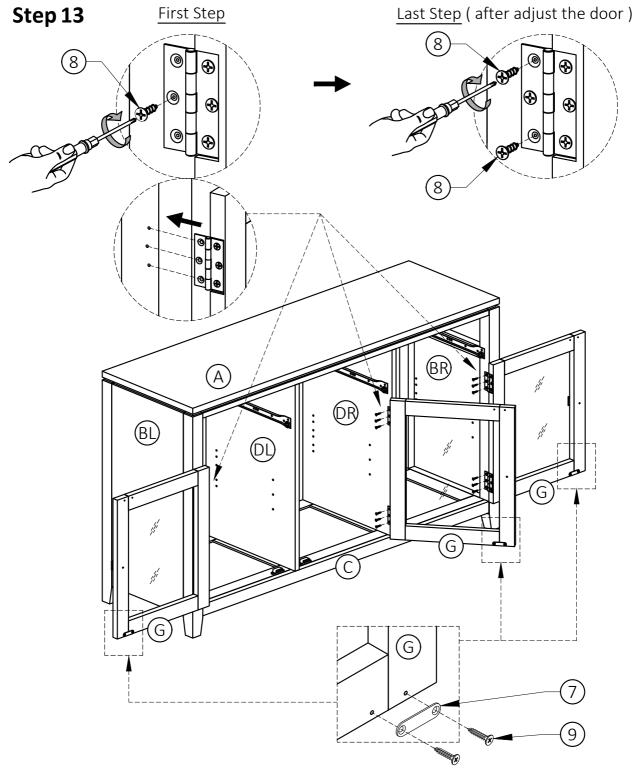


- 1. Attach hinges on Doors (G) to parts (BL), (BR), (DR) using Phillips Screws (8) into pre-drill holes:
 - Using Phillips screwdriver to attach Screws (8) at middle hole of hinges for both top & bottom hinges.
 - Adjust the door to ensure they are aligned straight & square with bottom shelf & side.
 - Using Phillips screwdriver to tighten the rest of screws (8) into pre-drill holes (top & bottom holes on hinges).
- 2. Attach Magnet Plates 7 to bottom corner of Doors Gusing Phillips Screws 9 into pre-drilled holes on Doors G.

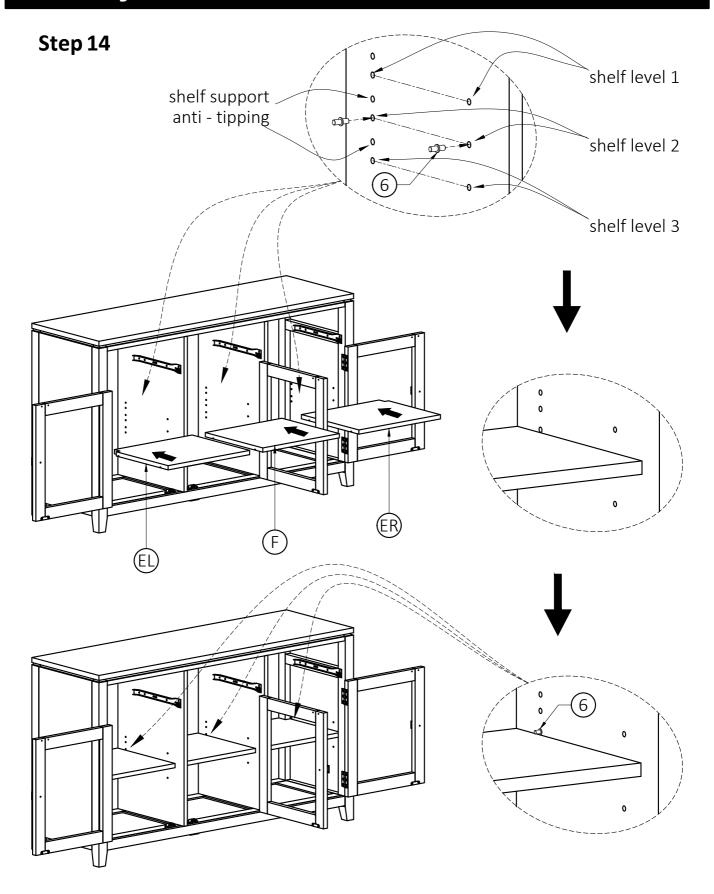

- 1. Use four Shelf Supports 6 for each Shelf F, EL, ER in desired location .
- 2. Two Shelf Supports 6 may be used on back top of each Shelf F, EL, ER as a tipping restraint.

Step 15

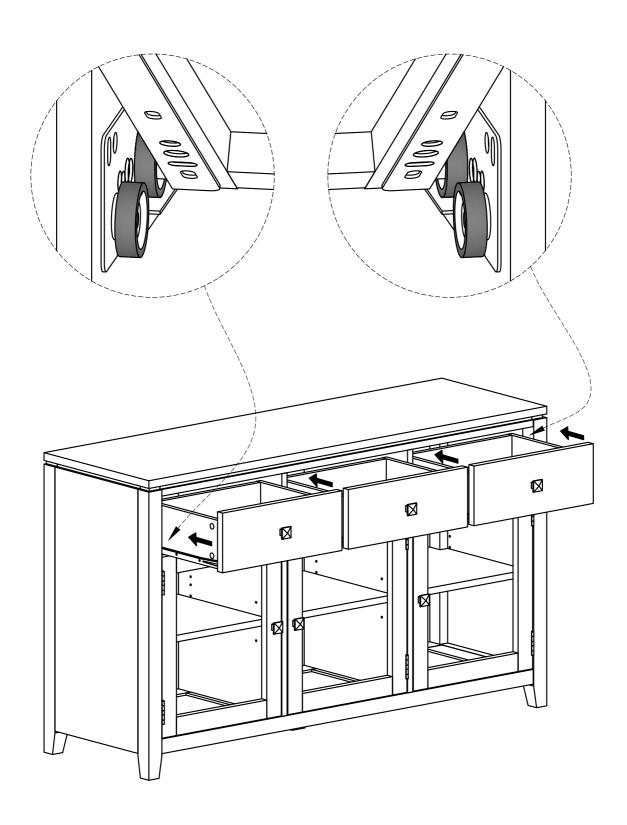


1. Insert assembled drawers into glides on assembled Sideboard.

Furniture Tip Over Restraint Assembly




WARNING

Serious or fatal crushing injuries can occur from furniture tip-over. If the furniture tip over restraint kit is not in the box, please contact our customer service department in order to obtain another kit before using the furniture.

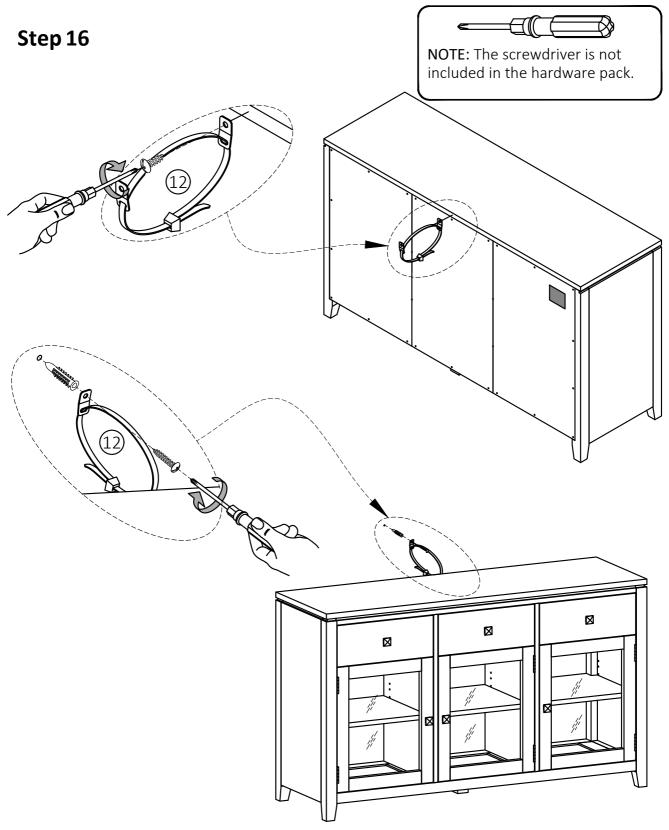


Furniture Anti-Tipping Restraint Instructions

 
1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the shorter screw.



 2. Determine where furniture is to be placed and mark location on the wall for mounting bracket screw hole approximately 2 inches below the bracket mounted to the furniture.



- 3. Drill a 3/16 inch hole in the wall. Press the plastic anchor into the hole and gently tap until the flange on the anchor is against the wall surface.
- 4. Position the bracket over the anchor and use the longer screw to securely attach the bracket to the wall.
- 5. Place the furniture so the back edge is in line with the bracket on the wall.
- 6. Lace an end of the nylon zip-tie strap down through each bracket. Bring both ends together and slide the smooth side upright through the square-shaped end and pull through to create the "locked" position.
- 7. Check to make sure the strap is securely laced and locked to the brackets.

 

- DO NOT put a TV or other heavy objects on top of furniture not intended for use with a TV
- **DO NOT** place heavy objects in top drawers or on top shelves
- **DO NOT** let children climb or hang on drawers, doors or shelves