 


CyberPower®

USB BATTERY PACK USER GUIDE

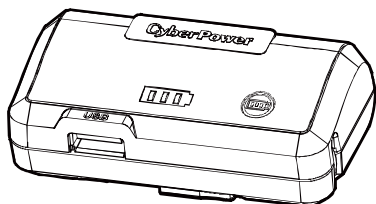

Model: CPBC2200 Series

IMPORTANT! PRIOR TO FIRST USE:
The CPBC2200 Series is packaged in a protection mode for shipping. Prior to use, connect the CPBC2200 Series to a USB power source to set it to normal mode and to provide the suggested 8-hour charge.

 
INTRODUCTION

The USB Battery Pack (CPBC2200 Series) is a rechargeable lithium-ion battery that is designed for powering mobile devices such as phones, MP3 players, and handheld gaming devices while away from other power sources.

FEATURES

- Compact and portable design
- Built in USB power cable
- Battery life indicator

PRODUCT VIEW:

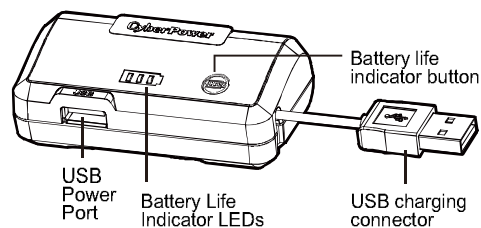

PACKAGE CONTENTS

- USB Battery Pack (CPBC2200 Series)
- User Guide

SPECIFICATIONS

Battery Capacity: 2200mAh

Rated Input: DC 5V 600mA

Rated Output: DC 5V 1A

PC Charging time: ~4 Hrs

Dimension: 2.96 x 1.58 x 0.96 inch

 
Weight: 2.57 oz

Environment: Storage: 14 to 122°F (-10 to 50°C)

Operation: 0 to 40°C (32 to 104°F)

CHARGING THE BATTERY PACK

Charge the USB Battery Pack by attaching the USB charging connector to any powered USB port, including but not limited to a desktop computer, laptop, powered USB hub or a USB charger. Recharge the CPBC2200 Series every 3 months when not in use to maintain peak battery performance. The battery capacity may decline after 300 charging cycles.

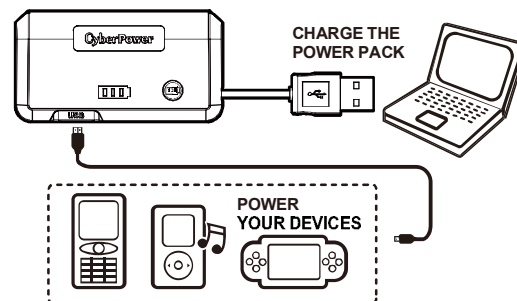

TROUBLE SHOOTING

Problem	Possible Cause	Solution
USB Battery Pack does not power the device.	The required power of device is over the 5 volt, 1 amp rating.	Check the power requirements of the device to be charged.
	The battery is out of power.	Charge the battery pack via a USB port.
USB Battery Pack does not charge.	Incorrect connection between charger and USB Battery Pack.	Re-attach the USB connector to a USB port.
	No power from the source.	Check that power is provided to the USB port.

SAFETY PRECAUTION

Before using the USB Battery Pack, please read the following warnings carefully. Use the product according to the procedures described in this manual. Failure to follow these safety precautions may result in fire, explosion, electrical shock or other dangers.

1. Do not disassemble this product, or any of its parts.
2. Store between 14 to 122°F (-10 to 50°C). Operate between 32 to 104°F (0 to 40°C).
3. Do not immerse this product in water or other liquids, as such use may result in fire or electrical shock. If water or other liquids enter the battery interior, unplug the product immediately from any attached power source or device.
4. Do not use this product with wet hands. Moisture in or on this product may result in electrical shock.
5. Do not expose this product to direct flame or leave it in an overheated condition, as the battery may explode.
6. Store this product in a cool and dry environment when not in use.
7. Do not puncture this product. Puncturing the battery may cause the release of harmful substances.
8. It is normal for the USB Battery Pack to become warm during charging.
9. Keep this product out of the reach of children. Ensure that all users read these warnings and instructions before using.
10. Please recycle USB Battery Pack in accordance with local environmental laws and regulations.

LEGAL NOTICES

FCC Part 15

This equipment has been tested and found to comply within the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- **Reorient or relocate the receiving antenna.**
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- **Consult the dealer or an experienced radio/TV technician for help.**

FCC WARNING

Changes or modifications not expressly approved by the party responsible for compliance with the FCC Rules could void the user's authority to operate this equipment.

LIMITED PRODUCT WARRANTY

CyberPower offers limited product warranty for the hardware of the USB Battery Pack and the product is free from material and manufacturing defects for one year. A reasonable purchase proof with date must be provided when submission. CyberPower's sole responsibility is to repair or replace the product if a material or manufacturing defect results in product failure during its normal use. The warranty is void if the product is damaged due to abuse, alteration, misuse, negligence, incorrect voltage supply, air/water pollution, accidents and natural disasters.

CyberPower Systems (USA), Inc.

4241 12th Avenue East, Suite 400, Shakopee, MN 55379, U.S.A.
TEL: (952) 403-9500 Toll-Free: (877) 297-6937
FAX: (952) 403-0009 E-mail: tech@cpsww.com
CPSww.com

© 2013 CyberPower Systems, Inc.
All rights reserved. Reproduction in whole or in part without permission is prohibited.