 
 
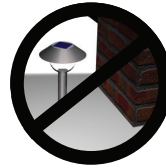 


SOLAR SONIC MOLE REPELLER SPIRAL SPIKES XPT-100

Review all information before using this product. Save this manual for future reference.



Do **NOT** place the solar panel in shaded areas

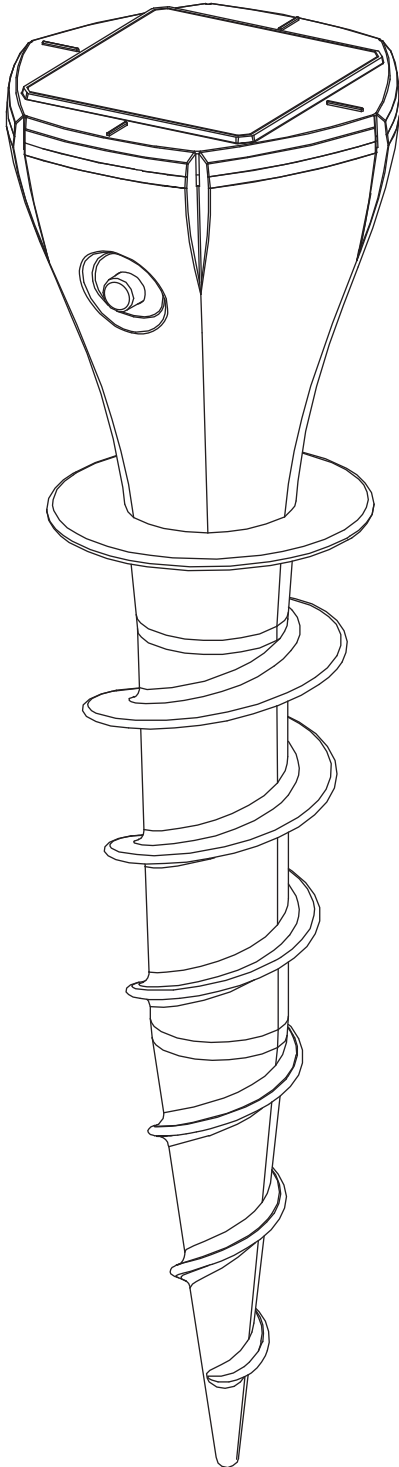

Clean the solar panel frequently

HOW IT WORKS

The solar panel converts solar energy into electricity and stores it in the rechargeable battery. How long the unit operates depends upon the location of the unit, weather conditions, and how much direct sunlight the solar panel is exposed to. Ensure the panel is switched to 'ON'.

This product simulates low-frequency seismic waves, to frighten snakes, gophers, moles and other ground or underground pests. The frequency of the vibration wave is repeatedly changes intermittently to prevent "adaptability" and "immunity" to pests.

CHOOSING THE RIGHT LOCATION

Select an outdoor location where the solar panel will receive at least 8 hours of full, direct sunlight each day. Do your best to ensure the solar panel will not become shaded by trees, shrubs or buildings throughout the day; locations that become shaded as well as unfavorable weather conditions such as clouds or extended periods of inclement weather reduce the charge of the battery and shortens operating time.

 
ABOUT THE BATTERY

The battery, like all rechargeable batteries, has a limited life span, and becomes less efficient with repeated charge/discharge cycles. As the capacity of the battery reduces, the hours of operation will lessen. The battery is not replaceable.

INSTALLATION/OPERATION

IMPORTANT: Do not press on the top of the unit during installation as doing so may permanently damage the solar panel and/or internal components. Always remove spikes from the ground when mowing grass.


1. Twist the product into the ground until the spiral tube is completely underground.
2. Press the ON/OFF button one time to turn the device on.

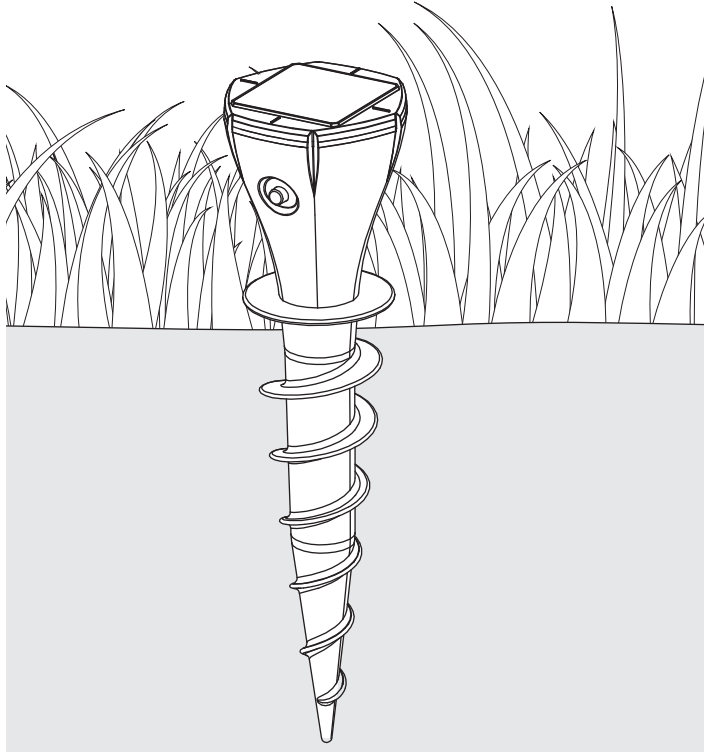


WORKING MODES

When the device is first turned on, it enters a 30-second test cycle, generating three different vibration modes. After the test cycle is complete, working modes will automatically cycle through each mode.

 
ALERT MODE: Continuous vibration for 5s, pause 115s

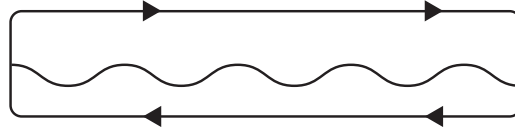

 RAPID MODE: Short vibration 5 times, pause 115s

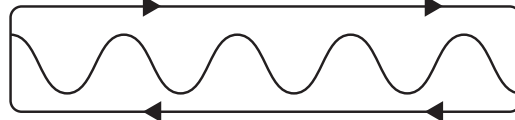

 SYMPHONY MODE: 2 short vibrations followed by one 3s vibration, pause 115s

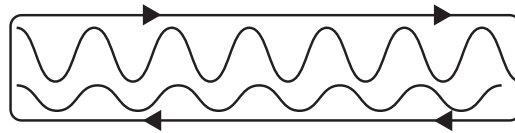

! IMPORTANT INFORMATION !

- For outdoor use only.
- Do not disassemble, repair or alter this unit in any way.
- Do not drop, as doing so can permanently damage internal components.
- Clean solar panels absorb more sunlight. Keep the solar panel clean by gently wiping it with a soft, damp cloth.
- Never use chemicals or abrasive materials to clean the unit.
- Store in a dry, warm, indoor location during freezing temperatures.
- Do not allow the unit to freeze. Freezing temperatures will damage the internal components.
- Turn the unit off before storing it.



This product contains electrical components and a rechargeable battery. When the unit can no longer be used, all components should be recycled in accordance with local laws and regulations. Do not dispose of this product with other household waste.

Any modification to the product or failure to follow recommended care will void the product warranty.

If you experience issues with operation or the product was damaged during shipping, please contact our customer service team through one of the methods mentioned at the top of page 1.

Please have the item number and order information ready to expedite response time.

! WARNING:

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.