Neo® Diverter Trim, Handicap Shower and Tub System (Valve not included)

### **MODELS:**

• SLV-1490-ADA: Includes VS-3010 2.5 GPM (9.5 L/min)

Flow Rate Hand Shower w/ 60 in.

• SLV-1490-ADA-E175: Includes VS-3010-E175 1.75 GPM

(6.6 L/min) Flow Rate Hand Shower

w/60 in. Hose

### **FEATURES:**

Diverter Shower Valve Trim • CPT-1401: • S-2540: Shower Arm and Flange

• VS-3010 or 2.5 GPM or E175 GPM Flow Rate Hand

VS-3010-E175: Shower w/ 60 in. Hose • VS-156: Pause/Trickle Adaptor • VS-153-ADA: 24 in. ADA Slide Bar

**Tub Spout** • S-1557:

### **VALVE OPTIONS:**

• CPV-PB-DV: Pressure Balance Diverter Valve

Sweat & Thread Connections

• CPV-PB-DV-PXC: Pressure Balance Diverter Valve

PEX F1807 Crimp Inlet Connections

• CPV-PB-DV-PXE: Pressure Balance Diverter Valve

PEX F1960 Cold-Expansion Inlet Connections

• CPV-T2-DV: Thermostatic Diverter Valve

Sweat & Thread Connections

• CPV-T2-DV-PXC: Thermostatic Diverter Valve

PEX F1807 Crimp Inlet Connections

• CPV-T2-DV-PXE: Thermostatic Diverter Valve

PEX F1960 Cold-Expansion Inlet Connections

# STOCK FINISHES:



### **STANDARDS:**

- ASME A112.18.1/CSA B125.1 certified
- ADA compliant

### **WARRANTY:**

Visit www.speakman.com for full product warranty information


• See Speakman.com For Warranty Information





Information continues on next page


Neo® Diverter Trim, Handicap Shower and Tub System (Valve not included)

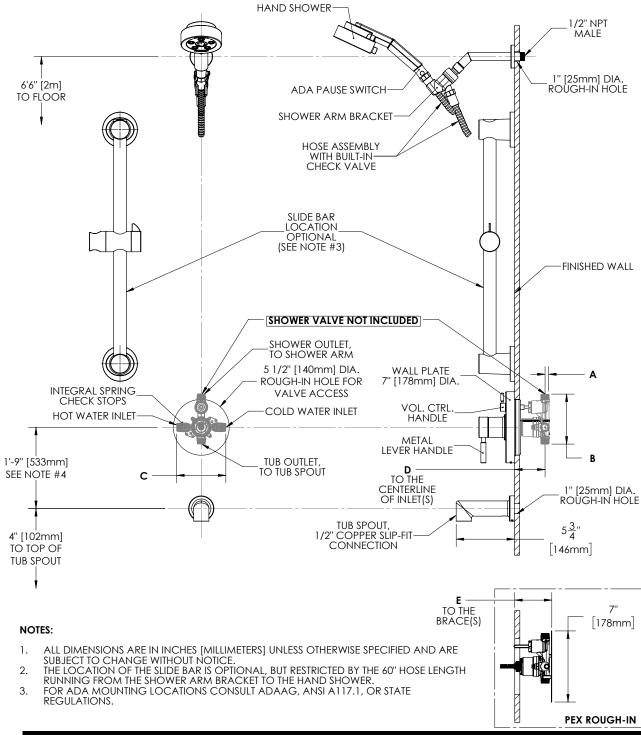


DIMENSION	CPV-PB-DV	CPV-T2-DV	CPV-PB-DV-PXC	CPV-PB-DV-PXE	CPV-T2-DV-PXC	CPV-T2-DV-PXE
Α	7/16" (11mm)	9/16" (14mm)	7/16" (11mm)		9/16" (14mm)	
В	4-15/16" (125mm)	5-1/16" (128mm)	4-15/16" (125mm)		5-1/16" (128mm)	
С	4-13/16" (123mm)	5-7/8" (150mm)	4-13/16" (123mm)		5-7/8" (150mm)	
D	2-1/2" (63mm) MIN TO 3-1/2" (89mm) MAX					
E			3-1/8" (79mm) MIN TO	4-1/8" (105mm) MAX	3-3/16" (81mm) MIN TC	) 4-3/16" (106mm) MAX

F: 800-977-2747

W: WWW.SPEAKMAN.COM

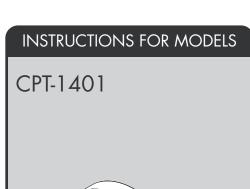


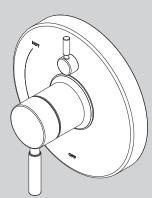

### NEED HELP?

For additional assistance or service please contact:
 
### **SPEAKMAN®**




customerservice@speakman.com



www.speakman.com

92-CPT-1401-01

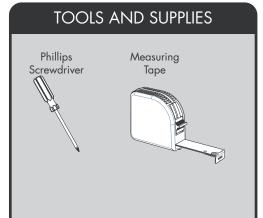

# **IMPORTANT**

- Do not over-tighten any connections or damage may occur.
- Be sure to read instructions thoroughly before
- Be sure to have properly adjusted the Temperature Limiting Stop (TLS) as per the Valve Installation Instructions before installing Valve Trim.

### SAFETY TIPS

0

Cover your drain to prevent loss of parts.


### MAINTENANCE

Your new Speakman Product is designed for years of trouble-free performance. Keep it looking new by cleaning it periodically with a soft cloth. The use of harsh chemicals and abrasives on any of the Speakman custom finish products may damage the finish and void the product warranty. Please be sure to only use approved cleaners. Please contact Speakman for any clarification of acceptable cleaners


### WARRANTY


0

Warranty information can be found at: www.speakman.com

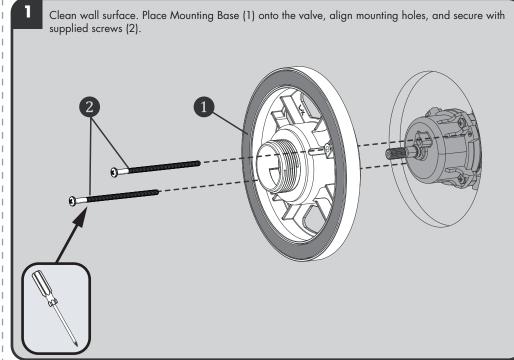


Verify the position of the Spindle within the Mounting Plate, as shown below. If the end of the Spindle extends beyond the Mounting Plate, then use the Shallow Mount Adapter. If the end of the Spindle is flush to, or is within the Mounting Plate, then use the Deep Mount Adapter.

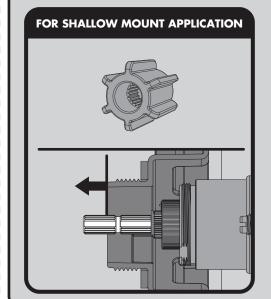


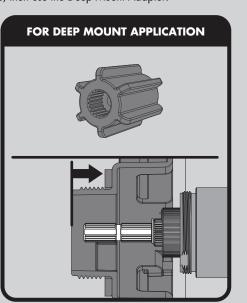



Confirm that Valve is in the "Off" position. Place appropriate Connector (1) on to the Spindle of the Valve, making sure to orient the Connector so that one set of Splines are in a perfectly vertical position. Secure Connector with 8-32 screw provided (2).

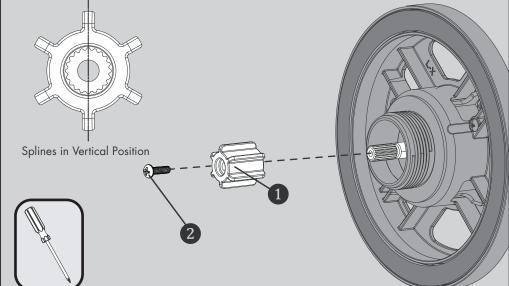

Place Wall Plate (1) on Mounting Base. Take care to orient the Wall Plate as shown below. Verify the Diverter Valve Stem is in the OFF (vertical) position. Align the Diverter Drive Tube (2) on the Wall Plate to the Stem (3) of the Diverter Valve. \* VIEW FROM BACK OF WALL PLATE

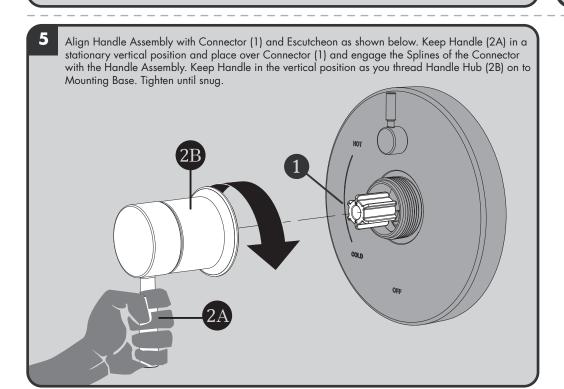


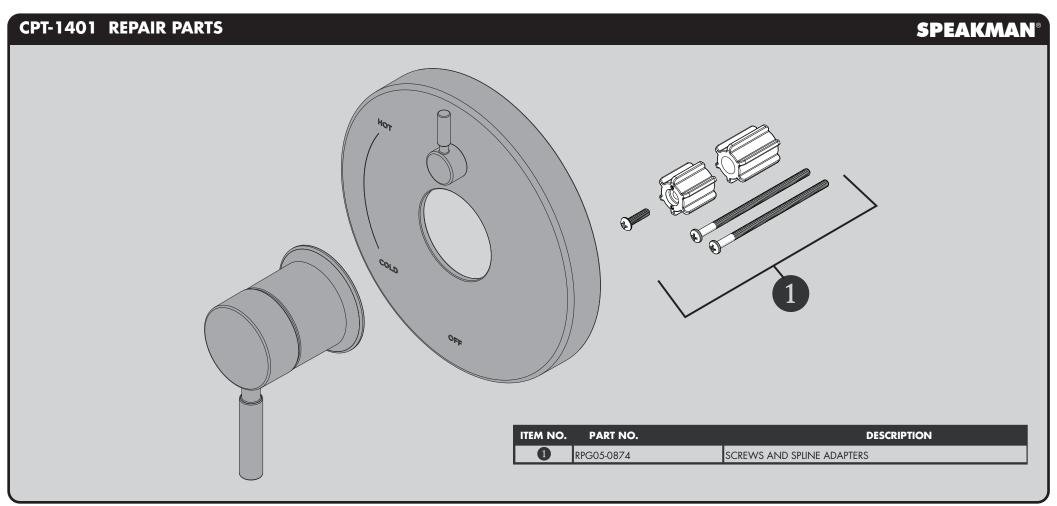

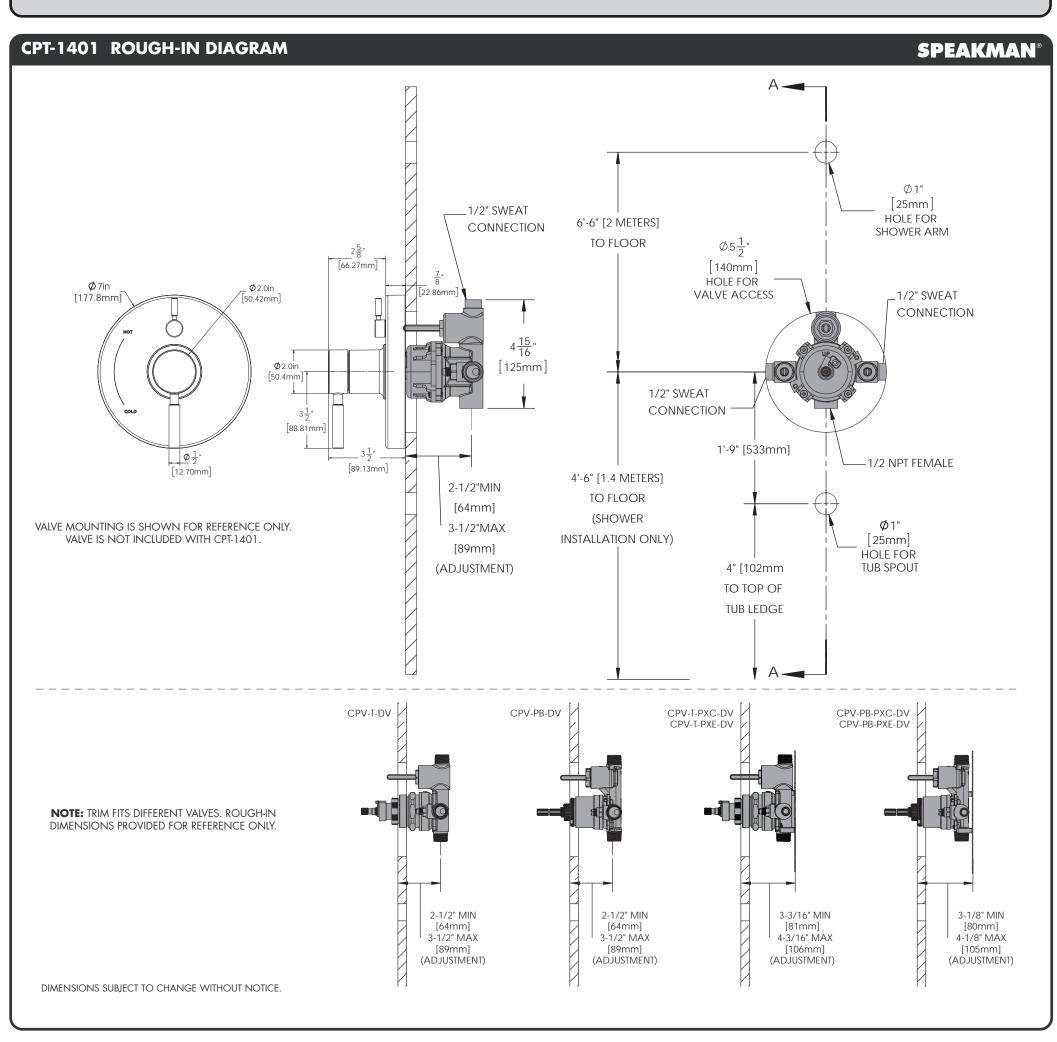

### INSTRUCTIONS FOR MODELS

VS-3010 VS-3010-E2 VS-3010-E175

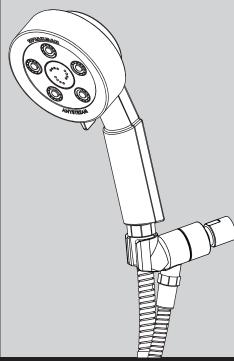

### **NEED HELP?**

For additional assistance or service please contact:

**SPEAKMAN®** Company 400 Anchor Mill Road New Castle, DE 19720



Q<sup>27</sup> 800-537-2107



customerservice@speakman.com



www.speakman.com

92-VS-3010-02

### **TOOLS AND SUPPLIES**

Thread Seal Tape (included)



Adjustable Wrench



## **IMPORTANT**



Be sure to read instructions thoroughly before beginning installation. Do not overtighten any connections or damage may occur. This hand shower has an optimal operating range of 20-80 psi.

### SAFETY TIPS

0

Cover your drain to prevent loss of parts.

### MAINTENANCE

0

Periodic cleaning using a mild soap and warm water will help keep your Hand Shower's appearance in its

For best results, dry immediately with a soft, clean cloth. <u>DO NOT USE</u> harsh and/or abrasive cleaners.

On CHROME PLATED HAND SHOWERS, a two (2) part white vinegar, one (1) part water solution can be used to break down excessive mineral deposits on the sprays. Let the hand shower soak in the solution for about ½ hour then rinse thoroughly. Brush off any remaining mineral deposits if necessary.

 $\underline{\text{DO NOT USE}}$  the vinegar/water treatment on any finish other than Chrome.

To reduce mineral build-up, turn the handle to FLOOD position to let the water drain out after every use.

### WARRANTY

0


Additional warranty information can be found at: www.speakman.com




Ensure Hose Washer is inserted inside connector to avoid leaks. Thread remaining end of Hose to base of Hand Shower. Hand tighten.



Thread Bracket onto shower arm by turning it in a clockwise direction. Tighten with adjustable wrench.

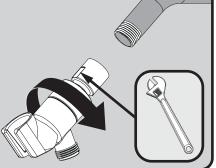


Place Hand Shower into Bracket. Turn on water supplies and check for leaks.

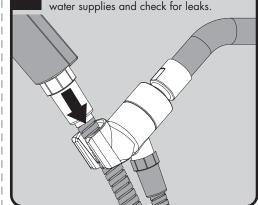


Ensure Hose Washer is inserted inside connector to avoid leaks. Thread Hose End with Label to the outlet port of Bracket. Hand tighten.
WATER WILL NOT FLOW
THROUGH THE HOSE IF THE WRONG SIDE IS CONNECTED.

 **NOTE:** Label around hose shows this end assembles to water supply. Remove label before installation.





# **ROUGH IN DIMENSIONS** 1/2"-14 NPSM FEMALE THREADED INLET MARKED Ø4" 2-1/4"\_\_ "ATTACH THIS CHECK [102mm] [58mm] VALVE END TO THE WATER SUPPLY" 61" 165mm 9-1/2" [240mm] -1/2"-14 NPSM FEMALE 1/2-14 NPSM THREADED THREADED OUTLET INLET [102mm] 1/2-14 NPT THREADED-Model: VS-3010 INLET Max. Flow Rate: 2.5 gpm (9.5L/min) Min. Flow Rate: 2.0 gpm (7.6 L/min) @ 45psi FOR USE WITH AUTOMATIC COMPENSATING VALVES RATED AT 7.6 L/MIN (2.0 GPM) OR LESS. Model: VS-3010-E2 1/2-14 NPSM THREADED Max. Flow Rate: 2.0 gpm (7.6 L/min) Min. Flow Rate: 1.5 gpm (5.7 L/min) @ 45psi FOR USE WITH AUTOMATIC COMPENSATING VALVES RATED AT 6.6 L/MIN (1.75 GPM) OR LESS. OUTLET Model: VS-3010-E175 Max. Flow Rate: 1.75 gpm (6.6 L/min) Min. Flow Rate: 1.3 gpm (4.9 L/min) @ 45psi FOR USE WITH AUTOMATIC COMPENSATING VALVES RATED AT 5.7 L/MIN (1.5 GPM) OR LESS.

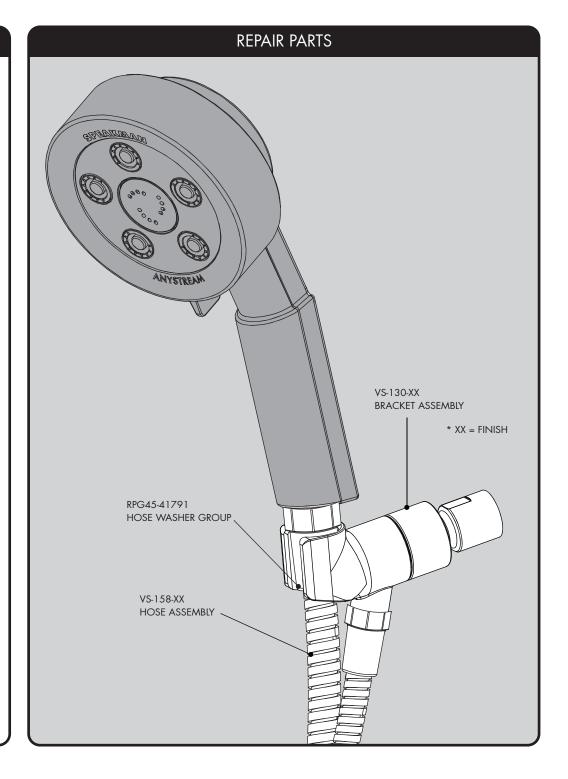



VS-156



### NEED HELP?

For additional assistance or service please contact:

**SPEAKMAN®** Company 400 Anchor Mill Road New Castle, DE 19720



customerservice@speakman.com



92-VS-156-02

### TOOLS AND SUPPLIES


Thread Seal Tape




### **SAFETY TIPS**

Cover your drain to prevent loss of parts.

Turn off water supply. Remove hose from existing Hand Held Shower Head.

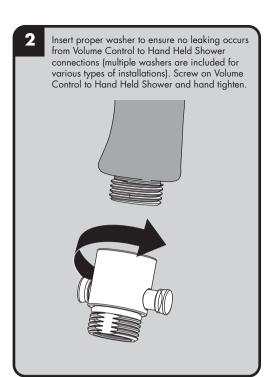

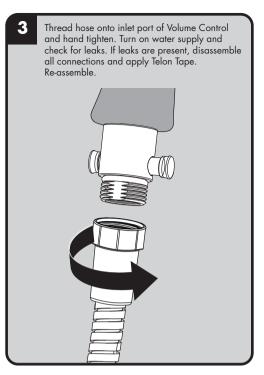

### **IMPORTANT**

- Do not over-tighten any connections or damage may occur.
- Be sure to read instructions thoroughly before beginning installation.

### MAINTENANCE

0

Your new Speakman Product is designed for years of trouble-free performance. Keep it looking new by cleaning it periodically with a soft cloth. The use of harsh chemicals and abrasives on any of the Speakman custom finish products may damage the finish and void the product warranty. Please be sure to only use approved cleaners. Please contact Speakman for any clarification of acceptable cleaners.

### WARRANTY

•

0


Additional warranty information can be found at: www.speakman.com

# VS-156 ROUGH-IN DIAGRAM SPEAKMAN® 1/2" NPSM FEMALE THREAD 96" (24.4mm) 1.36" (34.5mm) 1/2" NPSM MALE THREAD



### **INSTRUCTIONS FOR MODELS**

**VS-130** 

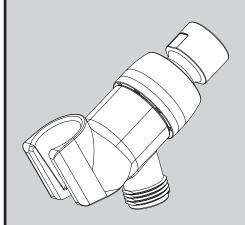

### **NEED HELP?**

For additional assistance or service please contact:

**SPEAKMAN®** Company 400 Anchor Mill Road New Castle, DE 19720



£ 800-537-2107



customerservice@speakman.com



www.speakman.com

92-VS-130-01

### **TOOLS AND SUPPLIES**

Thread Seal Tape (included)



Adjustable Wrench



# $\triangle$

### **IMPORTANT**



Be sure to read instructions thoroughly before beginning installation. Do not overtighten any connections or damage may occur. This bracket assembly has an optimal operating range of 20-80 psi.

### SAFETY TIPS

0

Cover your drain to prevent loss of parts.

### MAINTENANCE

0

Periodic cleaning using a mild soap and warm water will help keep your Bracket's appearance in its original

For best results, dry immediately with a soft, clean cloth. <u>DO NOT USE</u> harsh and/or abrasive cleaners.

On CHROME PLATED BRACKETS, a two (2) part white vinegar, one (1) part water solution can be used to break down excessive mineral deposits. Let the bracket soak in the solution for about 1/2 hour then rinse thoroughly. Brush off any remaining mineral deposits

**DO NOT USE** the vinegar/water treatment on any finish other than Chrome.


### WARRANTY


0


Additional warranty information can be found at: www.speakman.com





Ensure Hose Washer is inserted inside connector to avoid leaks. Thread remaining end of Hose to base of Hand Shower. Hand tighten. Note: Hand Shower and Hose are not included.

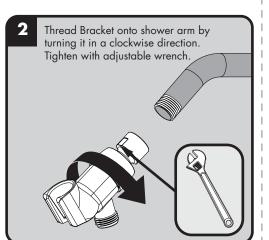


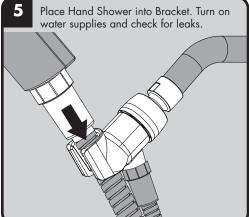

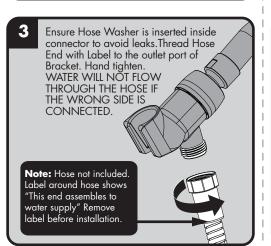

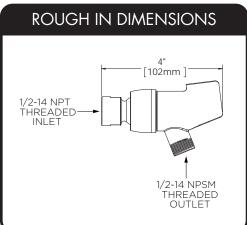

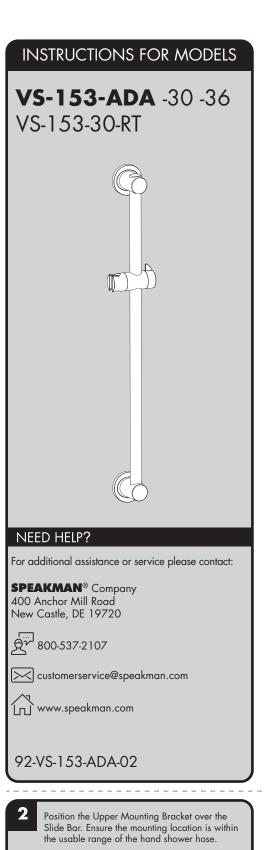

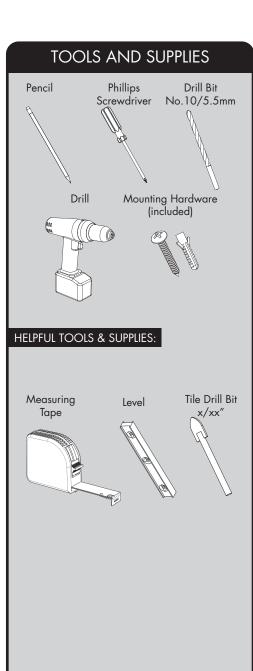






If mounting directly to wood stud or

a wood stud behind drywall, proceed


**to Step 6.** If mounting to tile or masonry wall, Drill holes (x4) in the marked locations using a No. 10 (0.1935 inches/5.5 mm) masonry drill

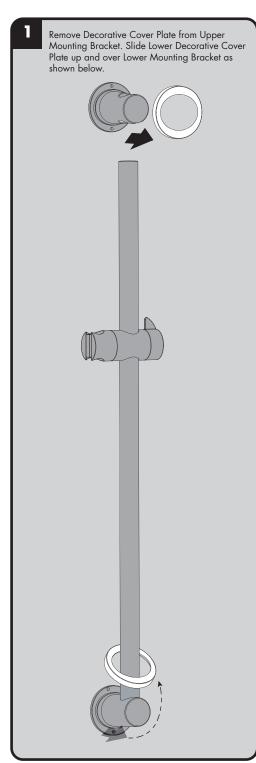


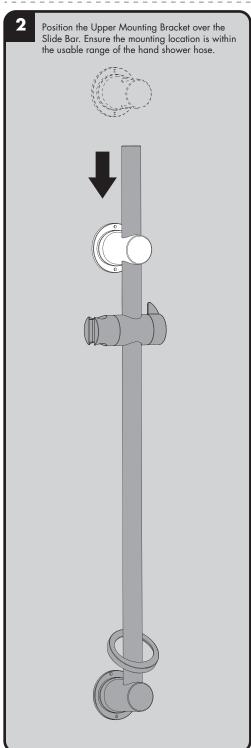


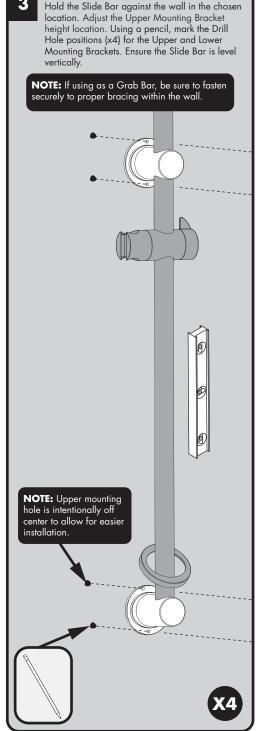



\_\_\_\_\_\_

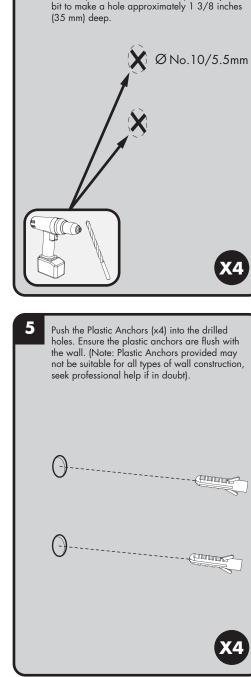

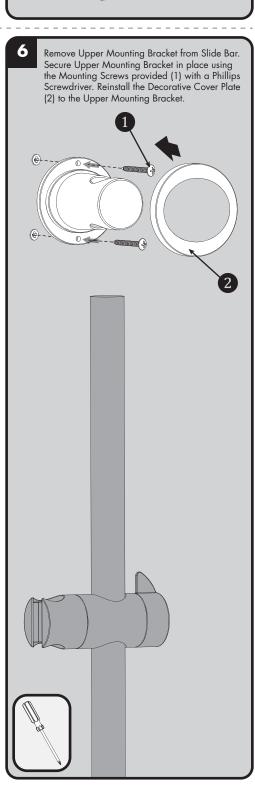

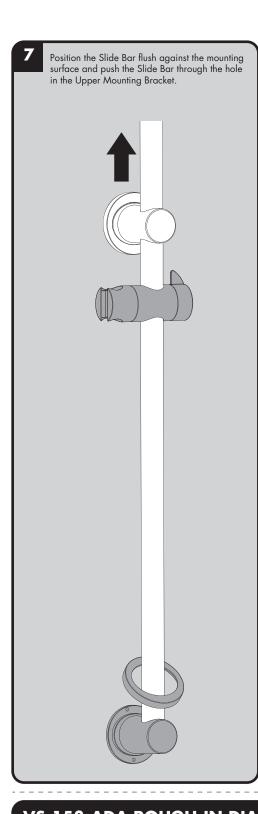

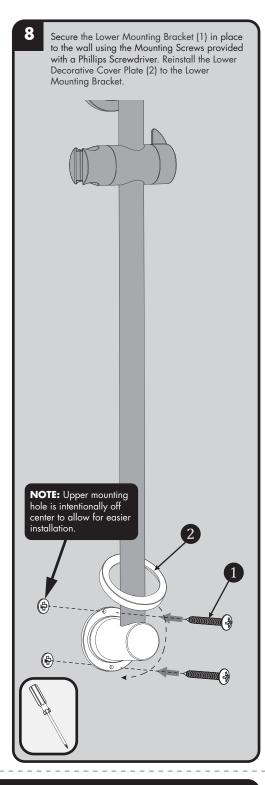

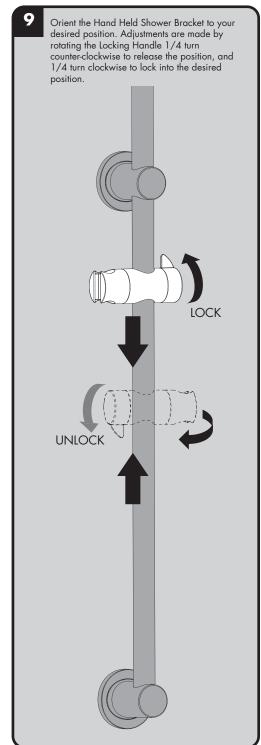

# **VS-153-ADA ROUGH-IN DIAGRAM**


# **SPEAKMAN®**


### **NOTES:**


### **COMPLIANCE:**

# ADA COMPLIANT

- Meets the ANSI standard 250 lbs. pull-test for grab bars and ADA lever handle for adjusting slide bar.

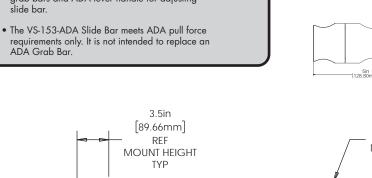

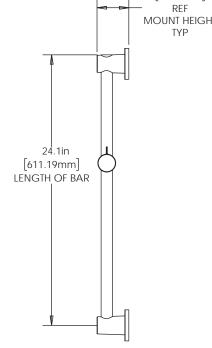

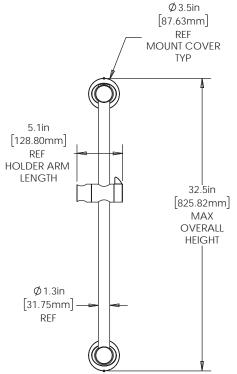

ø1.34in [33.91mm]

DIMENSIONS SUBJECT TO CHANGE WITHOUT NOTICE.


# VS-153-ADA-30 / VS-153-30-RT ROUGH-IN DIAGRAM SPEAKMAN®


### **NOTES:**


### COMPLIANCE:

# ADA COMPLIANT


- Meets the ANSI standard 250 lbs. pull-test for grab bars and ADA lever handle for adjusting slide bar.
- The VS-153-ADA Slide Bar meets ADA pull force requirements only. It is not intended to replace an ADA Grab Bar.

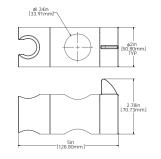


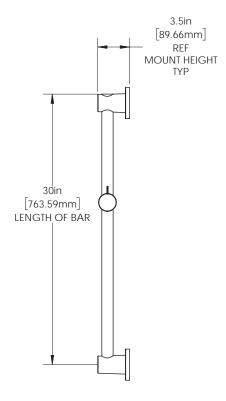

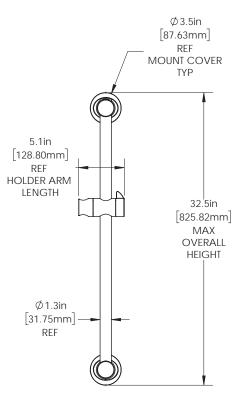


DIMENSIONS SUBJECT TO CHANGE WITHOUT NOTICE.

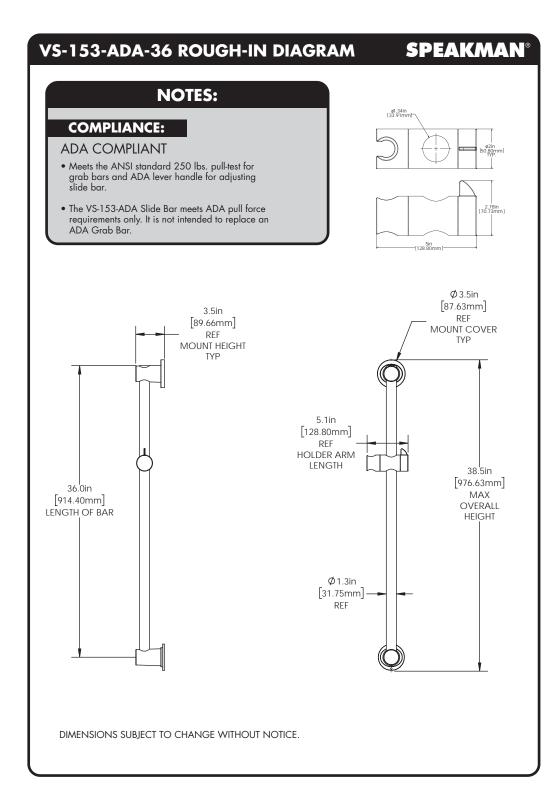

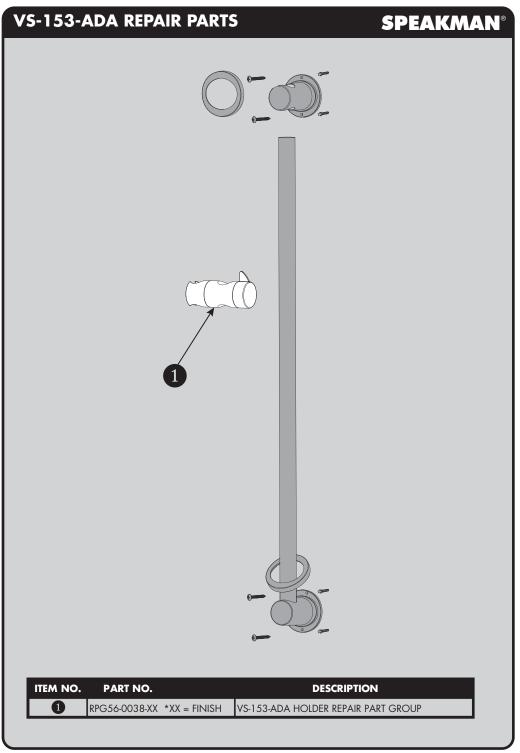



S-1557

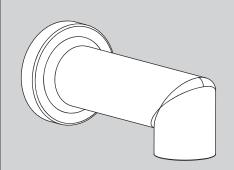


### **NEED HELP?**

For additional assistance or service please contact:

 **SPEAKMAN®** Company 400 Anchor Mill Road New Castle, DE 19720







92-S-1557-03

### TOOLS AND SUPPLIES

Phillips Screwdriver

### **HELPFUL TOOLS & SUPPLIES:**

Tubing Hacksaw Safety
Cutter Glasses



### **IMPORTANT**



- Do not over-tighten any connections or damage may occur.
- Be sure to read instructions thoroughly before beginning installation.

### SAFETY TIPS

**O** 

Cover your drain to prevent loss of parts. Be sure to wear eye protection while cutting pipe.

### **MAINTENANCE**





Your new Speakman product is designed for years of trouble-free performance. Keep it looking new by cleaning it periodically with a soft cloth. Avoid abrasive cleaners, steel wool, and harsh chemicals as these will dull the finish and void your warranty.

### WARRANTY


0

Additional warranty information can be found at: www.speakman.com

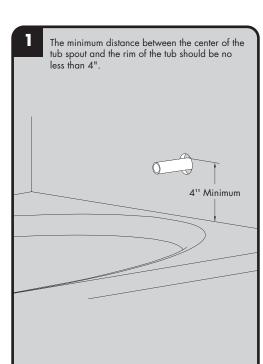

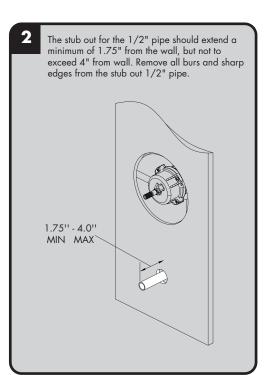

Slide Spout (1) over exposed stub out pipe until flush to wall. Center the Spout (1) on the wall and tighten Set Screw (2) from underneath with a Phillips Screwdriver.

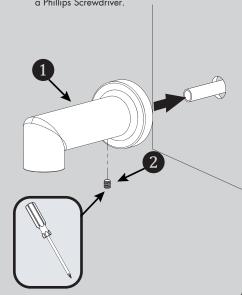

### **ROUGH-IN DIAGRAM**

