


# Computer Desk

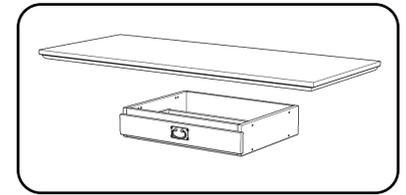


Top Unit

## IMPORTANT


Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.


Do not use power tools above 8 volts to assemble.

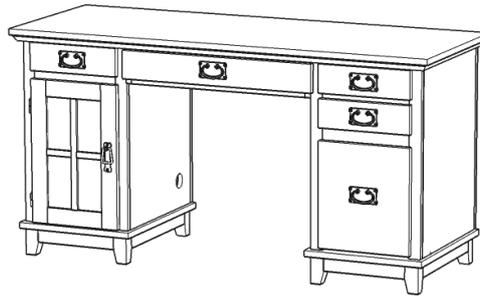


## Part List

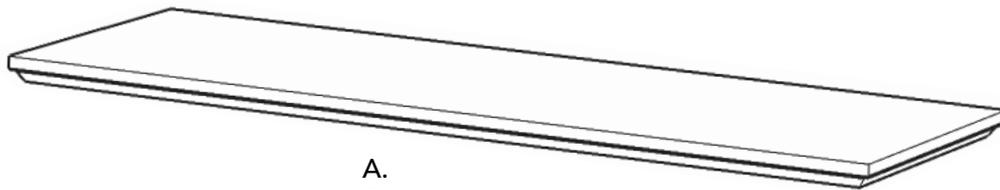


A.  
Top  
1 pc.

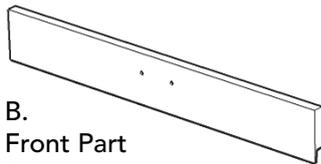


B.  
Front Part  
1 pc.

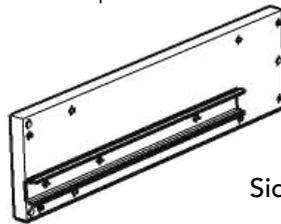


C2.  
Side Part  
1 pc.

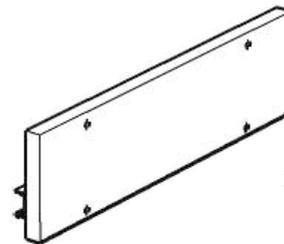


C3.  
Side Part  
1 pc.

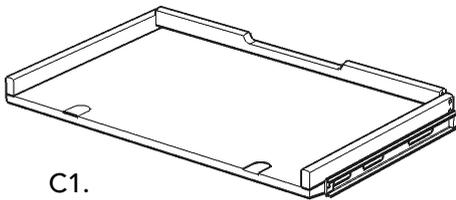

C1.  
Base  
1 pc.

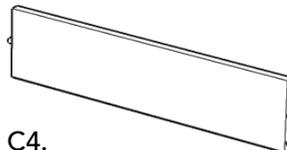

C4.  
Back Part  
1 pc.

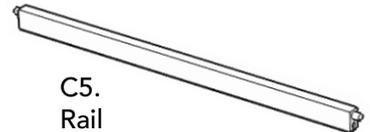

C5.  
Rail  
2 pcs.

## Hardware List



 
Hex Wrench  
1 pc.



Small Hex Wrench  
1 pc.




M3.5x10  
Wood Screw  
6 pcs. (+1 extra)



M6x30  
Head Cap Bolt  
24 pcs. (+1 extra)



M4x15  
Machine Screw  
2 pcs.

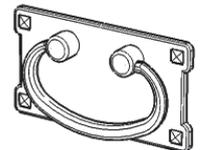

Drawer  
Pull Handle  
1 pc.

Cartons 88 5180 181, 182 are also needed for assembly.

Tool(s) required for assembly: Phillips screwdriver, Level

Home Styles Customer Service: [www.homestyles-furniture.com](http://www.homestyles-furniture.com),  
[servicedesk@homestyles-furniture.com](mailto:servicedesk@homestyles-furniture.com), 888-680-7460, 877-831-0319

## Assembly Instructions 2/2




### IMPORTANT

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- The unit must be level to work properly. Use the included adjustable levelers to level.
- Keep Hex Wrench in a safe place as the bolts may need to be tightened up in the future.

### STEP 1


Attach Rails (C5) and Back Part (C4) to Side Part (C2) with Head Cap Bolts. (See Figure 1)

Attach Side Part (C3) to unit with Head Cap Bolts.

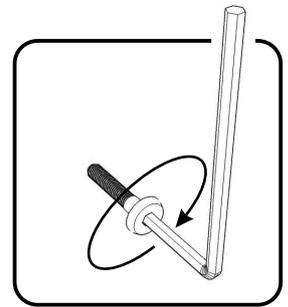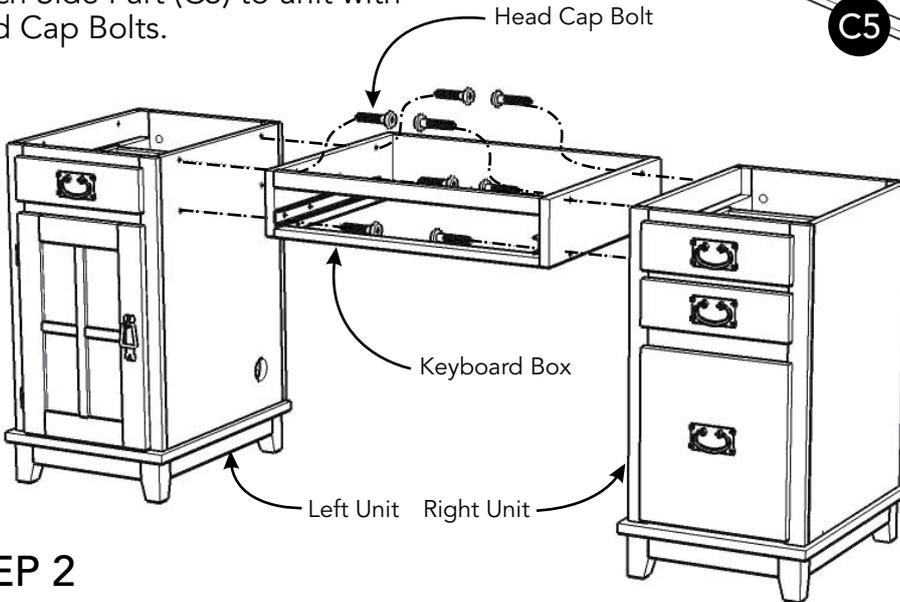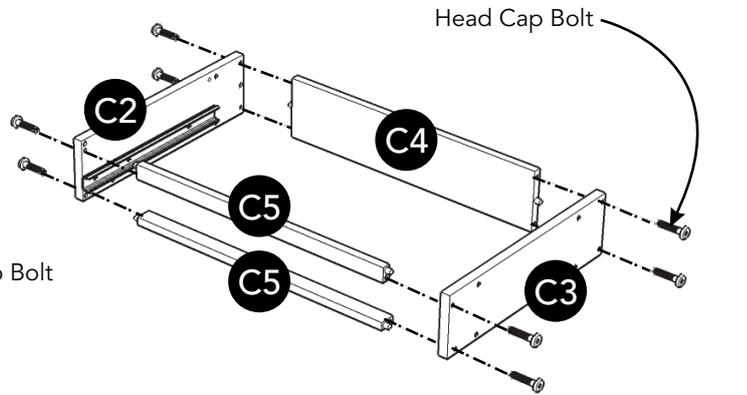

### STEP 2


Attach Left Unit and Right Unit to Keyboard Box with Head Cap Bolts.

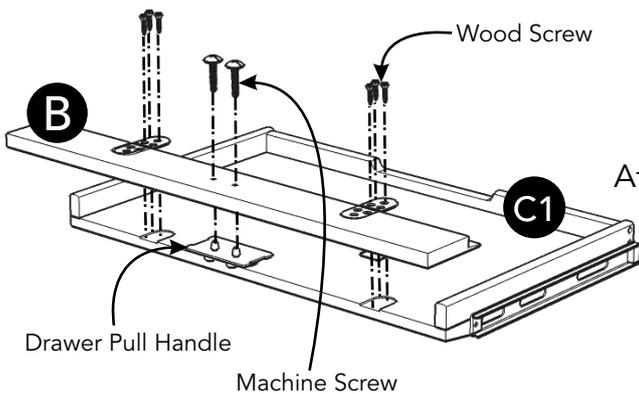

### STEP 3

Attach Front Part (B) to Base (C1) with Wood Screws.

Attach Drawer Pull Handle to unit with Machine Screws.

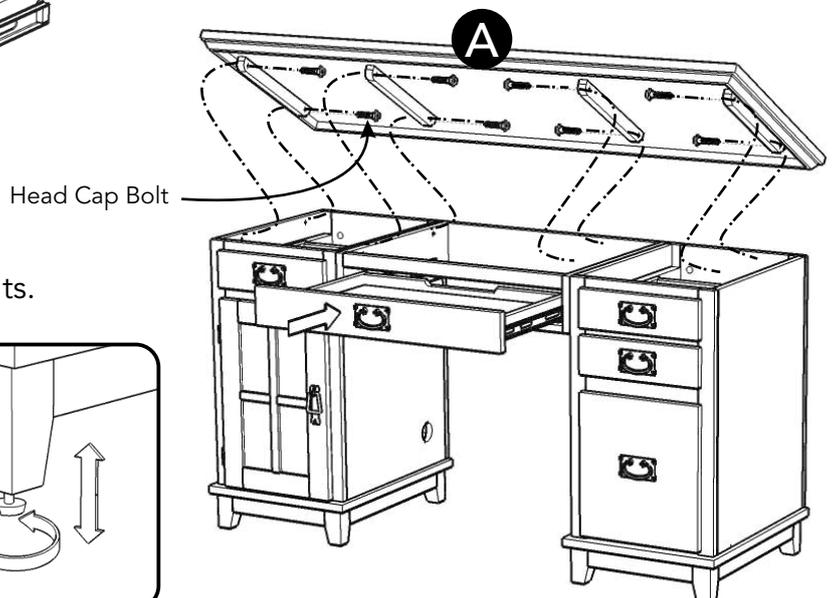


### STEP 4

Attach Top (A) to unit with Head Cap Bolts.

Slide keyboard into place.

Level unit by adjusting the adjustable levelers on the bottom of legs. (See Figure 2)

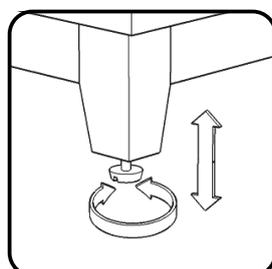

# CARE INSTRUCTIONS

## NEVER

allow liquids to remain on furniture.  
Absorption causes parts to warp  
and split and finishes to delaminate.

## NEVER

use glass cleaners on  
finished furniture. Ammonia  
chemically attacks the finish.



Do not use power tools  
above 8 volts to assemble.  
**PREVENT  
CRACKING**



Do not place  
in direct sunlight.  
**PREVENT  
FADING**



Do not write  
directly on surface.  
**PREVENT  
MARKING**



Do not place hot  
objects on surface.  
**PREVENT  
FINISH DAMAGE**



Do not use rubber  
based placemats.  
**PREVENT  
DISCOLORING**



Do not use commercial  
waxes and polishes.  
**PREVENT  
YELLOWING**

## CLEAN

with a soft cloth moistened  
in lukewarm soap and water.  
Buff with a dry clean cloth.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

[www.homestyles-furniture.com/customer-service/replacement-parts](http://www.homestyles-furniture.com/customer-service/replacement-parts)

Home Styles Customer Service: [www.homestyles-furniture.com](http://www.homestyles-furniture.com),  
[servicedesk@homestyles-furniture.com](mailto:servicedesk@homestyles-furniture.com), 888-680-7460, 877-831-0319