

ATTACHMENT

Be sure to
read the
manual



Part No.	Qty.	Description
1	1	Filter
2	1	Seal
3	1	Bracket

1. Remove the old filter.
2. Install the new filter.
3. Tighten the seal.

1. Turn the power off.
2. Disconnect the power cord.



3. Reconnect the power cord.
4. Turn the power on.

5. Check the operation.
6. If the problem persists, contact the service center.