
## Warm Shaker / Norfolk / Lexington

Coffee Table

Model # AXWSH001-GR

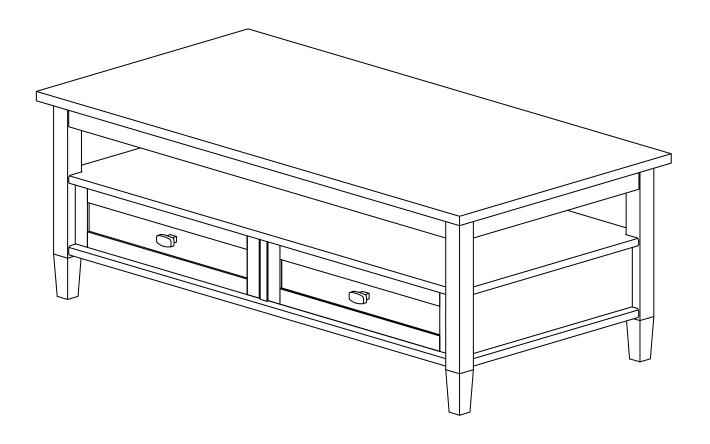

brooklyn<u>+ max</u>





### It's time to register your product warranty.

It's quick and easy. And you'll be happy you did.



- ✓ Activate your 1-year warranty
- ✓ Automatic entry to win a \$500 gift certificate
- ✓ Earn instant rewards and save



 
simpli-home.com/product-registration

### Review your product and collect rewards!

Thank you for your purchase! We hope you enjoy it. We'd love your feedback. Please share a review and get instant rewards!









### Share photos and get your cash back!



Send us images or share them on social and qualify for instant rewards. You may even receive store credit on your entire purchase!





simpli-home.com/share-images

#### **For Fastest Customer Service:**



- 1. Open your phone's camera.
- 2. Point your phone's camera at the QR code to scan.
- 3. Click on the pop up.
- 4. You'll be taken to our customer service page.
- 5. Fill the form with your order information and issue.
- 6. Submit form.
- 7. A customer service associate will contact you.

#### Other ways to contact us...



**Email Us** 

customerservice@simpli-home.com



**Visit Us** 

Visit our site directly at www.simpli-home.com



Call Us

1-866-518-0120 Monday to Friday 9am to 5pm EST

\*If you've purchased from a retailer and you wish to return the product, please contact the retailer directly.

**IMPORTANT:** Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

### **Safety Information**

Identify all the parts and hardware. Do not discard of the packaging until you have checked that you have all the parts and hardware required. Hardware package may have spare parts.

**WARNING:** This item contains small parts which can be swallowed by children and pets. Keep children and pets away during assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets.

We recommend that you assemble this unit on a carpeted floor to avoid scratches. If using power tools, set the tool to low torque to avoid damage.

May require 2 people for ease of assembly.

### **Care & Maintenance**

#### This furniture is designed for indoor use.

Perhaps the greatest environmental damage to wood furniture comes from wide swings in relative humidity (RH) in our homes. Wood absorbs and desorbs water as relative humidity rises and falls, and in doing so it swells and shrinks. Making matters worse, it expands and contracts unequally along different grain directions. As humidity changes, the components of wooden objects are continually pushing and pulling against each other. This pressure often results in parts of furniture no longer fitting together closely or becoming distorted or breaking from their own internal stresses.

The response to relative humidity changes begins with determining the annual average RH for your particular space. Then try to keep the RH in the space where your furniture is as close to that average as possible, generally within about 10% up or down. De-humidify in the summer and humidify in the winter.

Be aware that raising the temperature lowers the humidity and vice versa. Thus, modern heating systems, which can drive down interior RH in the winter, almost invariably cause problems for furniture. To counteract their effect, you can either modify the RH by keeping furniture containing spaces cooler in the winter or most importantly, have a good working humidifier for your home. A humidistat automatically works to balance the humidity in your home so it is constant. Dry indoor air can suck enough moisture from its surroundings to do permanent damage to wood, causing it to crack or split.

Remember, that not all woods are created equal. Two factors that help determine how rapidly a wood will lose moisture are pore size and surface hardness. A piece made from a dense and hard wood will dry less rapidly than pieces made from softer woods.


Furniture that is sealed and lacquered will lose moisture more slowly than an unfinished piece while pieces with veneer finishes are not only stronger but lose moisture more slowly than other finishes.

#### To help protect your wood furniture, take these steps:

- Use a humidifier, preferably one with an automatic control system that can sense the humidity level and adjust itself accordingly
- Don't over-humidify; that can damage wood by causing it to expand and contract
- Keep furniture out of direct sunlight, which can cause it to dry out, crack and warp
- If you can avoid it, don't put furniture near heating vents; if you can't, keep the item 3 to 4 inches away from the wall, giving the heat and air space to circulate
- Dust with soft dry cloth
- Do not use liquid or aerosol products
- To avoid marking, do not place rubber on surface (foot pads, etc.)
- For soil build-up, wipe with damp cloth & dry
- Do not use abrasive cleaners


## Model # AXWSH001-GR **Pre-Assembly Information Part Description** BR $\mathsf{BL}$ TOP **LEFT SIDE** RIGHT SIDE QTY 1 QTY 1 QTY 1 **BOTTOM SHELF BACK** TOP SHELF QTY 1 QTY 1 QTY 1 ΗL G DRAWER FRONT LEFT DRAWER SIDE CENTRE DRAWER QTY 1 QTY 2 QTY 2 $\mathsf{HR}$ RIGHT DRAWER SIDE DRAWER BACK DRAWER BOTTOM QTY 2 QTY 2 QTY 2

## Model # AXWSH001-GR **Pre-Assembly Information Hardware Description** 3 ALLEN KEY SCREW CAM LOCK PIN ALLEN KEY M6 X 30 mm CAM LOCK QTY 1 QTY 26 QTY 18 SETS 5 Required-Flathead screwdriver Phillips screwdriver WOOD DOWEL HANDLE Rubber mallet Ø8 X 30 mm M4X25 mm **Not Included** QTY 4 SETS QTY 6

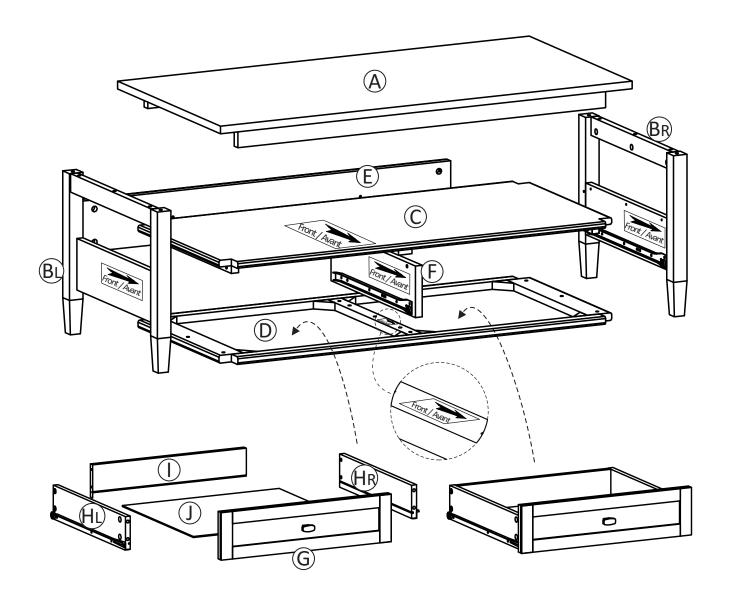


#### **Assembly**

### Model # AXWSH001-GR

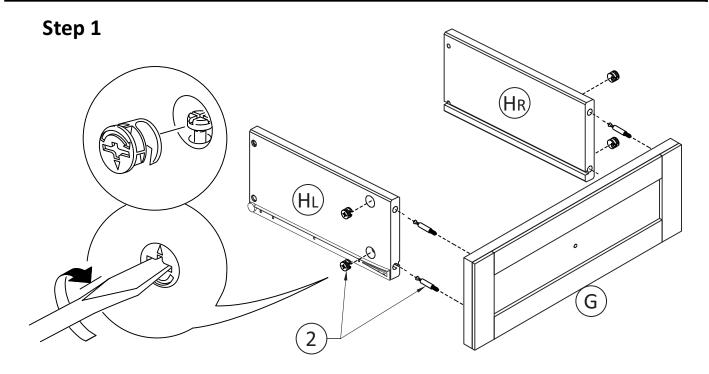


- 1. Attach 4 Cam Lock Pins(2) to back of Drawer Front (G).
- 2. Align Cam Lock Pins with guide holes and attach Drawer Sides (HL), (HR).
- 3. Insert 2 Cam Locks (2) into guide holes on each Drawer Side (HL), (HR).
- 4. Use flathead screwdriver to secure Cam Locks.

Step 2

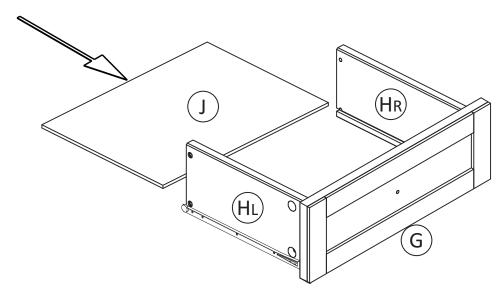


1. Slide Drawer Bottom (J) firmly into slots on Drawer Sides (HL), (HR) and Drawer Front (G).


Step 3

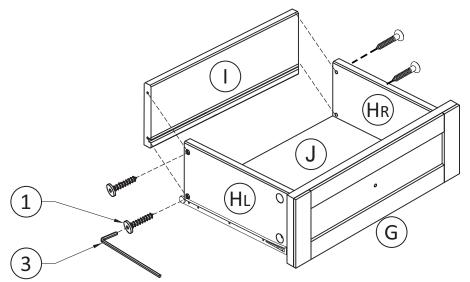

 - 1. Align Drawer Back ( ) with Drawer Bottom ( ) and press firmly into slot.
- 2. Attach back using 2 Allen Key Screws 1) through guide holes on each side.
- 3. Use Allen key 3 to tighten. Do not over tighten.



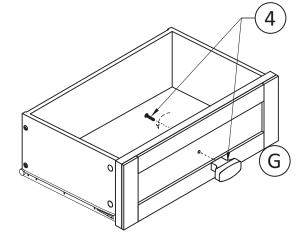





**NOTE**: The screwdriver is not included in the hardware pack.

1. Use Phillips Screwdriver to attach Handle 4 to Drawer Front G.

#### Repeat Step 1-4 for the second drawer.

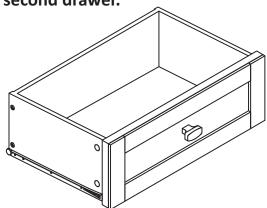


Step 5

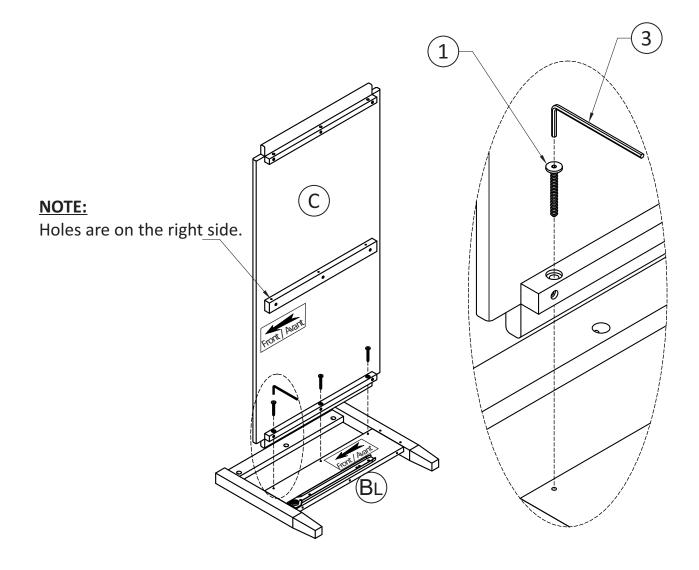


1. Attach Top Shelf © to Left Side BL using Allen Key Screws 1 through guide holes.

Step 6

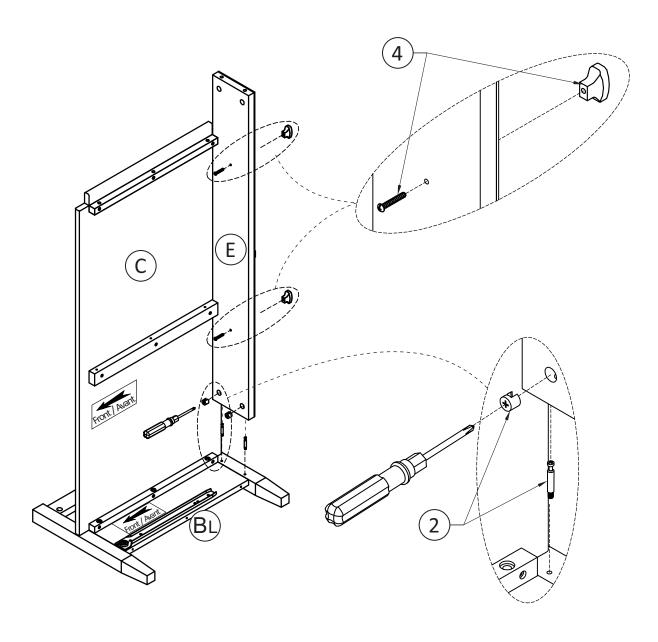


- 1. Attach 2 Cam Lock Pins (2) to Left Side (BL) using pre-drilled holes.
- 2. Align and insert Cam lock Pins on Left Side (BL) into guide holes on Back (E).
- 3. Use a flathead screwdriver tighten Cam Locks into Pins.
- 4. Use Phillips screwdriver to attach Handle 4 to Back (E).

Step 7

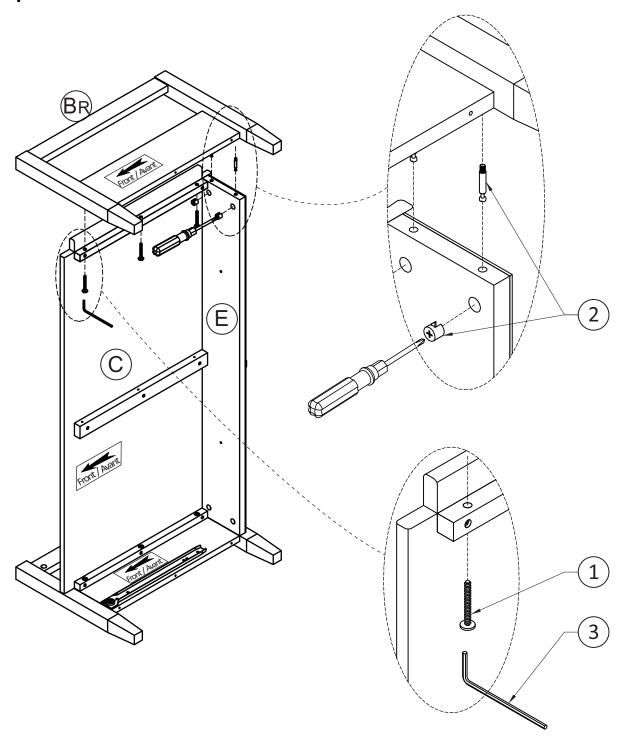


1. To attach Right Side BR to Top Shelf C and Back E, repeat steps 5-6.

Step 8

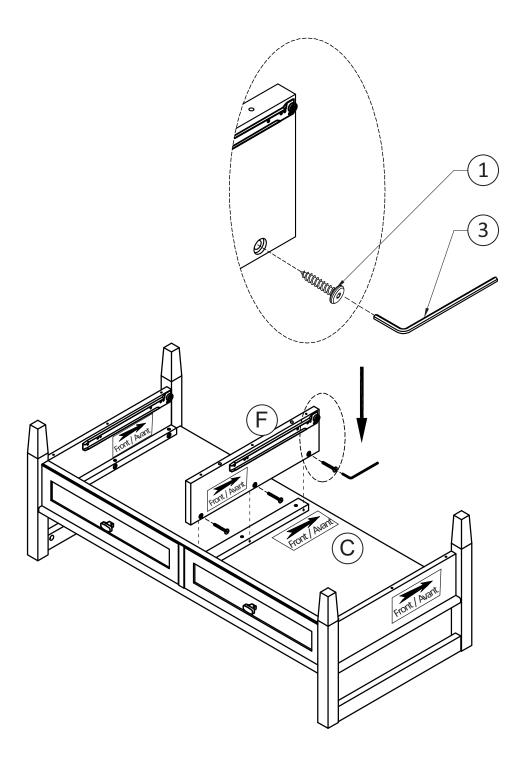


1. Attach Centre Drawer F to Top Shelf C using Allen Key Screws 1 through guide holes.

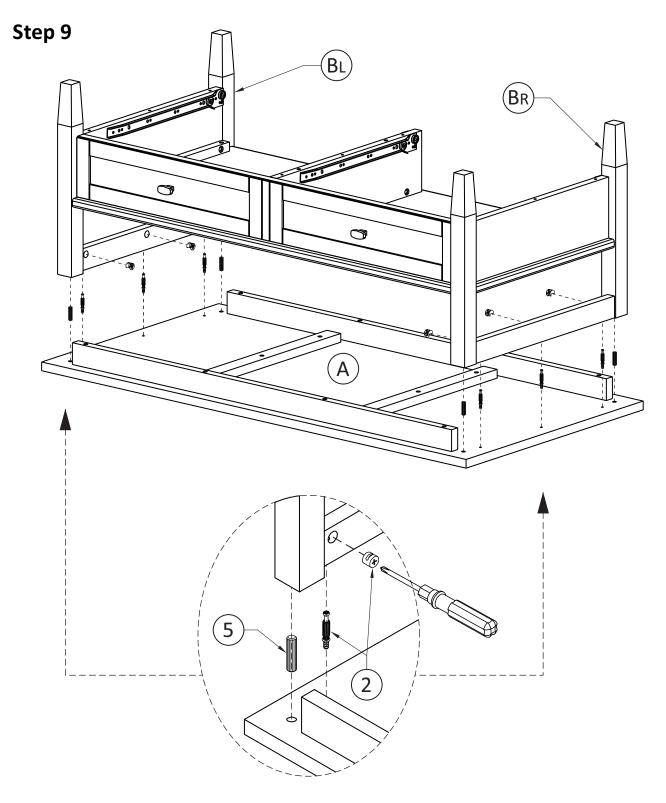


- 1. Insert Dowels (5) into each corner of Side (BL), (BR).
- 2. Use rubber mallet to tap Dowels (5) into bottom of holes securely. 1/2 length of Dowels should be exposed.
- 3. Attach 6 Cam Lock Pins 2 to bottom of Top A.
- 4. Align and insert Cam Lock Pins on Top (A) into guide holes on Sides (BL), (BR).
- 5. Use a flathead screwdriver to tighten Cam Locks into Pins.

#### **Assembly**

#### Model # AXWSH001-GR

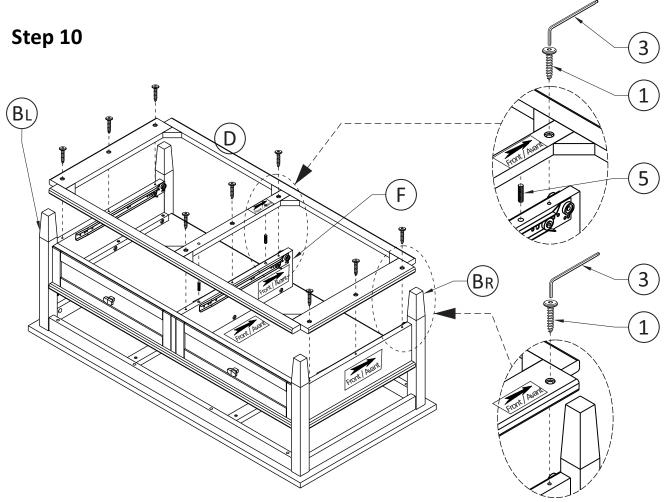

- 1. Insert 2 Dowels (5) into guide holes on the Centre Drawer (F).
- 2. Use rubber mallet to tap Dowels 5 into bottom of holes securely. 1/2 length of Dowels should be exposed.
- 3. Attach Bottom Shelf (D) to Sides (BL), (BR) and Centre Drawer (F) using Allen Key Screws (1) through guide holes.

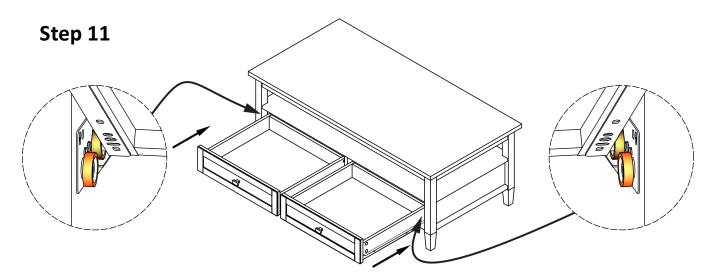

- 1. Insert assembled drawer into glides on assembled table.
- 2. Drawers can be inserted into either side of table opening.