

KINGSTON

REPAIR AND MAINTENANCE

INSTRUCTIONS

REPAIRS

1. Turn off the engine and disconnect the battery.
2. Remove the air filter.
3. Remove the spark plug and inspect it.
4. Check the valve clearance.
5. Check the oil level and change it if necessary.
6. Check the timing belt and adjust it if necessary.



RECOMMENDATIONS

For more information, please contact our technical support department. We are available 24 hours a day, 7 days a week. For more information, please visit our website at www.kingston.com.