
INSTRUCTION MANUAL

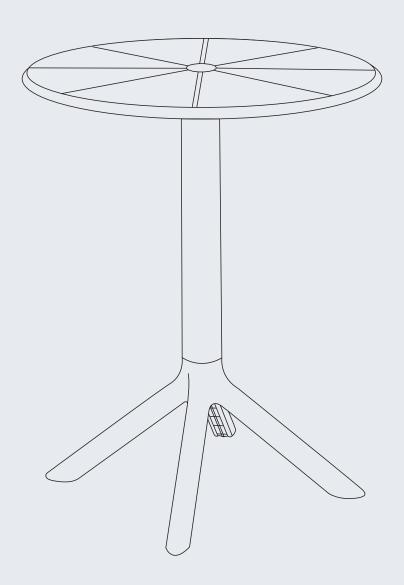

23.5" Outdoor Round Dining Table

() CARE & MAINTENANCE

- Be careful when assembly, avoid hurting the product.
- Clean the dust with lukewarm water, mild detergent & soft cloth.
- Firmly secure all bolts before use, do not use any part of this item as a step ladder.
- Reconfirm that all bolts, screws, and nuts are secure every 90 days.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.


CAPACITY

ASSEMBLY


TOOLS REQUIRED LBS 180 LBS 1 PERSON UP TO 20 MIN.


HARDWARE

(PROVIDED)

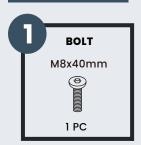


PARTS

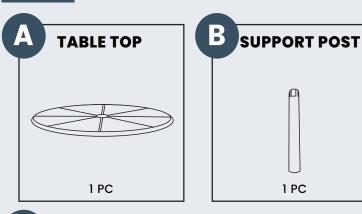

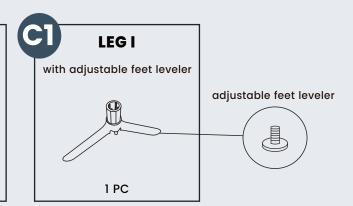


ASSEMBLY

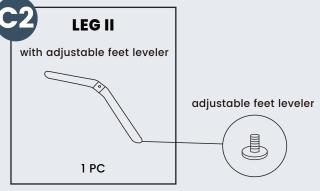

PRODUCT ASSEMBLY - OVERALL VIEW

Look at the overall view of this table and learn the exact position of each part to be assembled.

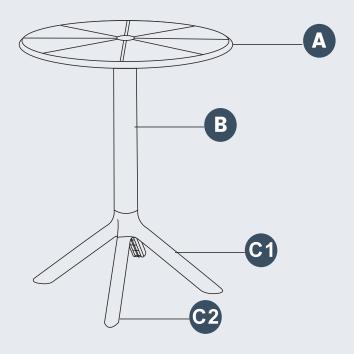


PRODUCT ASSEMBLY



Warning: A heavy iron block is preinstalled inside the top of Part C1 Leg I.

Please be careful to prevent injury.


Attach Part C1 Leg I on Part C2 Leg II with 1 pc of Hardware #1 Bolt by using allen wrench provided.

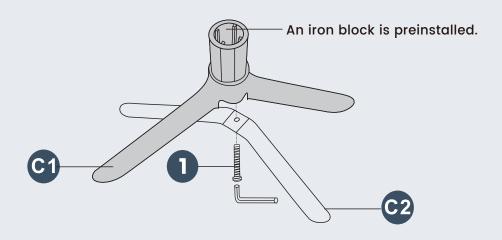

PRODUCT ASSEMBLY

2

Insert Part B Support Post to the assembled legs firmly.

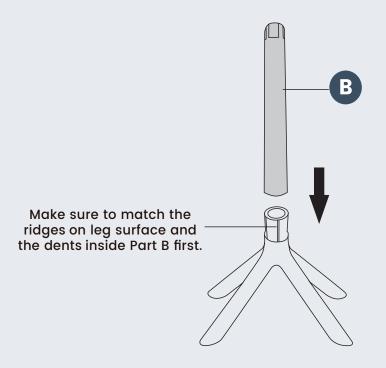

PRODUCT ASSEMBLY

3

Attach **Part A Table Top** to the assembled legs firmly.




PRODUCT ASSEMBLY



Adjust the feet levelers on the bottom of the legs for perfect balance.

Enjoy the table now.

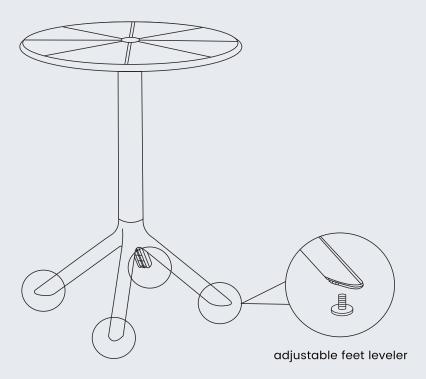

CLEANING TIPS

REGULAR CLEAN: Use a mixture of warm water and mild soap. Gently scrub the surface with a soft bristle brush to remove any dirt or stains.

QUICK CLEAN: You can simply wipe down the furniture with a damp cloth.

Regular cleaning not only preserves the aesthetic appeal of your furniture, but also helps extend its lifespan.