

Dresser



 
IMPORTANT

Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.


Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.


Part List

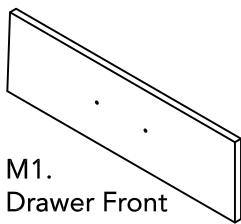


M1.
Drawer Front
1 pc.

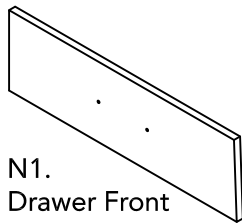 


N1.
Drawer Front
1 pc.

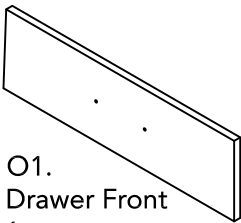 


O1.
Drawer Front
1 pc.

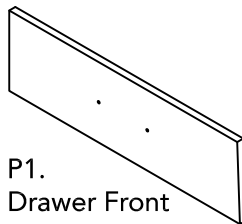 


P1.
Drawer Front
1 pc.

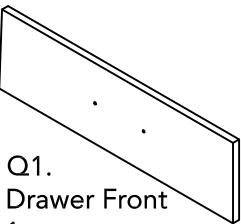 


Q1.
Drawer Front
1 pc.

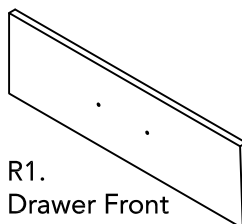 


R1.
Drawer Front
1 pc.

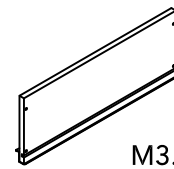 


M3.
Drawer Side
2 pcs.

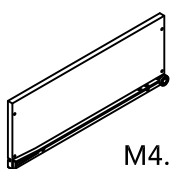 


M4.
Drawer Side
2 pcs.

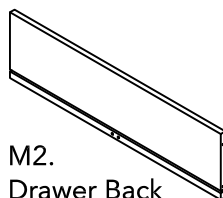 


M2.
Drawer Back
6 pcs.

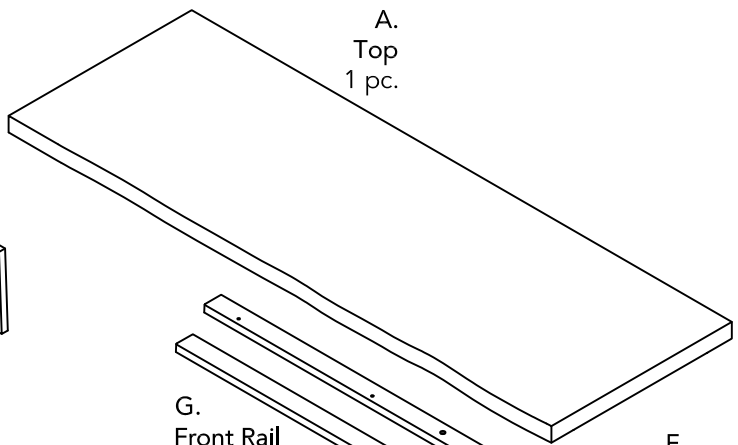 

 
A.
Top
1 pc.

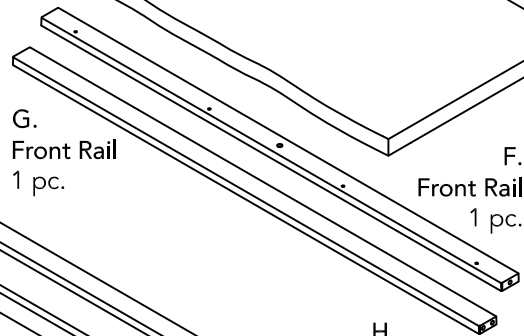

 
G.
Front Rail
1 pc.

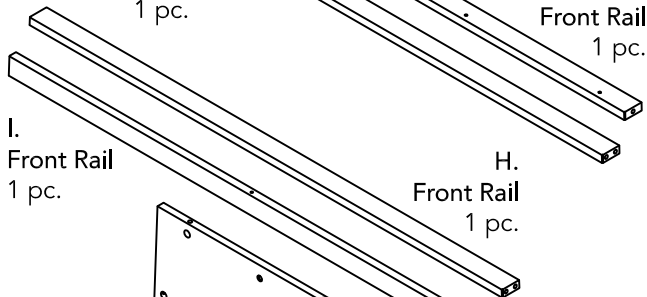

 
F.
Front Rail
1 pc.

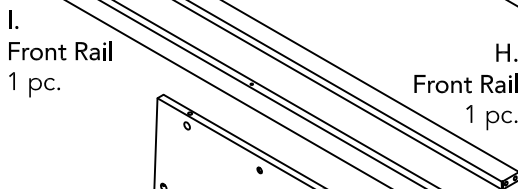

 H.
Front Rail
1 pc.

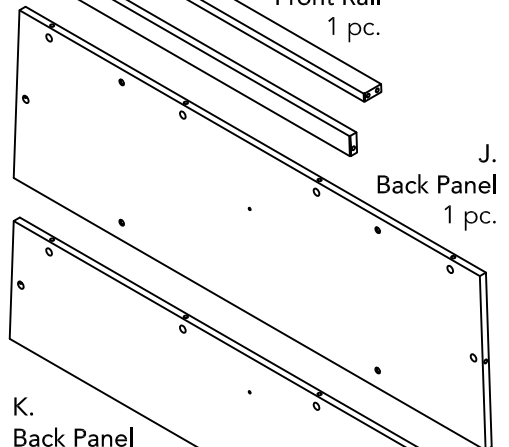

 J.
Back Panel
1 pc.

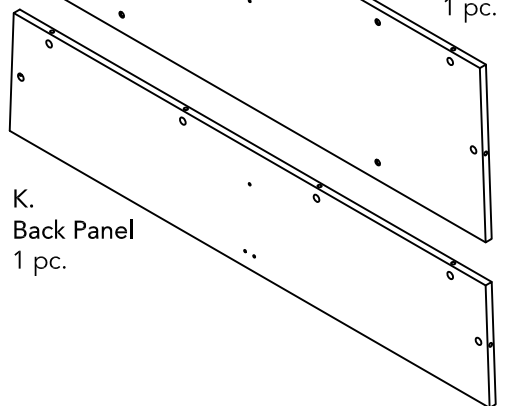

K.
Back Panel
1 pc.

For assembly see instructions in carton 20 05185 0432