

homestyles®

20 05503 0101

Entertainment Center

IMPORTANT

 
Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.


Do not use power tools above 8 volts to assemble.



Part List

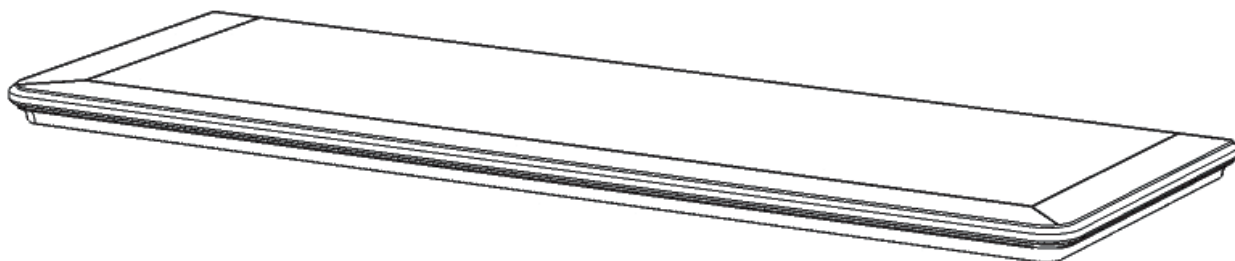

 A.
Top
1 pc.

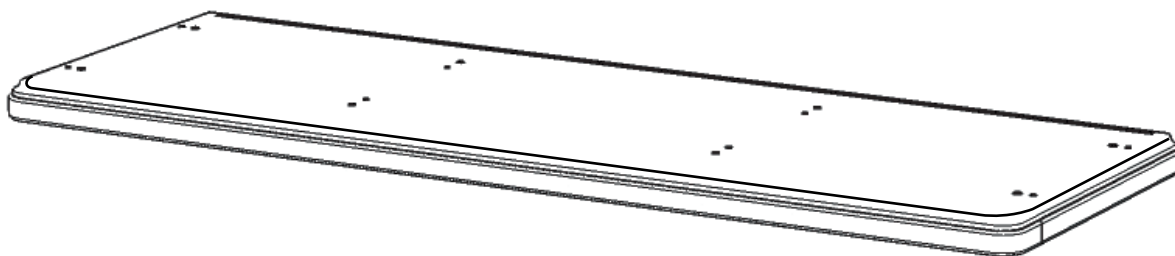

B.
Base
1 pc.

For assembly see instructions in carton 20 05503 0102.

Home Styles Customer Service: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319